 
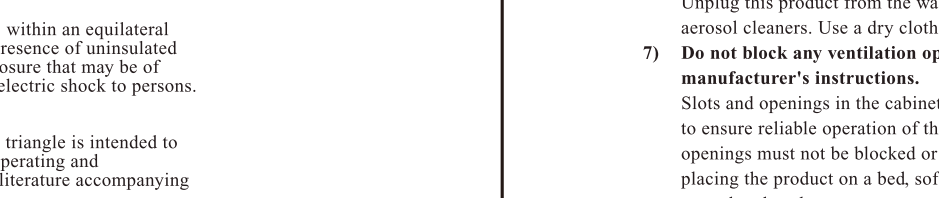 


CRAIG®

TOWER SPEAKER SYSTEM WITH COLOR CHANGING LIGHTED SPEAKERS AND BLUETOOTH® WIRELESS TECHNOLOGY

IMPORTANT SAFETY INSTRUCTION

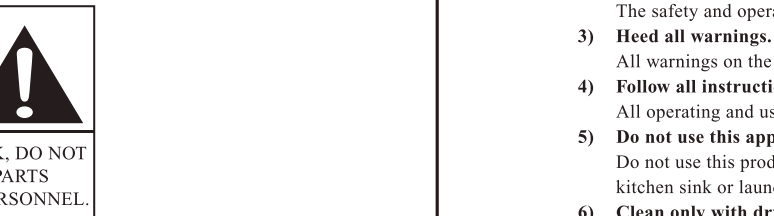

FCC WARNING:
This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. Modifications not authorized by the manufacturer may void users authority to operate this device.

INFORMATION:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.

Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

Model: CHT941DG

OWNER'S MANUAL

IMPORTANT SAFETY INSTRUCTION

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

DANGEROUS VOLTAGE:
The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons. **ATTENTION:** The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

FCC WARNING:
This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. Modifications not authorized by the manufacturer may void users authority to operate this device.

INFORMATION:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.

Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

 
 
 
 
Power source
This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products indicated to operate from battery power, or other source, refer to the operation instructions.

POWER SOURCE

Insert the small plug from the supplied AC/DC Adaptor to the DC IN Jack on the unit. Insert the AC/DC adaptor to a wall outlet having AC 100-240V~, 50/60Hz.






NOTE: This AC/DC Adaptor is intended to be correctly orientated in a vertical or floor mount position.

INSTALLATION

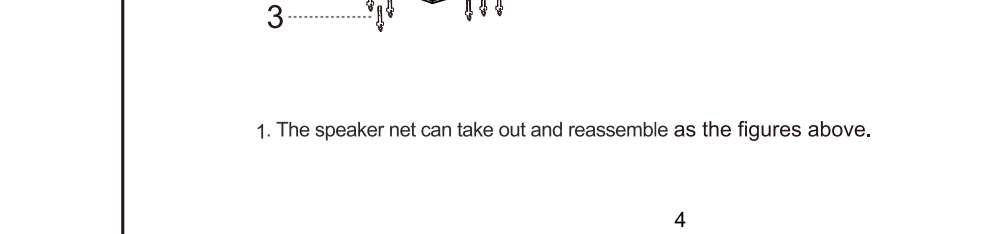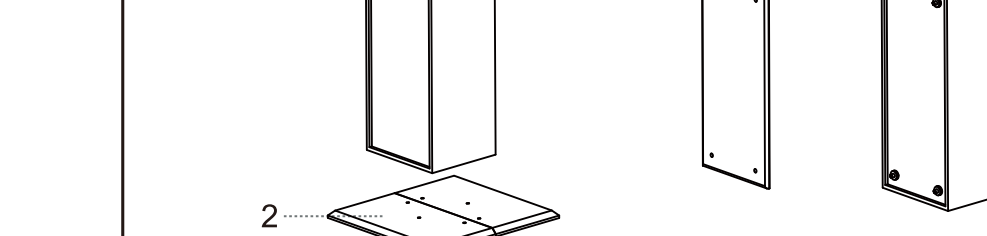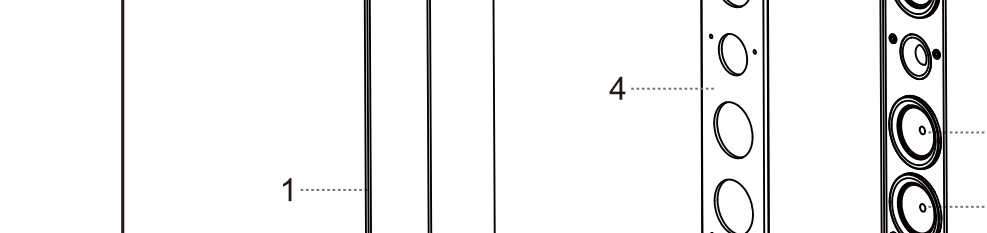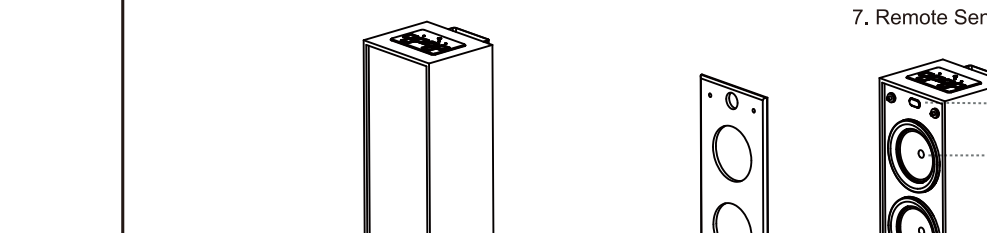







ASSEMBLING METHOD

     1. Assemble the two wooden bases to the bottom of unit by the supplied assembly screws and screwdriver as the figure above.

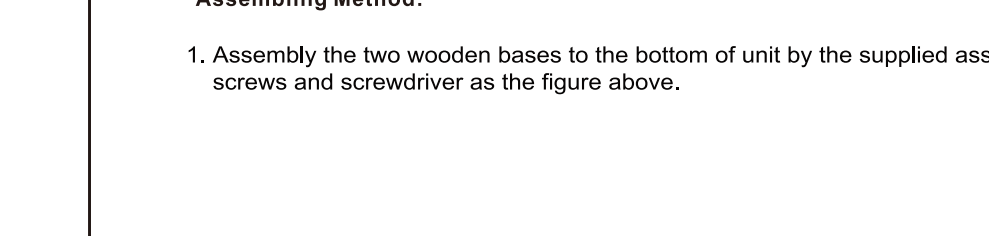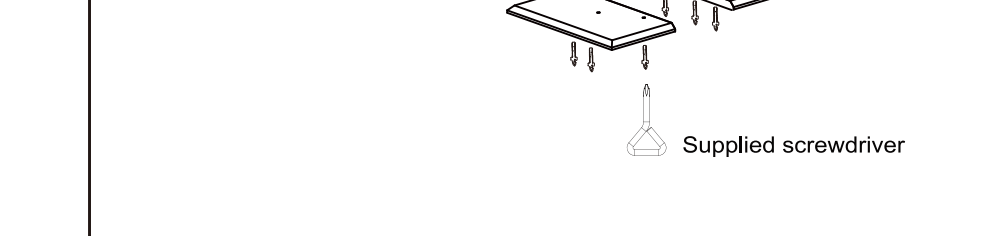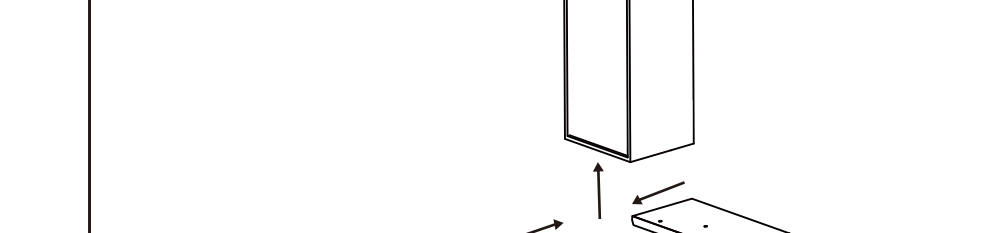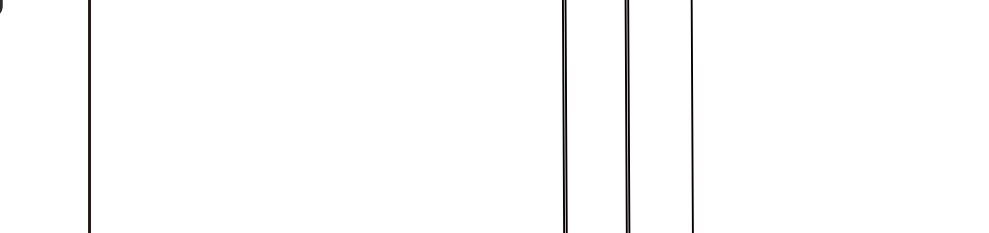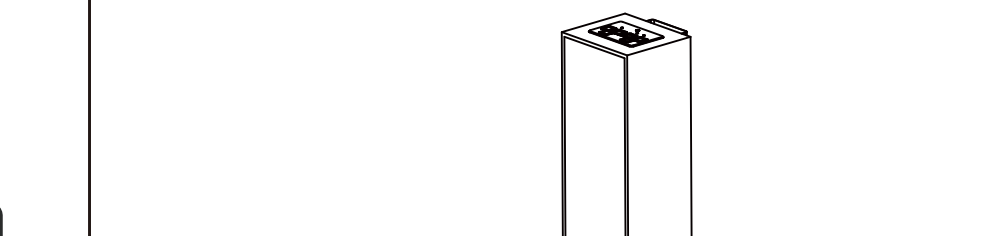





LOCATION OF CONTROLS

      1. FM Antenna
2. POWER ON/OFF Switch
3. DC IN Jack (DC $\approx$ 12V, 1A $\oplus$ $\ominus$)
4. AUX IN 1 Jack
5. AUX IN 2 Jacks
6. Remote Sensor (On the front of unit)
7. INDICATOR
8. $\odot$ (Standby) Button
9. SOURCE - LED ON/OFF Button
10. TUNE - / $\lll$ (Skip Backward) Button
11. TUNE + / $\ggg$ (Skip Forward) Button
12. VOL - (Volume Down) Button
13. VOL + (Volume Up) Button
14. LED Display

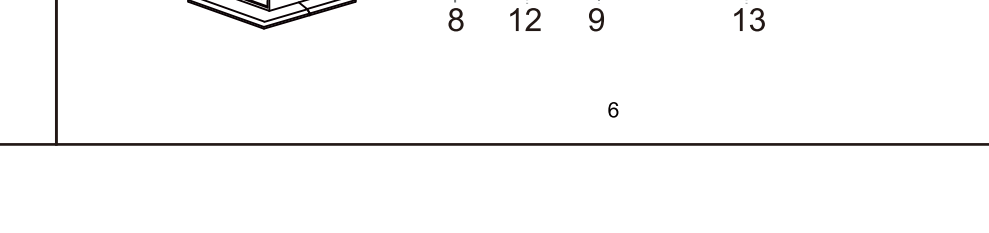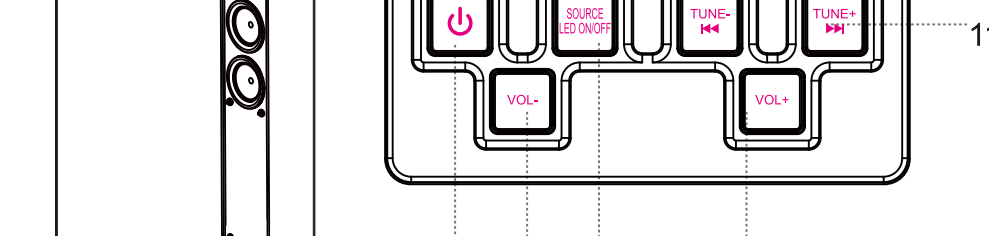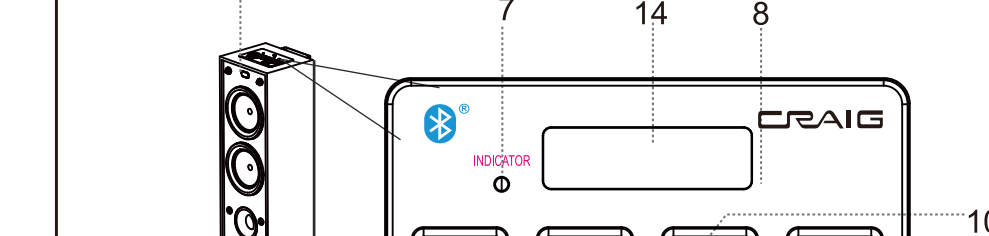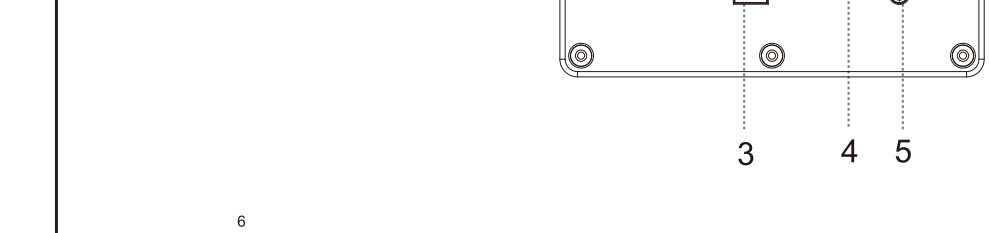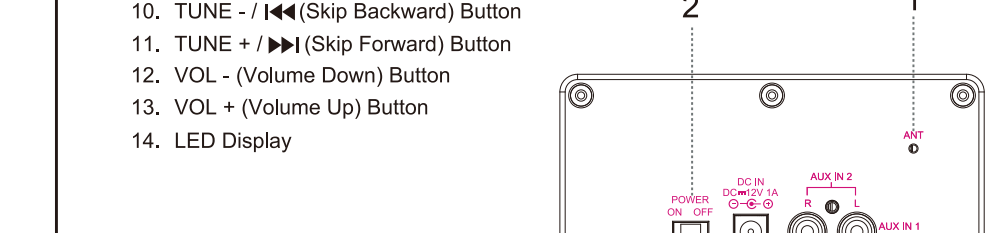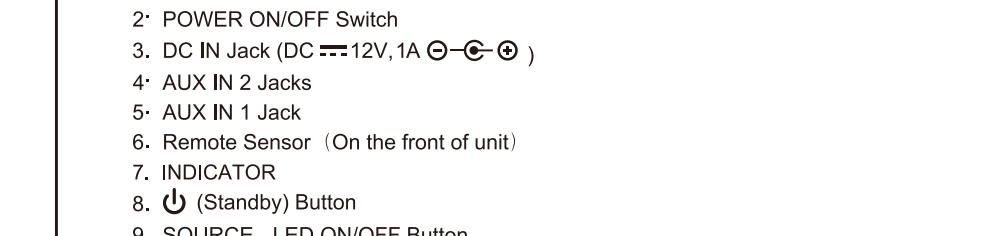

REMOTE CONTROL - LOCATION OF CONTROLS



 
 
 
 
1. (Standby) Button
2. $\otimes$ (Mute) Button
3. LED ON/OFF Button
4. FM Button
5. AUX 1 Button
6. AUX 2 Button
7. TUNE - / $\lll$ (Skip Backward) Button
8. TUNE + / $\ggg$ (Skip Forward) Button
9. $\parallel$ (Play - Pause)/RESET Button
10. $\times$ (Blue Tooth) Button
11. VOL - (Volume) - Button
12. VOL + (Volume) + Button

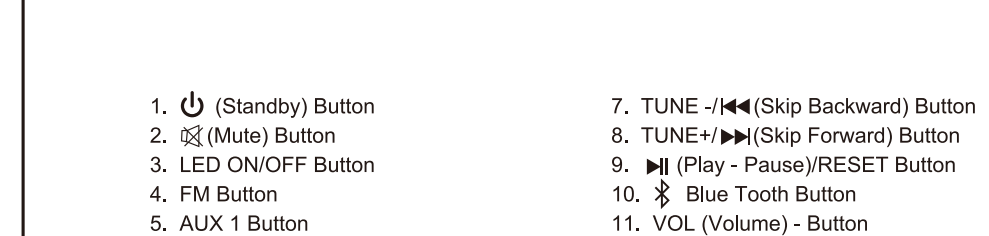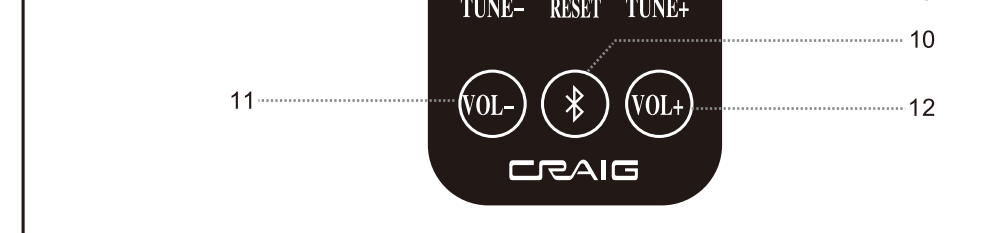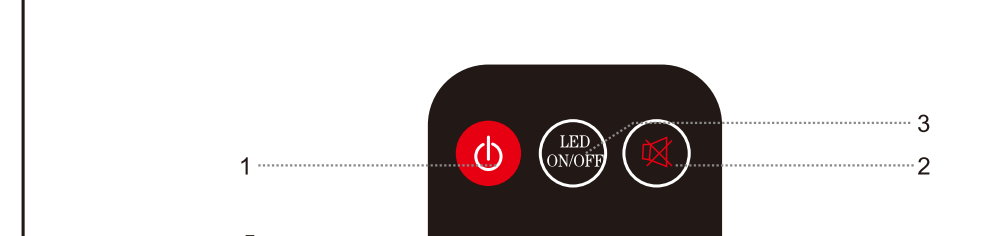

BATTERIES INSTALLATION (REMOTE CONTROL)







First time use:
Remove and discard the insulation film as the figure on right.

      Replacing battery for the remote control
1. Push and slide out the battery tray as the figure below.
2. Replace the battery by a new CR2025 button cell with the polarity "+" face up as the figure below and the rear of remote control.
3. Close the battery tarp.

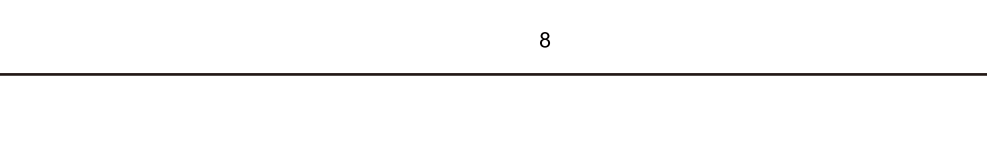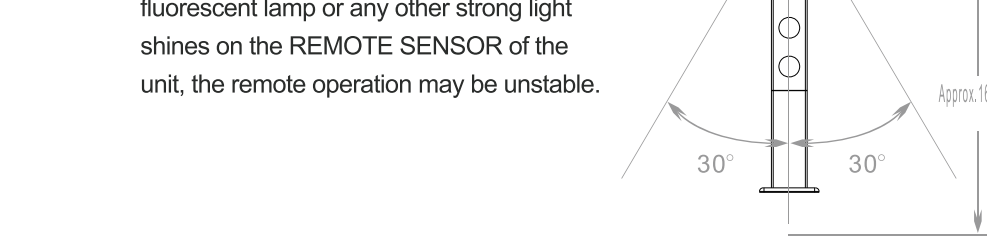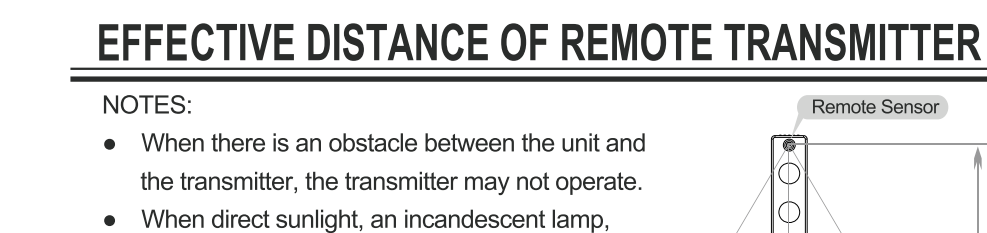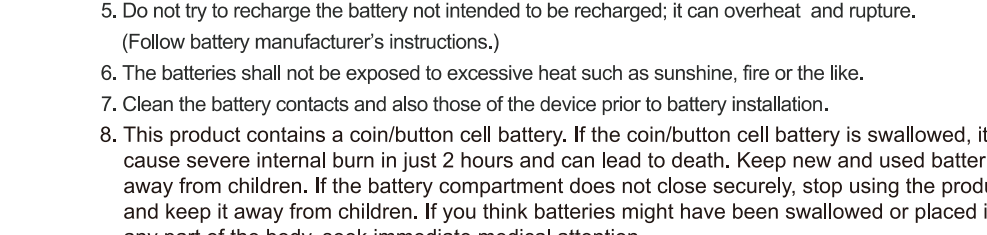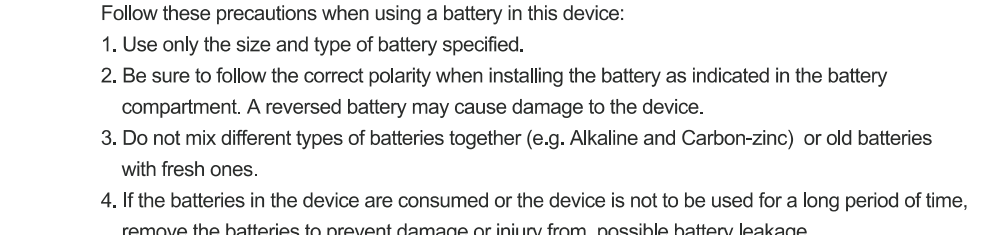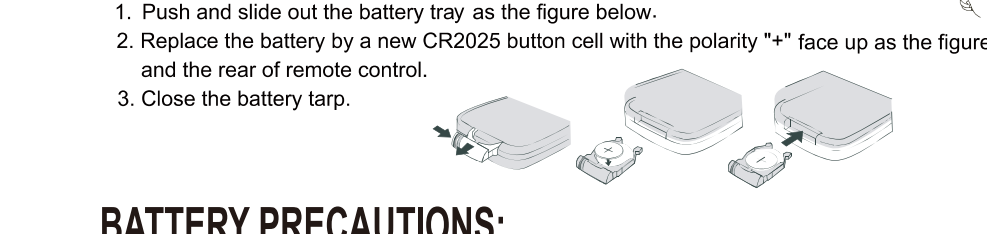

CONNECTION

      Connect to External Audio Device with 3.5mm Jack:

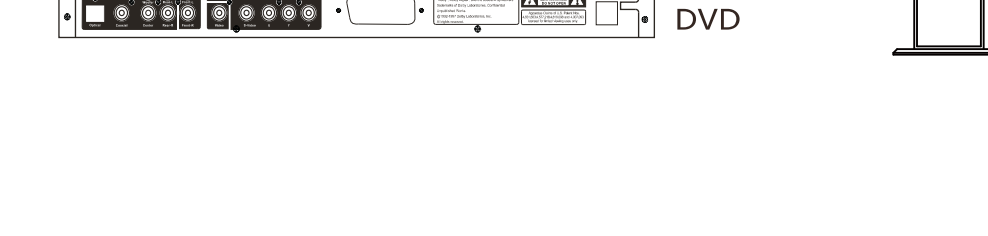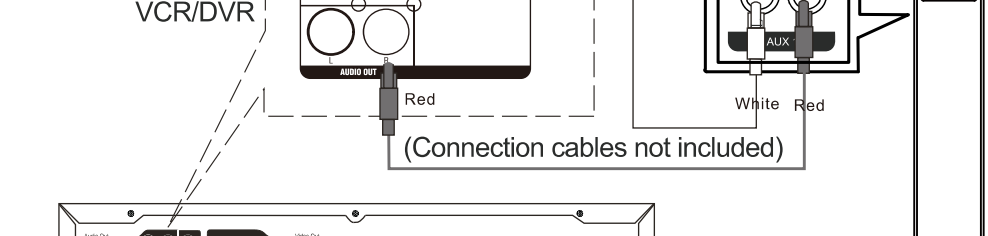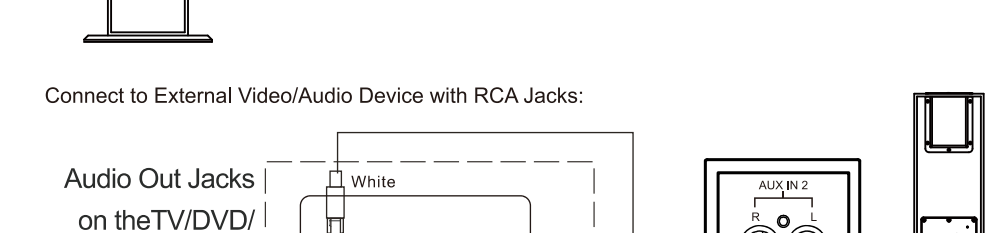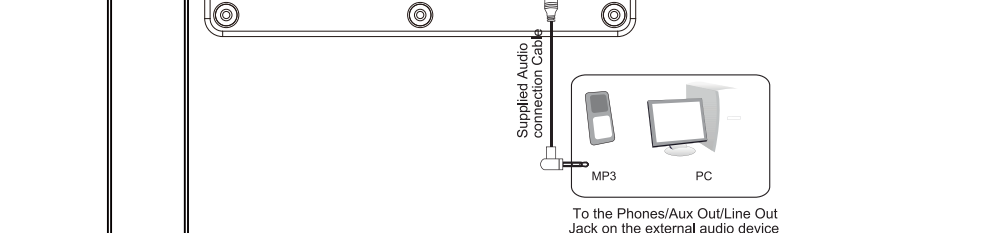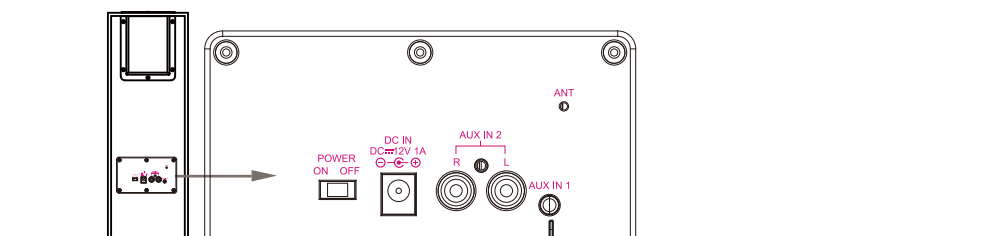

OPERATION

GENERAL:
1. Slide the POWER ON/OFF Switch on the rear of unit to ON position to power on the unit. Red Indicator on the top will illuminate.
2. Press and hold the $\odot$ (Standby) Button on the unit approx 1 second or press the $\odot$ (Standby) Button on the Remote Control to turn the unit ON from standby mode. (The Blue Indicator will illuminate and stop blinking).
3. Press the SOURCE - LED ON/OFF Button on the unit repeatedly or the correspondence buttons on the Remote Control to select the desired input source.
4. Press the VOL (Volume) +/- Buttons to adjust volume level.
5. Press the $\otimes$ (MUTE) Button on the Remote Control to turn off the sound temporary, press again to turn it back.
6. When finished, press and hold the $\odot$ (Standby) Button on the unit or press the $\odot$ (Standby) Button on the Remote Control to turn the unit off (standby mode).
7. If long period of time will not use the unit, turn off the unit by slide the POWER ON/OFF Switch on the rear of unit to OFF position, then unplugging the AC/DC Adaptor from wall outlet. All the indicators will turn off.

DECORATIVE LED
To turn On/Off the Decorative LED, press and hold the SOURCE - LED ON/OFF Button on the unit or press the LED ON/OFF Button on the remote control.

RADIO:
1. Power on the unit as previous procedures.
2. Press the SOURCE - LED ON/OFF Button on the unit repeatedly until the FM Frequency appear on the display. (Or press the FM Button on the Remote Control to go to radio FM mode directly).
3. Press the TUNE +/- $\ggg$ / $\lll$ Buttons until the frequency on the display start running to search and plays the next (previous) available FM station.
4. Repeat the same procedures until the desired station was found and play.
5. To start search from the beginning, press $\parallel$ / RESET Button on the Remote Control.
6. If the reception is no good, press and release the TUNE - / $\lll$ or TUNE + / $\ggg$ Buttons repeatedly to fine tune.

FM Antenna:
The antenna wire on the rear of unit is for radio reception. If reception is weak, unwind and extended the wire or relocation the wire to improve the radio reception.

BT (Blue Tooth):
In first time use or re-pairing the unit to new BT Device, pairing the unit to external BT Device as below:
1. Power on the unit as previous procedures.
2. Press the SOURCE - LED ON/OFF Button on the unit repeatedly until the Blue Indicator is illuminate and blinking. (Or press the $\times$ Blue Tooth Button on the Remote Control to go to BT mode directly).
3. Power on the external BT Device and enter to searching mode. The Red indicator will not light and Blue Indicator will stop blinking. Start pairing as the instructions on screen on the external BT Device. After paired, the Blue Indicator will stop blinking. (For details pairing procedures, please refer to the user's manual of your BT Device.).

Audio Out Jacks:
on the TV/DVD/VCR/DVR
(Connection cables not included)

Remote Sensor:
Approx. 16 feet
30°

NOTE:
When there is an obstacle between the unit and the transmitter, the transmitter may not operate.
When direct sunlight, an incandescent lamp, fluorescent lamp or any other strong light shines on the REMOTE SENSOR of the unit, the remote operation may be unstable.

BATTERY PRECAUTIONS:

Follow these precautions when using a battery in this device:
1. Use only the size and type of battery specified.
2. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment. A reversed battery may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the batteries in the device are consumed or the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge the battery not intended to be recharged; it can overheat and rupture. (Follow battery manufacturer's instructions.)
6. The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
7. Clean the battery contacts and also those of the device prior to battery installation.
8. This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burn in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you find batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

EFFECTIVE DISTANCE OF REMOTE TRANSMITTER
NOTES:
• When there is an obstacle between the unit and the transmitter, the transmitter may not operate.
• When direct sunlight, an incandescent lamp, fluorescent lamp or any other strong light shines on the REMOTE SENSOR of the unit, the remote operation may be unstable.

BT (Blue Tooth):
In first time use or re-pairing the unit to new BT Device, pairing the unit to external BT Device as below:
1. Power on the unit as previous procedures.
2. Press the SOURCE - LED ON/OFF Button on the unit repeatedly until the Blue Indicator is illuminate and blinking. (Or press the $\times$ Blue Tooth Button on the Remote Control to go to BT mode directly).
3. Power on the external BT Device and enter to searching mode. The Red indicator will not light and Blue Indicator will stop blinking. Start pairing as the instructions on screen on the external BT Device. After paired, the Blue Indicator will stop blinking. (For details pairing procedures, please refer to the user's manual of your BT Device.).

Audio Out Jacks:
on the TV/DVD/VCR/DVR
(Connection cables not included)

Remote Sensor:
Approx. 16 feet
30°

NOTE:
When there is an obstacle between the unit and the transmitter, the transmitter may not operate.
When direct sunlight, an incandescent lamp, fluorescent lamp or any other strong light shines on the REMOTE SENSOR of the unit, the remote operation may be unstable.

BT (Blue Tooth):
In first time use or re-pairing the unit to new BT Device, pairing the unit to external BT Device as below:
1. Power on the unit as previous procedures.
2. Press the SOURCE - LED ON/OFF Button on the unit repeatedly until the Blue Indicator is illuminate and blinking. (Or press the $\times$ Blue Tooth Button on the Remote Control to go to BT mode directly).
3. Power on the external BT Device and enter to searching mode. The Red indicator will not light and Blue Indicator will stop blinking. Start pairing as the instructions on screen on the external BT Device. After paired, the Blue Indicator will stop blinking. (For details pairing procedures, please refer to the user's manual of your BT Device.).

Audio Out Jacks:
on the TV/DVD/VCR/DVR
(Connection cables not included)

GENERAL SPECIFICATIONS

Power Source: DC $\approx$ 12V, 1A, $\oplus$ $\ominus$ $\oplus$
Power Source of Remote Control: DC $\approx$ 3V, 1 x CR 2025 button cell (Included)

Radio Coverage FM 87.5 - 108 MHz
Impedance of Speakers: 2 x 8 Ohms, 6 W
Audio Power: 5W x 2 ((Total 10W, RMS))

Accessories:
1 x Remote Control (Uses 1 x CR 2025 button cell, included)
1 x AC/DC Adaptor (Input: AC 100-240V~, 50/60Hz 1A; Output DC $\approx$ 12V, 1A, $\oplus$ $\ominus$)
1 x Audio Connection Cable with 3.5mm Stereo plugs
1 x User's Manual
2 x Wooden Stand
6 x Assembly Screws
1 x Screwdriver

FCC RF Exposure Information and Statement
This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

LIMITED WARRANTY

Craig warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 90 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$12.00 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit can not be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.
1160 NW 163 Drive
Miami, FL 33169

This warranty is void if the product has been: a) Used in a commercial application or rental, b) Damaged through misuse, negligence, or abuse, c) Modified or repaired by anyone other than an authorized Craig service center, d) Damaged because it is improperly connected to any other equipment.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.