 


IMPORTANT SAFETY INSTRUCTIONS

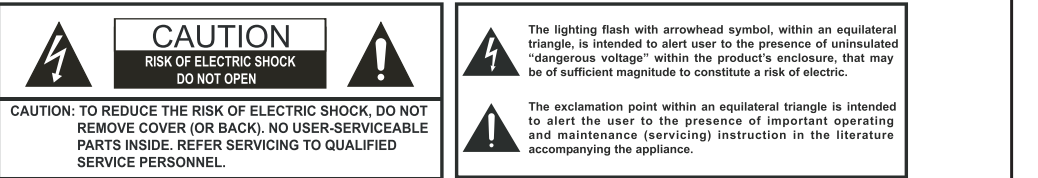

 
FCC NOTICE:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


FCC NOTICE:
To assure continued compliance, follow the attached installation instructions and use only shielded cables when connecting to other devices. Modifications not authorized by the manufacturer may void user's authority to operate this device.

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.

- 1. Read these instructions**
All the safety and operating instructions should be read before the product is operated.
- 2. Keep these instructions**
The safety and operating instructions should be retained for future reference.

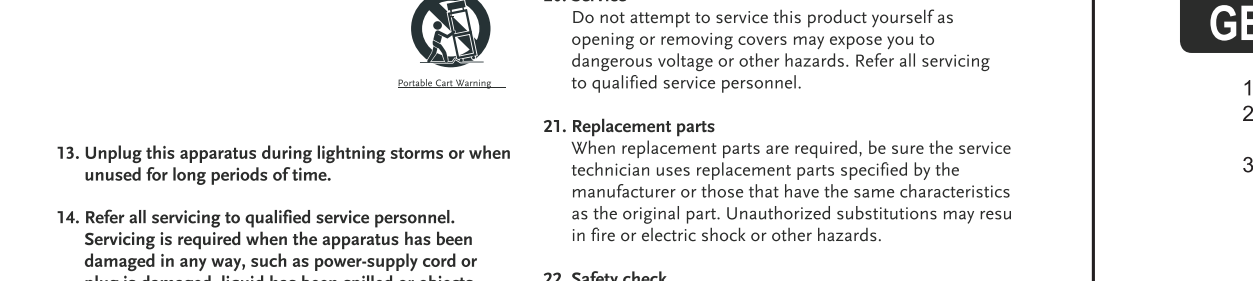

- 3. Read all warnings**
All warnings on the product and in the operating instructions should be followed.
- 4. Follow all instructions**
All operating and use instructions should be followed.
- 5. Do not use this apparatus near water**
Do not use the product near water and moisture, for example: near a bathtub, washbowl, kitchen sink or laundry tub, in a wet basement, or near a swimming pool.
- 6. Clean only with dry cloth**
Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.
- 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.**
Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat source. This product should not be placed in a built-in installation such as a bookcase or rack, unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.**
- 9. Do not defeat the safety purpose of the polarized or grounding-type plug.** A polarized plug has two blades with one blade wider than the other. A grounding type plug has two blades and a third grounding prong, the wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10. Protect the power cord from being walked on or pinched** particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11. Only use attachments/accessories specified by the manufacturer.**

 


GENERAL WARNINGS

1. This unit is designed for adult use only. Always keep away from children.
2. This unit is designed for indoor use within temperature 5-40°C (41-104°F) only. If unit is freezes, place it in room temperature until the liquid defrosts before powering on the unit.
3. If the unit is broken and/or liquid leaks, discard the unit immediately.

POWER SOURCE


Insert the small plug from the supplied AC/DC Adaptor to the DC IN Jack on the rear of the unit. AC/DC adaptor to a wall outlet having AC 100-240V~, 50/60Hz.

 NOTE: This AC/DC Adaptor is intended to be correctly orientated in a vertical or floor mount position.

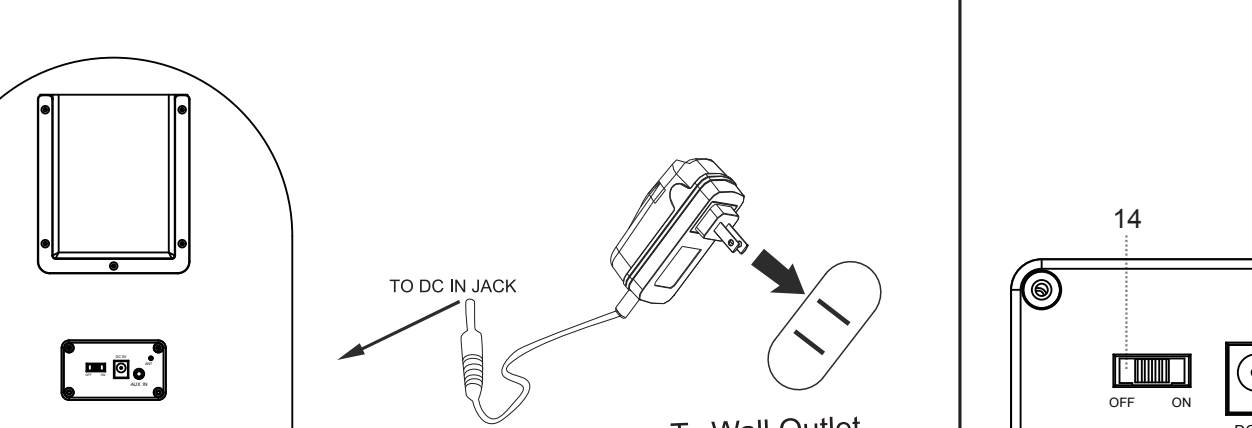

LOCATION OF CONTROLS

 1. CD Player
2. Disk Tray/ Inside CD Player)
3. Open / Close Tab
4. LED Neon Lights
5. CD Display Screen
6. Standby Button
7. Play / Pause Button
8. Stop / Scan Button
9. Program Button
10. Function Button
11. Skip - / Volume - Button
12. Skip + / Volume + Button
13. Repeat Button
14. On / Off Switch
15. 5V 1A DC Input Jack
16. Aux Input Jack
17. FM Radio Antenna



LOCATION OF CONTROLS (REMOTE CONTROL)

1. Standby Button
2. Source Button
3. Mute Button
4. LED On/Off Button
5. Play/Pause Button
6. Program Button
7. Tune +/-Skip + Button
8. Stop Button
9. Volume - Button
10. Repeat Button
11. Volume + Button
12. Scan Button
13. Volume + Button



 
 
 
 
 
 
 
 
 
 
 
BATTERIES INSTALLATION (REMOTE CONTROL)

- First time use:**
Remove and discard the insulation film as the figure on right.
- Replacing battery for the remote control**
1. Push and slide out the battery tray as the figure below.
2. Replace the battery by a new CR2025 button cell with the polarity "+" face up as the figure below and the rear of remote control.
3. Close the battery tarp.











BATTERY PRECAUTIONS

- Follow these precautions when using a battery in this device:
1. Use only the size and type of battery specified.
 2. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment. A reversed battery may cause damage to the device.
 3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
 4. If the batteries in the device are consumed or the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
 5. Do not try to recharge the battery not intended to be recharged; it can overheat and rupture. (Follow battery manufacturer's instructions.)
 6. The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
 7. Clean the battery contacts and also those of the device prior to battery installation.
 8. This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burn in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it from children. If you think batteries might have been swallowed








CONNECTION

        - Connect to External Audio Device with 3.5mm Jack:
- Supplied Audio Connection Cable
- MP3 PC
- To the Phones/Aux OutLine Out Jack on the external audio device



OPERATIONS

     - Using the Retro Jukebox with CD Player
- Plug the DC input jack on the power adaptor into the DC in socket on the reverse of the jukebox and then plug the adaptor into the mains power supply. Set the jukebox to 'Standby' mode by sliding the 'On/Off' switch to 'On'. The standby indicator light will illuminate. To turn on the jukebox, press and hold the 'Standby' button on the control panel or press the 'Standby' button on the remote control. Press the 'Function' button on the control panel or the 'Source' button on the remote control to change between the CD player, Aux and FM radio functions. To adjust the volume, use the 'Skip +/- Volume+' and 'Skip-/Volume-' buttons on the control panel or use the corresponding buttons on the remote control. The volume will be shown on the CD display screen. Turn the LED neon lights on and off by pressing the 'LED On/Off' button on the remote control. Press and hold the 'Standby' button on either the control panel or the remote control to set the jukebox to standby. To turn off the jukebox completely, slide the 'On/Off' switch on the reverse of the unit to 'Off'.



GENERAL SPECIFICATIONS

- Power Source: DC = 5V, 2A @- @
- Power Source of Remote Control: DC = 3V, 1 x CR 2025 button cell (included)
- Radio Coverage: FM 87.5 - 108 MHz
- Accessories:
- 1 x Remote Control (Uses 1 x CR 2025 button cell, included)
 - 1 x AC/DC Adaptor (Input: AC 100-240V~, 50/60 Hz, 0.5 A, Output DC = 5V, 2A, @- @)
 - 1 x Audio Connection Cable with 3.5mm Stereo plugs
 - 1 x User's Manual



CARE AND MAINTENANCE

- Care and Maintenance
- Before attempting any cleaning or maintenance, ensure that the jukebox is turned off the mains power supply and has been unplugged. Wipe down the jukebox with a soft, damp cloth and dry thoroughly. Do not use abrasive cleaning solvents to clean the jukebox. Do not immerse the jukebox in water or any other liquid. Do not expose the remote control to extremely high or low temperatures, as this may destroy the battery.

