 



GETTING READY

Accessories Included


Your camera box should contain the camera model you purchased along with the following accessories. If anything is missing or appears to be damaged, please contact your retailer first or our customer service center (Based on sales in different countries or regions, the shape of the AC adapter will vary. Please subject to the actual product will prevail.)



 Rechargeable
Li-ion battery




AC adapter

 


USB cable



Neck strap

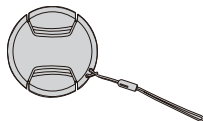

Lens cap with strap

 

User manual



Quick start guide



Warranty card




SD card




Pouch

Installing Lens Cap and Neck Strap

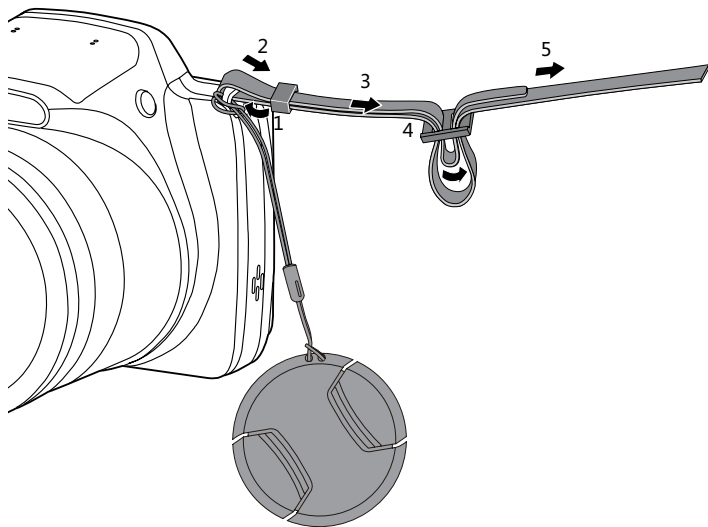

Button Overview

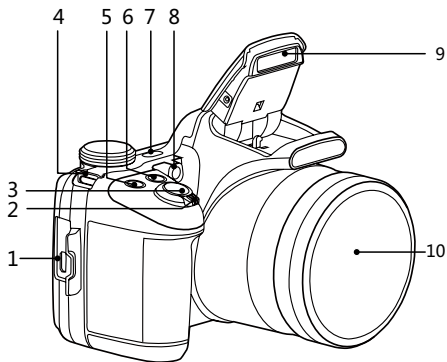

1 USB Port

2 Zoom Lever

3 Shutter Key

4 Strap Eyelet

5  Aperture Key



6  Burst Key

7 Power Key

8 AF Assist Beam / Self-Timer Lamp

9 Flash Lamp


10 Lens

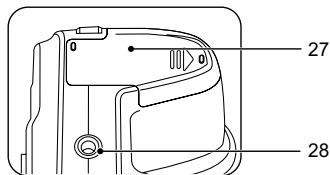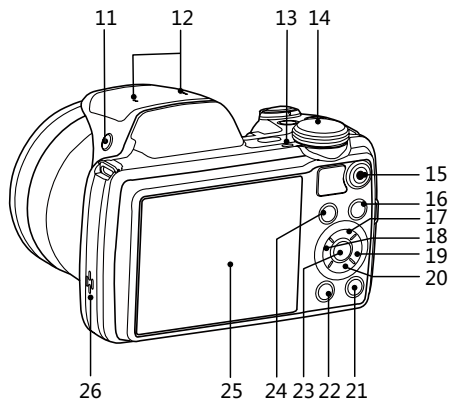


- | | | |
|------------------------------|--|-------------------|
| 11 Flash Key | 17 [▲DISP] Display Key / Arrow Key (Up) | 23 EV/SET Key |
| 12 Microphone | 18 [◀🌸] Macro Key / Arrow Key (Left) | 24 AE-L/AF-L Key |
| 13 Indicator Lamp | 19 [▶⚡] Flash Key / Arrow Key (Right) | 25 LCD |
| 14 Mode Dial | 20 [▼🕒🗑️] Delete Key / Self-timer Key / Arrow Key (Down) | 26 Speaker |
| 15 Fast Video Recording Key | 21 Playback Key | 27 Battery Cover |
| 16 C1 Key | 22 Menu Key | 28 Tripod Socket |

Installing the Battery and SD Memory Card


1. Open the battery cover door.

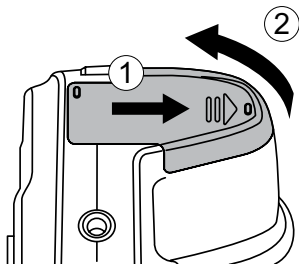


2. Insert the battery into the battery compartment according to the negative and positive directions as illustrated in the picture. Push the battery down until it locks in place.

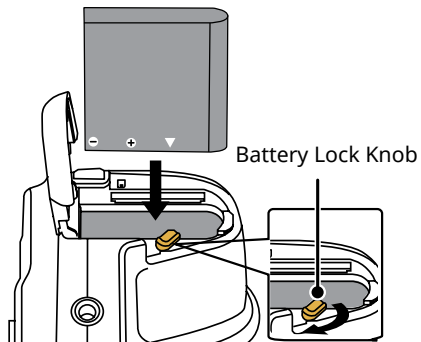

3. Insert the SD memory card into the memory card slot as shown in the diagram.

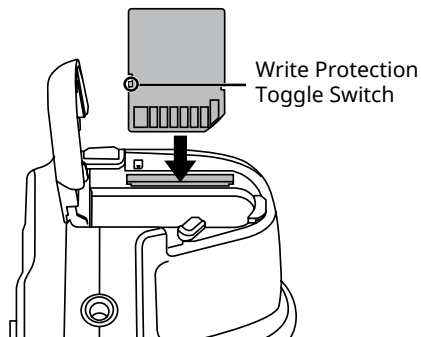

4. Close the battery door cover.

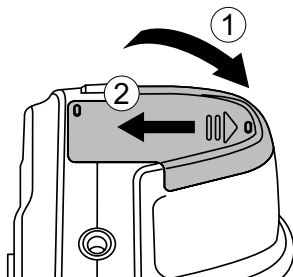


 To remove your memory card, open the battery cover door, gently press the memory card to eject it and remove it carefully.

Charging the Battery


Before you charge the battery, you should turn the camera off and properly insert the battery. Otherwise, there will be no charging prompts after connecting the AC adapter.

1. Connect the camera to the power charger using the supplied USB cable.
2. Insert the plug of the power charger into the power outlet to charge the battery.

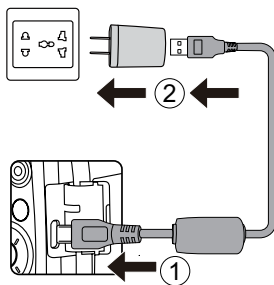

Use the supplied power charger to charge the battery prior to use.

Indicator Lamp

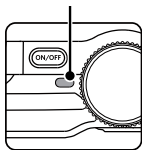

Charging indicator:

Steady orange: Charging

Steady green: Charging complete


To maximize battery life, charge the battery for at least 4 hours the first time.



Please charge the battery indoors between 0°C and 40°C (32°F and 104°F).



Turning Camera On and Off

Press the Power key to turn the camera on. To turn the camera off, press the Power key again.

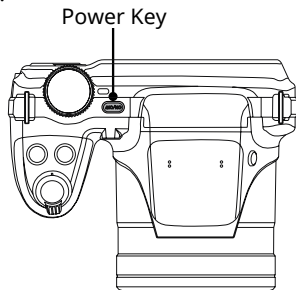

When the power is off, press and hold the playback key (⏮) to power on and enter Playback mode.

How to Take Pictures

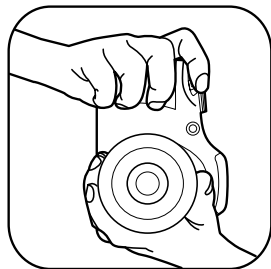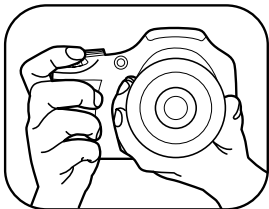

1. Hold the camera with both hands, being careful to not block the flash and lens with fingers.
2. Point the lens toward the object you want to take a picture of, and then frame it with the LCD.
3. Use the Zoom Lever to select Tele or Wide positions to zoom in or out on your subject.
4. Press the Shutter Key halfway to focus on the subject. When the focus frame turns green, press the Shutter Key down completely to take the picture.

Set your Language, Region and Time



Set your Language, Region and Time after the First Power-On

1. When you turn the camera on for the first time, the language selection screen appears.
2. Press the [ DISP] / [  ] keys to select your desired language.
3. After you press the  key to confirm your language selection, the [Set Time] settings screen will appear.
4. Press the [ ] / [ ] keys to select [Region] / [Daylight] and press the  key to confirm. Press the [ DISP] / [  ] keys to select an option and press the  key to confirm.
5. Press the [ ] / [ ] keys to select [Region], press the [ DISP] / [  ] keys to select the [Date/Time] and press the  key to enter the menu. Press the [ ] / [ ] keys to select the adjustment block: This information is displayed in YYYY.MM.DD/HH:MM. Press the  key to confirm.
6. Press the [ DISP] / [  ] keys to adjust the value for the desired Date/Time. Press the  key to confirm. Press the [  ] key to select [Confirm] and press the  key to confirm.
7. Press the [  ] key to select [Confirm], press the  key to confirm and the shooting screen will appear.

Resetting your Language

After you set your language for the first time, follow the instructions below to reset your language.



1. Press the  key and select , press the  key to enter the menu.
2. Press the [ **DISP**] / [ ] keys to select  and press the  / [ ] key twice to enter the menu.
3. Press the [ **DISP**] / [ ] keys to select [Language] and press the  / [ ] key to enter the menu.
4. Press the [ **DISP**] / [ ] key to select your desired language and press the  key to confirm.
5. Press the  key and the shooting screen will appear.

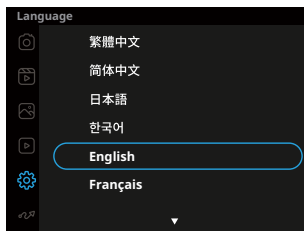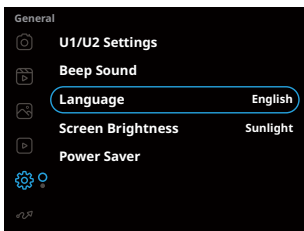



Resetting Region and Time

After you set your Daylight/Region/Date/Time for the first time, follow the instructions below to reset daylight, region, date and time.

1. Press the  key and select , press the  key to enter the menu.
2. Press the [ DISP] / [ ] keys to select  and press the  / [ ] key twice to enter the menu.
3. Press the [ DISP] / [ ] keys to select [Set Time] and press the  / [ ] key to enter the menu.
4. Press the [ ] / [ ] keys to select [Region] / [Daylight] and press the  key to confirm. Press the [ DISP] / [ ] keys to select an option and press the  key to confirm.

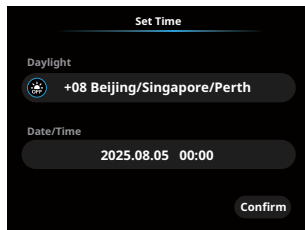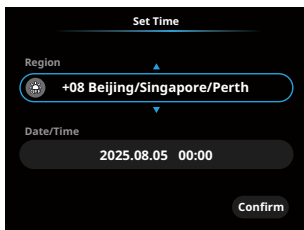


5. Press the [◀🌿] / [▶⚡] keys to select [Region], press the [▲DISP] / [▼🗑] keys to select the [Date/Time] and press the (EV SET) key to enter the menu. Press the [◀🌿] / [▶⚡] keys to select the adjustment block: This information is displayed in YYYY. MM.DD/HH:MM. Press the (EV SET) key to confirm.
6. Press the [▲DISP] / [▼🗑] keys to adjust the value for the desired Date/Time. Press the (EV SET) key to confirm. Press the [▼🗑] key to select [Confirm] and press the (EV SET) key to confirm.

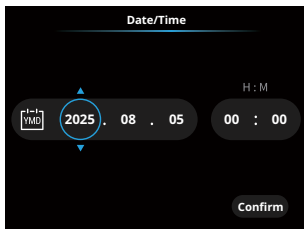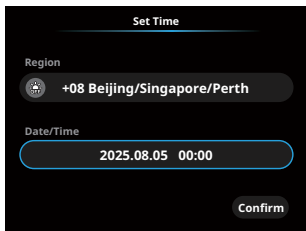

7. Press the [▼🗑] key to select [Confirm] and press the (EV SET) key to confirm.
8. Press the (📺) key to confirm the time settings and the shooting screen will appear.


LCD DISPLAY

Overview of the Screen Icons in Shooting Mode

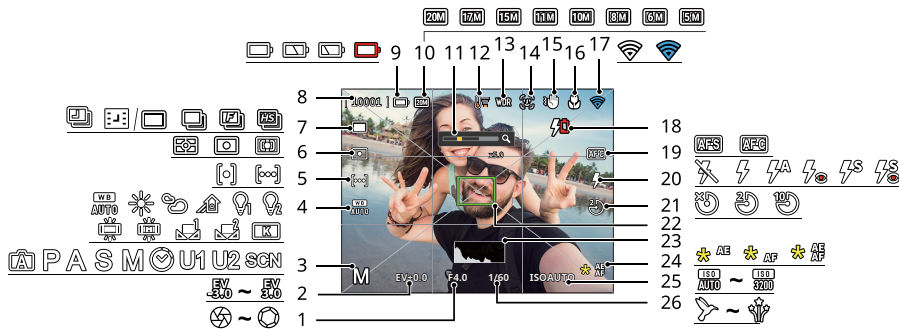

1 Aperture Value	8 Number of Remaining Shots	15 OIS	22 Focus Frame
2 EV Value	9 Battery Status	16 Macro Mode	23 Histogram
3 Shooting Mode	10 Image Size	17 Wireless Status	24 AEL&AFL Lock
4 White Balance	11 Zoom Display	18 Flash Charging Status	25 ISO Value
5 Focus Area	12 High Temperature Warning	19 AF Mode	26 Shutter Speed
6 Exposure Metering	13 WDR	20 Flash	
7 Burst	14 Face Detection	21 Self-timer	

Overview of the Screen Icons in Movie Mode

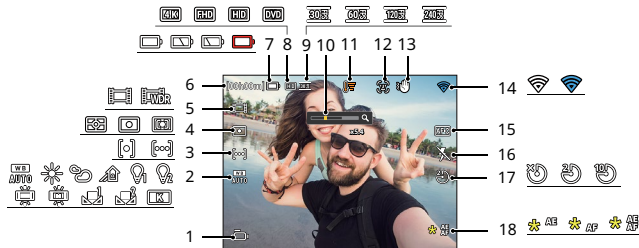

1	Movie Mode	7	Battery Status	13	Anti-shake
2	White Balance	8	Video Size	14	Wireless Status
3	Focus Area	9	Frames	15	Cont.AF
4	Exposure Metering	10	Zoom Display	16	Force Off (Flash)
5	WDR Video	11	High Temperature Warning	17	Self-timer
6	Maximum Record Time	12	Face Detection	18	AEL&AFL Lock




To achieve the optimal video recording and photo-taking experience, it is recommended to use an SDHC or SDXC Class 10 or higher storage card.



Optical Zoom and Digital Zoom can be adjusted (208X in total). Digital Zoom can be adjusted to 4X.

Overview of the Screen Icons in Playback Mode

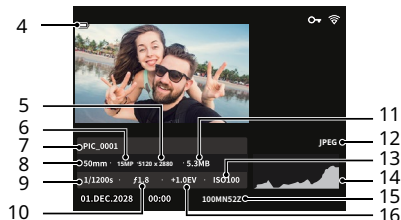


1 Wireless Status	7 File Name	13 ISO Value
2 File Protection	8 Focal Length	14 Histogram
3 Capture Date and Time	9 Shutter Speed	15 Folder
4 Battery Status	10 Aperture Value	16 EV Value
5 Resolution	11 File Size	
6 Image Size	12 File Format	

BASIC OPERATION

Using the Mode Dial

This camera provides a convenient Mode Dial that allows you to manually switch between different modes with ease.

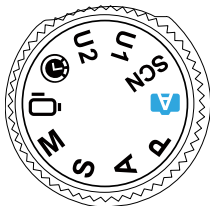

Auto Mode

In this mode, the optimal conditions for taking pictures will be set based on the subject and environment. It is the most commonly used mode for taking pictures.

Auto

The camera automatically adjusts the exposure and focus to ensure the best possible pictures.

Landscape

For landscapes, the camera automatically adjusts the exposure to match the background.

Portrait

Most suitable for capturing people with focus on their faces.

Night Portrait

When you take portraits at night or in low light conditions, the camera automatically adjusts the exposure for people and night scenes.

Backlit Portrait

When the sun or any other light source is behind you, the camera automatically adjusts the foreground exposure to produce the best pictures possible.

Night Landscape

For night scenes, the camera automatically increases the ISO value to compensate for low light.

Macro

The macro setting is ideal for shooting small objects or close-up photos.

Program AE **P**

Under different scenes, the user can switch the ISO and EV value according to personal preference, the camera can automatically set the shutter speed and aperture value.

Aperture Priority **A**

In this mode, you can adjust the aperture size, EV and ISO values. The large aperture is to highlight the object focused through blurring the background, while the small aperture is for clear focus on both the background and the object.

Shutter Priority **S**

Setting allows you to adjust the shutter speed / EV value and ISO value. The camera automatically sets the aperture value based on the shutter speed and ISO value to get the most appropriate exposure value.

Manual Mode **M**

This mode is for manually setting the aperture, shutter speed and ISO value.

Movie Mode

Switch to this mode to record videos.

1. Press down the Shutter Key to start recording.
2. Once you are finished, press the Fast Video Recording Key  or the Shutter Key to stop recording and return to the shooting screen.

Time-lapse Mode

Time-lapse Photo

Capture photos at the selected interval.



Time-lapse Video

A time-lapse video combines images automatically captured at specified intervals.

U1/U2 (User Define) U1 / U2

The user can store frequently used shooting modes / parameters and switch to this mode for a quick adjustment.



1. Select any mode to be stored. Set your desired parameters in the current mode.
2. Press the  key, press the [▲ DISP] / [▼  ] keys to select  and press the  key to enter the menu.
3. Press the [▲ DISP] / [▼  ] keys to select  and press the  / [► ] key twice to enter the menu.
4. Select [U1/U2 Settings] and press the  / [► ] key to enter the menu.

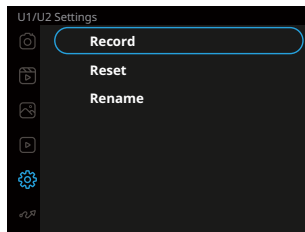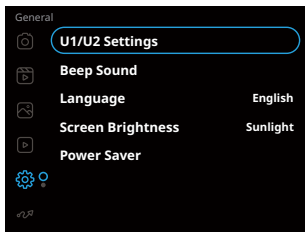

Record

Save the current mode and parameters in U1 or U2 mode.



5. Select [Record] and press the  / [► ] key to confirm. Press the [▲ DISP] / [▼  ] keys to select [U1] or [U2] and press the  key to confirm.

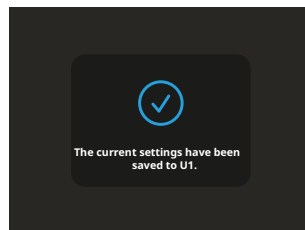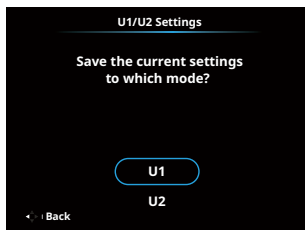

Reset

Reset the parameters in U1 or U2 mode.


- Press the [▲ DISP] / [▼ ⏻] keys to select [Reset] and press the  / [► ⚡] key to confirm. Press the [▲ DISP] / [▼ ⏻] keys to select [U1] or [U2] and press the  key to confirm.

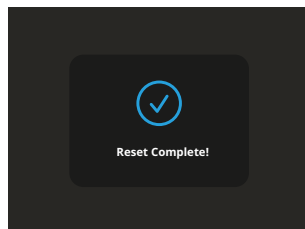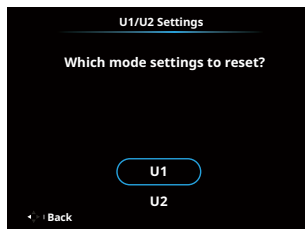

Rename

Re-enter the U1 or U2 mode name. The mode name can be a combination of numbers and/or letters. It can be up to 12 characters.

7. Press the [**▲ DISP**] / [**▼** ] keys to select [Rename] and press the  / [**▶ ⚡**] key to confirm. Press the [**▲ DISP**] / [**▼** ] keys to select [U1] or [U2] and press the  key to confirm.

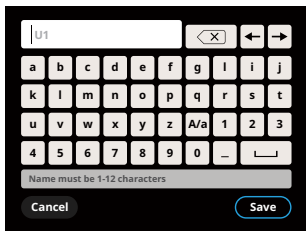

Meanings of Interface Icons	
	Delete the last letter
	Switch the display of letters in capital and lowercase
	Move the cursor
	Input space

8. After re-entering the U1 or U2 mode name, select [Save] / [Cancel] and press the  key to confirm.
9. Turn the Mode Dial to switch to the **U1 / U2** and press the  key to enter the shooting screen.





When the **U1 / U2** mode is used for the first time, it defaults to **M** Mode and its parameters.

Scene Mode SCN

You can select an appropriate mode from the 11 scene modes according to the type of environment you are shooting in. The camera then automatically configures the most appropriate settings for the best possible photos.

1. Rotate the Mode Dial to **SCN** and press the EV SET key to confirm.
2. Press the MENU key highlight Select Scene and press EV SET key to enter scene selection.
3. Press the [$\blacktriangleleft$ 🌸] / [$\blacktriangleright$ ⚡] keys to select a scene and press the EV SET key to confirm.

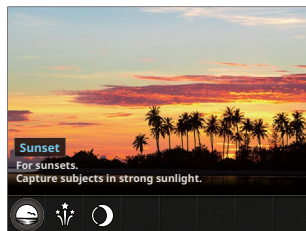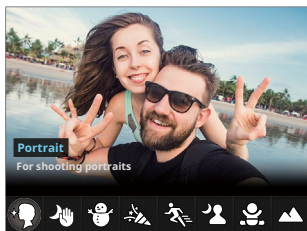

4. If any need of changing the scene, please press the MENU key and select 🗨 , press the EV SET key. Finally the [$\blacktriangleleft$ 🌸] / [$\blacktriangleright$ ⚡] keys to reselect the scene.

Portrait

For shooting portraits.

Handheld Night

Reduce Blur caused by camera shake in low light conditions.

Snow

Reduces underexposure when shooting in snowy conditions.

Party

Capture clear images at night without a tripod.

Sports

For fast-moving subjects. Capture sharp action shots without blur.

Night Portrait

For portraits against night time scenery.

Children

For kids and pets. Flash is disabled for eye protection.

Landscape

Speed adjusted for brilliant images.

Sunsets

For sunsets. Captures subjects in strong sunlight.

Fireworks


For fireworks at night. Slow shutter speed adjusted for brilliant images.

Moon


Capture detailed images of the moon's surface, even when shooting handheld.

Using the Zoom Function

Your camera is equipped with two types of zoom functions: Optical Zoom and Digital Zoom. Toggle the Zoom Lever of the camera to zoom in or out on the subject while taking pictures.

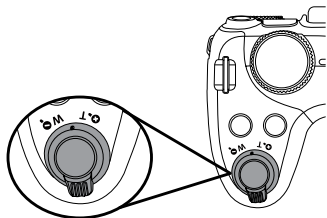

Zoom Lever

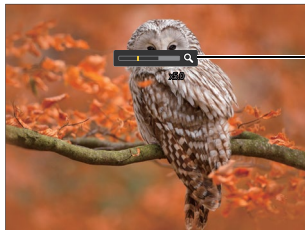

Zoom Indicator

When the Optical Zoom reaches the threshold as Digital Zoom, release and turn the Zoom Lever to T to switch between the Optical Zoom and Digital Zoom.