



■ Menu

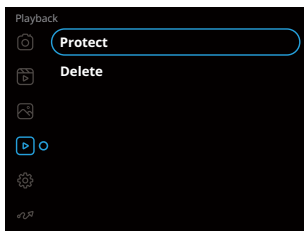

Press the  key to return to the single playback screen.

■ Rotate

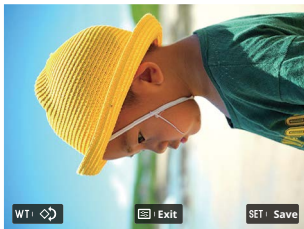


1. When the Zoom Lever is toggled to the **W**  end, the photo rotates counterclockwise; When the Zoom Lever is toggled to the **T**  end, the photo rotates clockwise.
2. Press the  key to save it and overwrite the original.
3. Press the  key to return to the single playback screen.

 Movie files or protected photos cannot be rotated.

■ Red-Eye Reduction


You can use this setting to reduce the red-eye of the picture.

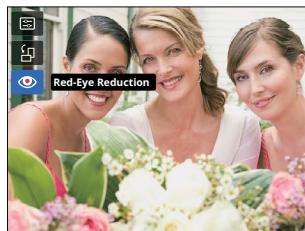

Select  and press the  key to confirm.

Index playback

1. Press the  key to switch to playback mode.
2. Slide the Zoom Lever to the **W**  position to display thumbnail images of the photos and videos on the screen.
3. Slide the Zoom Lever to switch between 3 x 2 and 5 x 3 thumbnails.

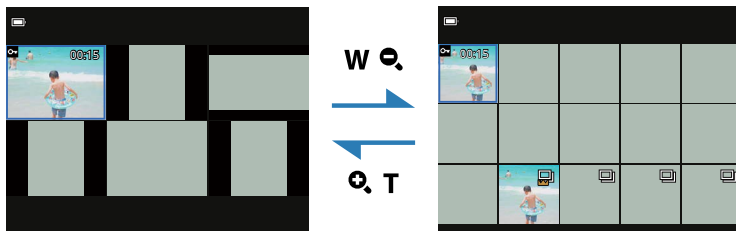

 Press the [ **DISP**] / [ ] / [ ] / [ ] keys or roll the Dial Key to select a picture or video clip to view and press the  key to return to the single playback.

 Icon / Description:

 : Protected file

 : Burst group

 : First image in burst group

4. When a 5 x 3 thumbnail is displayed, slide the Zoom Lever to switch to **W**  to display the Date albums.




-  Press the [**▲ DISP**] / [**▼** ] keys to select a date folder. Press the **(EV SET)** key to enter the playback of the date folder's first image.

5. Press the **(MENU)** key to show / hide the playback Fn menu, press the [**◀** ] / [**▶** ] keys to select a Fn menu.





■ Menu

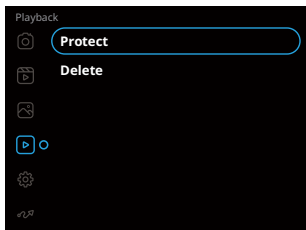


Press the  key to enter the menu, press the  key to return to the index playback screen.

■ Delete: Multi

1. Press the  key to enter the Multiple-selection screen.
2. Press the [ DISP] / [ ] / [ ] / [ ] keys or roll the Dial Key to select the desired file. Press the  key to confirm or uncheck it.
You can also select the files by sliding the Zoom Lever.

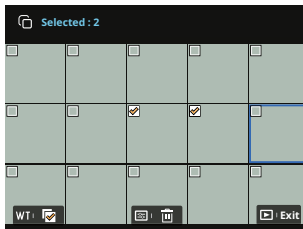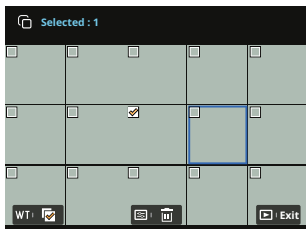


3. After selecting the desired file(s), press the  key to enter the delete screen.
Select [Delete] to delete the files or select  [Back] to return to the Multiple-selection screen.

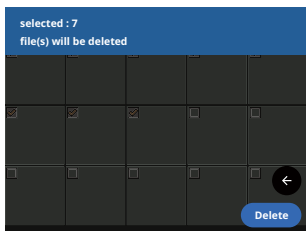

■ Delete: Date

- Press the  key to enter the delete screen of Date albums.
Select [Confirm] to delete the Date folder or select  [Back] to return to the Date albums screen.

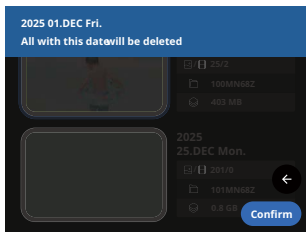

USING THE MAIN MENU

Mode:  **P** **A** **S** **M**   **U1** **U2** **SCN**



1. In each mode, press the  key and select . Press the  key to enter the Main Menu.
 -  [\[Capture\] Menu](#)
 -  [\[Video\] Menu](#)
 -  [\[Photo\] Menu](#)
 -  [\[Playback\] Menu](#)
 -  [\[General\] Menu](#)
 -  [\[Media\] Menu](#)
2. Press the [ **DISP**] / [ ] keys to select the menu to be set and press the  / [ ] key to confirm.
3. Press the [ **DISP**] / [ ] keys to select the item to be set and press the  key to confirm.
4. Press the [ **DISP**] / [ ] keys to select an option and press the  key to confirm.

Capture Menu

There are the following options in the [Capture] Menu:

- [ISO](#)
- [Exposure Metering](#)
- [AEL&AFL](#)
- [WB](#)
- [Focus Area](#)
- [AF Mode](#)
- [Macro](#)
- [Face Detection](#)
- [Digital Zoom](#)
- [OIS](#)
- [WDR](#)
- [Self-timer](#)
- [Burst](#)
- [DISP](#)
- [Custom Keys](#)
- [Dial Key](#)
- [SMART Ring](#)


Press the  / [▶⚡] key to turn the functions on or off.

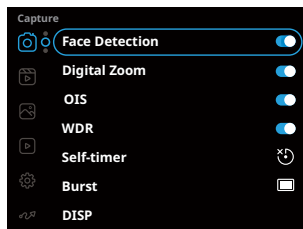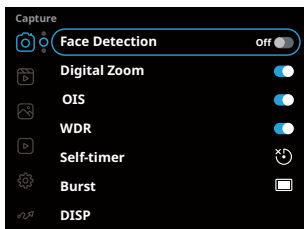


Face Detection

Detects and focuses on faces to make all faces as clear as possible in Photo Mode.

1. Hold the camera steadily and then focus on the object to detect its face. A focus frame will appear at the face on the screen when a face is detected.

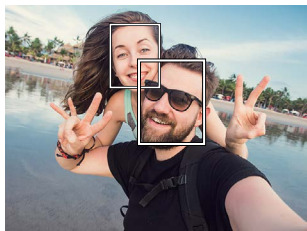

2. Press the Shutter Key half-way down to focus. The LCD will show a green focus frame when the subject is in focus.

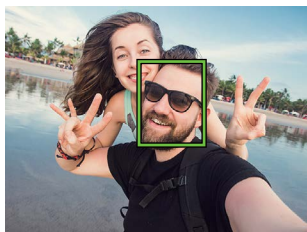

3. Press the Shutter Key all the way down to take pictures.

Digital Zoom

This setting is for adjusting digital zoom. If this function is disabled, only optical zoom can be used.

OIS (Optical Image Stabilization)

This mode can help reduce photo blur caused by unintentional shaking or low light.



Use this image stabilization mode in dark environments.



You may not need OIS when using a tripod.



Shooting in a windy or unstable environment (such as a moving vehicle) may cause blurry images.

WDR (Wide Dynamic Range)

When the camera detects that there is a big contrast in brightness between scenes and such scenes are against the light, it will automatically adjust the brightness and saturation to capture an image that better represents the scene.



When the WDR is activated, Flash and WB functions are disabled.

Options of the [Capture] Menu in the shooting mode (O: Available X: Unavailable)

Options	Shooting Modes																		
		P	S	A	M			SCN											
ISO	X	O	O	O	O	X	O	X	X	X	X	X	X	X	X	X	X	X	X
AEL&AFL	O	O	O	O	X	O	O	O	O	O	O	O	O	O	O	O	O	O	O
Digital Zoom	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O
Face Detection	X	O	O	O	O	O	O	O	X	X	X	X	O	O	X	X	X	X	X
OIS	X	O	O	O	O	X	X	O	X	X	X	X	X	X	X	X	X	X	X
WDR	X	O	O	O	O	O	X	X	O	O	X	O	X	O	X	X	O	X	X
DISP	O	O	O	O	O	X	O	X	O	O	O	O	O	O	O	O	O	O	O
Custom Keys	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O
Dial Key	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O
SMART Ring	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O



If each option is available in the mode set to **U1 / U2**, the option is available in **U1 / U2** mode; otherwise, it is not available.



For other options of the [Capture] Menu, please refer to page 65 of this manual.


Video Menu

There are the following options in the [Video] Menu:

- [Video Size](#)
- [Video Bitrate](#)
- [Time-lapse Video](#)
- [Video Format](#)
- [Anti-shake](#)

Video Size

Set the image resolution used during video recording.

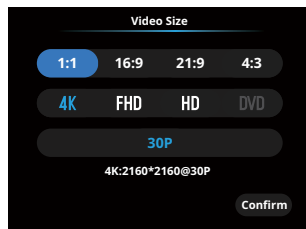

- 4K 1 : 1 2160 x 2160 30 fps
 16 : 9 3840 x 2160 30 fps
 21 : 9 3840 x 1648 30 fps
- FHD 1 : 1 1080 x 1080 60/30 fps
 16 : 9 1920 x 1080 60/30 fps
 21 : 9 1920 x 824 60/30 fps
- HD 1 : 1 720 x 720 60/30 fps
 16 : 9 1280 x 720 60/30 fps
 21 : 9 1280 x 548 60/30 fps
- DVD 4 : 3 640 x 480 240/120 fps

The speed requirements for reading and writing high resolution image pixel images to an SD card are as follows:

No.	Image Pixels	Frames	Recording Time (32GB) About	No.	Image Pixels	Frames	Recording Time (32GB) About
1	3840 x 2160	30	125 minutes	10	1280 x 548	60	563 minutes
2	3840 x 1648	30	125 minutes	11	1280 x 548	30	1127 minutes
3	2160 x 2160	30	125 minutes	12	1080 x 1080	60	250 minutes
4	1920 x 1080	60	250 minutes	13	1080 x 1080	30	501 minutes
5	1920 x 1080	30	501 minutes	14	720 x 720	60	563 minutes
6	1920 x 824	60	250 minutes	15	720 x 720	30	1127 minutes
7	1920 x 824	30	501 minutes	16	640 x 480	120	845 minutes
8	1280 x 720	60	563 minutes	17	640 x 480	240	422 minutes
9	1280 x 720	30	1127 minutes				



* The longest recording time is 29 minutes at one time.



When recording in higher pixel resolutions for extended periods of time, this can cause the camera to generate heat. This is not a camera malfunction.




When the video format is set as 640 x 480 120fps, the shooting time is 30 seconds and the playback time is 2 minutes; When the video format is set as 640 x 480 240fps, the shooting time is 30 seconds and the playback time is 4 minutes.



Sound recording is disabled when 640 x 480 (120fps/240fps) is chosen.

Video Bitrate


Configure the appropriate video bitrate based on the video format.

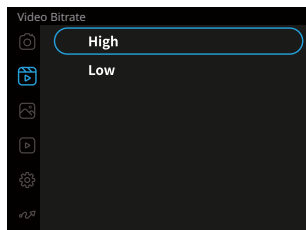

- High: Record high-definition videos.
- Low: Record a standard definition video.

Video Format

Select a format for your video.

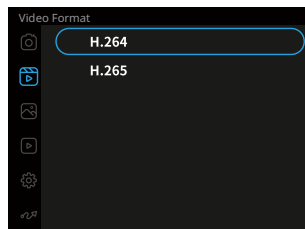

Anti-shake

This mode can help reduce photo blur caused by shakiness of hands, low light and/or slow shutter speed.

-  Use Anti-shake mode in dark environments or when using a slower shutter speed.
-  Shooting in a windy or unstable environment (such as a moving vehicle) may cause blurry images.


Photo Menu

There are the following options in the [Photo] Menu:

- [Image Size](#)
- [Quality](#)
- [Preview](#)
- [AF Assist Beam](#)
- [Time-lapse Photo](#)

Image Size

The size setting refers to the image resolution in pixels. A higher image resolution allows you to print that image in larger sizes without degrading the photo image quality.

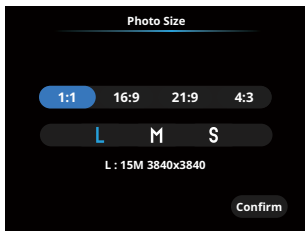


L	20M	4 : 3	5120 x 3840
	17M	3 : 2	5120 x 3413
	15M	16 : 9	5120 x 2880
M		1 : 1	3840 x 3840
	11M	4 : 3	3840 x 2880
	10M	3 : 2	3840 x 2560
	8M	16 : 9	3840 x 2160
S		1 : 1	2880 x 2880
	6M	4 : 3	2880 x 2160
		3 : 2	2880 x 1920
	5M	16 : 9	2880 x 1620
		1 : 1	2160 x 2160



The larger the number of recorded pixels is, the better the image quality becomes. As the number of recorded pixels lessens, you will be able to record more images on a memory card.

Quality

The quality setting can be used to adjust the image compression ratio.

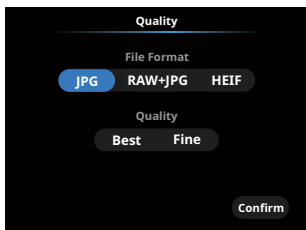

- **JPG**
The image is recorded in the JPG format.
- **RAW+JPG**
A RAW image and a JPG image are created at the same time. This is suitable when you need two image files, a JPG for viewing and a RAW for editing.
- **HEIF (HEIC)**
The image is recorded in the HEIF format.



The computer systems supported by this camera are Windows 32-bit and 64-bit, 8.1 / 10 / 11; MacOS 10.15 / 11 / 12 / 13 / 14.

When the file format of the photos taken is HEIC, in order to ensure normal viewing of the photos, we recommend that you install a HEIC-compatible player on the computer systems supported by this camera.

■ **Windows Photos App**

Built-in support for HEIC on Windows 10 and later.

■ **IrfanView**

Freeware for non-commercial use. It supports Windows 8 / 10 / 11.

Please download and install it from the official website (<https://www.irfanview.com/>).

■ **XnView MP**

It is available for free. It supports Windows 10 / 11 and MacOS 10.3+.


Please download and install it from the official website (<https://www.xnview.com/en/xnviewmp/>).

■ **Apple Preview**

Native support for HEIC on macOS.


Preview

This option enables a quick review of images immediately after capture. Each picture will be displayed on the LCD screen per the selections below.

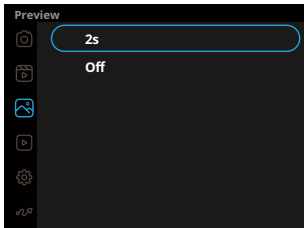

AF Assist Beam

In a darker environment, the AF assist beam setting can be turned on for better focus.

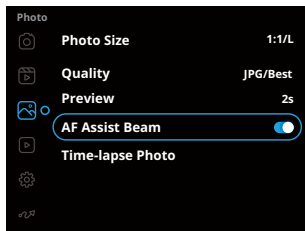


Playback Menu

There are the following options in the [Playback] Menu:

- [Protect](#)
- [Delete](#)

Protect


To prevent any pictures or videos from being accidentally erased, use this setting to lock one or all of the files.

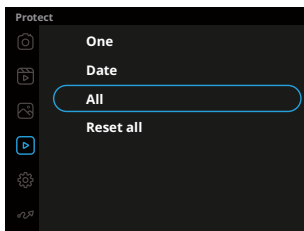

- **One:** Lock the selected photo or video file if they are unprotected; unlock the selected photo or video file if they are protected.
- **Date:** Protect all files in the Date Folder.
- **All:** Lock all files.
- **Reset all:** Cancel all locked files.

Delete

You can delete one or all photo / video files.

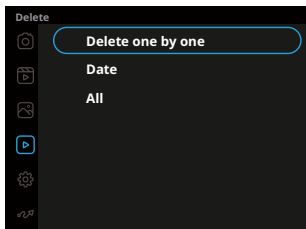

- Delete One by one: Delete photo / video files one by one.
- Date: Delete all files in the Date Folder.
- All: Delete all files.

-  The  indicator means a file is protected. File protection must be removed before a file can be deleted.
-  When a file in the Date Folders is protected, it will be kept but any other files will be deleted.
-  Deleted files will be permanently deleted and will not be able to be recovered or restored.

General Menu


There are the following options in the [General] Menu:

- [U1/U2 Settings](#)
- [Beep Sound](#)
- [Language](#)
- [Screen Brightness](#)
- [Power Saver](#)
- [Firmware](#)
- [Set Time](#)

Beep Sound

With this setting you may adjust the sound volume.


Press the [◀ 🔊] / [▶ 🔊] keys to adjust the sound volume. Press the  / [▶ 🔊] key to turn the functions on or off.

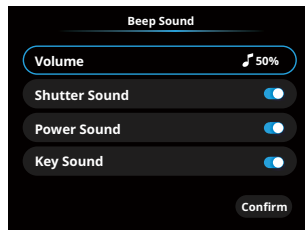

If the sound volume is adjusted to mute, the Shutter Sound, Power Sound and Key Sound will be automatically turned off and cannot be turned on.

Screen Brightness


Use this setting to adjust the brightness of your screen.

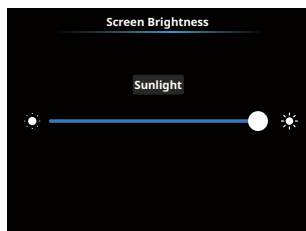

Setting and adjusting your camera's screen brightness to the lowest setting will help conserve your camera's battery life and longevity. Using the screen on the brightest setting will drain your batteries more quickly.

Power Saver


This setting allows you to save power and get the maximum possible running time for your camera's batteries. Turn the LCD and camera off automatically after a consecutive period of inactivity.

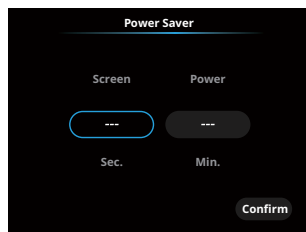


- Screen --- / 30 Sec. / 1 Min. / 5 Min.
- Power --- / 1 Min. / 5 Min. / 10 Min.

Firmware

Use this setting to view the current camera firmware version.

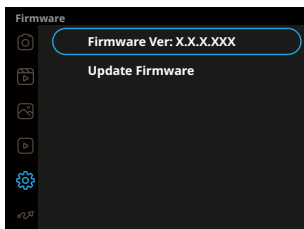

When there is a new firmware version in the memory card, select [Update Firmware] and then select [Yes] to update.

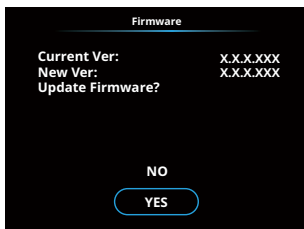

Media Menu

There are the following options in the [Media] Menu:

- [Wireless](#)
- [Custom File Name](#)
- [New Folder](#)
- [Reset](#)

Wireless

Enable image transmission and remote control by connecting smart device with wireless network.

Before utilizing Wireless Mode, please review the following:

- Your smart device operating system version needs to be iOS 16 or higher, or ANDROID 12 or higher. If not, please upgrade your smart device before using the APP.
- Please do not use in places that have a high intensity magnetic field, electrostatic and electric wave interference (for example near a microwave oven), which may cause failure in receiving signals.


- To maintain a connection, please keep the camera within 10 meters (32.8 feet) without signal shielding interference.
- Please do not use wireless network connection functionality on a plane.
- The camera and the smart device can only be connected one to one.

Downloading the APP package:

Download a dedicated installation package from the application store (APP name: Minolta Dimage) and then install it.


- ANDROID devices: Search and download the APP “Minolta Dimage” in Google play, and install it following the instructions on the interface.
- iOS devices: Search and download the APP “Minolta Dimage” in APP store, and install it following the instructions on the interface.

Press the  / [] key to turn this function on or off.

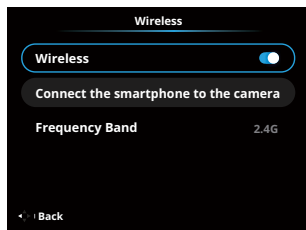

Connect the smartphone to the camera

Select [Connect the smartphone to the camera] and press the  / [] key to confirm. The SSID (not modifiable) of your camera and the random connection password are displayed on the screen.

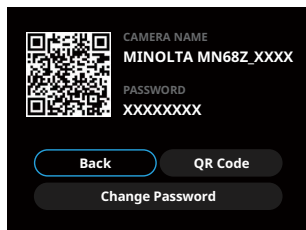

- Back: Back to previous screen.
- QR Code: Use your smartphone to scan the QR code on the screen of your camera to connect it.
- Change Password: Create a new random connection password.

-  If the scan connection fails, you can manually enter the connection password displayed on the screen.
-  If the camera successfully connects to the APP (Minolta Dimage) on your smartphone, a connection success icon  will display on the camera.
-  Refer to the "Minolta Dimage User Manual" located on the web:




<https://www.minoltadigital.com/>

Frequency Band


Only displays the network frequency band.

Custom File Name

Edit the name of the photo and video file.

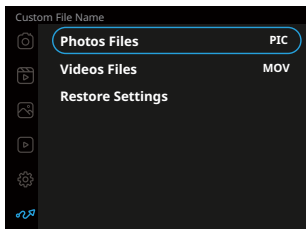

The file name consists of 1 to 3 characters and can be made up of uppercase English letters or numbers.

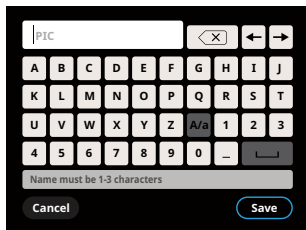


Meanings of Interface Icons


	Delete the last letter
	Move the cursor

New Folder

Create a new directory and reset file numbering.

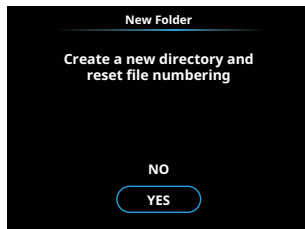


Reset

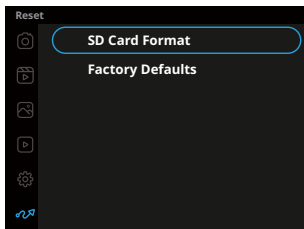


SD Card Format

Please note: formatting enables you to delete all contents on the memory card, including protected photo and movie files.

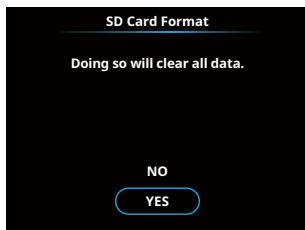

Factory Defaults

Use this setting to restore the camera to its original default settings.

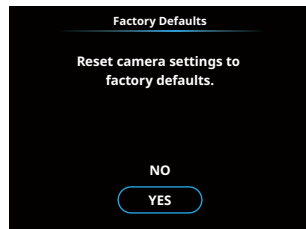

CONNECTION SETTINGS

Connecting to a Computer


You can use a USB cable to connect the camera and copy (transmit) photos to a computer or other device.

Transferring Files to your Computer

The computer will automatically detect the camera as a removable drive. Double-click the “My Computer” icon on the desktop to locate the removable drive and to copy folders and files in the drive to a directory on your PC as you would copy any typical folder or file.

Follow the steps below to connect the camera to a computer:

1. Make sure the camera and the computer are turned on.
2. Connect one end of the supplied USB cable to the USB port on your camera.
3. Connect the other end of the cable to an available USB port on your computer.
4. After the transmission is complete, disconnect the USB cable according to your computer manufacturer’s instructions specifying how to safely remove USB devices.

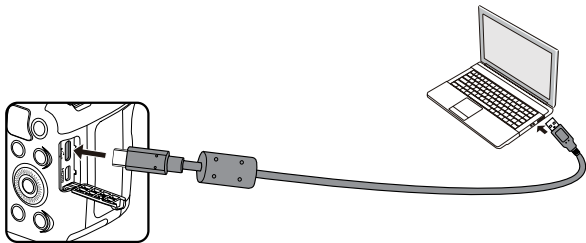

Viewing Images on Computer

Display transferred images on a standard image viewer etc. that an OS has. For details about viewing images, see the help menu on the viewer.

Supported OS==>Windows: Windows® 11 / Windows® 10 / Windows® 8.1

Macintosh: Mac OS X 10.15, OS X 11 / 12 / 13 / 14


Connecting HDMI-Ready TV

The product is capable of realizing movie and photo playback on a TV through an HDMI cable.

HDMI (High Definition Multimedia Interface) is a fully digital audio/video transmission interface, through which uncompressed audio and video signals are transmitted.

Follow the steps below to connect the camera to the TV:

1. Use the cable with high resolution output terminal (which should be purchased separately) to connect the camera to the television which meets HDMI standards.
2. The camera will be automatically detected by the TV.
3. After connecting via HDMI, the camera enters Playback Mode.

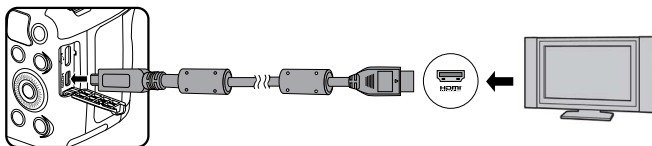

Make sure the camera and the TV are both turned on before connecting.

APPENDICES

Product Specifications



[Design and specifications are subject to change without notice.]

Image Sensor	Type	1/2.3"BSI CMOS
	Effective Pixels	20.68 Megapixels
	Total Pixels	21.14 Megapixels
Lens	Focal Length	4.2mm (Wide) ~ 285.6mm (Tele)
	35 mm Film Equivalent	23.4mm (Wide) ~ 1591.2mm (Tele)
	F number	F2.9 (Wide) ~ F6.7 (Tele)
	Lens Construction	14 groups 18 elements
	Optical Zoom	68x
	Focusing Range	Normal: (Wide) 50cm ~ ∞, (Tele) 250cm ~ ∞; Macro: 1cm ~ ∞ (Wide Only)
Autofocus System		TTL Autofocus
Electronic Viewfinder		Yes (-4 ~ +2 diopter)
Anti-Handshake		Optical Image Stabilization
Digital Zoom		4x Digital Zoom (Combined Zoom: 272x)

Number of Recording Pixels	Still Image	(4:3) 20MP: 5120 x 3840 11MP: 3840 x 2880 6MP: 2880 x 2160	(3:2) 17MP: 5120 x 3413 10MP: 3840 x 2560 6MP: 2880 x 1920	(16:9) 15MP: 5120 x 2880 8MP: 3840 x 2160 5MP: 2880 x 1620	(1:1) 15MP: 3840 x 3840 8MP: 2880 x 2880 5MP: 2160 x 2160
	Movie	(16:9) 3840 x 2160 (30fps), 1920 x 1080 (60fps/30fps), 1280 x 720 (60fps/30fps) (21:9) 3840 x 1648 (30fps), 1920 x 824 (60fps/30fps), 1280 x 548 (60fps/30fps) (1:1) 2160 x 2160 (30fps), 1080 x 1080 (60fps/30fps), 720 x 720 (60fps/30fps) (4:3) High-Speed Movie: 640 x 480 (240fps/120fps)			
Image Compression		Best, Fine			
DCF (Ver 1.1)		Yes			
File Format	Still Image	Exif 2.3 (JPEG), HEIF (HEIC), RAW + JPEG (Best)			
	Movie	MP4 [Image: H.264 / H.265; Audio: AAC (Stereo)]			
Shooting Modes		Auto Mode, Program AE, Shutter Priority, Aperture Priority, Manual Mode, Movie Mode, Time-lapse Mode, U2, U1, Scene Mode			

Scene Mode	Portrait, Handheld Night, Snow, Party, Sports, Night Portrait, Children, Landscape, Sunsets, Fireworks, Moon
Detection Features	Face Detection
Red-Eye Reduction	Yes
WDR	Yes
LCD Display	3.0 inch (460k Pixels)
Image Auto Rotation	Yes
ISO Sensitivity	Auto (100~1600), ISO 100/200/400/800/1600/3200
Focus Mode	Center-AF, Multi-AF, Face Tracking, Manual Focus
Focusing Area Selection	Single Area Focusing, 25-Area-Focusing, Face Detection, Manual Area Focusing
Exposure Metering Method	Average Metering, Center Metering, Spot Metering, Face AE
Exposure Control Method	Program AE (AE-Lock Available), Shutter Priority , Aperture Priority
Exposure Compensation	± 3 EV in 1/3 Step Increments
Shutter Speed	1/2000 ~ 30 Seconds
Burst	Approx. 5fps (Full Resolution)
Playback Mode	Single Playback, Index Playback (6/15 Thumbnails), Date Folder, Burst Folder, Zoom (Approx. x2 ~ x8)

White Balance		AWB, Daylight, Cloudy, Shade, Incandescent(warm), Incandescent(cool), Fluorescent(warm), Fluorescent(cool), Manual WB1, Manual WB2, Color Temp. (1900K ~ 10000K)
Flash	Flash Method	Pop-up (Auto)
	Flash Modes	Force Off, Flash On, Auto Flash, Red-Eye Reduction, Slow Sync., Slow Sync.+Red-Eye Reduction
Recording Media		SD / SDHC / SDXC Card (Up to 1.5TB Support) [MMC Card not supported]
Multi-Language Support		11 Languages
Jacks		USB 2.0 (Type-C), HDMI (Type D)
Wireless		Yes
Remote Viewfinder		Yes (via iOS/ANDROID Smart Device)
Power		Rechargeable Li-ion Battery LB-070, 7.4V 1020mAh, In-Camera Charging
Shooting Capability (Battery Performance)		Approx. 270 Shots (Based on CIPA Standards)
Operation Environment		Temperature: 0 ~ 40°C, Humidity: 0 ~ 90%
Dimensions (W × H × D)		Approx. 126.0 x 89.0 x 114.3 mm (Based on CIPA Standards)
Weight		Approx. 602g (Body Only)

Prompts and Warning Messages

Message	Description	Action
Change Successful	This message will display after editing the image in single playback.	This message will disappear after 4 seconds or press any key to dismiss the message.
Protected! Undeletable!	This message will be displayed on the image immediately when executing delete action to the protected files.	
This image cannot be edited.	The file format does not support editing or the edited file cannot be edited again.	
No Red-Eye Detected!	No red-eye detected when using red-eye removing in single playback.	
NO FILES	There is no file in the camera or the card. This message will display when pressing the Playback Key.	
All of files are protected.	This message will be displayed when all of files executing protect action.	
All protected files were reset successfully.	Unprotect all files.	This message will disappear after 5 seconds and return the previous image.
Temperature Too High! The camera needs to rest for a while before it can be used again.	The battery temperature is too high.	

Message	Description	Action
Please update firmware after the battery is fully charged!	The firmware cannot be updated when power is less than 50%.	This message will disappear after 5 seconds and return the previous image.
USB Mode: Mass Storage Export files to PC or mobile. When camera is plugged into mobile, you can tap the [App>Import] to download files to mobile via SD card in camera.	Connect the USB cable and switch to Mass Storage Mode.	The message is displayed until remove the USB cable.
Lens obstruction. Please re-start camera.	The lens is jammed or some foreign object is preventing the lens from functioning properly.	The camera will automatically shut down after 5 seconds. Restart it to reset the lens.
Warning ! Battery exhausted.	Warning before power off when the camera battery is exhausted.	The camera will automatically shut down in 5 seconds.
Connection failed!	Failure to connect to your computer or TV-system.	Remove USB cable or HDMI cable.
The app is in operation, the camera cannot sync.	This message will display when setting the camera's shooting functions and parameters in the app.	Wait until the app finishes this operation.

Message	Description	Action
Cannot change settings in this mode.	This message will display when the function of Smart Ring conflicts with the shooting mode.	This message will disappear after 5 seconds and return the previous image.
Exceeded maximum folder limit.	This indicates that the memory card exceeded the maximum number of folders (999).	
This device is about to shut down.	The battery temperature is too high.	The camera will automatically shut down after 5 seconds. Let the battery cool before attempting to use the camera again.
Long exposure, please wait~	A warning display when the exposure time exceeds 2 seconds.	The message disappears after 2 seconds.
No card present.	The memory card is not inserted. The message will be displayed until select [OK] to return to shooting.	Turn off the camera and insert a SD card.
Write Protect!	The memory card is locked. The message will be displayed until select [OK] to return to shooting.	Remove memory card and switch the lever on the side of card to UNLOCK.
Card Full!	Indicates that the memory card is full. The message will be displayed until select [OK] to return to shooting.	Replace memory card with another that has available memory.

Message	Description	Action
Card is not formatted. Please format card with this camera.	The message will appear when an error occurs in the memory card.	Select [Format] to format the memory card or select [NO] to return to shooting.
V10 cards can support 4K video. V30 SD cards are recommended for stable 4K/60P video recording with no lag.	Use a memory card with write Class 30 or higher to improve performance.	The message will be displayed until select [OK] to return to shooting.
This is an outdated SD card, please replace. SDXC and V10 or higher is better.	Use a SDXC card with write Class 10 or higher.	The message will be displayed until select [OK] and shut down the camera.
Exceeded maximum folder limit. Replace SD card and check storage space.	Indicates that the memory card is full.	The message will be displayed until select [EXIT] to return to shooting or select [NEXT] to continue.
If another SD card is inserted, please press [Reset].	This indicates that the memory card exceeded the maximum number of folders.	The message will be displayed until select [NO] to return to shooting or select [RESET] to reset the folder number.
Unable to Format SD Card. Your SD card might be defective.	Formatting failed twice.	The message will be displayed until select [OK] to return to shooting.

Troubleshooting

Problem	Possible causes	Solution
Camera does not turn on	■ The battery has been depleted. ■ The battery is not inserted correctly.	■ Replace a fully charged battery or a new battery. ■ Correctly reinstall the battery.
Camera turns off suddenly during operation	■ The battery has been depleted.	■ Replace a fully charged battery or a new battery. ■ Make sure the camera is actually shutting off and not entering Power Save Mode, where the LCD will turn off after the camera has been idle for a period of time.
The picture is blurry	■ Camera shakes while taking a picture.	■ Turn on OIS Feature. ■ Please use tripod for high magnification (above 15X) optical zoom. If you are holding the camera, be sure to use both hands.
Images and video files cannot be saved	■ The memory card is full. ■ The memory card is locked.	■ Use another memory card or delete unnecessary files. ■ Unlock the memory card.

Problem	Possible causes	Solution
Saving data to memory card is slow	■ Using a memory card below Class 10 may result in slower recording times.	■ Use a memory card with write Class 10 or higher to improve performance.
Cannot write to the memory card	■ The memory card has been locked.	■ Release the write lock of the memory card or replace with another card.
Too many movies to process	■ The number of pictures or folders in the memory card exceed the specifications, so the playback of data folder can not be displayed.	■ Delete unwanted files.
The flash  flashes on the LCD screen.	■ Current shooting environment requires flash.	■ Turn on flash.




When shooting with stacked filters attached, the corners of the photo may turn dark (vignetting effect) because the filter holder blocks light from reaching the camera image sensor; especially, at wide angle zoom control settings. Please take test shots and review the results when using stacked filters. (Filter size : $\Phi 52\text{mm}$)



Please enter the new password on smart device after changing wireless network password. Some models of smart device will remember the wireless network password previously entered, so please clear the old password on smart device manually before connection (For different models, this operation may be varied, please subject to your user manual).

iOS System

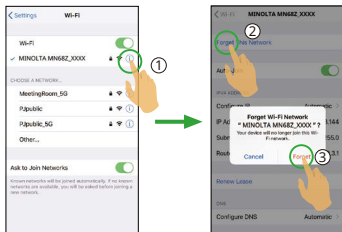

ANDROID System





MINOLTA®

Minolta is a registered trademark of JMM Lee Properties, LLC and is used in the United States by Elite Brands Inc. under license.

40 Wall Street, 61st Floor, New York, NY 10005 USA

www.minoltadigital.com • www.elitebrands.com



Copyright © 2025 Elite Brands Inc.



MINOLTA®

DIMAGE
MN68Z