

Options in the shooting mode (O: Available X: Unavailable)

Options	Shooting Modes																		
		P	S	A	M				SCN										
																			
	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O
	X	O	O	O	O	X	X	X	O	X	O	O	O	X	O	X	X	O	X
	X	X	X	X	X	X	O	O	X	X	X	X	X	X	X	X	X	X	X
	X	X	X	X	X	O	X	X	X	X	X	X	X	X	X	X	X	X	X
	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O
	X	O	O	O	O	O	O	O	X	X	X	X	X	X	X	X	X	X	X
	X	O	O	O	O	O	O	O	X	X	X	X	X	X	X	X	X	X	X
	X	O	O	O	O	X	O	X	O	O	O	O	O	O	O	O	O	O	O
	X	O	O	O	O	X	X	X	O	X	O	O	X	X	X	X	O	X	X
	O	O	O	O	O	O	O	O	O	O	O	O	X	O	X	O	O	O	O
	X	O	O	O	O	O	O	O	O	X	X	O	X	X	X	X	X	X	X



If each option is available in the mode set to **U1 / U2**, the option is available in **U1 / U2** mode; otherwise, it is not available.

 
 
Using Playback Key

Viewing Photos and Videos

For viewing taken photos and videos on the LCD:



1. After pressing the  key, the last photo or video clip taken will be displayed on the LCD.
2. Press the [] / [] keys to scroll through the photos or video clips stored in the built-in memory or on the Memory Card.
3. To play a selected video clip, press the  key to enter the movie playback mode.

An operation guide appears on the screen when playing back a burst file. Press the appropriate keys to enable the corresponding functions.

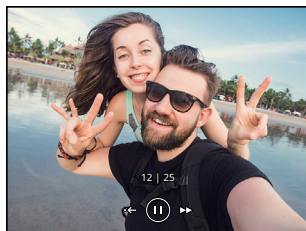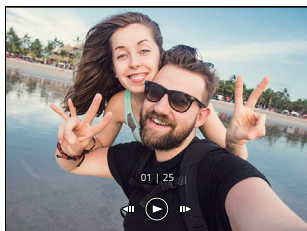

Paused		Under Playback	
Key/Icon	Description	Key/Icon	Description
 	Frame backward	 	Return back to the beginning of the video
 	Play with 8 fps	 	Pause
 	Frame forward	 	Fast playback with 12 fps

  An operation guide appears on the screen when playing back a video. Press the appropriate keys to enable the corresponding functions.

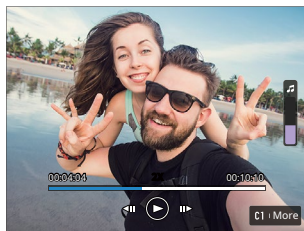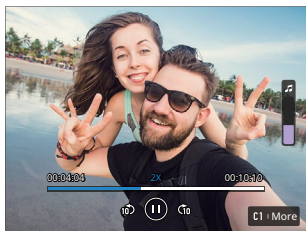


Under Playback		Paused	
Key/Icon	Description	Key/Icon	Description
 	Rewind 10s	 	Frame backward
 	Pause	 	Play
 	Fast forward 10s	 	Frame forward
  	Decrease volume (Mute)	 AF 	Increase volume


 Long press the [] / [] keys to play the video at double speed under Playback.

 Press the  key or  key to exit the playback screen and return to the single playback screen.

 
Screenshot under paused:

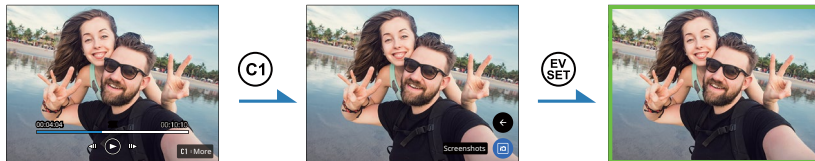

Replay under playback:

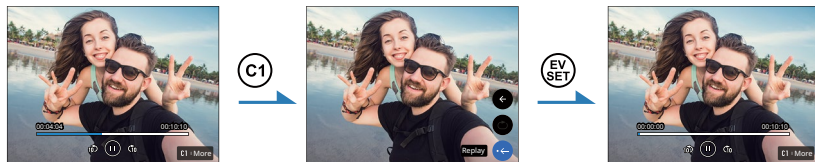 


Auto play under playback:

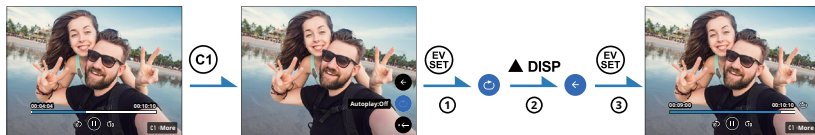 


Using Zoom Playback (for still pictures only)

 When playing back photos, you can use the Zoom Lever to zoom in the photos 2 to 8 times or press the  key to zoom in the photos 2 times.

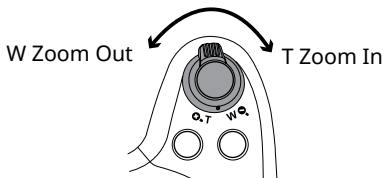

 1. Press the  key to switch to Playback Mode.
2. Press the [] / [] keys to select a photo to be zoomed in.
3. Rotate the Zoom Lever to  position to zoom in the photo. The magnified area and times of the photo will display on the LCD.

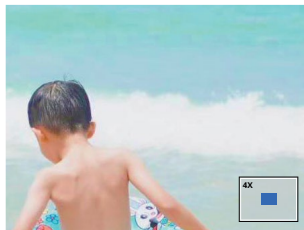

4. Press the [] / [] / [] / [] keys to navigate and select a portion of the photo to be zoomed in on.
5. Press the  key to return the image to its original scale.



 
Movie images cannot be magnified.

Deleting a Photo or Video

In Playback Mode, press the [▼ ◯] key to delete photos and videos.

To delete photos or videos:

1. Press the [◻] key to switch to playback mode.
2. Press the [◀] / [▶] keys to select the photos or videos to be deleted.
3. Press the [▼ ◯] key and the deletion screen is displayed.

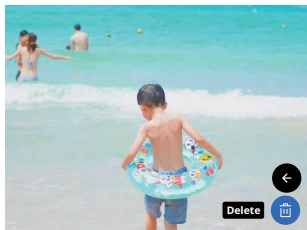

4. Press the [▲ DISP] / [▼ ◯] keys to select [Delete] or [Back] and press the [EV SET] key to confirm.



 
Erased photos/video clips cannot be recovered.




Please refer to page 82 for instructions on deleting more than one image at a time.

Single playback

1. Press the [◻] key to switch to playback mode.
2. Press the [◀] / [▶] keys to select the photos or videos you want.
3. Press the [◻] key to show/hide the playback Fn menu, press the [▲ DISP] / [▼ ◯] keys to select a Fn menu and press the [EV SET] key to confirm.

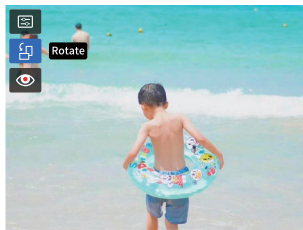


■ Menu

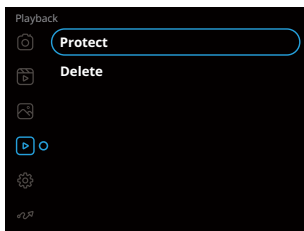 

Press the  key to return to the single playback screen.

 ■ Rotate

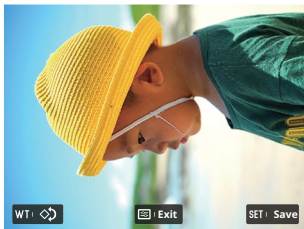

1. When the Zoom Lever is toggled to the **W**  end, the photo rotates counterclockwise; When the Zoom Lever is toggled to the **T**  end, the photo rotates clockwise.
2. Press the  key to save it and overwrite the original.
3. Press the  key to return to the single playback screen.



Movie files or protected photos cannot be rotated.

■ Red-Eye Reduction

 
You can use this setting to reduce the red-eye of the picture.



Select  and press the  key to confirm.

Index playback

1. Press the  key to switch to playback mode.
2. Slide the Zoom Lever to the **W**  position to display thumbnail images of the photos and videos on the screen.
3. Slide the Zoom Lever to switch between 3 x 2 and 5 x 3 thumbnails.

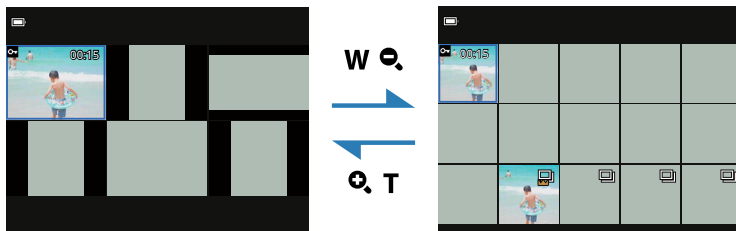

 Press the [ DISP] / [ ] / [ ] / [ ] keys to select a picture or video clip to view and press the  key to return to the single playback.

 Icon/Description:

 : Protected file

 : Burst group

 : First image in burst group

4. When a 5 x 3 thumbnail is displayed, slide the Zoom Lever to switch to **W**  to display the Date albums.

 


-  Press the [**▲ DISP**] / [**▼** ] keys to select a date folder. Press the **(EV SET)** key to enter the playback of the date folder's first image.

5. Press the **(E)** key to show/hide items, press the [**◀** ] / [**▶** ] keys to select an item.





■ Menu

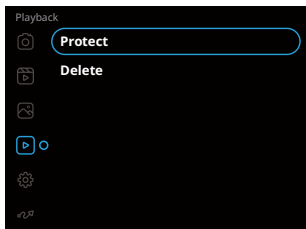


Press the  key to enter the menu, press the  key to return to the index playback screen.

■ Delete: Multi

  1. Press the  key to enter the Multiple-selection screen.
2. Press the  /  /  /  /  keys to select the desired file. Press the  key to confirm or uncheck it.
You can also select the files by sliding the Zoom Lever.

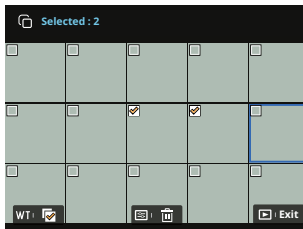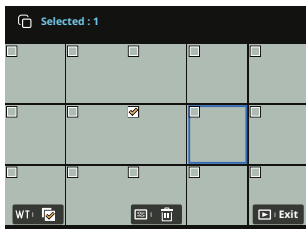


 3. After selecting the desired file(s), press the  key to enter the delete screen.
Select [Delete] to delete the files or select  [Back] to return to the Multiple-selection screen.

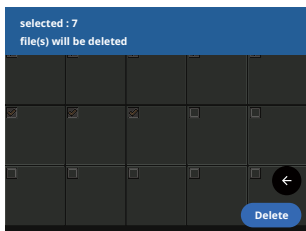

■ Delete: Date

 - Press the  key to enter the delete screen of Date albums.
Select [Confirm] to delete the Date folder or select  [Back] to return to the Date albums screen.

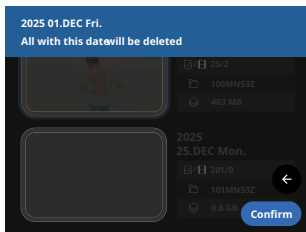

USING THE MAIN MENU

Mode:  **P A S M**   **U1 U2 SCN**

 
 
1. In each mode, press the  key and select . Press the  key to enter the Main Menu.
 -  [\[Capture\] Menu](#)
 -  [\[Video\] Menu](#)
 -  [\[Photo\] Menu](#)
 -  [\[Playback\] Menu](#)
 -  [\[General\] Menu](#)
 -  [\[Media\] Menu](#)
2. Press the [ **DISP**] / [ ] keys to select the menu to be set and press the  / [ ] key to confirm.
3. Press the [ **DISP**] / [ ] keys to select the item to be set and press the  key to confirm.
4. Press the [ **DISP**] / [ ] keys to select an option and press the  key to confirm.

Capture Menu

There are the following options in the [Capture] Menu:

- [ISO](#)
- [Exposure Metering](#)
- [AEL&AFL](#)
- [WB](#)
- [Focus Area](#)
- [AF Mode](#)
- [Macro](#)
- [Face Detection](#)
- [Digital Zoom](#)
- [OIS](#)
- [WDR](#)
- [Self-timer](#)
- [Burst](#)
- [DISP](#)
- [Custom Keys](#)

Press the  / [ ] key to turn the functions on or off.

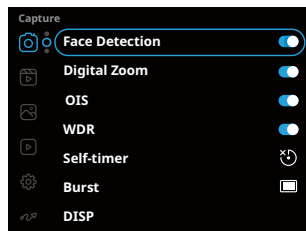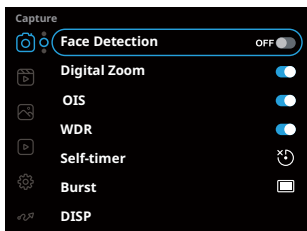


Digital Zoom

This setting is for adjusting digital zoom. If this function is disabled, only optical zoom can be used.


Face Detection

Detects and focuses on faces to make all faces as clear as possible in Photo Mode.

 1. Hold the camera steadily and then focus on the object to detect its face. A focus frame will appear at the face on the screen when a face is detected.

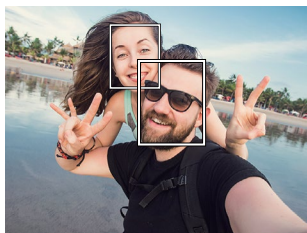

 2. Press the Shutter Key half-way down to focus. The LCD will show a green focus frame when the subject is in focus.

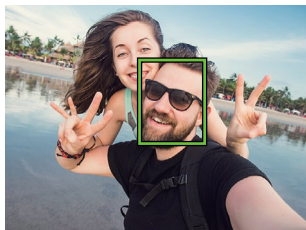

3. Press the Shutter Key all the way down to take pictures.

OIS (Optical Image Stabilization)

This mode can help reduce photo blur caused by unintentional shaking or low light.

-  Use this image stabilization mode in dark environments.
-  You may not need OIS when using a tripod.
-  Shooting in a windy or unstable environment (such as a moving vehicle) may cause blurry images.