

 
 
Using the C1 Key

If you assign frequently used functions to the C1 Key () in advance, you can quickly call up those functions simply by pressing the key on the shooting screen.

Custom Keys Settings

You can set and check the functions assigned to each custom key via the following procedure:

1. Press the  key and select . Press the  key to enter the Main Menu, select  and press the  key to confirm.
2. Press the [  ] key twice and press the  / [ ] key to enter the menu.
3. Press the [ **DISP**] / [  ] key to select [Custom Keys] and press the  / [ ] key to enter the menu.

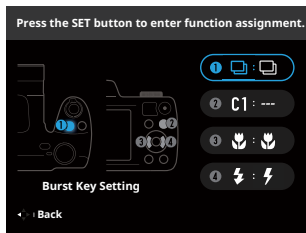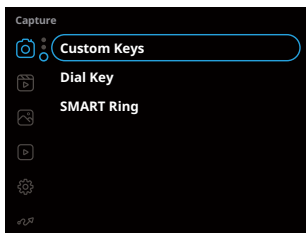

4. Press the [ **DISP**] / [  ] keys to select the key to set and press the  key to enter the menu.

5. Press the [ **DISP**] / [  ] keys to select the options and press the  key to confirm.

Custom Keys	Default	Configurable functions		
Burst Key	Burst	Unassigned	AEL&AFL	OIS
C1 Key	Unassigned	Aperture	WB	Flash
		Shutter	Focus Area	Burst
Flash Key	Flash	EV	AF Mode	WDR
Macro Key	Macro	ISO	Macro	Self-timer
		Exposure Metering	Face Detection	Photo Size

6. Press the  key and the shooting screen will appear.

7. Press the corresponding key to quickly enter the selected menu screen. Press the [ ] / [ ] keys to select the option and press the  key to confirm.

Using the Menu Key

Modes:  **P** **A** **S** **M**   **U1** **U2** **SCN**

 
1. In each mode, press the  key to enter the Function Menu.

-  [Menu](#)
-  [Burst](#)
-  [Time-lapse Photo & Time-lapse Video](#)
-  [WDR Video](#)
-  [Exposure Metering](#)
-  [Focus Area](#)
-  [WB](#)
-  [AF Mode](#)
-  [Flash](#)
-  [Self-timer](#)

 Different features are enabled for each mode, please refer to page 65 of this manual for details.

2. Press the [ **DISP**] / [  ] / [ ] / [ ] keys to select the function to be set and then press the  key to confirm.
3. Press the [ ] / [ ] keys to select options of the function to be set and then press the  key to confirm.


Time-lapse Photo & Time-lapse Video

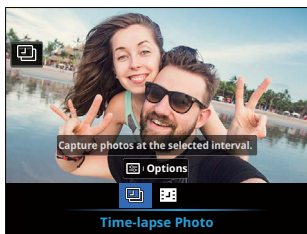

Time-lapse Photo

Time-lapse Video

 A time-lapse video combines images automatically captured at specified intervals.

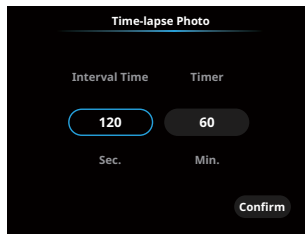


Press the  key to enter the menu. Press the [ ] / [ ] keys to select the item to set and press the [ **DISP**] / [ ] keys or roll the Dial Key to select a value. Press the  key to confirm.

-  Time-lapse Photo
Capture photos at the selected interval.
Interval Time: 1~120 Sec.
Timer: Off, 15Min., 30 Min., 60 Min.
-  Time-lapse Video
A time-lapse video combines images automatically captured at specified intervals.
Interval Time: 1~120 Sec.
Video Segment: 3 Sec., 5 Sec., 10 Sec.
Timer: Off, 15Min., 30 Min., 60 Min.

WDR Video

 
Active wide dynamic range in Movie Mode ().

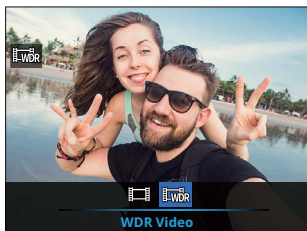

-  Normal Video
-  WDR Video

Exposure Metering

 
Use this setting to select the “target” size of the camera’s field of view to be metered.

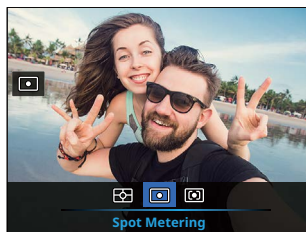

-  Average Metering
Evaluates the light intensity at multiple points in the frame and automatically determines the best value for the light meter.
-  Spot Metering
For metering the block displayed in the center of the screen.
-  Center Metering
For metering the object in the center of the screen.

Focus Area

 
In different photo shooting modes, you can select different focus methods.

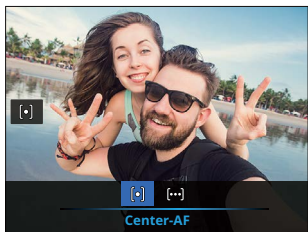

-  **Center-AF**
The focus frame appears on the center of the LCD to help you focus on the subject.
-  **Multi-AF**
The camera automatically focuses the subject in a wide area to find the focus point.

WB

 
The white balance function allows adjustment of the color temperature for different light sources.

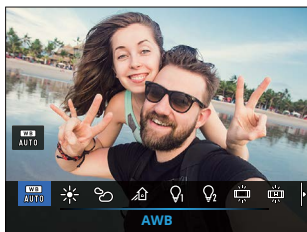

-  AWB
-  Daylight
-  Cloudy
-  Shade
-  Incandescent(warm)
-  Incandescent(cool)
-  Fluorescent(warm)
-  Fluorescent(cool)
-  Manual WB1
-  Manual WB2
Set WB according to the current light source, press the  key to set.
-  Color Temp. (1900K~10000K)
Press the  key to enter and turn the Dial Key to adjust the color temperature value.
Press the  key to confirm.

AF Mode

 Selects the focus method to suit the subject.

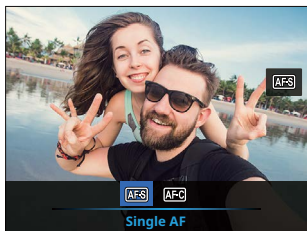

-  **Single AF**
Locks the focus once focusing is complete. Use this when the subject is motionless.
-  **Cont.AF**
Continues focus. Use this when the subject is in motion.

Using the Fast Video Recording Key

In photo shooting mode, press the  key to begin recording video. Once you are finished, press the  key again to stop recording. The camera will save the video and return to the shooting screen.



During recording, if the camera temperature is too high (above 158° F / 70° C), a recording interruption may occur and a message “Temperature Too High! The camera needs to rest for a while before it can be used again.” pops up on the screen.

Options in the shooting mode (O: Available X: Unavailable)

Options	Shooting Modes																			
		P	A	S	M				SCN											
																				
	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	
	X	O	O	O	O	X	X	X	O	X	O	O	O	X	O	X	X	O	X	
	X	X	X	X	X	X	O	O	X	X	X	X	X	X	X	X	X	X	X	
	X	X	X	X	X	O	X	X	X	X	X	X	X	X	X	X	X	X	X	
	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	O	
	X	O	O	O	O	O	O	O	X	X	X	X	X	X	X	X	X	X	X	
	X	O	O	O	O	O	O	O	X	X	X	X	X	X	X	X	X	X	X	
	X	O	O	O	O	X	O	X	O	O	O	O	O	O	O	O	O	O	O	
	X	O	O	O	O	X	X	X	O	X	O	O	X	X	X	X	O	X	X	
	O	O	O	O	O	O	O	O	O	O	O	O	X	O	X	O	O	O	O	
	X	O	O	O	O	O	O	O	O	X	X	O	X	X	X	X	X	X	X	



If each option is available in the mode set to **U1** / **U2**, the option is available in **U1** / **U2** mode; otherwise, it is not available.

 
 
Using Playback Key

Viewing Photos and Videos

For viewing taken photos and videos on the LCD:



1. After pressing the  key, the last photo or video clip taken will be displayed on the LCD.
2. Press the [] / [] keys to scroll through the photos or video clips stored in the built-in memory or on the Memory Card.
3. To play a selected video clip, press the  key to enter the movie playback mode.

An operation guide appears on the screen when playing back a burst file. Press the appropriate keys to enable the corresponding functions.

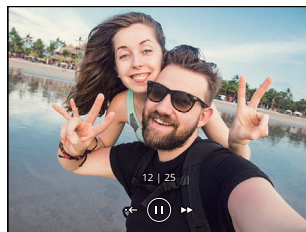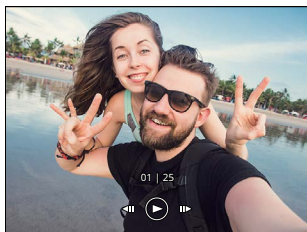

Paused		Under Playback	
Key / Icon	Description	Key / Icon	Description
 	Frame backward	 	Return back to the beginning of the video
 	Play with 8 fps	 	Pause
 	Frame forward	 	Fast playback with 12 fps

  An operation guide appears on the screen when playing back a video. Press the appropriate keys to enable the corresponding functions.

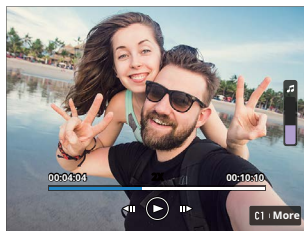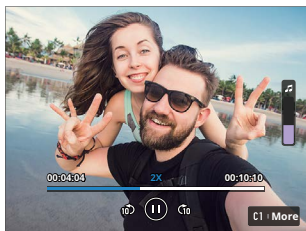


Under Playback		Paused	
Key / Icon	Description	Key / Icon	Description
 	Rewind 10s	 	Frame backward
 	Pause	 	Play
 	Fast forward 10s	 	Frame forward
  	Decrease volume (Mute)	 	Increase volume


 Long press the [] / [] keys to play the video at double speed under Playback.

 Press the  key or  key to exit the playback screen and return to the single playback screen.

 
Screenshot under paused:

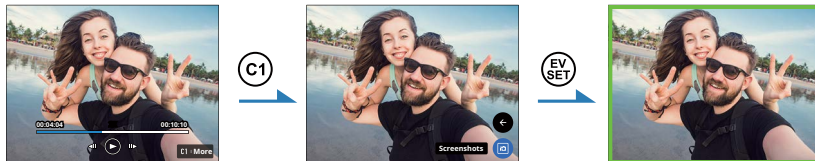

Replay under playback:

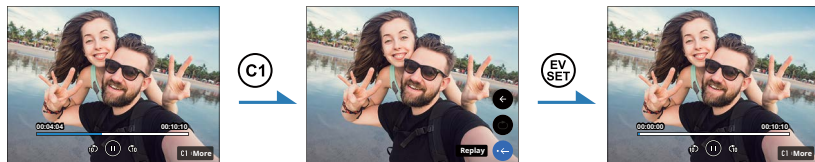 


Auto play under playback:

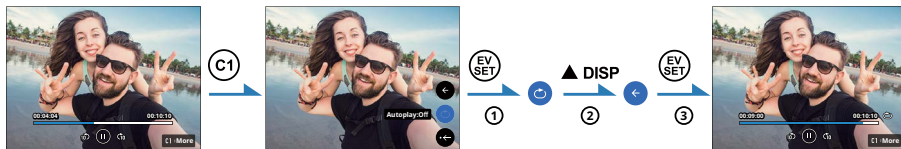 


Using Zoom Playback (for still pictures only)

 When playing back photos, you can use the Zoom Lever to zoom in the photos 2 to 8 times or press the  key to zoom in the photos 2 times.

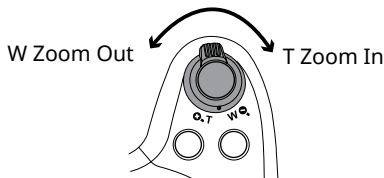

 1. Press the  key to switch to Playback Mode.
2. Press the [] / [] keys to select a photo to be zoomed in.
3. Rotate the Zoom Lever to  position to zoom in the photo. The magnified area and times of the photo will display on the LCD.

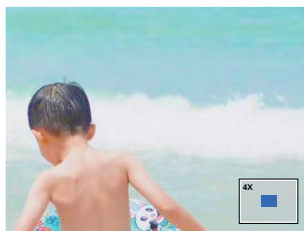

4. Press the [ DISP] / [] / [] / [] keys to navigate and select a portion of the photo to be zoomed in on.
5. Press the  key to return the image to its original scale.



 
Movie images cannot be magnified.

Deleting a Photo or Video

In Playback Mode, press the [▼ ◂ ▢] key to delete photos and videos.

To delete photos or videos:

1. Press the [◻] key to switch to playback mode.
2. Press the [◀ ◂] / [▶ ◂] keys to select the photos or videos to be deleted.
3. Press the [▼ ◂ ▢] key and the deletion screen is displayed.

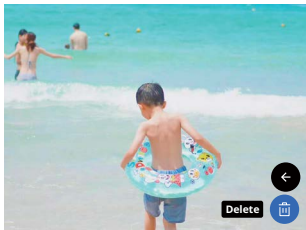

4. Press the [▲ DISP] / [▼ ◂ ▢] keys to select [Delete] or ◀ [Back] and press the [EV SET] key to confirm.



Erased photos / video clips cannot be recovered.



Please refer to page 88 for instructions on deleting more than one image at a time.

Single playback

1. Press the [◻] key to switch to playback mode.
2. Press the [◀ ◂] / [▶ ◂] keys or roll the Dial Key to select the photos or videos you want.
3. Press the [◻] key to show / hide the playback Fn menu, press the [▲ DISP] / [▼ ◂ ▢] keys to select a Fn menu and press the [EV SET] key to confirm.

