

User manual



Item# BAR109
Bluetooth® Wireless Music Receiver

1. Notice Before Using

Thank you for purchasing the Bluetooth® Audio Receiver.
Please read this User's Manual completely before you use the device.


The Music Receiver is based on the advanced Bluetooth® wireless technology and compliant with Bluetooth V3.0+EDR specification. After paired to a Bluetooth® enable phone or other devices which built-in Bluetooth® audio, it is available for music play with a universal earphone. The hands-free function is also available for phone call conversation.

2. Package Contents List

Please inspect this package and refer to the package contents list below to verify all items were included in this package:

- 1) BAR109 Bluetooth® Audio Receiver
- 2) USB Charging Cable
- 3) User's Manual

3. Bluetooth® Audio Receiver Overview

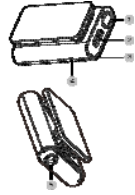

- 1 - MFB
- 2 - USB
- 3 - LED
- 4 - Microphone
- 5 - 3.5mm Male Connector

4. Charging the battery

The Music Receiver is operated with a rechargeable battery. Charge the battery completely before its first use.

- 1) Connect USB cable to a general USB power supplier.
- 2) The red indicator light will turn on while the charger is connected. Charging the battery fully may take up to 2 hour.
- 3) The red indicator light will turn blue when the battery is fully charged. Disconnect the charger from the device and the outlet.

NOTE:

- The fully charged battery has power for up to 6 hours of play-time, and up to 240 hours of standby time. However, the talk and standby times may vary when used with different Bluetooth® devices, usage settings, usage styles, and environments.
- When the battery power is low, the Wireless Music

Receiver will remind you by the "Beep" tone every 20 seconds, and the red indicator light starts to flash.
- To avoid a complete discharge of the battery, it should be charged at least every 3 months if leaving the device unused.

5. Pairing to your Bluetooth® phone

Before you use Wireless Music Receiver the first time, you must pair the unit Bluetooth® device. Please follow the instruction to pair with a Bluetooth® enabled mobile phone. Pairing is a one-time process and required only for the first connection with the cell phone.

- 1) Keep it within range of a Bluetooth®-ready cell phone; the distance should not exceed 1 meter.
- 2) Hold the **MFB** button for approx. 5 seconds, the indicator light intermittently flashes red and blue. The device is in pairing mode.
- 3) Find the Bluetooth® setting of your cell phone and

start the search for Bluetooth® devices. (For further details, please read the operating instructions of your cell phone).

- 4) From the list of devices found, select the "**BAR109**".
- 5) If required, enter the PIN code "0000" and confirm the entry. If the pairing process was successful, the indicator changes to flash blue.
- 6) After pairing, the music receiver will connect with the cell phone automatically.

Note: If pairing is not completed within 2 minutes, the receiver will turn off automatically. Please repeat the pairing process if this happens.

6. Turning Bluetooth® Wireless Music Receiver on /off

Turning on

Press and hold **MFB** for 5 seconds to turn on the receiver.

Connecting to a Bluetooth® phone

If it has completed the pairing process successfully, it will connect to the phone you last connected automatically while it turns on. Please ensure your phone's Bluetooth® function is active.

Turning off

Press and hold **MFB** for 5 seconds to turn the receiver off.

Note:

To conserve power, if it is not connected to a device for approximately 10 minutes, it will turn off automatically.

7. Using the wireless music receiver

Listen to the music

Connect your earphone to the AUX port to listen to the music. Press **MFB** to play/pause the music.

Answer a call

When you receive an incoming call, press the **MFB** button shortly to answer the incoming call. The music will pause automatically while a call is dialed out/incoming, and

resume when the conversation has ended.

Ending a call

Press the **MFB** button shortly to end a call.

Last number re-dialing

In standby mode, double click **MFB** button to re-dial the last number you dialed out.

8. Safety and general information

- 1) Please read this User's Manual carefully and follow all instructions.
- 2) To avoid any damage or malfunction of the device do not drop the device from high places.
- 3) Keep device away from humidity, water and any other liquid. If the device is exposed to water, moisture and other liquids do not operate it to avoid any electrical shock, explosion and damage to the device or yourself.
- 4) Do not place or keep this device near any heat sources,

such as, direct sunlight, radiators, stoves or other apparatus that produce heat. This may cause an explosion, degrade the performance and/or reduce battery life.

- 5) Do not modify, repair or disassemble device (Especially the battery). Doing this will void the warranty.
- 6) Do not place heavy objects on the device.
- 7) Use only the supplied and approved chargers.
- 8) Please contact the retailer for replacement or support with this product.
- 9) Unplug this device when unused for long periods of time or during lightening storms.
- 10) The battery used in this device may present a risk of fire or chemical burn if mistreated.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.