



深圳澳特爱电子有限公司

ATI Electronics (Shenzhen) Co.,LT

VIVITAR®

© 2009-2016 Sakar International, Inc. All rights reserved.

VIVITAR®

Plug-In Outdoor Smart Outlet

Quick Start Guide

HA-101

Wireless Smart Outlet

What's Included

- Smart Outlet HA-101
- Quick Start Guide

Features

- Built-in Wi-Fi for complete control in or out of the house
- Set multiple timers
- Full schedule management via the Vivitar Smart Home Security App
- Easily connects to your smart phone or tablet
- Alexa and Google Home compatible

LED Indicators

LED Light	LED Status	Function
RED	Flashing Quickly	Searching for the Wi-Fi network and initialization
RED	ON (solid light)	Disconnected to Wi-Fi network
BLUE*	OFF (no light)	No power output
BLUE*	ON (solid light)	Power output

NOTE:

The appearance of the Blue LED light whether the device is either connected to the Wi-Fi network or it is not connected to the Wi-Fi network.

How to Install the App

MOBILE DEVICE SYSTEM REQUIREMENTS

- Android cellphone/tablet with OS 4.4 or higher
- iPhone/iPad with iOS 9.0 or higher

APP INSTALL AND LAUNCH

Use your mobile phone or tablet to search for Vivitar Smart Home Security in Google Play Store (Android) or the Apple App Store (iOS). Or you can scan the QR codes below to find the application.

ANDROID

iOS

1. Install Vivitar Smart Home Security app according to the instructions as seen on your mobile device.

2. Tap the app icon to launch the application and register.

Connecting Your Smart Outlet with the App

NOTE: Your Smart Outlet is supported only on a 2.4GHz Wi-Fi network. Before setup, make sure your mobile device is connected to a 2.4GHz Wi-Fi network.

INITIAL DEVICE SETUP

1. Scroll through the initial tutorial and then tap **Agree and Continue** on the License Agreement screen.

2. The "Device" screen then appears. Tap **+Add device** to add your Smart Outlet.

3. Tap Outlets.

4. Tap HA-101.

5. The "Sign In" screen then appears. Tap **Create Account** and follow the prompts to register your new device or enter your email and password. If you already have an account then tap **Sign In**. Once you have successfully created your account, a window appears showing Registration Complete.

6. Switch on your smart outlet and ensure the Wi-Fi indicator light is rapidly flashing, then tap **Continue**. NOTE: If it is not flashing, please follow the instructions on the screen to reset your smart outlet.

7. Enter your Wi-Fi password, then tap **Continue**.

8. The "Connecting" window then appears, displaying the progress as the device connects to the app.

9. After the connection is complete, enter a name for your smart outlet and choose a room from the list, and then tap **Done**.

10. The "Devices" window opens, then tap **Outlets** to enter the main Control Panel screen.

11. Tap **Add timer** to set the timer. Tap **Settings** to change the device's name or room. You can also remove the device.

For more app features or how it works with Amazon Alexa and Google Home, please refer to the User Manual. The User Manual can be accessed from the "Help" in the App's menu options.

Technical Specifications

Rated Input	AC 100-240V 50/60Hz
AC Rated Current	10A Max
Output Rated Power	1000W@100VAc;2400W@240VAc
Wi-Fi Protocol	802.11.B/G/N
Working Temp	14-140°F

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE:

1) The pictures used in this manual show as an example the iOS interface.
2) Product and software are updated periodically. The application interface in this manual are only for example. No extra notification on further changes.

Vivitar One Year Warranty

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty

Damage or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-800-592-5541 in the U.S. or 1-800-006-614 in Australia or visit our website at www.vivitar.com.

For Consumers in Australia Only

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE, SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR, ITS MANUFACTURERS, OR SAKAR INT. BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies. This product is manufactured, distributed and sold by SAKAR International, Inc. All other trademarks are the property of the respective owner, who has not sponsored, endorsed or approved this product.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The equipment should be installed and operated with minimum distance 25cm between the radiator & your body.

Q4-RD-07A0