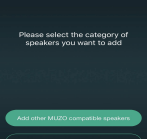 


PAIR SPEAKER AS "BP-BT-SP"

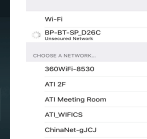 
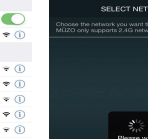 
BLAUPUNKT SMART WIRELESS WIFI SPEAKER SMART WIRELESS WIFI SPEAKER USER MANUAL	FOC INFORMATION This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Federal Communications Commission (FCC) Statement This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment. Tested to comply with FCC standard, FOR HOME OR OFFICE USE. Warning : This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.	PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING YOUR SMART WIRELESS WIFI SPEAKER. KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE. 1. Be sure to follow the safety warnings listed below: 2. Do not assemble, throw away or damage the speaker . 3. Store the speaker in a dry place, keeping it away from damp corrosive materials and environments, such as salt air. 3. Keep the speaker away from direct sunlight, fire, and high voltage equipment. Do not store the speaker inside a car during hot weather. Remember a closed car acts as a greenhouse allowing the inside temperature to possibly reach over 200F. 4. The speaker are not toys. Please keep it out of the reach of young children. Please do not discard this rechargeable device as trash. Consult your local waste collection agency for proper disposal or recycling method. You may also contact "CallRecycle.org" at 877-733-2953 or online at "callRecycle.org" for a battery recycling drop off location near you.	LIMITED WARRANTY WorldWide Accessories Inc., warrants to the first consumer purchaser that this product, when shipped in its original container to the original purchaser will be free from defective workmanship and materials for one year and agrees that it will, at its option, either repair the defect and replace the defective product or part thereof at no charge to the purchaser for parts or labor for the time periods described. This warranty does not apply to any appearance items of the product nor to the additional excluded items set forth below nor to any product the exterior of which has been damaged or defaced which design or construction. The limited warranty described herein is in addition to an applicable law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD FROM THE DATE OF ORIGINAL PURCHASE SET FORTH BELOW. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein or to extend the duration of any warranties beyond the time period described herein on the behalf of WorldWide Accessories Inc. The warranties described herein shall be the sole and exclusive warranties granted by WorldWide Accessories Inc. and shall be the sole and exclusive remedy available to the purchaser correction of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of WorldWide Accessories Inc. to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract negligence, strict liability and responsibilities of WorldWide Accessories Inc. be liable in any way responsible, for any incidental or consequential damages, so the above exclusion may not apply to you. THIS WARRANTY DOES NOT SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE. Send product with \$11.95 shipping & handling fee to: WorldWide Accessories Inc. PO Box 194 244 Madison Ave New York, NY 10016 Tech Support: 1-800-751-1247 TechSupport@WorldWideAccess.com
ITEM DESCRIPTION Thank you for purchasing the BLAUPUNKT® Smart Wireless WIFI Speaker. For best use of this device, we recommend carefully reading this user manual and keeping it for your records. Package contains: a. Speaker b. Adapter c. User manual a. b. c.	APP DOWNLOAD The "Muzyo player" app lets you play music and audio from streaming services like Spotify, iHeartRadio, and others. Download the app for your device by searching for the "Muzyo player" in the Apple App Store or Google Play store. Note that this app is designed for mobile devices only, such as smartphones or Wi-Fi enabled tablets. It is not available for use on a regular desktop or laptop computers. INITIAL Wi-Fi SETUP To use the speaker's Wi-Fi features, the speaker and your phone must be connected to a Wi-Fi network. The app will guide you through the process, just follow the on-screen instructions and have your network password ready. The Steps listed below and following visual guides are provided for your reference. >> Press and hold the Power button to power on the speaker. The speaker should start in Wi-Fi mode, indicated by a flashing white LED. If it is not in Wi-Fi mode, press the Power button until Wi-Fi is selected. Normally there are voice prompts which are the Wi-Fi mode or Bluetooth mode. >> On your phone, launch the Muzyo player app and press "Join". Following the on-screen prompts to connect the speaker to your Wi-Fi network. >> When the speaker and your phone are successfully connected, a voice prompt will announce the connection. >> With the Wi-Fi connection complete, the app will automatically begin the process to connect to Amazon Alexa. Follow the On-screen prompts to link Alexa with the speaker and begin using Amazon Alexa Voice Services. You will need to enter your Amazon account information to use Alexa.	OVERVIEW 1. Power Button: Press and hold to power the speaker ON or OFF. 2. & 3. Volume: Press to adjust the volume. 4. Alexa off: Switch Wi-Fi mode. Power OFF voice button. 5. Alexa on: Voice start button. 6. Charger Port 7. LED Indicate 8. MIC	

INITIAL WI-FI SETUP-VISUAL GUIDE

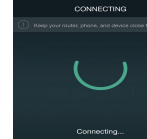 
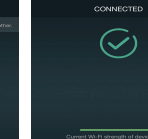 
Download the MUZO PLAYER in the APPLE STORE or Google app website.


INITIAL WI-FI SETUP-VISUAL GUIDE

INITIAL WI-FI SETUP-VISUAL GUIDE

1.Enter the MUZO.

2.Searching the wifi and connect.

3.Click the MUZO Cobblestone.

4.Choose settings and connect ur wifi speaker.

5.Found the BP-BT-SP_D26c pairing name and connect it.

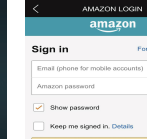 
6.Connected BP-BT-SP_D26C.

7.Connected home wifi.

8.The speaker is connecting to network.

9. Connected.

INITIAL WI-FI SETUP-VISUAL GUIDE

10.Sign in with Amazon.

11.Login Amazon account.

[illegible]