

JOYTECH™

JOYTECH™

FOR XBOX™

WIRELESS NEO S CONTROLLER

USER GUIDE

Design and specifications are subject to change without notice.

Dispose of this product or products contained in this pack in accordance with local and national disposal regulations.

Microsoft, Xbox and the Xbox logo are either registered trademarks or trademarks of Microsoft Corporation in the U.S. and /or other countries and are used with permission from Microsoft.

JOYTECH is a registered trademark of Joytech Europe Ltd. and TAKE 2 is a trademark of Take 2 Interactive Software

Joytech Europe Ltd. Saxon House 2-4 Victoria Street Windsor Berkshire SI4 1EN UK

VERSION 2.1

A Take2 Company


505-110B060102

ENGLISH


INTRODUCTION

Thank you for purchasing the JOYTECH Wireless Neo S Controller for use with the Xbox™ video games system from Microsoft. The Wireless Neo S Controller features full Analog Controls and Dual Vibration Feedback. Before operating your new controller, please familiarise yourself thoroughly with this User Guide so that you fully understand the set-up procedure and functions of the products included in this pack.

WIRELESS ANALOG CONTROLLER AND RECEIVER MODULE LAYOUT

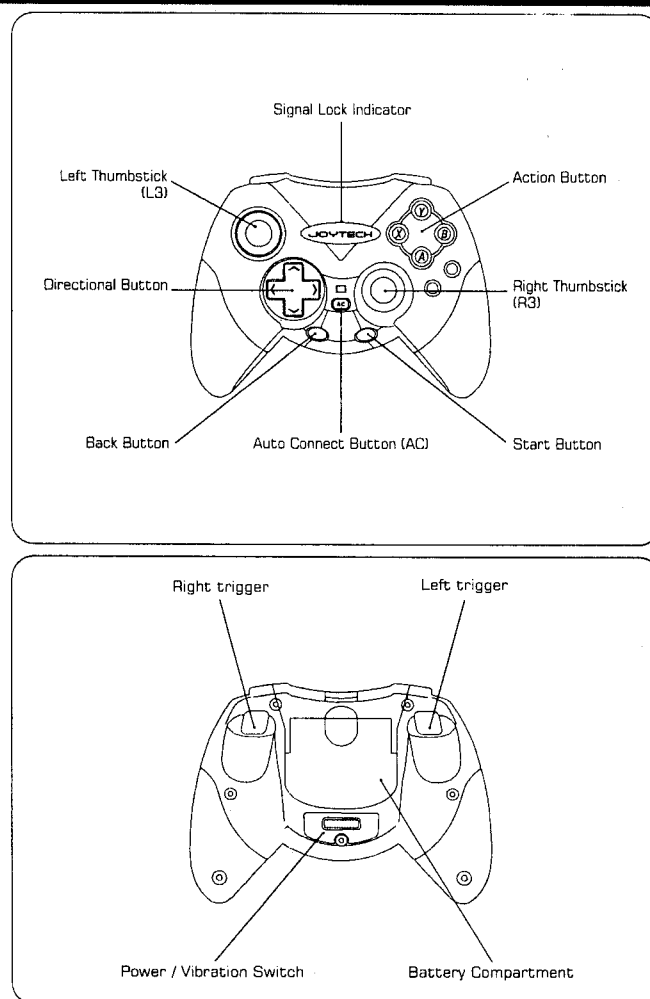

ENGLISH

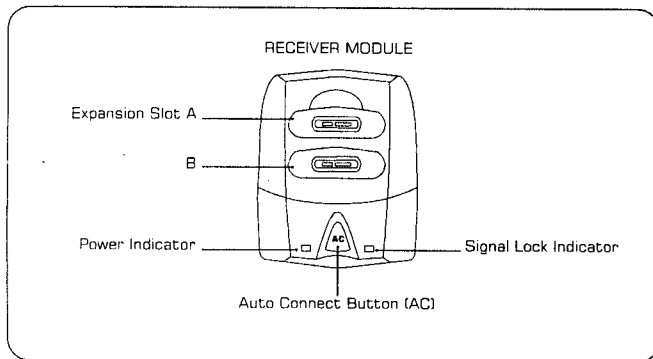

HOW TO SETUP YOUR WIRELESS NEO S CONTROLLER

- 1) Ensure the power is turned off on your console.
 - 2) Carefully insert 3 AAA (LR03) alkaline batteries into the battery compartment observing the correct polarity (+/-). Please note that the life expectancy of alkaline batteries may vary depending on battery strength and use of the Vibration Feedback feature. We advise you to use new batteries as this will ensure the best performance. See section entitled "Battery Care"
 - 3) Insert the Receiver Module into controller port 1 of your console and turn the power on. The Power Indicator will illuminate.
- (NOTE:** always connect to port 1 for single player games).
- 4) Turn on the Wireless Analog Controller by moving the Power / Vibration switch located on the underside of the controller to the ON or ON/ VIB position.

(NOTE: When this switch is in the ON position the vibration motors are deactivated. In the ON/ VIB position the motors are activated).

The Wireless Neo S Controller will automatically search for the Receiver Module. The Signal Lock Indicator on both the Receiver Module and Wireless Neo S Controller will flash quickly until they lock onto each other. Once locked, the Signal Lock Indicators will continue to flash at a slower rate.

- 5) You are ready to play.

ENGLISH

MULTI PLAYER SETUP USING THE AUTO CONNECT BUTTON

When using two or more JOYTECH Wireless Neo S Controllers (i.e. when several controllers are setup with a Multi Player Adapter) it may be necessary to use the Auto Connect Button (AC) to match each controller to a specific Receiver Unit. To do this simply press the AC Button on the Receiver Unit located in the controller port you wish to match followed by the AC Button on the Wireless Neo S Controller you want to match it to. The green Signal Lock Indicators should illuminate when both the Receiver Unit and controller are matched.

ANALOG FUNCTIONS

Each button of the Wireless Neo S Controller (except start, back, directional, L3 & R3 buttons) provides full analog control, meaning that the control is proportional to the amount of pressure placed on the button.

The functions of the buttons will be determined by the game. Refer to your game Instruction Guide for further details.

VIBRATION FEEDBACK

The Wireless Neo S Controller features High Intensity Dual Vibration Feedback Technology and full analog buttons, which will only function if it is supported by the game being played. Please also note that the depth of vibration may vary according to each game. To increase the life expectancy of the alkaline batteries you can turn off the vibration feedback by using the Power/ Vibration switch.

AUTO BATTERY SAVE FUNCTION

The Wireless Neo S Controller has an intelligent Auto Battery Save Function, which turns the controller power off after 5 minutes of no button activity. To turn the power back on, press any button on the controller (except the thumbsticks).

NOTE: The Power Indicator LED on the WIRELESS NEO S CONTROLLER will Flash rapidly when the battery power is low. It is recommend that you change the batteries at this time.

EXPANSION SLOTS

There are two expansion slots (A and B) within the Receiver Module. These can be used to add specific devices to your setup such as a Memory Unit and /or the Xbox™ Live communicator headset.

EXPANSION SLOT A – For use with Memory Unit only.

EXPANSION SLOT B – For use with Memory Unit or the Xbox™ Live communicator headset.

ENGLISH

BATTERY CARE

Incorrect use of batteries can result in battery leakage or explosion. When using batteries, be sure to following these instructions:

- Make sure that the plus and minus terminals of the batteries are inserted in the correct directions.
- Do not mix old and new or different types of batteries
- Do not attempt to recharge non-rechargeable type batteries.
- Remove the batteries when the product will not be used for an extended period of time.
- If the battery has leaked, be sure to carefully remove all residue before inserting new batteries.

CAUTION

- Do not remove this product when the console power is ON.
- Avoid placing this product near extreme temperatures or humidity.
- Do not submerge or allow this product to come into contact with water. Use in dry locations only.
- An adult should supervise young children when using this product.
- Use of any attachment or accessory with this product not recommended or sold by JOYTECH may result in risk of fire, electrical shock or injury to persons or product.
- Do not clean any parts with alcohol, cleaning solutions containing alcohol or strong abrasives. Use a soft cloth and a little water
- Tampering with this product will invalidate your JOYTECH warranty.

ENGLISH

IMPORTANT HEALTH WARNINGS

PHOTOSENSITIVE SEIZURE WARNING

A very small percentage of people may experience a seizure when exposed to certain visual images, including flashing lights or patterns that may appear in video games. Even people who have no history of seizures or epilepsy may have an undiagnosed condition that can cause these "photosensitive epileptic seizures" while watching video games.

These seizures may have a variety of symptoms, including lightheadedness, altered vision, eye or face twitching, jerking or shaking of arms or legs, disorientation, confusion, or momentary loss of awareness. Seizures may also cause loss of consciousness or convulsions that can lead to injury from falling down or striking nearby objects.

Immediately stop playing and consult a doctor if you experience any of these symptoms.

Parents should watch for or ask their children about the above symptoms - children and teenagers are more likely than adults to experience these seizures.

TAKING THE FOLLOWING PRECAUTIONS MAY REDUCE THE RISK OF PHOTOSENSITIVE EPILEPTIC SEIZURES:

- Sit further away from the screen
- Use a smaller TV screen
- Play in a well-lit room
- Do not play when you are drowsy or fatigued

If you or any of your relatives have a history of seizures or epilepsy, consult a doctor before playing.

WE ALSO ADVISE YOU TO TAKE REGULAR BREAKS OF 15 MINUTES EVERY HOUR.

Design and specifications are subject to change without notice.

Dispose of this product or products contained in this pack in accordance with local and national disposal regulations.

Microsoft, Xbox and the Xbox logo are either registered trademarks or trademarks of Microsoft Corporation in the U.S. and /or other countries and are used with permission from Microsoft.

ENGLISH

FCC STATEMENT

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received including interference that may cause undesired operation.

CAUTION

To maintain compliance with the FCC's RF exposure guidelines place the receiver module unit at least 20cm from nearby persons.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a ClassB digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

WARRANTY

When you purchase from JOYTECH, you purchase quality. JOYTECH offers a One (1) year replacement warranty on this product. JOYTECH warrants to the original consumer purchaser that this product is free from defects in either material or workmanship. If a defect covered by this warranty occurs,

JOYTECH, at its option, will repair or replace the product at no charge. JOYTECH products are tested to withstand normal wear and tear, but are not indestructible and can be damaged if misused. The JOYTECH warranty does not cover normal wear and tear or abusive use. This warranty does not apply to products used for any industrial, professional or commercial purpose. This warranty does not apply to products that have been damaged by abuse, misuse, modification or tampering or by any other cause not relating to either materials or workmanship. If a replacement is necessary and your product is no longer available, a comparable product may be substituted at JOYTECH sole discretion.

For Tech support please consult the JOYTECH website at www.joytech.net