 
 



1-1. Please Click “Install Bluetooth Driver” Item.

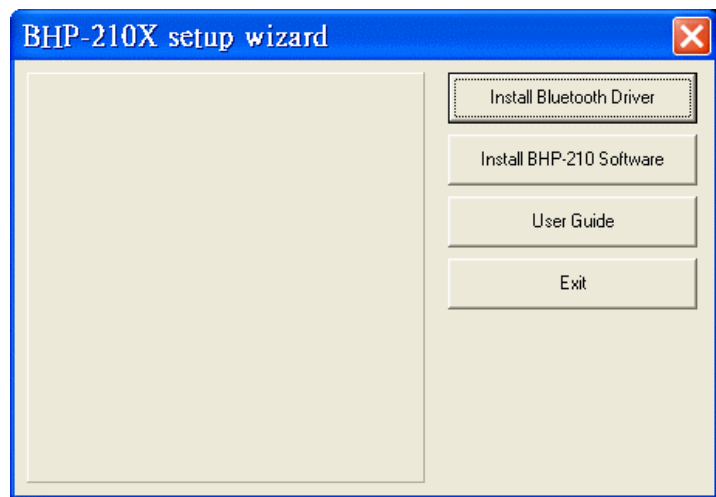


1-2. Please Click “Install” icon.

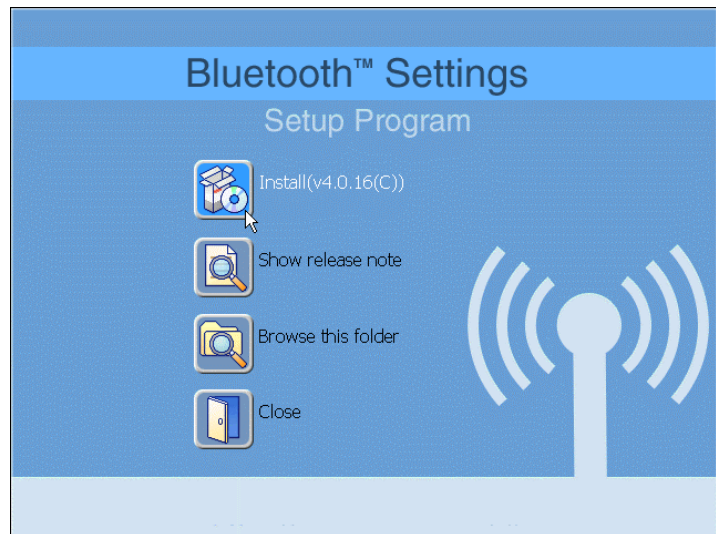

 1-3. Please Click “Next”

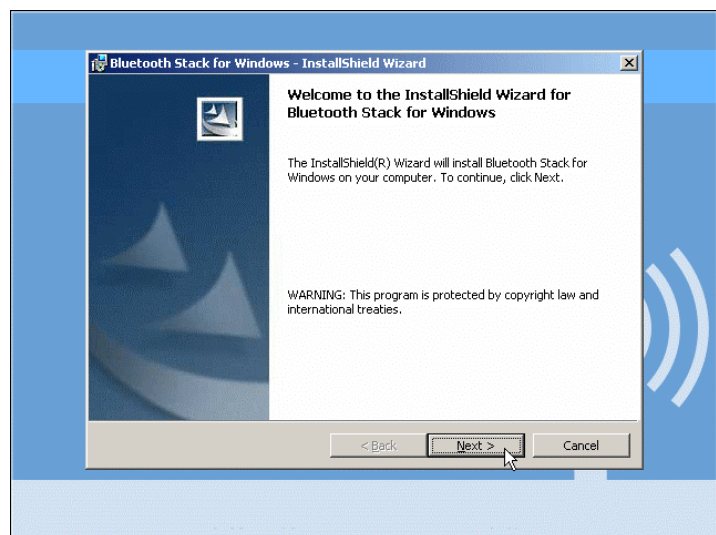

1-4. Please Choose “I accept the terms in the license agreement”, then click “Next”

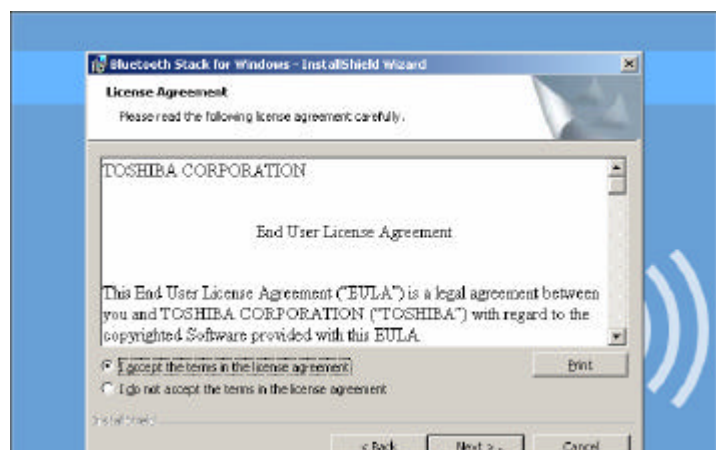

Using the telephone kit

1-1. Double Click the “Bluetooth VoIP Phone” icon on your desktop.



1-2. Check “Allow this program to use Skype”.
Click “OK”



Chapter 3: Exploring the Telephone kit Menu

Icons shown on the Handset

Icon	Meaning	Icon	Meaning
	Homepage		Contacts
	Ring Bell		Call List
	Skype out account		Skypeme
	Do Not Disturb		Online
	Offline		Away
	Not Available		
	Making calls		In ChangeStatus Mode
	Configuration		Status-SkypeMe
	Status-Offline		Status-Invisible
	Status-Not Disturb		Status-N/A
	Status-Away		Status-Online
	Battery Full (The black area goes		Charging

	lower as the battery charge runs low)		
	Battery Empty		Battery Full (when you are charging)

Function Keys:

	Sync Contacts		Configuration
	Cancel		Off-hook Make a call Answer a call
	List (Up/Down)p		Power ON/OFF On-hook (hand-up) End a call Exit

Configurations

Press  to enter configuration mode

Function Introductions

Functions	Descriptions
Call List→Missed	Display missed call lists
Call List→Incoming	Display Incoming call lists
Call List→Outgoing	Display Outgoing call lists
ChangeStatus	Status options: “SkypeMe”, “Online”, “Away”, “N/A”, “Not Disturb”, “Invisible”, “Offline”
Credit	Showing how many skype out credits you have
Ringer	Test ringer
BT Pairing	Pair Bluetooth devices
F/W Version	Showing F/W version installed in your BHP-210
F/W Upgrade	Upgrade firmware

Chapter 4: Guide to Basic Functions

How to make a call?



1. Power on → Wait until




→ press



button to sync contact lists with

PC skype

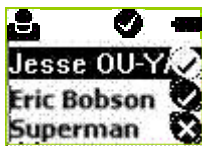

2. Use List button



to scroll up/down the contact lists



3. Press

to start a call.




4. Press



to disconnect this call

How to answer a call?

1. When you hear the ring bell from BHP-210, call

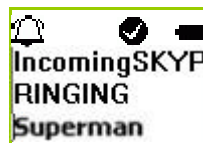

press



to answer this

How to make a conference call?


A. invite another contact when you are chatting


1. Press



to go to the contact list menu.

2. Make 1st call

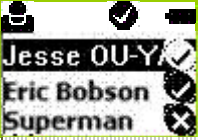3. Press  to invite 2nd contact  → Press  to select

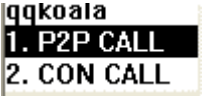4. Select CON CALL  to invite 2nd contact to join this conference call with 1st contact
5. Select “P2P CALL” to hold 1st call and talk to 2nd contact.

B. invite contacts and conference them together

1. Press  to go to the contact list menu.
2. Press “*” to mark the contact you want to include in this conference call. (Conference participants (max 4+host))
3. Press  to start this conference call

How to redial the last call? (to be implemented)

1. Press  to redial the last call.
2. Select the contact (from the outgoing call list) you want to dial to make a call.

How to redial any call from Call List?

1. Redial from Missed Calls: Press  → Call List  → Missed → Choose one contact to dial.  (press  to cancel this action)
2. Redial from Incoming Calls: Press  → Call List  → Incoming Calls → Choose one contact to dial.  (press  to cancel this action)
3. Redial from Outgoing Calls: Press  → Call List  → Outgoing Calls → Choose one contact to dial.  (press  to cancel this action)

Appendix

Troubleshooting

Problem: Popup “Please keyin the BT MAC address like xx:xx:xx:xx

1. Please input the MAC address of your Bluetooth Phone.

Note: You can find the device address of your BHP-210 from it's back label*

Note: please remove the battery to find the back label