



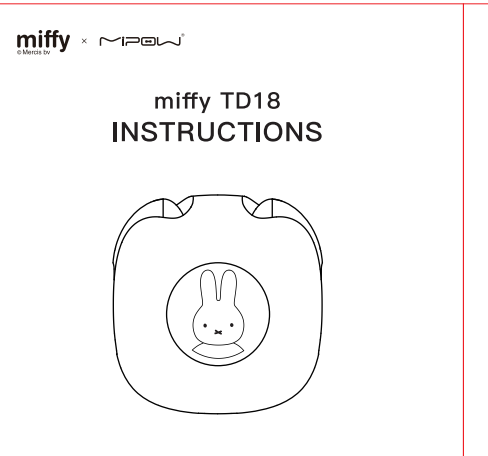

## PRODUCE

miffy TD18 is a real wireless Bluetooth earbuds with Hifi sound effect, it not only have delicate and cute appearance, small and portable body, but also have super ergonomic design – long wear painless. With fast charging and long battery life advantage, it is the perfect choice for sports, study and daily commute.

## PRODUCT MIX

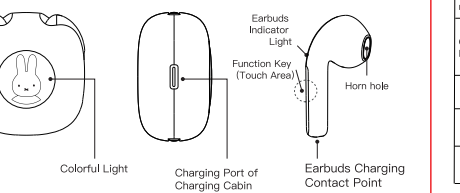

## ERATION

| Function                       | operation                                                                                                                                                                                                                                 | Indicator light                                                                                                                                                                               | Clew tone             |
|--------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------|
| Power ON                       | 1. The earbuds will turn on automatically after take from charging cabin.<br>2. Long press the touch area of the L/R earbuds for 3 seconds to turn on.                                                                                    | The white light is on for 1 second and then flash.                                                                                                                                            | POWER ON              |
| Power OFF                      | 1. The earbuds will automatically shut down after put back to charging cabin, and enter the charging status.<br>2. Long press touch key for 5S to turn off earbuds.<br>3. Automatic shutdown after no connection for more than 5 minutes. | 1. White light always on after put back earbuds into cabin, light off after fully charged.<br>2. White light off after 1 second on in the conditions of Long press or automatically turn off. | POWER Off             |
| Left and Right Earbuds Pairing | After the two earbuds turned on, they automatically enter and paired.                                                                                                                                                                     | /                                                                                                                                                                                             | POWER ON pairing mode |
| Bluetooth Pairing with Phone   | After the two earphones are paired successfully, they will automatically enter the Search Mode, open the Bluetooth of the smart device, find the list " MIPOW Earbuds" and click " Connect" to complete the pairing.                      | White light quick flash for 2 times.                                                                                                                                                          |                       |
| Music Mode                     | In music mode, double click the touch area of the (L/R) earbuds                                                                                                                                                                           | /                                                                                                                                                                                             | /                     |
| Volume Up                      | In music mode, three click the touch area of the (L) earbud                                                                                                                                                                               | /                                                                                                                                                                                             | /                     |
| Volume Down                    | In music mode, three click the touch area of the (R) earbud                                                                                                                                                                               | /                                                                                                                                                                                             | /                     |

## SPECIFICATIONS

Model: TD18                      Product Name: WIRELESS EARBUS  
Input : 5V  $\equiv$  500mA  
Earbuds Battery Capacity: 30mAh\*2  
Charging Cabin Battery Capacity: 300mAh

|                          |                                                                                                                                              |                                                                                                                                                                            |                              |
|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------|
| Assistant                | In connection mode + no talk status, long press L or R earbuds touch area for 2 seconds                                                      | /                                                                                                                                                                          | /                            |
| Power Call               | In incoming call status, double-click L or R earbuds touch area                                                                              | /                                                                                                                                                                          | /                            |
| Hang Up                  | In talking status, double-click L or R earbuds touch area                                                                                    | /                                                                                                                                                                          | /                            |
| Reject Call              | In incoming call status, long press L or R earbuds touch area for 2 seconds                                                                  | /                                                                                                                                                                          | /                            |
| Battery Indicator        | When the battery is too low, every 1 minute will have a prompt tone                                                                          | When the charging cabin is low battery, the light of the charging cabin flashes red for 3 times to remind low battery and charging.                                        | Battery in low please charge |
| Automatic Connect Back   | After paired with devices, the earbuds will automatically connect back again when the Bluetooth is turned on or disconnected from a distance | /                                                                                                                                                                          | /                            |
| Earbuds Light Indication | charging earbuds via Charge cabin                                                                                                            | The white light of earbuds always on, charging cabin RGB light cyclic flash for one time, the color order is light yellow...to red, earbuds light off after fully charged. | /                            |
|                          | Recharge charging cabin with cable                                                                                                           | RGB light cyclic flash, color order is: light yellow...and final red. Green light always on after fully charged.                                                           | /                            |

## FETY INSTRUCTION

When using this product, please read all the tips carefully. If any abnormal phenomenon such as odor, leakage, swelling occurs on the bluetooth wireless earbuds, please stop using immediately, and place the product in a safe place away from children to avoid accidents. In addition:

- Please select USB adapter carefully to ensure that the adapter has the CE mark and safety certification;
- Do not open or mechanically disassemble the product.

Do not place the mobile power supply in the sofa, bed, car, or other places where it is easy to heat up and not easy to take out for charging;

- Please keep away from damp environment, and do not  
 impact or rub the product violently to avoid product depre-  
 ciation, cracking, deformation, corrosion and other abnor-  
 mal phenomena;  
 Please place the product in a place that is not easily accessi-  
 ble to children to avoid accidents;  
 Please disconnect the device after charging;

### FCC Statement

Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### STATEMENT

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- This device may not cause interference.
- This device must accept any interference, including interference that may cause undesired operation of the device.

émetteur/récepteur exempt de licence contenu dans le  
 ésent appareil est conforme aux CNR d'Innovation, Sciences  
 Développement économique Canada applicables aux  
 pareils radio exempts de licence. L'exploitation est autorisée  
 x deux conditions suivantes :  
 L'appareil ne doit pas produire de brouillage;  
 L'appareil doit accepter tout brouillage radioélectrique  
 bi, même si le brouillage est susceptible d'en compromettre  
 fonctionnement.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter. The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Thank you for your purchase miffy X MPOWS product. This product has been tested and proved to be qualified for conformity with standard . This Limited Warranty for the product is twelve ( 12 ) months from the date of original purchase . This original card and original invoice must be presented at the time you warranty service or such warranty will be voided . This limited warranty only if the product is used for the purpose for which it was designed . It does not apply to damage or loss caused by negligence ; physical abuse ; accident ; exposure to moisture ; dampness or extreme temperatures ; unauthorized modifications ; unauthorized opening or repair ; force or other actions beyond the reasonable control of MPOW .

In case of when the warranty does not apply , repair or replacement will be incurred . The customer shall be responsible for sending the product to and collecting the repaired or replaced product from center .

MIPOW reserves the right to amendment and the final interpretation of the above terms without prior notice .

WARRANTY NOTE : The product has standard one-year warranty. We do not accept any liability for direct, indirect, incidental or consequential damages or other damages caused by improper handling or disregard of the information contained in this manual. However, we assume no liability.

## WARRANTY CARD

Product Name: \_\_\_\_\_

Model No.: \_\_\_\_\_

Purchase Date: \_\_\_\_\_

Dealer Shop:

Customer Name:

Order No. / Website Name:

### Mobile Phone Use

service \_\_\_\_\_

\_\_\_\_\_

Postcode: \_\_\_\_\_

For more efficiency on handling your case , please provide correct info and mail with the failure product' MIPOW authorized repair center