

Preparing Your Phone


Installing SIM Card

- 1. Please keep your SIM card away from reach of children.
- 2. Scratches and bends can easily damage the SIM card. Please be extra careful when installing, removing, handling or storing your SIM card.
- 3. Before installing or removing the SIM card, make sure the phone is switched OFF, then remove the back cover and battery.

1. Slide the back cover toward the bottom of the phone until it can be removed;
2. Remove the battery (see Removing Battery);
3. Push the metal SIM holder toward the bottom of the phone and lift the released end of the holder.
4. Place SIM card into the SIM holder with the beveled corner at the bottom left corner with the metal contacts face down.

5. Return the metal SIM holder to original position and push it towards the top of the phone until it locks into place.

6. Fit the battery and replace the back cover by push and sliding it towards the top of the phone.

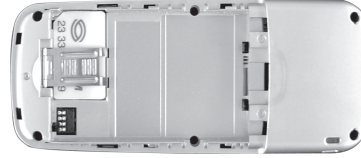

Fitting Battery

Remove the back cover (see #1, Installing SIM Card). Push the battery into place with the label up and metal contacts at the bottom right side in the back of the phone until the battery fits into place, then replace the back cover (see #6, Installing SIM Card).

Preparing Your Phone 15 **WIRD**



Removing Battery

Remove the back cover (see #1, Installing SIM Card) then push toward the top of the phone and lift the battery at the bottom side center to remove.

- 1. Settings and data stored in the phone or SIM card may be lost after the battery is removed.

Understanding Instruction Symbols

Symbols are used in this document:

- press Left Soft Key
- press Right Soft Key
- press Up Navigator key
- press Down Navigator key
- press Left Navigator key
- press Right Navigator key
- press Call / Dial key
- press End / On/Off key
- press * key
- press # key
- press corresponding numeric key
- Danger / warning
- Tip / information
- Network dependent feature

Receiving a Call

When there is an incoming call, the phone will give corresponding alert according to your settings (such as Vibrate or Ring). If your network supports caller ID, the screen will display caller's name or number. You can answer the incoming call by pressing the  or . If the headset is plugged-in, pressing on its button will answer the incoming call.

Adjusting Call Volume

Press the  or  to adjust earphone volume during call, there are 8 volume levels to choose from. You can press  and select Hands-free to turn on the hands-free loud speaker. If you use a headset with volume control knob, it can also be utilized. Check with your dealer for availability, be sure to use only approved accessories.

Ending a Call

Press  to end a call or to terminate connection after dialing. If the headset is plugged-in, pressing on its button will terminate call or dialing.

Locking & Unlocking Keypad

Press and hold  from the standby mode to lock, press  and  keys in succession to unlock the key pad and prevent accidental key press.

Emergency Services

You can contact emergency service numbers without the need of a SIM card or without unlocking the keypad. Different networks uses different emergency numbers, please contact your network operator for details.

Making an International Call

To make an international call, please long press  to display "+" sign (international call dial prefix), then enter the country code, area code, and phone number, use  to erase erroneous inputs. Press  when done to connect.

Dialing from Phone Book

Enter the Phone Book (press the down navigator or via the menu), use the up or down navigator to scroll to the desired contact, or press the first letters of the name

Using Your Phone 21 

of the desired contact as saved in your phonebook for quick access to names beginning with the letter then scroll to the desired one, press  to dial.

Using the In-Call Menu

The feature provides some operations and features while you are in active call with a party or several parties. Some of which are network dependent, please inquire with your network operator or service provider of their availability. Press  to enter the in-call Options menu while on an active call to choose among following functions (some options are only available under specific conditions):

-  **Phone Book:** to perform search; add; and other phone book operations.
-  **SMS:** to access the SMS menu.
-  **Hold/ Retrieve:** to hold the active call or resume a held call.
-  **Mute:** to turn muting on or off to speak confidentially with another person present without the other

-  **Hands-free:** switch hands-free mode (loudspeaker) on or off.

PIN2 Code

The PIN2 code is required when activating certain special features (such as call costs and fixed dialing). It is normally supplied with the SIM card package. Be careful while entering PIN2 code, 3 wrong tries in entering PIN2 code will block the SIM from use, requiring input of PUK2 code to unblock. Please contact your operator for further details.

PUK Code

The PUK (Personal Unblocking Key) code is required to unblock a blocked PIN codes. It is normally supplied with the SIM package; otherwise contact your service provider for the code. Keep your PUK codes in a safe place, do not throw it away. Contact your service provider if it is lost.

If your SIM is blocked, your phone will ask you to enter PUK code to unblock. You have 10 tries to enter the right PUK code, after which your SIM might be permanently blocked.

Phone Password

The Phone Code is a 4 to 8 digit security code that protects unauthorized use of your phone. The factory default code is "0000". Once activated, the phone will ask you to enter Phone code every time it is turned on. For your protection, change the default phone code as soon as possible. Do not forget your phone password.

Preparing Your Phone 19



Using Your Phone

Powering ON/OFF

Press and hold  to switch your phone ON or OFF. Startup and goodbye animation will be played during powering ON and OFF.

➔ If there is no SIM card, SIM card is defective, or SIM card contact is loose, you will be prompted with a warning after powering ON, Shut down and check your SIM and its installation.

➔ If your phone lock is activated and you had changed your SIM, you will be asked to enter your phone code, input the phone password and press .

➔ If the PIN is activated, you will be asked to enter the PIN, input your PIN code and press .

➔ If your SIM is being blocked, you will be prompted to enter PUK, input the PUK code and hit .

Your phone will automatically search for network and register to it after correctly performing above procedures on power on.

 If the phone detected authorized network, the screen will display the network name and signal strength.

 If only non-authorized network signal is found, the phone can only make emergency calls or use non-communications features.

 If no network signal is found at all, you will then only be able to use the non-communications features.

Making a Call

In standby mode, press the corresponding numeric keys to the phone number you are calling, including necessary area codes. Use  to erase erroneous inputs, Press  when done to connect.

To dial a number from phone book, please refer to Phone Book section. To redial a number from call records list, please refer to the Call Records section.

Refusing a Call

Press  or  (Reject) to refuse an incoming call.

Charging Battery

Insert the connector (if the connector position is wrong, it cannot be inserted, do not force it into the port, turn it around and try again) to the accessories port at the bottom side of the unit with the side having arrow or triangular marks on top, then plug the charger to an AC outlet having the SAME voltage rating; Charging may be done either when the phone is ON or OFF.

During charging, the battery icon on the LCD will scroll until the battery is fully charged.

When done, press the two release buttons at both sides of the connector and pull it out of the accessories port, then remove the charger from AC outlet.

The battery temperature may increase during charging, this is normal, please do not be alarmed.

- 💡 When the battery is low, the phone display will show a warning message. Recharge the battery as soon as possible to avoid inconvenience of the phone shutting off during a call. Your phone will power off automatically if the voltage becomes too low. Prolong use of battery in low charge state will adversely affect the quality and life of the battery.
- 💡 To ensure normal operations, please use approved chargers.
- 💡 Do not remove the battery when charging.
- 💡 Before your first use, please charge the battery for at least 4 hours. It will achieve maximum efficiency after several charge and discharge cycles.

Preparing Your Phone 17



Caring for Battery

💡 This phone uses a rechargeable battery as power source, when the charge is weak, recharge immediately to protect the battery life. It is best to drain the battery charge first.

💡 When not using the charger, unplug it from the power source and the phone. Over charging will shorten the battery life. Do not leave the charger connected to the unit or battery for more than a week.

💡 Temperature affects battery charge capacity. Your battery may need to be warm up or cool down before charging. If battery temperature is more than 40 degrees Celsius, it may not recharge.

💡 Use the battery as it is originally intended. Do not short circuit the battery by connecting the positive and negative terminals with a conductor.

- 💡 Do not use a damaged battery.
- 💡 The battery will not perform properly and its life will be shortened if exposed to extreme temperatures.
- 💡 Do not place the battery in fire, follow local laws and ordinances in disposing used battery.

Security Codes

PIN Code

The PIN (Personal Identification Number) code protects your SIM card against unauthorized use. It is normally supplied with the SIM card package. Be careful while entering your PIN code, 3 wrong tries in entering PIN code will block the SIM from use, requiring input of PUK code to unblock. Please contact your operator for further details on your PIN code.