 
 


3.

CHARGING




● (red) = Charging
○ (off) = Charging Complete

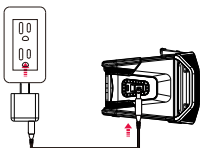

1. To charge the speaker,
Connect the supplied USB-C to USB-C cable to the USB-C
charging port on the left side.
2. Connect the USB-C end of the supplied cable to the supplied
USB-C wall charger, or a suitable USB-C charging port.
3. When charging the indicator LED will be red. When fully
charged the LED will turn off.

4.

BLUETOOTH PAIRING

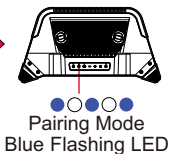

Bluetooth Connection:

Go to the Bluetooth page in the settings app on your phone. Make sure Bluetooth is ON before connecting to the available device 'AL Mix 3.0'.



Once paired the speaker will automatically reconnect to any nearby paired devices the next time it is turned on.

To disconnect a currently paired device and connect another simply either forget the speaker in your Bluetooth Settings, turn off Bluetooth on the connected phone/tablet or short press the  button on the speaker

This will cause the speaker to drop the connection and go to pairing mode.

5.

SPEAKER CONTROLS

 
Controlling Music

SHORT PRESS

- + Volume Up
- Volume Down
- ⏻ Play/Pause
- Bass Boost

PRESS & HOLD 2S

- ⏻ ON/OFF
- + Next Track
- Previous Track

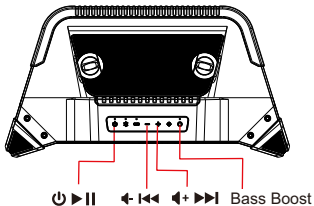

6.

 
MULTI-SPEAKER CONNECTION

Party Sync

In Party Sync Mode multiple speakers can be connected that all play in stereo.

Turn on the Primary speaker and connect it to your Bluetooth compatible device as normal. Start playing some music to this speaker.

Now short press its Link button. Its LED will go green with very short flashes off indicating it is broadcasting as the Party Primary.



PRESS & HOLD  FOR 2S
AND PAIR AS USUAL
Primary

PRESS  TO
TO ACTIVATE PRIMARY



Primary

PRESS  TO
TO ACTIVATE SECONDARY



Flashing Green = Secondary Connecting / Idle
Solid Green = Secondary Connected /Playing

Turn on the secondary speaker but don't connect anything to it just short press the Link button on that speaker. It will be a Party Secondary and will start looking for the Primary.

The Secondary will connect to the Primary and its LED go solid green. They will now play in sync. You can connect more secondaries by turning them on and short pressing their Link buttons.

Note the Secondary LEDs return to Flashing Green if playback is paused on the Primary (Party Sync is Idle). To exit Party Sync short press the Link button on each speaker you wish to disconnect.

True Wireless Stereo Pairing

In TWS Mode two speakers can be connected where one speaker plays the left and the other the right channel.

Turn on the first speaker and connect it to your Bluetooth compatible device as normal.


Turn on the secondary speaker and press hold the Link button for 2-3 seconds on the first speaker.

Press hold the Link button for 2-3 seconds on the primary speaker. The first will now connect to secondary so they play in sync as a stereo pair. The LEDs will go flashing green.

PRESS & HOLD  2S



Flashing Green = Pairing

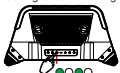


Flashing Green = Paired



To end TWS press and hold the power button on either speaker for 3S.

7.

MULTI COLOR LIGHT MODES

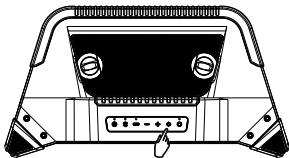

PRESS  TO
CYCLE ROUND THE DIFFERENT LIGHT MODES

Multi color light modes

Briefly press the  button to cycle round the different light modes. 12 Modes are available (descriptions are when active with Music):

1. Single color
2. Chase mode single color
3. Double chase mode color fading
4. Fade between Colors
5. Rainbow color round
6. Back and forth with color cycle
7. Fire mode
8. Pulse to music single color
9. Pulse to music changing color
10. Bargraph changing color
11. Circular bargraph changing color
12. Off

Reset


A Reset will erase all settings. To perform a Reset, press & hold the  button for 10 seconds. The speaker will reset and power off.

In the unlikely event that the speaker locks up a Hardware Reset can be performed by inserting a pin/paperclip into the Hardware Reset hole in the dry-box.

8.

AUDIO PLAYBACK

 Aux In

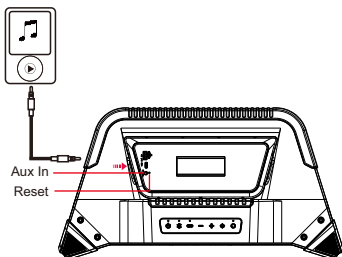

To play from an external device connect the line or headphone output of phone/cd player/mp3 player etc. to the Aux input using a suitable stereo 3.5mm 1/8th jack cable (not supplied). The speaker will automatically select the Aux input.

9.

POWER BANK

 
Charging External Devices

Connect your device to the USB A or USB C port in the dry-box with a suitable cable.

Note: Only one charging type can be used at a time.

1.USB-A Charging Output(5V/0.5A)

2.USB-C Charging Output(5V/0.5A)

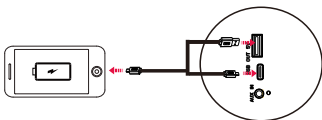

USB-A Charging
USB-C Charging

