


Installing the 9-volt battery
into your dual
function controller

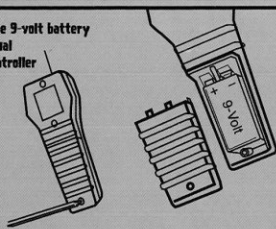

Using a small screwdriver, open the
battery door on the back of
your controller.

Install a fresh 9-volt battery and
replace door. Remove battery between
uses to extend battery life.

Zooms forward and spins to change direction and eyes light up
Wireless remote control, controllable up to 40 feet
Hours of hilarious fun at your fingertips

How To Operate Your Dirty Rat

Locate the ON/OFF switch on the bottom of your Dirty Rat.
Turn switch to ON and set down on floor. A flat, hard and smooth surface
is recommended for best results.

Point the dual function controller at the remote control Dirty Rat.



GOES FORWARD
when pressed




**SPINS AND CHANGES
DIRECTION** when pressed



Installing Batteries Into Your Remote Control Dirty Rat

Using a small screwdriver, open the
battery door on the bottom of your
Dirty Rat. Install fresh AA size
batteries and close door.

Remember to turn off your Dirty Rat
when finished using to preserve battery
life. Remove all batteries when
storing between uses.

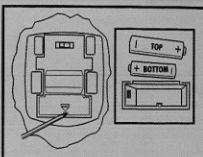

Caution: Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc),
or rechargeable (nickel-cadmium) batteries. **DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE ON LEAK.**

WARNING

Modifying or tampering with the transmitter, controllers or the Dirty Rat's components is strictly prohibited and
can cause a malfunction and void your FCC authorization to operate your Dirty Rat.

Controller requires one 9-volt battery - not included
Rat requires two AA batteries - not included



7 63750 12915 4

054 21 0973 TD-363488-V
Distributed by Target Corporation
Minneapolis, MN 55403
© 2004 Target Brands, Inc.
All Rights Reserved
www.target.com

Made in China