

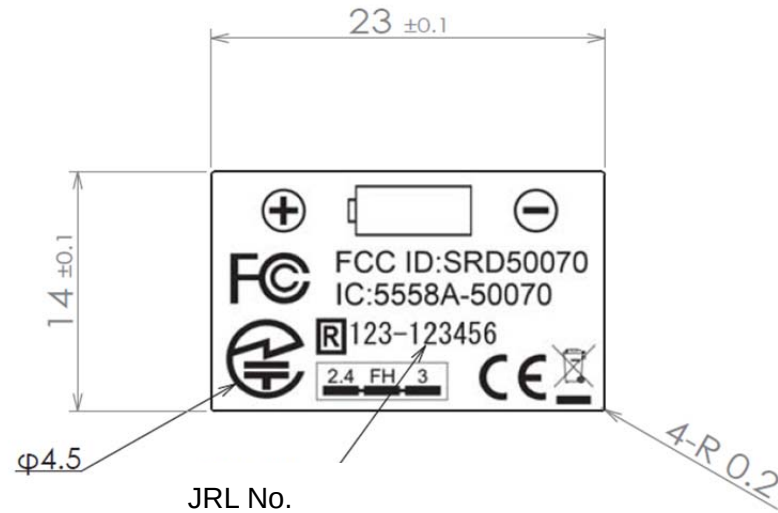


## Label Drawing

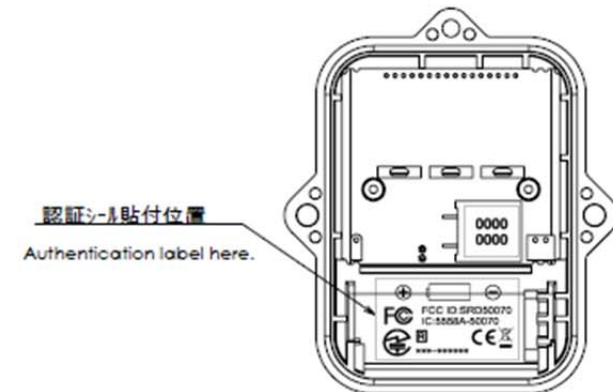

Although the FCC ID and IC No. are placed inside of the battery compartment, users will recognize the label when they put the battery into the device before starting to use it.

## Label Location

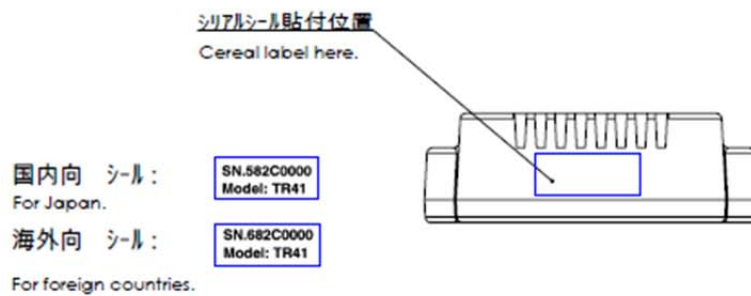


シリアルシール貼付位置  
Cereal label here.

国内向 シール：  
For Japan.

SN.582E0000  
Model: TR42

海外向 シール：  
For foreign countries.

SN.682E0000  
Model: TR42

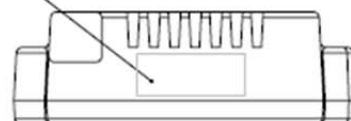


シリアルシール貼付位置  
Cereal label here.

国内向 シール：  
For Japan.


SN.58300000  
Model: TR45

海外向 シール：  
For foreign countries.

SN.68300000  
Model: TR45

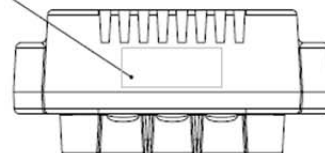


認証シール貼付位置  
Authentication label here.

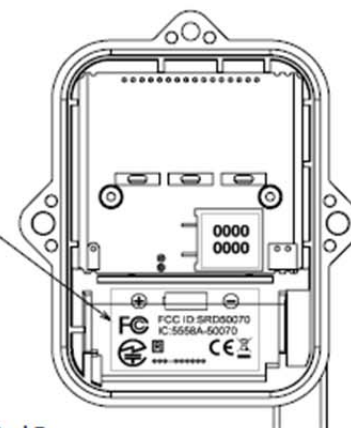

ケース内部  
Inside

認証シール貼付位置  
Authentication label here.

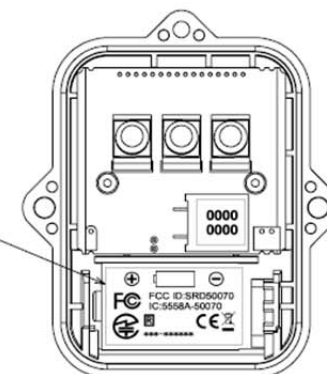

ケース内部  
Inside