 


K88

User Manual



About This Manual

Thank you for choosing this ZTE mobile device. In order to keep your device in its best condition, please read this manual and keep it for future reference.

Copyright

Copyright © 2016 ZTE CORPORATION

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

Notice

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice. This manual has been designed with the utmost care to ensure the accuracy of its content. However, all statements, information and recommendations contained therein do not constitute a warranty of any kind, either expressed or implied. Please refer to [For Your Safety](#) to be sure to use your device properly and safely. We offer self-service for our smart terminal device users. Please visit the ZTE official website (at <http://www.zteusa.com/>) for more information on self-service and supported product models. Information on the website takes precedence.

Disclaimer

ZTE Corporation expressly disclaims any liability for faults and damages caused by unauthorized modifications of the software.

Images and screenshots used in this manual may differ from the actual product. Content in this manual may differ from the actual product or software.

Trademarks

ZTE and the ZTE logos are trademarks of ZTE Corporation.

Google and Android are trademarks of Google, Inc.

The Bluetooth® trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by ZTE Corporation is under license.



microSDHC Logo is a trademark of SD-3C, LLC.



Qualcomm® Snapdragon™ processors are products of Qualcomm Technologies, Inc.

Qualcomm and Snapdragon are trademarks of Qualcomm Incorporated, registered in the United States and other countries. Used with permission.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.

Other trademarks and trade names are the property of their respective owners.

Version No.: R1.0

Edition Time: April 7, 2016

Contents

Getting Started9

- Getting to Know Your Tablet 9
- Knowing the Keys 11
- Installing the nano-SIM Card and the microSDHC™ Card 11
- Charging the Battery 12
- Extending the Battery Life 14
- Powering On/Off 14
- Setting Up for the First Time 14
- Locking/Unlocking the Screen and Keys 15
- Using the Touch Screen 15
- Getting to Know the Home Screen 18

Personalizing.....21

- Changing the System Language 21
- Setting the Date and Time..... 21
- Changing Notification Sound..... 21
- Turning On/Off System Sounds..... 22
- Adjusting Volume 22
- Using Do Not Disturb Mode 22
- Applying New Wallpapers 23
- Changing Screen Brightness 24
- Setting the Theme 24
- Setting the Home Screen Transition Effect 25
- Protecting Your Tablet With Screen Locks 25

Protecting Your Tablet With Screen Pinning	26
Knowing the Basics.....	28
Monitoring the Tablet Status	28
Managing Notifications	29
Managing Icons and Widgets	32
Organizing With Folders.....	34
Rearranging the Primary App Icons	34
Entering Text.....	35
Editing Text	44
Opening and Switching Apps.....	45
Connecting to Networks and Devices.....	46
Connecting to Mobile Networks	46
Connecting to Wi-Fi.....	47
Using Wi-Fi Direct®	51
Connecting to Bluetooth Devices.....	52
Connecting to Your Computer via USB	55
Using the microSDHC Card as Portable or Internal Storage	56
Sharing Your Mobile Data Connection	60
Connecting to Virtual Private Networks.....	63
Web Accounts	65
Adding or Removing Accounts.....	65
Configuring Account Sync	66
Email	68

Setting Up the First Email Account	68
Checking Your Emails	68
Responding to an Email	69
Writing and Sending an Email	70
Adding and Editing Email Accounts	71
Changing General Email Settings	72
Web Browser	73
Opening a Web Page or Searching the Web	73
Using Multiple Browser Tabs	74
Downloading Files	74
Camera.....	75
Capturing a Photo.....	75
Recording a Video	76
Using Manual Camera Mode	77
Using Other Camera Modes	78
Customizing Camera/Camcorder Settings.....	79
Gallery.....	81
Opening Gallery.....	81
Working With Albums.....	81
Working With Pictures.....	82
Retouching Your Pictures.....	83
Playing Videos.....	84
Play Music	86
Playing Your Music	86

Managing Playlists	88
Video Player	90
Opening the Video Library	90
Playing and Controlling Videos	90
Managing Video Files	91
FM Radio	93
Scanning and Saving Channels	93
Listening to FM Radio	93
Editing a Saved Channel	94
Other Options and Settings	94
Sound Recorder	95
Recording a Voice Memo	95
Playing a Voice Memo	95
More Apps	97
Backup & Restore	97
Calculator	97
Clock	98
Downloads	99
File Manager	99
Task Manager	100
Google Apps	100
Settings	102
Wireless and Networks	102

Personal 105

Device 110

Accounts 113

System 114

For Your Safety 116

General Safety..... 116

FCC Regulations 117

RF Exposure Information (SAR)..... 118

CTIA..... 119

Distraction 120

Product Handling 121

Electrical Safety..... 124


Interference 124

Explosive Environments..... 126

Getting Started

 Getting to Know Your Tablet



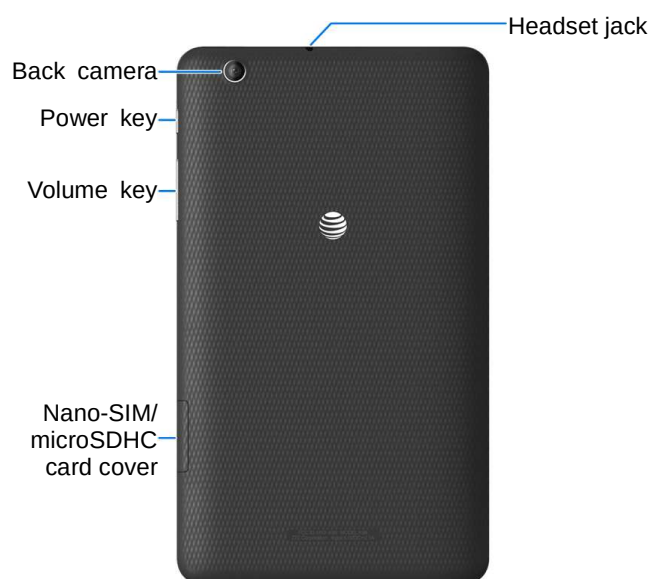

Knowing the Keys

Key	Function
Power key	• Press and hold to turn on or off airplane mode, restart, or power off. • Press to turn off or on the screen display.
Home key	• Touch to return to the home screen from any application or screen. • Touch and hold to use Google Search or Now on Tap.
Back key	Touch to go to the previous screen.
Recent apps key	Touch to see recently used apps.
Volume key	Press or hold either end of the key to turn the volume up or down.

Installing the nano-SIM Card and the microSDHC™ Card

 
The microSDHC card (optional, not included) can be installed or removed while the device is turned on. You need to unmount the microSDHC card before removing it. See [Using the microSDHC Card as Portable or Internal Storage](#).



WARNING!

To avoid damage to the device, do not use any other kind of SIM cards, or any non-standard nano-SIM card cut from a SIM card. You can get a standard nano-SIM card from your service provider.

1. Open the nano-SIM/microSDHC card cover on the back of the tablet.
2. Slide the nano-SIM card into the nano-SIM card slot and the microSDHC card (sold separately) into the microSDHC card slot with the contacts on the cards facing the tablet.

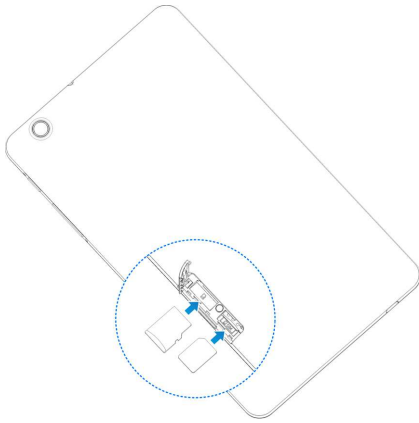

3. Close the cover.

Charging the Battery

Your device's battery should have enough power for the device to turn on and find a signal. You should fully charge the battery as soon as possible.

If the battery is low, there will be a pop-up message on the screen. As you charge your device, the lock screen will show you the exact battery level on the status bar.

 
⚠ WARNING!

Use only ZTE-approved chargers and cables. The use of unapproved accessories could damage your device or cause the battery to explode.

⚠ CAUTION:

Do not change the built-in rechargeable battery in your device by yourself. The battery can only be changed by ZTE or ZTE authorized service provider.

1. Connect the adapter to the charging jack. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charging jack.

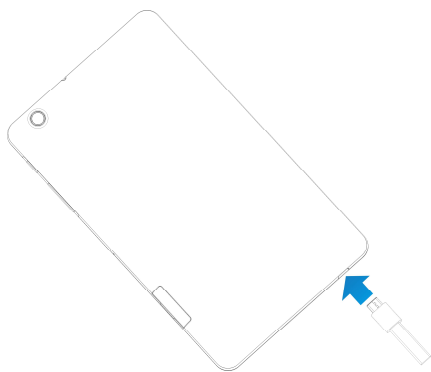

2. Connect the charger to a standard AC power outlet. If the device is on, you'll see a charging icon, such as  or , appear on the status bar.
3. Disconnect the charger when the battery is fully charged.

**NOTE:**

If the battery is extremely low, it may take a while before the screen displays charging indication and you can turn the device on.

Extending the Battery Life

Active applications, screen brightness levels, Bluetooth and Wi-Fi usage and GPS functionality can drain your battery. You can follow the helpful tips below to conserve your battery power:

- Reduce the screen backlight time.
- Lower the screen brightness.
- Turn Wi-Fi, Bluetooth and auto-sync off when not in use.
- Disable the GPS function when not in use. Most applications using this function will periodically query the GPS satellites for your current location, and each query drains your battery.

Powering On/Off

- Press and hold the **Power** key to turn on your device.
- To power off, press and hold the **Power** key to open the options menu and touch **Power off**.

**NOTE:**

If the device freezes or takes too long to respond, you can press and hold the **Power** key for about 10 seconds to restart the device.

Setting Up for the First Time

When you first power on your device after you purchase it or reset it to factory settings (see [Backup and Reset](#)), you need to do some

settings before using it.

Touch the language field to select the language. Then follow the prompts to set up Wi-Fi, Google account, Google location and other options.

Locking/Unlocking the Screen and Keys

Your device allows you to quickly lock the screen and keys (put the device to sleep mode) when not in use and to turn the screen back on and unlock it when you need it.

To lock the screen and keys:

To quickly turn the screen off and lock the keys, press the **Power** key.

NOTE:

To save battery power, the device automatically turns off the screen after some time of inactivity. You will still be able to receive notifications while the screen is off.

To unlock the screen and keys:

Press the **Power** key to turn the screen on.

If you have set up a screen lock, you'll need to unlock the device by touching and holding on the screen, drawing a pattern, or entering a PIN or password. See [Protecting Your Tablet With Screen Locks](#) for more information.

Using the Touch Screen

Your device's touch screen enables you to control actions through a variety of touch gestures.

- Touch

When you want to type using the onscreen keyboard, select items on the screen such as the application and settings icons, or press the onscreen buttons, simply touch them with your finger.



- Touch and Hold

To open the available options for an item (for example, a message or link in a web page), touch and hold the item.



 
- Swipe or Slide

To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.




- Drag

To drag, press and hold your finger with some pressure before you start to move your finger. While dragging, do not release your finger until you have reached the target position.

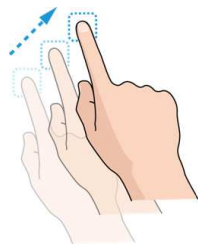

- Pinch

 In some apps (such as Maps, web browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).

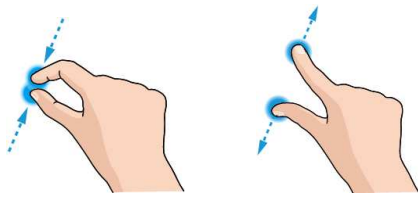

- Rotate the screen

For most screens, you can automatically change the screen orientation from portrait to landscape by turning the device sideways.

 NOTE:

 
The auto-rotate feature needs to be enabled for the screen orientation to automatically change. Touch the **Home** key >

 > **Settings > Display** and turn on the **Auto-rotate screen** switch.

You can also access the screen rotation control by sliding down the status bar with two fingers and touch **Auto-rotate/Portrait**.

Getting to Know the Home Screen

The home screen is the starting point for your device's applications, functions, and menus. You can customize your home screen by adding folders, widgets, and more.

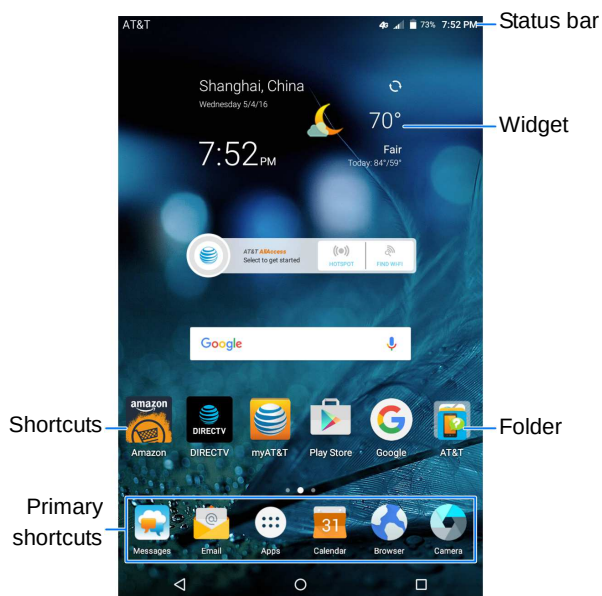

Extended Home Screen Panels

Your home screen is extendable, providing more space for app icons, widgets, and more. Simply swipe left or right on the home screen to see the extended panels. You can add or remove home screen panels, or adjust their order.

To add a new home screen panel:

1. Touch  on the home screen, or touch and hold an empty area of the home screen and select **Widgets**.

2. Touch and hold an application icon or a widget and drag it to the left of right edge of the screen to create a new home screen panel and put the icon or widget on it.



NOTE:

Your device keeps at least three home screen panels.

To adjust the order of a home screen panel:

1. Touch and hold an empty area of the home screen and slide left or right at the top of the screen to view the home screen thumbnails.
2. Touch and hold a thumbnail and drag it left or right to the place you need.



NOTE:

Touch  at the bottom of a home screen thumbnail to set it as the main home screen.

Personalizing

Changing the System Language

1. Touch the **Home** key >  > **Settings** > **Language & input** > **Language**.
2. Select the language you need.

Setting the Date and Time

1. Touch the **Home** key >  > **Settings** > **Date & time**.
2. Set the date, time, time zone, and date/time format.
 - ▶ To adjust the date and time automatically, turn on **Automatic date & time**.
 - ▶ To adjust the date and time manually, turn off **Automatic date & time** and touch **Set date** / **Set time** to change the date and time.
 - ▶ To adjust the time zone automatically, turn on **Automatic time zone**.
 - ▶ To adjust the time zone manually, turn off **Automatic time zone** and touch **Select time zone** to set the correct time zone.
 - ▶ To adjust the time format, touch **Use 24-hour format**.

Changing Notification Sound

You can customize the default notification sound.

1. Touch the **Home** key >  > **Settings** > **Sound & notification**.

2. Touch **Default notification ringtone**.
3. Select the ringtone you want to use.

 NOTE:

If you have additional audio files saved in the internal storage or the microSDHC card, touch the **MUSIC** or **RECORDINGS** tab at the top of the ringtone list to choose one as the ringtone.

4. Touch **OK**.

Turning On/Off System Sounds

1. Touch the **Home** key >  > **Settings** > **Sound & notification** > **Other sounds**.
2. Touch **Dial pad tones**, **Screen locking sounds**, **Charging sounds**, or **Touch sounds**.

Comment [A1]: No phone function, delete?

Adjusting Volume

1. Touch the **Home** key >  > **Settings** > **Sound & notification**.
2. Drag the sliders below **Media volume**, **Alarm volume** and **Notification volume** to adjust the volume for each type of audio.

 NOTE:

You can adjust the media volume when a media application is in use by pressing the **Volume** key. If no media application is active, press the **Volume** key to adjust notification volume.

Using Do Not Disturb Mode

You can limit interruptions with Do not disturb mode. This mode silences your device so that it doesn't make sounds or vibrate when

you don't want it to.

To turn on Do not disturb mode:

1. Touch the **Home** key >  > **Settings** > **Sound & notification** > **Do not disturb**.
2. Touch **Do not disturb** and select **On** or **Scheduled**.
3. Touch **Disturb rules** and select **Total silence**, **Alarms only**, or **Priority only** depending on whether you want to allow exceptions. You can customize the exceptions when **Priority only** is selected.
4. If you selected **Scheduled**, set the days and time period when Do not disturb automatically applies.

 NOTES:

- Press and hold down on the **Volume** key to turn off the notification ringtone.
- To turn off Do not disturb mode quickly, press either end of the **Volume** key and then touch **END NOW** when the screen is unlocked.

To set exceptions for Do not disturb mode (Priority only):

You can set reminders, events, and callers that you specify as exceptions when Do not disturb mode is set to **Priority only**.

1. Touch the **Home** key >  > **Settings** > **Sound & notification** > **Do not disturb**.
2. In the **Priority interruptions** section, turn on the switch next to the items you want to allow.

Applying New Wallpapers

You can set the wallpaper for the home screen and lock screen.

1. Touch and hold an empty area on the home screen.
2. Touch the **Wallpapers** tab and slide left or right to select an image as the wallpaper. You can also touch **GALLERY** or **LIVE WALLPAPER** to choose a picture. Some cropping may be needed for **Gallery** images.

 NOTE:

In addition, you can touch the **Home** key >  > **Settings** > **Display** > **Wallpaper** to pick an image from **Wallpapers**, **Gallery** or **Photos**, or an animation from **Live Wallpapers**.

Changing Screen Brightness

1. Touch the **Home** key >  > **Settings** > **Display** > **Brightness level**.
2. Drag the slider to manually adjust the screen brightness.

 NOTE:

Your tablet can automatically adjust the screen brightness for available light. Touch **Adaptive brightness** in the **Display** settings screen to turn the feature on or off.

Setting the Theme

You can change the icon style of by changing themes.

1. Touch and hold an empty area on the home screen.
2. Touch **Themes**.
3. Select the theme you like.

Setting the Home Screen Transition Effect

1. Touch and hold an empty area on the home screen.
2. Touch **Effects**.
3. Pick an effect and the tablet will demonstrate how it works. Touch other effects until you find the favorite one.

Protecting Your Tablet With Screen Locks

You can protect your tablet by creating a screen lock. When it is enabled, you need to touch and hold on the screen, draw a pattern or enter a numeric PIN or password to unlock the tablet's screen and keys.

1. Touch the **Home** key >  > **Settings** > **Security** > **Screen lock**.
2. Touch **None**, **Long press**, **Pattern**, **PIN** or **Password**.
 - ▶ Touch **None** to disable the screen lock.
 - ▶ Touch **Long press** to enable screen lock and allow unlocking with a 'touch and hold' gesture. You can unlock the screen by touching and holding on the display.
 - ▶ Touch **Pattern** to draw and redraw a pattern that you must draw to unlock the screen.
 - ▶ Touch **PIN** or **Password** to set a numeric PIN or a password that you must enter to unlock the screen.
3. For Pattern, PIN, or Password lock, select whether to require

unlock at start up and how you want notifications and their contents to show when the device is locked. Then touch **DONE**.



NOTE:

Remember the pattern, PIN or password you set. Otherwise, you will have to upgrade the tablet software to use the device.

Protecting Your Tablet With Screen Pinning

You can use the screen pinning feature to keep an app in view, so others cannot switch to other apps or access your personal information.

Turn On Screen Pinning

1. Touch the **Home** key >  > **Settings** > **Security** > **Screen pinning**.
2. Touch the **On/Off** switch.
3. If you want to ask for the unlock pattern, PIN or password before unpinning the screen, switch on **Ask for unlock pattern / PIN / password before unpinning** when the screen lock has been set.

Pin a Screen

1. Ensure that screen pinning is turned on.
2. Open the app you want to keep in view.
3. Touch the **Recent apps** key.
4. If there are many app tabs, swipe up to find  on the front-most tab.

5. Touch .

Unpin the Screen

To unpin the screen and return to normal use, touch and hold the **Back** key and the **Recent apps** key at the same time.

If you have asked for the unlock pattern, PIN or password before unpinning the screen, touch and hold on the lock screen and draw the pattern or enter the PIN/password.

Knowing the Basics

Monitoring the Tablet Status

The status bar at the top of the home screen provides tablet and service status icons on the right side. Below are some of the icons you may see.

	4G LTE connected		3G connected
	Do not disturb mode on (Alarms only or Priority only)		Signal strength
	Do not disturb mode on (Total silence)		Airplane mode
	Battery low		Bluetooth® on
	Battery partially drained		Connected to a Wi-Fi® network
	Battery full		GPS on
	Battery charging		Alarm set
	Wired headset connected		

Managing Notifications

Notification Icons

The status bar at the top of the home screen provides notification icons on the left. Below are some of the icons you may see.

	New Exchange email		New Wi-Fi network detected
	New message(s) from the Email app		Downloading data
	New message(s) from the Gmail™ app		Sending data
	Song playing		USB tethering on
	microSDHC card mounted		

Open/Close the Notification Panel

Notifications report the arrival of new messages, calendar events, and alarms, as well as ongoing events, such as when you are playing music. You can open the notification panel to view the details of notifications.

- To open the notification panel, swipe your finger down on the home screen or from the top of the screen.

- To close the notification panel, swipe your finger up on the screen or touch the **Back** key.

Respond to or Remove a Notification

In the notification panel, you can respond to a notification or remove the notifications. The notification panel also supports expandable notifications that let you perform additional actions right from the notification itself.

- To respond to a notification, just touch it.
- Slide down with one finger to expand certain notifications. You can also swipe two fingers vertically or pinch-zoom to expand or collapse certain notifications.
- To remove a notification, swipe it right or right.
- Some applications allow you to turn off their notifications. You can swipe such notification left and touch  to hide future notifications from this app.
- To remove all notifications, touch  below all the notifications.
- To manage notifications you have received, touch and hold a notification to identify the application that created it. You can then touch  and turn on or off some or all of the following settings.
 - ▶ **Block all:** Hide future notifications from this app.
 - ▶ **Treat as priority:** Show notifications from this app when Do not disturb mode is set to Priority only.
 - ▶ **Allow peeking:** Allow this app to show certain

notifications briefly in the current screen.

- ▶ **Hide sensitive content:** Hide content in this app's notifications when the tablet is locked.



NOTE:

If you block notifications for an app, you may miss its important alerts and updates. The notifications of some apps cannot be blocked.

Use Quick Settings

The Quick Settings make it convenient to view or change the most common settings for your tablet.

To access the Quick Settings, open the notification panel and drag the panel downwards, or swipe down from the top of the screen with two fingers.

You can find the following Quick Settings:

- **Hotspot:** Touch to turn on or off mobile hotspot. See [Share Your Mobile Data Connection as a Mobile Hotspot](#).
- **Airplane mode:** Touch to turn on or off airplane mode.
- **Sync:** Turn on or off **Auto-sync data**. See [Configure Auto Sync Setting](#).
- **Do not disturb / Total silence / Alarms only / Priority only:** Touch to open the Do not disturb menu. See [Using Do Not Disturb Mode](#).
- **Auto-rotate/Portrait:** Touch to turn on or off the auto-rotate screen feature.
- **Bluetooth:** Touch to turn on or off Bluetooth. Touch and hold

to open Bluetooth settings. See [Connecting to Bluetooth Devices](#).

- **Wi-Fi:** Touch to turn on or off Wi-Fi. Touch and hold to open Wi-Fi settings. See [Connecting to Wi-Fi](#).
- **Data:** Touch to enable or disable data access over the mobile network. Touch and hold to open the Data usage menu. See [Data Usage](#).
- **Location:** Touch to turn location services on or off. Touch and hold to open the Location menu. See [Location](#).
- **Brightness:** Drag the brightness slider to adjust the screen brightness.



NOTES:

- Additional Quick Setting buttons may appear after you use at least once the functions they control.
- In the Quick Settings screen, touch  at the top to get to the **Settings** menu; touch  to adjust the Quick Settings buttons.

Managing Icons and Widgets

Add Widgets

1. From the home screen, touch and hold an empty area.
2. Touch the Widgets tab and slide left or right to browse all available widgets.
3. Touch and hold a widget and drag it to a home screen panel.

 NOTE:

While holding the item, you can drag it to the right edge of the screen to create a new home screen panel and put the item on it.

Move Icons or Widgets

1. Touch and hold an icon or a widget on the home screen.
2. Drag it to the place you need.

 NOTE:

To move icons to another home screen panel, drag them to the right or left edge of the screen. Then release them when the display shows the adjacent panel.

Remove Icons or Widgets

1. Touch and hold an icon or a widget on the home screen.
2. Drag it to  (**Remove**) at the top right to remove it.

 NOTE:

If the icon is an application, drag it to  (**Uninstall**) and touch **OK** to uninstall it. Some preinstalled apps cannot be uninstalled.

Adjust Widget Size

1. Touch and hold a widget on the home screen and then release it.
2. An outline appears around the widget. Drag the outline to resize the widget.

 NOTE:

Not all widgets can be resized.

Organizing With Folders

You can create folders on the home screen and add several application icons to a folder.

You can move folders the same way as moving icons.

1. Touch and hold an icon on the home screen and drag it to  (**Folder**) at the top left.
2. Release the icon. A new folder will be created and the icon is added into the folder.
3. To add more icons into the folder, touch and hold each icon and drag it over the folder before releasing it.

 


NOTE:

Touch the folder and then touch the name field to rename the folder.

Rearranging the Primary App Icons

The home screen includes a customizable primary icons area at the bottom visible from all home screen panels. You can keep at most six items in the area. Drag icons or folders in or out of the area to rearrange it.



Entering Text

You can enter text using the onscreen keyboard. Some apps open it automatically. In others, you open it by touching where you want to type. Touch the **Back** key to hide the onscreen keyboard. You can also enter text by speaking with the Google voice typing feature.

Enable or Disable Input Methods

1. Touch the **Home** key >  > **Settings** > **Language & input** > **Current Keyboard**.
2. Touch **CHOOSE KEYBOARDS** at the bottom.
3. Slide the switches beside the input methods to enable or disable them.

 NOTE:

Some default input methods may not be disabled.

Change Input Methods

 
1. When you use the onscreen keyboard to enter text, the icon  appears next to the **Recent apps** key.
2. Touch  and select the input method you need.

 NOTE:

The icon  appears only when more than one input method is installed and enabled.

Google Keyboard

The Google Keyboard provides a layout similar to a desktop computer keyboard. When screen auto-rotation is enabled, turn the tablet sideways and the keyboard will change from portrait to landscape. The landscape keyboard is not supported in all applications.

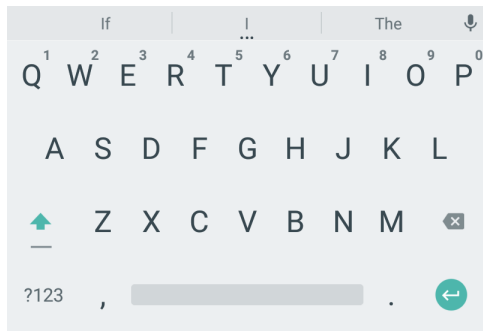

- Touch the alphabetic keys to enter letters. Touch and hold some specific keys to enter associated accented letters or numbers. For example, to enter É, touch and hold **E**³ and the available accented letters and number 3 appear. Then slide to choose É.
- As you enter a word, candidates appear above the keyboard. Touch to select the correct one; touch and hold to see more possible options.
- Touch  to use uppercase. Double-tap  to lock

uppercase. This key also changes to indicate the current case you are using:  for lowercase,  for uppercase, and  when locked in uppercase.

- Touch  to delete the text before the cursor.
- Touch  to select numbers and symbols. You can then touch  to find more.
- Touch  to use Google voice typing.
- Touch and hold  to change the input language or set up the Google Keyboard.

 
Gesture Typing

The Google Keyboard supports the gesture typing feature. You use this feature to input a word by sliding through the letters.

To enable and use gesture typing:

1. Touch and hold  on the Google Keyboard and then touch **Google Keyboard Settings**.
2. Touch **Gesture Typing** and then touch **Enable gesture typing** if this feature is turned off.
3. Move your finger from letter to letter on the keyboard to trace a word without lifting the finger until you reach the end of the word.

Hello

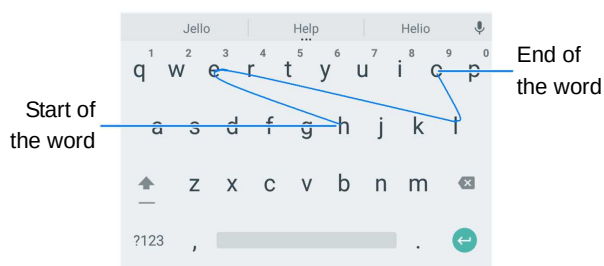

NOTES:

 
- Touch when you want to. If you want to enter a single letter, go ahead and touch.
- Lift your finger at the end of the word. A space is added automatically when you begin to input the next word.

TouchPal Keyboard

The TouchPal keyboard offers three layouts including Full, Phonepad, and T+. You can touch  to select a language and layout.

You can also use Curve® and Wave™ to speed up text input by moving your finger from letter to letter or word from word without lifting the finger.

The Full Layout

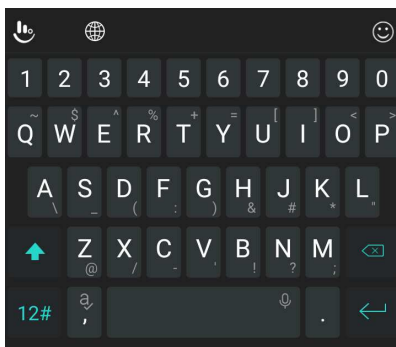

The full layout offers an input experience similar to a computer keyboard.

 
- **The alphabetic keys:** Touch the keys to enter letters. Touch and hold a key and slide if necessary to choose more characters.
- **The shift key:** Touch  to use uppercase. Double-tap  to lock uppercase. This key also changes to indicate the current case you are using:  for lowercase,  for uppercase, and  when locked in uppercase.
- **Word prediction:** Touch and hold  or  and touch the prediction switch to turn off or on prediction.
- **Pre-defined texts:** Touch  to enter digits, symbols, and other texts. You can touch the arrow keys to turn pages, or touch  to go back to the alphabetic keys. Slide up on the

space key or touch  to enter Emoji and emoticons.

- **The delete key:** Touch  to delete text before the cursor. You can also slide left on the key to delete a whole word.
- **More options:** Touch  to access additional functions of TouchPal, use voice input, edit text, change keyboard themes, and more.

The PhonePad Layout


The layout is similar to a phonepad.

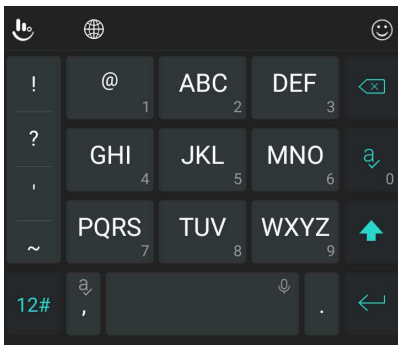

Touch an alphabetic key repeatedly until the desired letter appears. You can also touch and hold the key and slide left or right to choose the letter or number you need.

If word prediction is enabled () , just touch the keys once and choose the right word.

 The T+ Layout

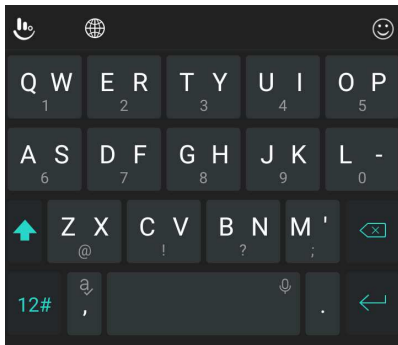

Touch to enter the left letter on the key. Double-tap or flick right to enter the right letter/symbol on the key. You can also touch and hold a key and slide left or right to choose more letters and symbols.

If word prediction is enabled (🔍), just touch the keys once and choose the right word.

Curve Word Gesture

Curve allows you to enter text by moving your finger on the screen from letter to letter to enter each word.

 
To enable and use Curve:

1. On the TouchPal keyboard, touch  > **Settings** > **Smart input** and check **Curve - Word gesture**.
2. Touch the **Back** key to return to the text field. Open the TouchPal keyboard and switch to the full layout.

NOTE:

Curve is only available in the full layout.

3. Move your finger from letter to letter on the keyboard to trace a word without lifting the until you reach the end of the word.

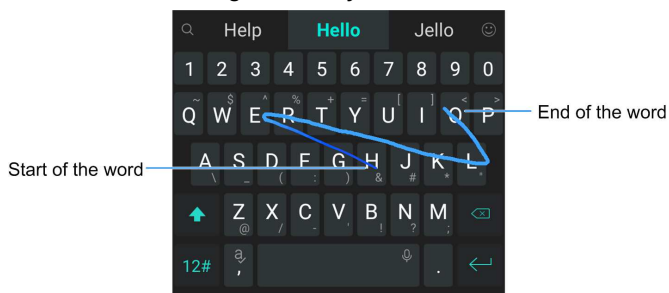

Tips for using TouchPal Curve:

- Touch when you want to. If you want to enter a single letter, go ahead and touch the key.
- Lift your finger at the end of the word. A space is added automatically when you begin to trace the next word.

Wave Sentence Gesture

Wave allows you to enter words by dragging candidate words to the space key.

To enable and use Wave:

 
1. On the TouchPal keyboard, touch  > **Settings** > **Smart input** and check **Wave - Sentence gesture**.
2. Touch the **Back** key to return to the text field. Open the TouchPal keyboard and switch to the full layout.



NOTE:

Wave is only available in the full layout.

3. Touch or use Curve to enter the first word. As the first word appears on the text field, candidate words appear on the keyboard for you to choose from as the following word.
4. Drag the correct candidate word to the space key to add the word to the text field.

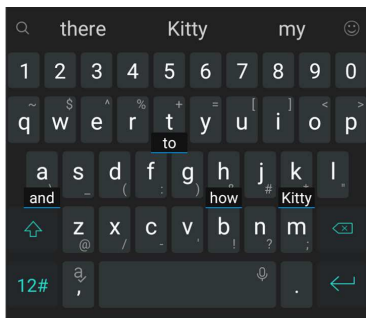

 NOTE:

If no candidate word is correct or displayed, you can go on entering the words normally.

Google Voice Typing

Google voice typing uses the Google voice recognition service to convert speech to text.

1. Touch  to access the voice typing feature when you are using the Google Keyboard.

Or touch  when entering text and select **Google voice typing**.

2. When you see the microphone image, speak what you want to type.
3. You can continue entering text to keep it or to delete it.

**NOTE:**

Say "comma," "period," "question mark," "exclamation mark," or "exclamation point" to enter punctuation.

Input Method Settings

Choose the input method settings by touching  > **Settings** > **Language & input** from the home screen.

In the **Keyboard & input methods** section, you can set the current input method and choose the settings for input methods.

Editing Text

- **Move the insertion point:** Touch where you want to type. The cursor blinks in the new position, and a tab appears below it. Drag the tab to move the cursor.
- **Select text:** Touch and hold or double-tap within the text. The nearest word highlights, with a tab at each end of the selection. Drag the tabs to change the selection.
- **Cut or copy:** Select the text you want to manipulate. Then touch **CUT** or **COPY** to cut or copy the text to the clipboard.
- **Replace text with the clipboard text:** Select the text you want to replace. Then touch **PASTE**.

- **Insert clipboard text to the text field:** Touch and hold the tab below the cursor and then select **PASTE**.

Opening and Switching Apps

Open an App

1. Touch the **Home** key to access the home screen.
2. Touch  and flick up or down on the screen and touch an app to open it.

Switch Between Recently Opened Apps

1. Touch the **Recent apps** key. The apps you've used recently are displayed in a series of tabs. Slide up and down to see all the tabs.
2. Touch a tab to open that app.

NOTE:

You can swipe a tab sideways or touch **X** on the tab to remove it from the screen.

Connecting to Networks and Devices

Connecting to Mobile Networks

Control Mobile Data Use

To enable or disable data access:

1. Touch the **Home** key >  > **Settings** > **Data usage**.
2. Touch the **Mobile data** switch to enable or disable mobile data access.

To get data services when roaming internationally:

1. Touch the **Home** key >  > **Settings** > **Mobile networks**.
2. Touch the **International Data Roaming**.
3. Touch the **International Data** switch.

NOTE:

Data roaming may incur significant roaming charges.

Select Preferred Network Type

1. Touch the **Home** key >  > **Settings** > **Mobile networks**.
2. Touch **Preferred network type** and touch the type of network you prefer the device to connect to.

Set Access Point Names

To connect to the Internet you can use the default Access Point Names (APN). And if you want to add a new APN, please contact the service provider to get the necessary information.

1. Touch the **Home** key >  > **Settings** > **Mobile networks**.
2. Touch **Access Point Names** and then touch .
3. Touch each item to enter the information you get from your service provider.
4. Touch  > **Save** to complete.

NOTE:

To set the APN to default settings, touch  > **Reset to default**.

Select Network Operator

1. Touch the **Home** key >  > **Settings** > **Mobile networks**.
2. Touch **Network operators**.
3. Touch **Search networks** to search for all available networks.
4. Touch a network in the network list to register manually.
You can also touch **Choose automatically** to select preferred network automatically.

Connecting to Wi-Fi

Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 100 meters, depending on

the Wi-Fi router and your surroundings.

Turn Wi-Fi On and Connect to a Wi-Fi Network

1. Touch the **Home** key >  > **Settings** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **On** position to turn on Wi-Fi.
3. Touch a network name to connect to it.
4. If the network is secured, enter the password and touch **CONNECT**.



NOTE:

Your tablet automatically connects to previously used Wi-Fi networks when they are in range.

Get Notified of Open Networks

1. Touch the **Home** key >  > **Settings** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **On** position.
3. Touch  > **Advanced**.
4. Slide the **Network notification** switch.

When Wi-Fi is on, you receive notifications in the status bar when your tablet detects an open Wi-Fi network. Switch off this option to turn off notifications.

Add a Wi-Fi Network

You can add a Wi-Fi network if the network does not broadcast its name (SSID), or to add a Wi-Fi network when you are out of

range.

To connect to a secured network, you first need to get the security details from the network's administrator.

1. Touch the **Home** key >  > **Settings** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **On** position.
3. Touch  > **Add network**.
4. Enter the network SSID (name). If necessary, enter security or other network configuration details.
5. Touch **SAVE**.

Connect to a WPS Network

Wi-Fi Protected Setup (WPS) is a feature that makes it easy to add your tablet to the access points which support WPS.

You can use one of the following methods to connect your tablet to a wireless network using WPS.

Method one: WPS button (Recommended)

1. Touch the **Home** key >  > **Settings** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **On** position.
3. Touch  > **Advanced** > **WPS Push Button**.
4. Press the WPS button on the access point and the access point will recognise your device and add it to the network.

Method two: PIN number

1. Touch the **Home** key >  > **Settings** > **Wi-Fi**.

2. Slide the **Wi-Fi** switch to the **On** position.
3. Touch  > **Advanced** > **WPS Pin Entry**.
4. The WPS PIN number displays on the screen. Enter the PIN number into the access point's setup page.

After entering the PIN number, your device automatically finds the access point and configures the connection.

 NOTE:

For detailed information about the WPS feature of the access point, please refer to its user documents.

Forget a Wi-Fi Network

You can make your device forget about the details of a Wi-Fi network that you added - for example, if you don't want the device to connect to it automatically or if it is a network that you no longer use.

1. Touch the **Home** key >  > **Settings** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **On** position.
3. Touch the Wi-Fi network name and then touch **FORGET**.

Adjust Advanced Wi-Fi Settings

1. Touch the **Home** key >  > **Settings** > **Wi-Fi**.
2. Touch  > **Advanced** to adjust the following settings.
 - ▶ **Network notification:** Get notifications in the status bar when Wi-Fi is on and an open network is available.
 - ▶ **Keep Wi-Fi on during sleep:** Set whether to keep Wi-Fi

on in sleep mode.

- ▶ **Scanning always available:** Allow some services to scan for networks even when Wi-Fi is off.
- ▶ **Connect to AT&T Wi-Fi spot:** Automatically connect to AT&T Wi-Fi hotspots when they are available.
- ▶ **Install certificates:** Install certificates needed for connecting to certain Wi-Fi networks.
- ▶ **Wi-Fi Direct:** Use the Wi-Fi Direct feature. See [Using Wi-Fi Direct®](#).
- ▶ **WPS Push Button:** Connect to a WPS network via the push button method.
- ▶ **WPS Pin Entry:** Connect to a WPS network via the device PIN method.
- ▶ **MAC address:** Check the MAC address.
- ▶ **IP address:** Check the device's IP address.

Using Wi-Fi Direct®

Wi-Fi Direct allows Wi-Fi devices to share files and data directly by connecting to each other without the need for wireless access points (hotspots).

Connect to Another Device via Wi-Fi Direct

1. Touch the **Home** key >  > **Settings** > **Wi-Fi**.
2. If Wi-Fi is off, slide the **Wi-Fi** switch to the **On** position.
3. Touch  > **Advanced** > **Wi-Fi Direct**. Your tablet will search

for other devices enabled with Wi-Fi Direct connections.

4. Touch a device name below **Peer devices** to connect with it. The other device will receive a connection prompt and need to accept the request for connection. Both devices may need to enter a common PIN.
5. Once connected the device is displayed as “Connected” in the **Peer devices** list.

Send Data via Wi-Fi Direct

1. Open the appropriate application and select the file or item you want to share.
2. Select the option for sharing via Wi-Fi Direct. The method may vary by application and data type.
3. Touch a device the tablet has connected with or wait for it to search for new devices and touch one of them.

Connecting to Bluetooth Devices

Bluetooth is a short-range wireless communication technology. Phones or other devices with Bluetooth capabilities can exchange information wirelessly within a distance of about 10 meters (32.8 feet). The Bluetooth devices must be paired before the communication is performed.

Turn Bluetooth On/Off

1. Touch the **Home** key >  > **Settings** > **Bluetooth**.
2. Slide the **Bluetooth** switch to the **On** or **Off** position.

When Bluetooth is on, the  icon appears in the status bar.

Change the Device Name

1. Touch the **Home** key >  > **Settings** > **Bluetooth**.
2. Slide the **Bluetooth** switch to the **On** position if Bluetooth is off.
3. Touch  > **Rename this device**.
4. Edit the name and touch **RENAME**.

Pair With Another Bluetooth Device

1. Touch the **Home** key >  > **Settings** > **Bluetooth**.
2. Slide the **Bluetooth** switch to the **On** position if Bluetooth is off.
Your tablet automatically scans for and displays the IDs of all available Bluetooth devices in range. You could touch  > **Refresh** if you want to scan again.
3. Touch the device you want to pair with.
4. Confirm that the Bluetooth passkeys are the same between the two devices and touch **PAIR**. Alternately, enter a Bluetooth passkey and touch **PAIR**.
Pairing is successfully completed when the other device accepts the connection or the same passkey is entered.



NOTE:

The Bluetooth passkey may be fixed for certain devices, such as headsets and hands-free car kits. You can try entering 0000 or

1234 (the most common passkeys), or refer to the documents for that device.

Forget (Unpair With) a Bluetooth Device

You can make your tablet forget its pairing connection with another Bluetooth device. To connect to the device again, you need to search it and enter or confirm a passkey again.

1. Touch the **Home** key >  > **Settings** > **Bluetooth** and ensure that Bluetooth is turned on.
2. In the list of paired devices, touch the icon  beside the Bluetooth device you want to forget.
3. Touch **FORGET**.

Send Data via Bluetooth

1. Open the appropriate application and select the file or item you want to share.
2. Select the option for sharing via Bluetooth. The method may vary by application and data type.
3. Touch a Bluetooth device the tablet has paired with or wait for it to search for new devices and touch one of them.

Receive Data via Bluetooth

1. Turn Bluetooth on before trying to receive data via Bluetooth.
2. Flick down the status bar and touch .
3. Touch **ACCEPT** to start receiving the data.

Received files are stored automatically in a dedicated folder (*Bluetooth*, for instance) in the tablet. You can access them with

the **File Manager** app.

Connecting to Your Computer via USB

You can connect your tablet to a computer with a USB cable and transfer music, pictures, and other files in both directions. Your tablet stores these files in the internal storage or on a removable microSDHC card.

If you are using USB tethering, you must turn that off before you can use USB to transfer files between your tablet and computer.

Connect Your Tablet to a Computer via USB

1. Connect your tablet to the PC with a USB cable.
 2. Open the notification panel and touch  (**USB for ...**).
 3. Choose one of the following options:
 - ▶ **Charge only:** Charge your tablet via USB.
 - ▶ **Install driver:** If the PC cannot recognize your tablet, you may need to install the driver first.
 - ▶ **Media device (MTP):** Transfer files on Windows® or Mac®.
-  **NOTE:**
For Windows XP, please install Media Player 11 (or later version) when you use MTP.
- ▶ **Camera (PTP):** Transfer photos using camera software.

Connect With Windows Media® Player

You can sync music, picture, and video files from the computer to your tablet via Windows Media Player on the computer.

1. Connect the tablet with your computer via USB.
2. Open the notification panel and touch  (USB for ...).
3. Touch **Media device (MTP)**.
4. Open Windows Media Player and synchronize music, picture, and video files.

Disconnect Your Tablet From the Computer

To disconnect the tablet from the computer, simply unplug the USB cable when you're finished.

Using the microSDHC Card as Portable or Internal Storage

You can use your microSDHC card as portable storage when there's already content such as your media and other files so that you don't lose them.

If your microSDHC card is new or doesn't have content you want to keep, you can also set it up as an extension of the internal storage, and this requires formatting that prevents the microSDHC card from working with other devices.

CAUTION:

As part of the internal storage, the microSDHC card may have

data on it that is necessary for some apps to function normally. Therefore, do not remove or replace the card randomly.

Set Up the microSDHC Card as Portable Storage

When you install a microSDHC card that has not been used on your tablet before, the tablet will mount the card as portable storage by default.

You can also open the notification panel and touch the microSDHC card name, select **Use as portable storage** and then touch **NEXT > DONE**.

To remove the microSDHC card from your tablet:

If you need to remove the microSDHC card used as portable storage while the tablet is on, you must unmount it first.

1. Touch the  > **Home** key > **Settings** > **Storage**.
2. Touch  next to the card name in the **Portable storage** section.
3. When the screen prompts the card is safely ejected, you can now remove it from the tablet.

To erase and format the microSDHC card:

1. Touch the  > **Home** key > **Settings** > **Storage**.
2. Touch the card name in the **Portable storage** section.
3. Touch **Format**.
4. Touch **ERASE & FORMAT**.

 **CAUTION:**

The formatting procedure erases all the data on the microSDHC card, after which the files CANNOT be retrieved.

Set Up the microSDHC Card as Internal Storage

If your microSDHC card is new or doesn't have content you want to keep, you can format the card and use it as part of the internal storage. If you move the microSDHC card to another device, it'll be formatted before it can be used.

1. Touch the  > **Home** key > **Settings** > **Storage**.
2. Touch the card name in the **Portable storage** section.
3. Touch **Format as internal**.
4. Touch **ERASE & FORMAT**.

CAUTION:

The formatting procedure erases all the data on the microSDHC card, after which the files CANNOT be retrieved.

5. The tablet will prompt you to move your photos, files and other data from the internal storage to the microSDHC card. Select **Move now** or **Move later** and touch **NEXT**. Follow the onscreen instructions to continue.

To move data between the internal storage and the microSDHC card:

With the microSDHC card as part of the internal storage, you can move your photos, files and other data between the internal storage and the card any time.

1. Touch the  > **Home** key > **Settings** > **Storage**.
2. Touch **Internal storage** or the microSDHC card name.
3. Touch **Migrate data**.
4. Touch **MOVE**.

 NOTE:

Whenever you move data between the internal storage and the microSDHC card, the destination is used to save new apps and personal data (such as photos and videos) and only the destination is accessible from a computer.

To remove the microSDHC card from your tablet:

If you need to remove the microSDHC card used as internal storage while the tablet is on, you must unmount it first.

1. Touch the  > **Home** key > **Settings** > **Storage**.
2. Touch your card name below **Internal storage**.
3. Touch **Eject**.

 NOTE:

Before ejecting the card, ensure that you have moved data and apps to the internal storage.

4. Touch **EJECT**.
5. When the screen prompts the card is safely ejected, you can now remove it from the tablet.

To reformat the microSDHC card as portable storage:

If you no longer want to use your microSDHC card as internal storage, you can reformat the card as portable storage.

 NOTE:

Before the formatting, ensure that you have moved data and apps to the internal storage.

1. Touch the  > **Home** key > **Settings** > **Storage**.
2. Touch your card name below **Internal storage**.
3. Touch **Format as portable**.
4. Touch **FORMAT**.

 CAUTION:

The formatting procedure erases all the data on the microSDHC card, after which the files CANNOT be retrieved.

Sharing Your Mobile Data Connection

You can share your tablet's data capabilities through tethering or by activating the mobile hotspot feature.

Share Your Mobile Data Connection via USB

You can access the Internet on your computer via the USB tethering feature of your tablet. The feature needs data connection on a mobile network and may result in data charges.

 NOTE:

You cannot transfer files between your tablet and your computer when the tablet is USB tethered.

1. Connect your tablet to your computer with a USB cable.
2. Touch the  > **Home** key > **Settings** > **More**.

3. Switch on **USB tethering**. A new network connection will be created on your computer.

 NOTE:

To stop sharing your data connection, switch off **USB tethering** or disconnect the USB cable.

Share Your Mobile Data Connection via Bluetooth

If your computer can obtain an Internet connection via Bluetooth, you can configure your tablet to share its mobile data connection with your computer.

1. Pair your tablet with your computer via Bluetooth.
2. Configure your computer to obtain its network connection via Bluetooth. For more information, please see your computer's documentation.
3. Touch the **Home** key >  > **Settings** > **More**.
4. Switch on **Bluetooth tethering**. Your computer is now sharing your tablet's data connection.

 NOTE:

To stop sharing your data connection, switch off **Bluetooth tethering**.

Share Your Mobile Data Connection as a Mobile Hotspot

You can share your tablet's data connection with other devices by turning your tablet into a mobile hotspot. The feature needs

data connection on a mobile network and may result in data charges.

 NOTE:

When the mobile hotspot feature is enabled, you cannot use your tablet's Wi-Fi capability to access the Internet. You still remain connected to the Internet via your mobile data network.

1. Touch the **Home** key >  > **Settings** > **Mobile Hotspot**.
2. Switch on the mobile hotspot feature.
After a moment, the tablet starts broadcasting its Wi-Fi network name (SSID).
3. On another device, locate your tablet via Wi-Fi and connect with it to start using the tablet's mobile data.

 NOTE:

To stop sharing your data connection, switch off mobile hotspot.

Set Your Mobile Hotspot

You can change the name of your tablet's Wi-Fi network (SSID), secure your mobile hotspot, and set other options.

1. Touch the **Home** key >  > **Settings** > **Mobile Hotspot**.
2. Touch **Configure** to set up the following options.
 - ▶ **Network name:** Enter or edit a network SSID (name) that other devices see when scanning for Wi-Fi networks.
 - ▶ **Channel:** Select a radio channel.
 - ▶ **Security:** Choose a security option: **None** (not recommended) or **WPA2 PSK** (other users can access

your Wi-Fi hotspot only if they enter the correct password). When you select **WPA2 PSK**, touch the **Password** field to edit the security password.

- ▶ **Broadcast network name (SSID):** Uncheck this option to hide your hotspot from searches from other devices.

3. Touch **SAVE** to save your settings.
4. Touch **Sleep policy** to set hotspot timeout options.
5. Touch **Manage users** to set the maximum number of connections and block unwanted devices.

Connecting to Virtual Private Networks

Virtual private networks (VPNs) allow you to connect to the resources inside a secured local network. VPNs are commonly deployed by corporations, schools, and other institutions to let people access local network resources when not on campus, or when connected to a wireless network.

Depending on the type of VPN you are using, you may be required to enter your login credentials or install security certificates before you can connect to your VPN. You can get this information from your network administrator.

Add a VPN

1. Touch the **Home** key >  > **Settings** > **More** > **VPN**.
2. Touch  at the top right corner and fill in the information provided by your network administrator.
3. Touch **SAVE**.

The VPN is added to the list on the VPN screen.



NOTE:

You must set a lock screen pattern, PIN or password before using VPN.

Connect to a VPN

1. Touch the **Home** key >  > **Settings** > **More** > **VPN**.
2. Touch the VPN that you want to connect to.
3. When prompted, enter any requested credentials, and then touch **CONNECT**.

Modify a VPN

1. Touch the **Home** key >  > **Settings** > **More** > **VPN**.
2. Touch  beside the VPN that you want to modify.
3. Edit the VPN settings and then touch **SAVE**.

Web Accounts

Adding or Removing Accounts

You can add multiple Google accounts and Microsoft Exchange ActiveSync® accounts. You may also add other kinds of accounts depending on the apps installed on your tablet.

Add an Account

1. Touch the **Home** key >  > **Settings** > **Accounts** > **Add account**.
2. Touch the type of account you want to add.
3. Follow the onscreen steps to enter the information about the account. Most accounts require a username and password, but the details may vary. You may also need to obtain some information from IT support or your system administrator.

When the account is successfully added, it is displayed in the **Accounts** menu.

Remove an Account

Removing an account will delete it and all information associated with it from your tablet, such as emails and contacts.

1. Touch the **Home** key >  > **Settings** > **Accounts**.
2. Touch the account category and then touch the account.

3. Touch  > **Remove account** > **REMOVE ACCOUNT**.

Configuring Account Sync

Configure Auto Sync Setting

1. Touch the **Home** key >  > **Settings** > **Accounts**.
2. Touch  and check or uncheck **Auto-sync data**.
 - ▶ When automatic sync is turned on, changes you make to information on your tablet or on the web are automatically synced with each other.
 - ▶ When automatic sync is turned off, you need to sync manually to collect emails, updates, or other recent information.

Sync Manually

1. Touch the **Home** key >  > **Settings** > **Accounts**.
2. Touch the account category and then the account you want to sync.
3. Touch  > **Sync now**. Or touch the types of information you want to sync.

Change an Account's Sync Settings

1. Touch the **Home** key >  > **Settings** > **Accounts**.
2. Touch the account category and then the account. The **Sync** screen appears, showing a list of information the account can sync.
3. When auto-sync is enabled, switch on or off items as you need. The types of information enabled on the tablet and the web will be kept in auto-sync. When auto-sync is disabled, touch a listing to sync that type of information between the tablet and the web.

Email

Touch **Email** in the home screen to receive and send emails from your webmail or other accounts, using POP3 or IMAP, or access your Exchange ActiveSync account for your corporate email needs.

Setting Up the First Email Account

1. When you open **Email** for the first time, select an email server, and enter your email address and password.
2. Touch **Next** to let the tablet retrieve the network parameters automatically.



NOTE:

Touch **Manual setup** if you want to enter these details manually or set up an Exchange ActiveSync account.

3. Follow the on-screen instructions to finish the setup.

Your tablet will show the inbox of the email account and start to download email messages.

Checking Your Emails

Your tablet can automatically check for new emails at the interval you set when setting up the account.

You can also check new emails manually by dragging down on the message list.

Responding to an Email

You can reply to or forward a message that you receive. You can also delete messages and manage them in other ways.

Reply to or Forward an Email

1. Open the email you want to reply to or forward from the Inbox.
2. Do the following as you need:
 - ▶ To reply to the sender, touch .
 - ▶ To reply to the sender and all recipients of the original email, touch .
 - ▶ To forward the email to someone else, touch .
3. Edit your message and touch **Send**.

Mark an Email as Unread

You can return a read email to the unread state - for example, to remind yourself to read it again later. You can also mark a batch of emails as unread.

- While reading a message, touch  > **Mark as unread**.
- While in a message list (for instance, the Inbox), touch the sender images beside the messages and then touch .

Delete an Email

You can delete an email from its folder. You can also delete a batch of emails.

- While reading a message, touch  > **OK**.
- While in a message list (for instance, the Inbox), touch the sender images beside the messages and then touch  > **OK**.

Writing and Sending an Email

1. Open your email Inbox and touch .

NOTE:

If you have more than one email account added on the tablet, touch the sender line to select the account you want to use for sending the message.

2. Enter a contact name or email address in the **To** field. Separate each recipient with a comma.

NOTE:

To send a carbon copy or blind carbon copy to other recipients, touch  > **Add Cc/Bcc** to open the **CC/BCC** field and enter the contact names or email addresses.

3. Enter the email subject and compose the email text.
4. Touch  > **Attach file** to add audio files, images, videos and other types of files as attachments.

5. Touch **Send** at the top right of the screen to send the message.

Adding and Editing Email Accounts

Add an Email Account

After setting up your first email account (see [Setting Up the First Email Account](#)), you can add more email accounts and manage them separately.

1. Open **Email** to get the Inbox screen.
2. Touch  > **Settings** > .
3. Follow the prompts to set up the account as you did with the first one.

Edit an Email Account

 
You can change a number of settings for an account, including how often you check for email, how you're notified of new mails, your email signature, and details about the servers the account uses to send and receive mails.

1. Open **Email** to get the Inbox screen.
2. Touch  > **Settings** and touch the account whose settings you want to change.
3. Make the changes and touch  when you finish.

Changing General Email Settings

General settings apply to all email accounts you add.

1. Open **Email** to get the Inbox screen.
2. Touch **⋮** > **Settings** > **General**.
3. Make the changes and touch **←** when you finish.



Web Browser

Use **Browser** to view web pages and search for information.

Opening a Web Page or Searching the Web

1. Touch the **Home** key > **Browser** to launch the web browser.

 NOTE:

Browser also opens when you touch a web link - for example, in an email.

2. Touch the address box at the top of the web page.
3. Enter the address (URL) of a web page or enter terms you want to search for. You can also touch  to search by voice.
4. Touch a URL or search suggestion or touch the enter key on the keyboard to open the web page or search results.

 NOTE:

Touch  in the address box if you want to stop opening the page.

Using Multiple Browser Tabs

You can open several web pages at the same time (one page in each tab) and switch between them freely.

To open a new browser tab:

Touch  > **New Tab**. A new browser tab opens.

To switch between tabs:

1. Touch  at the bottom (the number in the icon indicates the number of opened tabs).
2. Swipe vertically to scroll through the list of opened tabs.
3. Touch the thumbnail of the tab you want to open.

NOTE:

Swipe a thumbnail horizontally or touch its  to close the tab.

Downloading Files

1. Touch and hold an image or a link to a file or to another web page.
2. In the menu that opens, touch **Download**.

The downloaded files are saved to your tablet. You can view or open them in the **Downloads** app.

Camera

You can use your tablet to take photos and record videos. Photos and videos are stored on the microSDHC card you have installed or in the internal storage. You can copy them to your computer or access them in the **Gallery** app.

Capturing a Photo

- 1. Touch the **Home** key > **Camera**.
- 2. Aim the camera at the subject and make any necessary adjustment. Auto camera mode is used by default.



Number	Function
1	Switch between the front and back cameras.

Number	Function
2	Set a time delay before the camera takes a picture automatically after you touch the shutter icon.
3	Change the camera settings.
4	View pictures and videos you have taken.
5	Capture a picture.
6	Capture a video clip.
7	Select the manual or auto camera mode, or use panorama, HDR, special effect, multi-exposure, smile detection, or interval capture modes. Only available for the back camera.

 NOTE:

You can spread or pinch on the screen to zoom in or out before taking pictures.

3. Touch the area where you want the camera to focus, or leave the camera to autofocus on the center of the image.
4. Lightly touch .

Recording a Video

1. Touch the **Home** key > **Camera**.
2. Aim the camera at the subject. You can touch any area on the screen that you want the camcorder to focus on before and during recording.

 NOTE:

You can spread or pinch on the screen to zoom in or out before and during recording.

3. Touch  to start recording. You can also touch / to pause or resume recording.

 NOTE:

While the recording is in progress, you can touch  to save the frame as a separate photo.

4. Touch  to stop recording.

Using Manual Camera Mode

You can use manual camera mode to adjust more camera options for you photo such as ISO, white balance, exposure, etc.

1. Touch the **Home** key > **Camera**.
2. Touch **MANUAL**.
3. Aim the camera at the subject and you can make the following adjustments.
 - ▶ Drag  to any area on the screen that you want to focus on.
 - ▶ Drag  to any area on the screen where you want the camera to meter exposure so as to adjust the photo

brightness.

- ▶ Touch  to show the grid or the golden spiral, or hide it.
- ▶ Touch  to enable or disable the level guide.
- ▶ Touch  to change white balance scenario or leave it at **Auto**.
- ▶ Touch  to select ISO level or leave it at **Auto**.
- ▶ Touch  to adjust the photo exposure.

4. Touch the shutter icon  to take the photo.

Using Other Camera Modes

Besides capturing photos and videos in the traditional way, your camera app offers other powerful and interesting camera modes. Switch to the back camera and touch **FUN** in the viewfinder screen to find them all.

- **Panorama:** Capture panorama pictures.
- **HDR:** Turn on the HDR feature.
- **Special effect:** Apply warm, cool, sepia, fisheye or other special effects to the photo.
- **Multi-exposure:** Capture two pictures for collage.
- **Interval:** Capture time lapse pictures at the interval you select.

- **Smile:** Capture pictures automatically when detecting smiles.

Customizing Camera/Camcorder Settings

Before capturing a photo or a video, you can touch  to open the following camera and camcorder setting options.

 NOTE:

Some camera and video options will change according to different camera modes.

- **CAMERA**
 - ▶ **Full screen:** Expand the viewfinder area to the whole screen.
 - ▶ **Shutter tone:** Select a shutter sound or turn it off.
 - ▶ **Geo-tagging:** Select whether to store the location information in your captured photos and videos.
 - ▶ **Review:** Select whether to review the picture after you shot it. You can also set the review time.
 - ▶ **Storage location:** Touch **Save location** to change the storage location for captured photos and videos.
 - ▶ **Restore defaults:** Restore default camera and video settings.
 - ▶ **Picture size:** Set the image size for your photo.
 - ▶ **Mirror:** Take mirror image of the subject with the front

camera.

- ▶ **Point-and-shoot:** When this feature is enabled, you can touch the viewfinder screen to take a photo using the front camera.

- **VIDEO**

- ▶ **Video quality:** Set the quality for your video.
- ▶ **Time lapse:** Set the time interval between each frame when you shot time lapse videos with the back camera.
- ▶ **Focus lock when recording:** Select whether to lock the focus point on the centre of the screen during video recording using the back camera.
- ▶ **Geo-tagging:** Select whether to store the location information in your captured photos and videos.
- ▶ **Storage location:** Touch **Save location** to change the storage location for captured photos and videos.
- ▶ **Restore defaults:** Restore default camera and camcorder settings.

Gallery

Opening Gallery

Touch the **Home** key >  > **Gallery** to view albums of your pictures and videos.

Working With Albums

When you open the Gallery, all pictures and videos on your tablet are displayed in a number of albums. Swipe left or right to see them all.

To view album contents:

Touch an album to view the pictures and videos it contains.

To share albums, pictures, or videos:

 
1. Touch and hold an album to select it or touch and hold an item after you open an album to select a picture or a video.
2. Touch more items that you want to share.
3. Touch  and select how you want to share the items.

To delete albums, pictures, or videos:

1. Touch and hold an album to select it or touch and hold an item after you open an album to select a picture or a video.
2. Touch more items that you want to delete.
3. Touch  > **OK**.

Working With Pictures

Touch a picture in an album to view the picture in full screen.

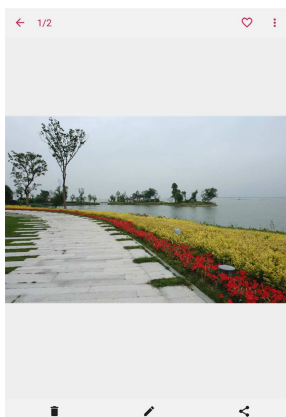

When viewing a picture in full screen, the following features are available.

- Swipe horizontally to see more pictures or videos.

- Pinch a picture or video to make it smaller. You'll then see a filmstrip-style view of all your pictures and videos in a row. Swipe left or right to scan through them all.

 NOTE:

You can delete a picture or video by swiping it up in the filmstrip view. If you accidentally delete one, touch **UNDO** to retrieve it.

- Double-tap the picture, or pinch two fingers together or spread them apart to zoom out or in.
- Touch  to edit the picture.
- Touch  and select a method to share the picture.
- Touch  to delete the picture.
- Touch  to access more options. You can rotate or rename the picture, set it as the wallpaper or contact photo, check its details, browse the album contents in a slideshow, or print the picture.
- Touch  to return to the album.

 NOTE:

Some options may not be available for certain albums or pictures.

Retouching Your Pictures

You can edit any photos you took and some other pictures in **Gallery**.

1. Touch  while viewing a picture in full screen.
2. Touch an edit option along the bottom of the screen and edit the picture.

Filter	Apply effects, such as punch, vintage, black/white, bleach, and instant on the picture.
Modify	Rotate, flip the picture, or cut it into a set ratio.
Adjust	Apply and adjust effects such as exposure, vignette, contrast, and shadows on the picture.
Doodle	Add drawings, texts, or mosaic on the picture.
Decoration	Decorate the picture with a frame or comical items such as hat, glasses, or beard.

3. Touch  to keep the edition or  to cancel it.
4. Touch  to save the new picture as a new file in the same album as the original picture. The original picture remains unedited.

 
 NOTE:

Tap  in the Photo Editor screen to see the edits you have made and undo or redo them.

Playing Videos

1. Touch an album in the gallery and then touch the thumbnail of a video.

2. Touch  at the center and select a player to start playing.
Touch the video to view the playback controls.



Play Music

The Play Music application works with Google Music, Google's online music store and streaming service. You can stream via mobile data or Wi-Fi and listen to your favourite songs that you've added to your online Google Music library. You can also play audio files you've copied directly to your tablet from a computer.



NOTE:

 
The availability of Google Music is dependent on your region. If it is not available, or you don't have a mobile data or Wi-Fi connection, you can only play music stored on your tablet.

Playing Your Music

Touch the **Home** key >  > **Play Music**. If you are prompted, select an account to access its online music library.

The app searches your online library and your tablet for music and playlists before displaying your combined music library, organised by **PLAYLISTS**, **GENRES**, **ARTISTS**, **ALBUMS** and **SONGS**. You can touch  > **My Library** to view all the music and playlists. To change views of your library, swipe left or right.

Touch a song to play it. When the song is playing, touch the summary information at the bottom to display the playback screen.

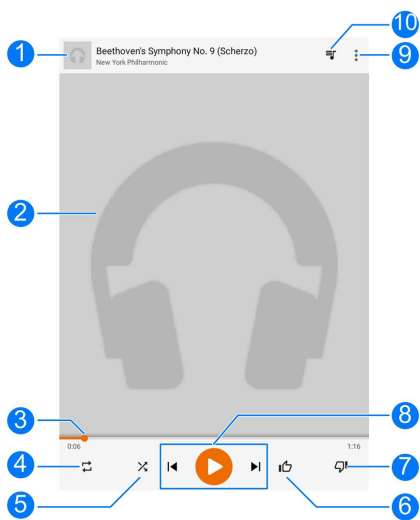

Number	Function
1	Song and artist information. Touch or drag down to return to the music library.
2	Album artwork (if available). Slide left/right to switch to the next/previous song in the playlist.
3	Drag the progress bar to jump to any part of the song.
4	Toggle repeat mode. You can repeat the current track, repeat the current playlist, or turn off repeat.
5	Turn on or off shuffle.

Number	Function
6	Give the song a thumbs-up.
7	Give the song a thumbs-down.
8	Playback control. Skip songs, or pause and resume playback.
9	Get more options.
10	Touch to see the current playlist (queue).

You can still control the music when you are not in the playback screen.

- In the music library of the **Play Music** app, touch the summary information at the bottom of the screen to restore the playback screen.
- In other apps, flick down the notification panel. Touch the song title to restore the playback screen, or just pause/resume playback or skip songs.
- When the screen is locked, the song information, album cover as well as playback control is displayed on the screen. You can pause/resume playback or skip songs.

Managing Playlists

Create playlists to organize your music files into sets of songs, so that you can play the songs you like in the order you prefer.

To create a playlist or add a song to a playlist:

Touch  next to a song and select **Add to playlist**.

To remove a song from a playlist:

1. Touch  > **My Library** in the **Play Music** app.
2. Touch **PLAYLISTS** and open a playlist.
3. Touch  next to a song in the playlist.
4. Touch **Remove from playlist**.

To delete a playlist:

1. Touch  > **My Library** in the **Play Music** app.
2. Touch **PLAYLISTS**.
3. Touch  next to the playlist you want to delete.
4. Touch **Delete > OK**.

 **NOTE:**

Certain automatically created playlists such as **Last added** cannot be deleted.

Video Player

Use the **Video Player** app to manage your video library and watch videos.

Opening the Video Library

Touch the **Home** key >  > **Video Player** to view your video library, where your video files are displayed in a list.

Swipe up or down to find the video you want. You can also touch  to search for video files, or touch  > **View by** or **Sort by** to change the display mode or sort the list.

Playing and Controlling Videos

Touch a video in the video library to play it. Touch the screen to show the playback controls. You can control the video and audio or carry out other operations.

- Touch the play/pause button at the bottom to pause or resume the playback.
- Slide horizontally on the screen to rewind or fast forward.
- Slide vertically on the right or left part of the screen to adjust volume or brightness.
- Touch  or  to skip to the previous or the next video.
- Touch  to change the video ratio.

- Touch  to rotate the video.
- Touch  to capture a screenshot.
- Touch  to hide the control panel.
- Touch  to adjust Dolby Audio settings.
- Touch  to play the video in a small window and continue with other tasks on the tablet.
- Touch  for more video options.

Managing Video Files

Delete Video Clips

1. Touch  > **Multi-Select** in the video library.
2. Touch the videos you want to delete.
3. Touch  > **OK**.

Share Video Clips

1. Touch  > **Multi-Select** in the video library.
2. Touch the videos you want to share.
3. Touch  and select how you want to share them.

Trim a Video Clip

1. Touch a video to start playing it.
2. Touch  > **Trim** on the right side of the progress bar.
3. Drag the two tabs on the progress bar to select the portion you want to keep.
If necessary, touch  to preview the selected portion.
4. Touch . The trimmed video is saved as a new video file.

FM Radio

With the FM radio, you can search for radio channels, listen to them, and save them on your tablet. Note that the quality of the radio broadcast depends on the coverage of the radio station in your area. The wired headset works as an antenna, so always connect the headset when using the radio.

Scanning and Saving Channels

1. Plug in a wired headset and touch the **Home** key >  > **FM Radio**.
2. Touch  > **Scan**. Your tablet scans for all available channels and saves them to the **All channels** list.

NOTE:

When you open the **FM Radio** app for the first time, it will automatically scan for channels and show the **All channels** list. You can also touch  > **All channels** to view the list.

Listening to FM Radio

1. Touch the **Home** key >  > **FM Radio** while the headset is connected.
2. Touch  > **All channels** and select a channel.

You can also drag the red line along the frequency panel or

touch  or  to switch to other channels.

NOTES:

- Touch  to add the channel to favorites. Favorite channels are put on the FM Radio main screen. Touch  to view all favorite channels.
- You can save at most 16 channels to favorites.
- Touch  to listen to the radio through the tablet speaker.

Editing a Saved Channel

1. Open the **FM Radio** app and touch  > **All channels** to display the list of saved channels.
2. Touch and hold a channel and select **Rename** or **Delete**, or touch the star to the right of a channel to add it to favorites.

Other Options and Settings

To turn off FM radio automatically:

Touch  > **Timing turn off** and select the time you want to turn off the radio.

A count-down clock appears above the frequency and the radio is turned off when the clock counts down to 0:00.

To turn off FM radio immediately:

Touch the switch  at the top of the screen.

Sound Recorder

Sound Recorder enables you to record voice memos and listen to them whenever you like.

Recording a Voice Memo

1. Touch the **Home** key >  > **Sound Recorder**.
2. Touch the **HQ** icon to turn on or off high quality recording.
3. Touch  to start recording. During recording, you can touch  /  to pause or continue the recording.
4. Touch  to stop recording. The memo is automatically saved.

Playing a Voice Memo

To play a memo you just recorded:

 
Touch .

To play any saved memo:

1. Touch  at the top right of the screen to see all recordings.
2. Touch the title of a memo to play it.

 **NOTE:**

Touch  next to a memo to delete, rename, share, trim it, check its file information, add a tag, or set it as your notification ringtone.



More Apps

Backup & Restore

Touch the **Home** key >  > **Backup & Restore**. You can back up your user data, such as contacts, messages, and installed applications to the microSDHC card regularly. If the data get lost, restore it from the microSDHC card.

Touch  > **Help** to view detailed guide.

NOTE:

You can back up your user data to the internal storage when the microSDHC card is not inserted. Please keep these data in your PC or other devices to avoid data loss.

Calculator

Touch the **Home** key >  > **Calculator** to use the tablet's convenient built-in calculator for some basic as well as advanced mathematical equations.

NOTE:

Slide left while holding the tablet upright, or hold the tablet on its side, to access advanced buttons.

Clock

Touch the **Home** key >  > **Clock**. The **Clock** app allows you to check local time in places around the world, set alarms, and use timers.

Set a New Alarm

1. Touch the  tab in the **Clock** app.
2. Touch an existing alarm to configure it, or touch  at the bottom of the screen to create a new alarm.
3. Set the time and touch **OK**. Then edit repeat, snooze, alarm sound, and label.

NOTES:

- To enable or disable existing alarms directly, just touch the switches on the right side.
- Touch  to set more alarm options in the **Alarms** section.

Check World Time

Touch the  tab in the **Clock** app to check local time around the world.

Touch  at the bottom to add other cities.

Use the Stopwatch and Countdown

Touch the  or  tab in the **Clock** app to use the stopwatch or the countdown timer.

Stopwatch allows you to record lap times, while countdown allows you to set a time and count down to zero.

Downloads

The **Downloads** app keeps a record of the files you have downloaded using apps such as **Chrome** or **Email**.

Touch the **Home** key >  > **Downloads** to check the record.

- Touch a file to open it with the appropriate applications.
- Touch and hold a file to delete or share it.

File Manager

Quickly access all of your images, videos, audio clips, and other types of files on your internal storage and the microSDHC card.

Touch the **Home** key >  > **File Manager**.

- Touch **CATEGORY** at the top right to find the file you need by category.
- Touch **LOCAL** at the top right to browse folders and files.
- Touch and hold an item to access option icons such as Copy, Move, Share, or Delete.

- To copy or move an item, navigate to a new location and touch **PASTE**.
- Touch **+** to create a new folder in the current directory.

Task Manager

Touch the **Home** key >  > **Task Manager** to manage running apps and tasks, and system resource use.

Google Apps

Open the Google apps to use Google services.

NOTE:

Some contents or Google services may not be available in your region.

- **Calendar:** Use the Google Calendar service on your tablet.
- **Chrome:** Use the Chrome app to browse the Internet and get your bookmarks, browsing history, and more synced with your Google account.
- **Drive:** Store files on Google servers for free after you sign in to your Google account. You can access them on your computers, your phones and other devices, share them, or collaborate with others.
- **Gmail:** Send and receive emails via your Gmail account or other personal email accounts.
- **Google:** Use Google search or get information when you

need it with Google Now.

- **Hangouts:** Chat with Google+ friends or send text or multimedia messages.
- **Keep:** Create, share, and collaborate notes quickly and easily.
- **Maps:** Find your place and find your way in the world.
- **Photos:** Manage photos on the tablet and your Google account.
- **Play Books:** Buy and read the electronic version of new bestsellers and classics.
- **Play Games:** Buy and play games from the Google Play Store. Share your gaming experience and progress with your friends.
- **Play Movies & TV:** Purchase, download and watch the latest and your favorite movies and TV shows.
- **Play Music:** Play music on the tablet and on your Google account.
- **Play Newsstand:** Purchase and read newspapers and magazines.
- **Play Store:** Buy and download apps, games, and other content from the Google Play Store.
- **Voice Search:** Search for information with your voice.
- **YouTube:** Watch video clips from YouTube.com, or upload your own and share with the world.

Settings

Touch the **Home** key >  > **Settings**. The **Settings** app contains most of the tools for customizing and configuring your tablet.

Wireless and Networks

Wi-Fi

Touch the **Home** key >  > **Settings** > **Wi-Fi**. You can turn Wi-Fi on or off and configure your Wi-Fi connections. See [Connecting to Wi-Fi](#).

When Wi-Fi is on, touch  > **Advanced** > **Wi-Fi Direct** in the **Wi-Fi** menu to share data between two devices via Wi-Fi directly. See [Using Wi-Fi Direct](#).

Bluetooth

Touch the **Home** key >  > **Settings** > **Bluetooth**. You can turn Bluetooth on or off and configure your Bluetooth connections. See [Connecting to Bluetooth Devices](#).

Mobile Networks

Touch the **Home** key >  > **Settings** > **Mobile networks** to control mobile data use, set access point names, or select mobile network or preferred network type. See [Connecting to](#)

[Mobile Networks](#).

Mobile Hotspot

Touch the **Home** key >  > **Settings** > **Mobile Hotspot** to share your tablet's mobile data connection with PCs or other devices via Wi-Fi. See [Share Your Mobile Data Connection as a Mobile Hotspot](#).

Data Usage

Touch the **Home** key >  > **Settings** > **Data usage** to manage mobile data use of the nano-SIM card.

Touch the **Mobile data** or **Set mobile data limit** switches to turn on or off mobile data or mobile data limit.

You can check how much data has been used during the time cycle you set, set mobile data limit and warning, see what apps have been using mobile data, or restrict background data for individual apps.

NOTE:

The data usage is measured by your tablet, and your carrier's data usage accounting may differ.

Touch  > **Network restrictions** to select Wi-Fi networks that are mobile hotspots. Data usage on recognized mobile hotspots will be restricted to avoid high mobile data bills.

Airplane Mode

Touch the **Home** key >  > **Settings** > **More** and slide the switch beside **Airplane mode** to turn airplane mode on or off. All the tablet's radios are turned off when airplane mode is on.

VPN

Touch the **Home** key >  > **Settings** > **More** > **VPN** to set up and connect to virtual private networks. See [Connecting to Virtual Private Networks](#).

Default SMS App

If you have multiple messaging apps installed on your tablet, you can choose the app your tablet uses for messaging.

USB Tethering

Touch the **Home** key >  > **Settings** > **More** and switch on **USB tethering** to share your tablet's mobile data connection with PCs or other devices via USB. See [Share Your Mobile Data Connection via USB](#).

Bluetooth Tethering

Touch the **Home** key >  > **Settings** > **More** and switch on **Bluetooth tethering** to share your tablet's mobile data connection with PCs or other devices via Bluetooth. See [Share Your Mobile Data Connection via Bluetooth](#).

Personal

Display

Touch the **Home** key >  > **Settings** > **Display** to configure the following options.

- **Brightness level:** Set the brightness of the display.
- **Adaptive brightness:** Automatically adjust screen brightness.
- **Wallpaper:** Select a background image or animation for the home screen and lock screen.
- **Auto-rotate screen:** Select whether the screen contents should rotate when the tablet is rotated.
- **Sleep:** Set the length of time of inactivity before the screen turns off automatically.
- **Daydream:** Manage the Daydream function. When Daydream is enabled, clock, photos or animations will be displayed as a screensaver.
- **Font size:** Set the font size of the text on the screen.
- **Cast:** Connect to Wi-Fi Display screens and project the tablet onto a larger screen.

Sound and Notification

Touch the **Home** key >  > **Settings** > **Sound & notification**. You can adjust different types of volume (see [Adjusting Volume](#)), set Do not disturb options (see [Using Do Not Disturb](#))

[Mode](#)), set up notification sound (see [Changing Notification Sound](#)), select system sounds (see [Turning On/Off System Sounds](#)), control notification display, and check the apps that have requested notification access or Do not disturb access.

Your tablet supports Dolby Audio to provide you with superior audio experience. Touch **Dolby digital plus** in the **Sound & notification** menu to set it up.

Security

Touch the **Home** key >  > **Settings** > **Security** to configure options that help keep your tablet and data safe.

- **Screen lock:** Disable the screen lock or enable it with long press, pattern, PIN, or password. See [Protecting Your Tablet With Screen Locks](#).
- **Make pattern visible:** Show the pattern as you draw it. This option is available when unlock pattern is set.
- **Automatically lock:** Set the time needed for the lock protection to be activated after the screen turns off. This option is available when unlock pattern, PIN or password is set.
- **Power button instantly locks:** Lock protection is activated immediately when you press the **Power** key. This option is available when unlock pattern, PIN or password is set.
- **Lock screen message:** Set the text that you may display on the lock screen.
- **Smart Lock:** Keep the tablet unlocked when connected to

trusted devices, in trusted places, or unlocked by trusted faces or voice, or unlocked when your tablet is being carried on the body.



NOTE:

You need to sign in to your Google account on the tablet to use the **Smart Lock** feature.

- **Set up SIM card lock:** Touch a nano-SIM card tab and you can manage the following settings.
 - ▶ **Lock SIM card:** Activate or deactivate the PIN lock to require PIN before accessing the nano-SIM card.
 - ▶ **Change SIM PIN:** Change the PIN used to access the nano-SIM card.



NOTE:

Put all your confidential passwords in a safe place for future use. If you enter the wrong SIM PIN more times than allowed, your nano-SIM card will be locked and you cannot access the mobile phone network. Contact your operator for a PIN Unlock Key (PUK) to restore the nano-SIM card.

- **Make passwords visible:** Display passwords as you enter them.
- **Device administrators:** View or deactivate apps you have authorized to be device administrators.
- **Unknown sources:** Switch on this option to permit installation of apps from sources other than the Play Store.
- **Storage type:** Check the credential storage type.
- **Trusted credentials:** Display trusted CA certificates.

- **Install from SD card:** Install certificates from the internal storage or the microSDHC card.
- **Clear credentials:** Delete all certificates.
- **Trust agents:** View or deactivate trust agents.
- **Screen pinning:** Keep a screen of your choice in view, so that others cannot switch to other apps and access your personal information. Touch this option to see how it works. See [Protecting Your Tablet With Screen Pinning](#).
- **Apps with usage access:** Turn on or off some apps' access to your tablet usage information.

Date and Time

Touch the **Home** key >  > **Settings** > **Date & time** to set date, time, time zone, and the time format. You can also use network-provided data.

Language and Input

Touch the **Home** key >  > **Settings** > **Language & input** to configure options related to system language, input methods, speech input and output as well as mouse/trackpad input.

- **Language:** Select a language for your system.
- **Spell checker:** Use Google Spell Checker to check for spelling errors when entering text.
- **Personal dictionary:** Add new words to the tablet's dictionary or remove words from the dictionary. The words you add are used for spelling check and word suggestion.

- **Keyboard & input methods:** Configure text input settings. See [Input Method Settings](#).
- **Text-to-speech output:**
 - ▶ **Preferred engine:** Select the speech synthesis engine you want to use or change its settings.
 - ▶ **Speech rate:** Select how quickly you want the synthesizer to speak.
 - ▶ **Pitch:** Adjust the tone of the speech.
 - ▶ **Listen to an example:** Play a brief sample of the speech synthesizer, using your current settings.
 - ▶ **Default language status:** Check whether the text-to-speech output feature supports the current system language.
- **Pointer speed:** Select how fast the pointer/mouse should scroll when you connect the tablet to a trackpad or mouse accessory.

Google

Touch the **Home** key >  > **Settings** > **Google** to easily manage settings for Google apps and features. You can set the options for Google account and services.

Device

Location

Touch the **Home** key >  > **Settings** > **Location** to manage location services, which help your tablet and apps determine your location. To use location-related applications, such as finding your location on Google Maps, you must have location services enabled on your tablet.

1. Slide the switch at the top right to turn location services on or off.
2. When location is enabled, touch **Mode** to select location sources you want to use.
 - ▶ To get your accurate location, choose **High accuracy**.
 - ▶ To save battery power and get approximate location, choose **Battery saving**.
 - ▶ To use only GPS to pinpoint your location, choose **Device only**.

Storage

Touch the **Home** key >  > **Settings** > **Storage** to view the memory information of the internal storage and the microSDHC card.

You can choose the default location for new data, such as photos captured and voice recorded. Touch **Save location** and select **Tablet** or the microSDHC card to store items in the

internal storage or the installed microSDHC card.

Touch **Tablet** to get a detailed breakdown of space usage.

For more information about using the internal storage and the microSDHC card, see [Using the microSDHC Card as Portable or Internal Storage](#).

Battery

Touch the **Home** key >  > **Settings** > **Battery** to view the battery level, check what has been using the battery, and optimize battery use.

Touch an app or service to adjust its settings in order to save battery life. For example, touch **Screen** > **Reduce the screen brightness and/or screen timeout** to change screen brightness and sleep.

Touch  > **Battery optimization**. Battery optimization helps prolong battery standby time when you're not using the tablet. If there are apps that you don't want battery optimization enabled, you can turn the feature off in those apps. Just touch **Not optimized** > **All apps**, touch the app name and then touch **Don't optimize** > **DONE**.

Apps

Touch the **Home** key >  > **Settings** > **Apps** to see apps installed on your tablet and manage them.

Touch an app to see its information. The following options may be available:

- **FORCE STOP:** Stop the app.
- **UNINSTALL:** Uninstall the app.
- **DISABLE/ENABLE:** Disable or enable the app.
- **Storage:** Check its storage information, clear its data or cache.
- **Data usage:** Check how much data has been used by the app during the time cycle you set and restrict background data for the app.
- **Permissions:** Check or change the app permissions.
- **Notifications:** Manage the app notifications in the notification panel and the lock screen. You can set the priority, sensitivity, and more.
- **Open by default:** Check the app's supported links and set whether to open the links in the app, and clear the app's defaults.
- **Battery:** Check the battery use details of the app since last full charge.
- **Memory:** Check how much memory has been used by the app.



NOTE:

Not all options are available for the apps.

Memory

Touch the **Home** key >  > **Settings > Memory** to monitor the average memory use and performance of your tablet. You can also check which apps use the most memory.

Connect to PC

Touch the **Home** key >  > **Settings** > **Connect to PC** to select the USB connection type between your tablet and PC. For more information, see [Connecting to Your Computer via USB](#).

Backup and Reset

Touch the **Home** key >  > **Settings** > **Backup & reset** to manage data backup and restoration options, and to reset the network setting or the tablet to factory status.

- **Back up my data:** Back up app data, Wi-Fi passwords, and other settings to Google servers after you sign in to your Google account.
- **Backup account:** Set the Google account that the data is backed up to.
- **Automatic restore:** Restore previously backed up settings and data when you reinstall an app.
- **Network settings reset:** Reset all network settings including Wi-Fi, mobile data and Bluetooth.
- **Factory data reset:** Reset your tablet to factory default settings. All your data in the internal storage will be erased during the process.

Accounts

Touch the **Home** key >  > **Settings** > **Accounts** to manage

your web accounts and synchronization. Touch **Add account** to sign in to or create accounts on your tablet.

Touch an account type to see that type of accounts you have added and adjust the accounts settings.

System

Accessibility

Touch the **Home** key >  > **Settings** > **Accessibility** to configure accessibility plug-ins and services on your tablet, such as using **Color inversion** or **Large text** for users with sight problems.

Printing

Touch the **Home** key >  > **Settings** > **Printing** to manage Google Cloud Print service or other printer plug-ins installed from the Google Play Store or your printer manufacturer.

AT&T Software Update

Touch the **Home** key >  > **Settings** > **AT&T Software Update** to check and download software updates.

About Tablet

Touch the **Home** key >  > **Settings** > **About tablet** to view the device status and other information. You can also touch

Additional system updates > Storage card updates to install updates from update packages copied to the storage card.

For Your Safety

General Safety

	Don't use while driving. Never text while driving.		Don't use at gas stations.
	Small parts may cause choking.		Your device may produce a bright or flashing light.
	Your device can produce a loud sound.		Don't dispose of your device in fire.
	Avoid contact with anything magnetic.		To prevent possible hearing damage, do not listen at high volume levels for long periods.
	Keep away from pacemakers and other electronic medical devices.		Avoid extreme temperatures.
	Turn off when asked to in hospitals and medical facilities.		Avoid contact with liquids. Keep your device dry.

	Turn off when told to in aircrafts and airports.		Do not attempt to disassemble your device.
	Turn off when near explosive materials or liquids.		Only use approved accessories.

FCC Regulations

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 CAUTION:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Information (SAR)

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the United States.

During SAR testing, this device was set to transmit at its highest certified power level in all tested frequency bands, and placed in positions accepted by FCC.

The exposure standard for wireless devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.

Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands.

The FCC has granted an Equipment Authorization for this model

device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model device is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: SRQ-K88.

For this device, the highest reported SAR value for usage next to the body is 1.36 W/kg.

CTIA

- Do not disassemble or open, crush, bend or deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been qualified with the system per CTIA Certification Requirements for Battery System Compliance to IEEE 1725. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- Promptly dispose of used batteries in accordance with local

regulations.

- Battery usage by children should be supervised.
- Avoid dropping the device or battery. If the device or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion or other hazard.
- The device shall only be connected to CTIA certified adapters, products that bear the USB-IF logo or products that have completed the USB-IF compliance program.

Distraction

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a wireless device while driving (even with a hands-free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating Machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

Product Handling

General Statement on Handling and Use

You alone are responsible for how you use your device and any consequences of its use.

You must always power off your device wherever the use of a wireless device is prohibited. Use of your device is subject to safety measures designed to protect users and their environment.

- Always treat your device and its accessories with care and keep it in a clean and dust-free place.
- Do not expose your device or its accessories to open flames or lit tobacco products.
- Do not expose your device or its accessories to liquid, moisture, or high humidity.
- Do not drop, throw, or try to bend your device or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your device or its accessories.
- Do not attempt to disassemble your device or its accessories. Only authorized personnel can do so.
- Do not expose your device or its accessories to extreme temperatures, minimum 23 °F and maximum 122 °F (minimum -5 °C and maximum +50 °C).
- Please check local regulations for disposal of electronic products.

- Do not carry your device in your back pocket as it could break when you sit down.

Small Children

Do not leave your device and its accessories within the reach of small children or allow them to play with it. They could hurt themselves or others, or could accidentally damage the device.

Your device contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.

Demagnetization

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your device for a long time.

Electrostatic Discharge (ESD)

Do not touch the SIM card's metal connectors.

Antenna

Do not touch the antenna unnecessarily.

Air Bags

Do not place the device in the area over an air bag or in the air bag deployment area as an airbag inflates with great force and serious injury could result.

Store the device safely before driving your vehicle.

Seizures/Blackouts

The device can produce a bright or flashing light. A small percentage of people may be susceptible to blackouts or seizures (even if they have never had one before) when exposed to flashing lights or light patterns such as when playing games or watching video. If you have experienced seizures or blackouts or have a family history of such occurrences, please consult a physician.

Repetitive Strain Injuries

To minimize the risk of Repetitive Strain Injury (RSI) when texting or playing games with your device:

- Do not grip the device too tightly.
- Press the keys lightly.
- Use the special features that are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.
- Take lots of breaks to stretch and relax.

Loud Noise

This device is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, *Bluetooth* stereo headsets or other audio devices.

Device Heating

Your device may become warm during charging and during normal use.

Electrical Safety

Accessories

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit in the battery terminals.

Connection to a Car

Seek professional advice when connecting a device interface to the vehicle electrical system.

Faulty and Damaged Products

Do not attempt to disassemble the device or its accessories.

Only qualified personnel can service or repair the device or its accessories.

If your device (or its accessories) has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service center.

Interference

General Statement on Interference

Care must be taken when using the device in close proximity to

personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 6 inches (15 cm) be maintained between a mobile device and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the device on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical Devices

Please consult your doctor and the device manufacturer to determine if operation of your device may interfere with the operation of your medical device.

Hospitals

Power off your wireless device when requested to do so in hospitals, clinics, or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Aircraft

Power off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on board the aircraft. If your device offers a 'flight mode', this must be enabled prior to boarding an aircraft.

Interference in Cars

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile devices in their vehicles unless a hands-free kit with an external antenna is included in the installation.

Explosive Environments

Gas Stations and Explosive Atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fueling areas, below decks on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting Caps and Areas

Power off your mobile device or wireless device when in a blasting area or in areas posted with power off “two-way radios” or “electronic devices” notices to avoid interfering with blasting operations.