


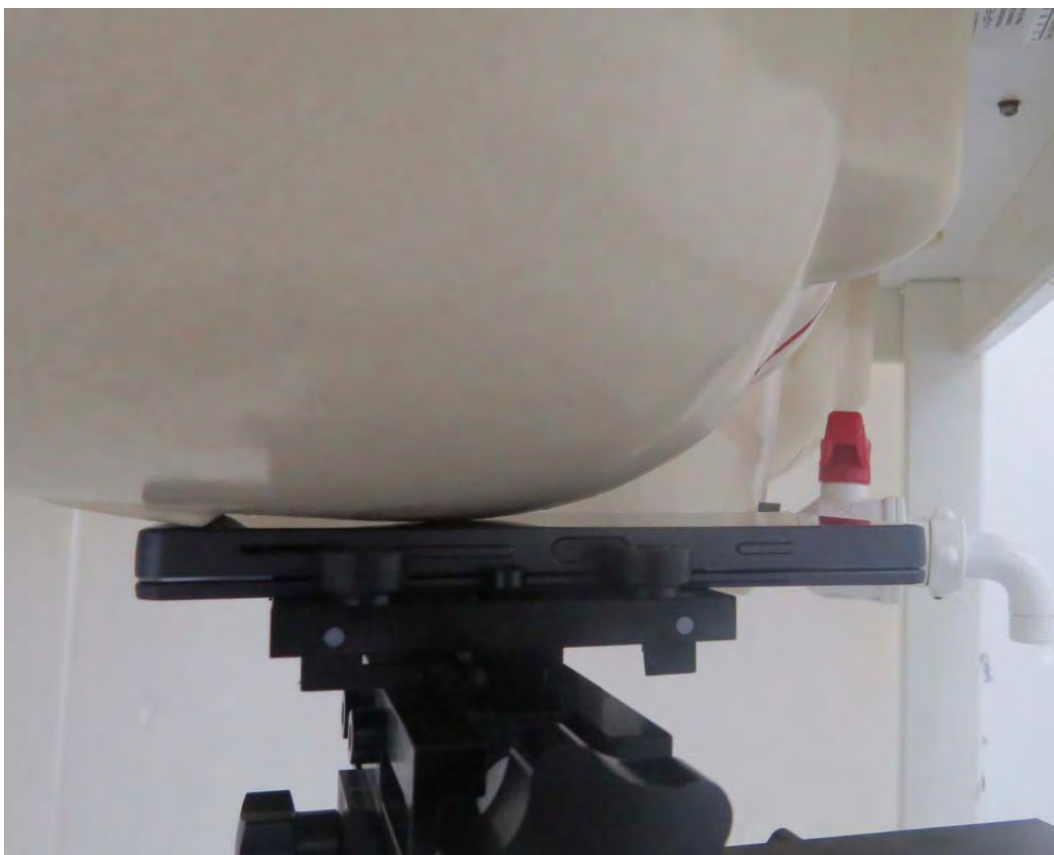

Picture 12: Left Hand Touch Cheek Position



Picture 13: Left Hand Tilt 15 Degree Position



Picture 14: Right Hand Touch Cheek Position



Picture 15: Right Hand Tilt 15 Degree Position



Picture 16: Back Side, the distance from handset to the bottom of the Phantom is 10mm
For Single Screen Mode



Picture 17: Front Side, the distance from handset to the bottom of the Phantom is 10mm
For Single Screen Mode



Picture 18: Left Side, the distance from handset to the bottom of the Phantom is 10mm
For Single Screen Mode




Picture 19: Right Side, the distance from handset to the bottom of the Phantom is 10mm
For Single Screen Mode



Picture 20: Top Side, the distance from handset to the bottom of the Phantom is 10mm
For Single Screen Mode



Picture 21: Bottom Side, the distance from handset to the bottom of the Phantom is 10mm
For Single Screen Mode

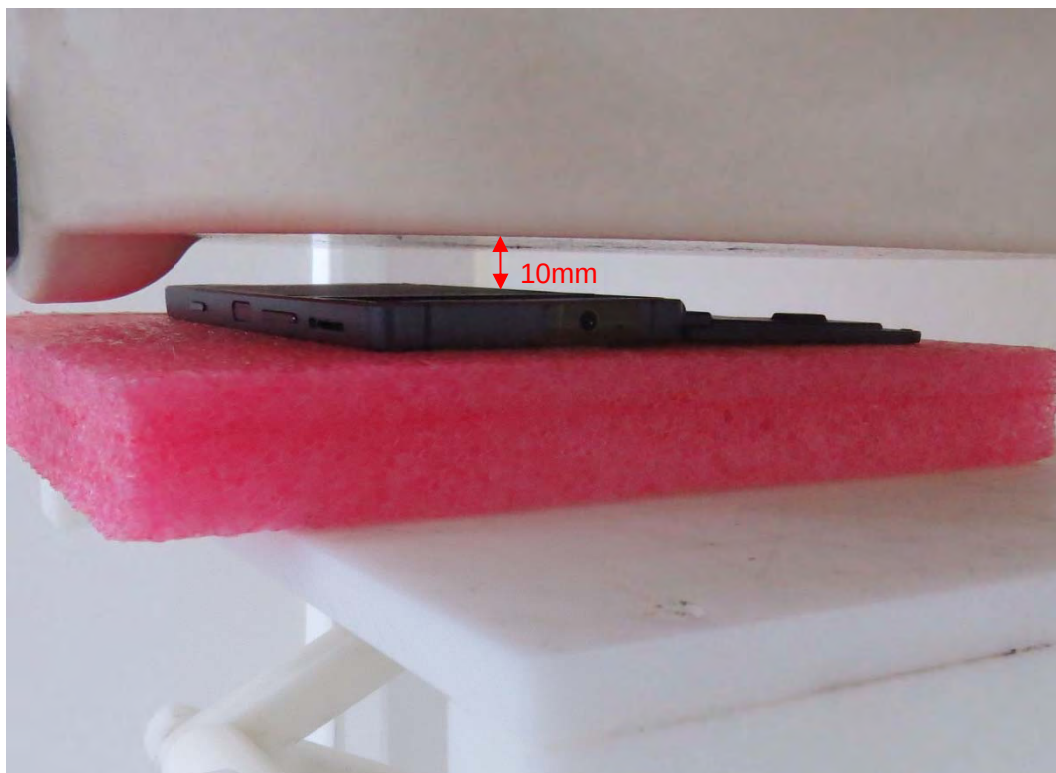

Picture 22: Back Side, the distance from handset to the bottom of the Phantom is 10mm
For Double Screen Mode



Picture 23: Front Side, the distance from handset to the bottom of the Phantom is 10mm
For Double Screen Mode



Picture 24: Left Side, the distance from handset to the bottom of the Phantom is 10mm
For Double Screen Mode



Picture 25: Right Side, the distance from handset to the bottom of the Phantom is 10mm
For Double Screen Mode



Picture 26: Top Side, the distance from handset to the bottom of the Phantom is 10mm
For Double Screen Mode




Picture 27: Bottom Side, the distance from handset to the bottom of the Phantom is 10mm
For Double Screen Mode




Picture 28: Back Side, the distance from handset to the bottom of the Phantom is 0mm
For Single Screen Mode




Picture 29: Front Side, the distance from handset to the bottom of the Phantom is 0mm
For Single Screen Mode

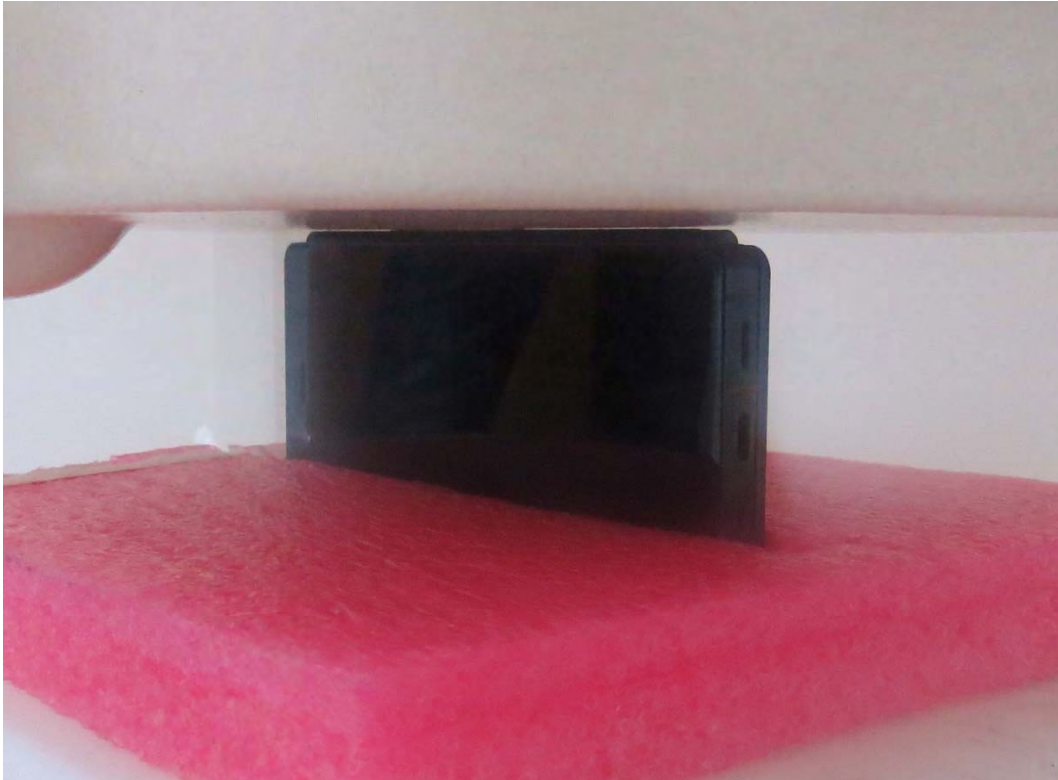


Picture 30: Right Side, the distance from handset to the bottom of the Phantom is 0mm
For Single Screen Mode

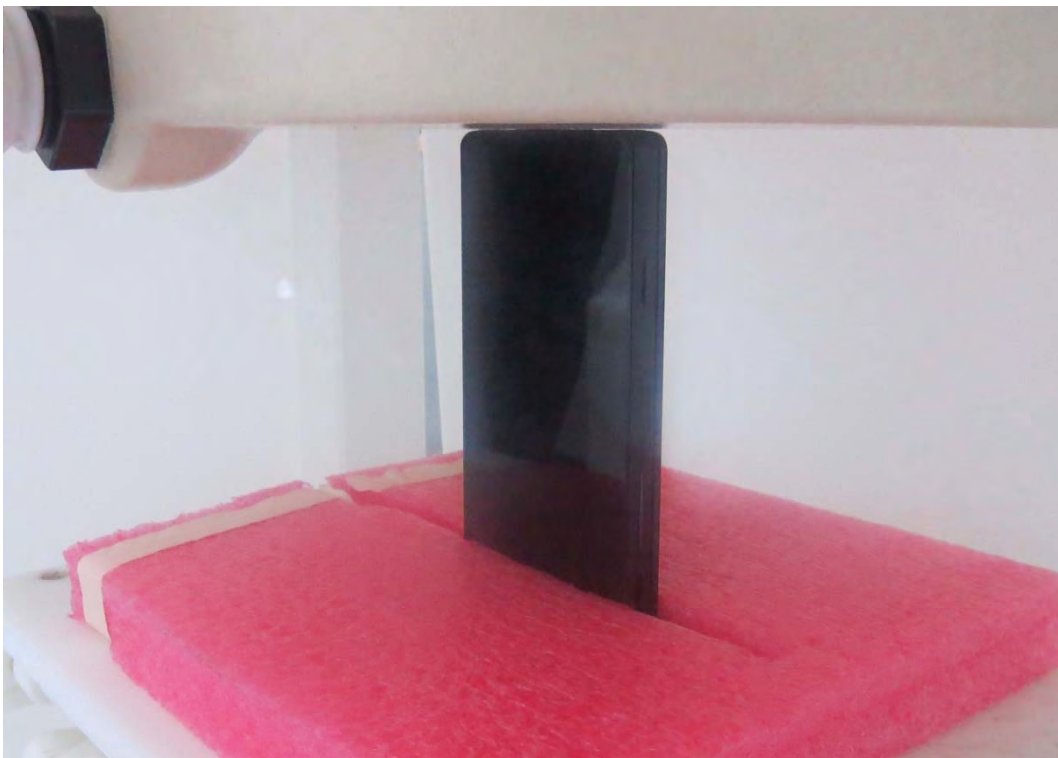

Picture 31: Top Side, the distance from handset to the bottom of the Phantom is 0mm
For Single Screen Mode

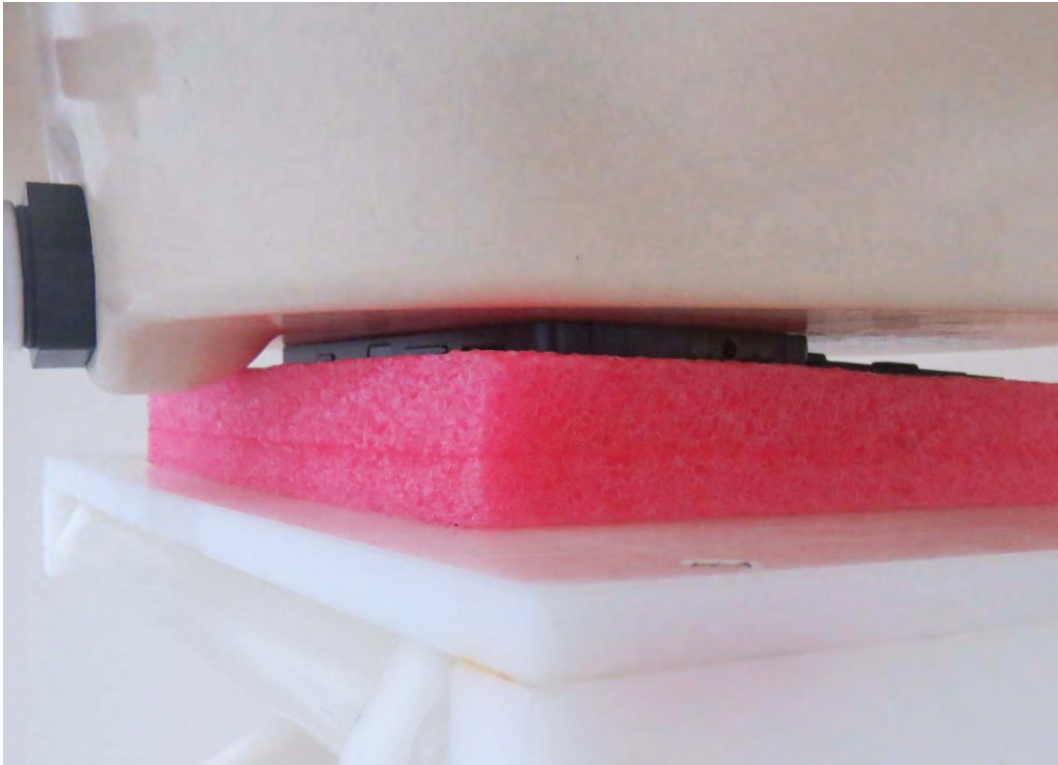

Picture 32: Back Side, the distance from handset to the bottom of the Phantom is 0mm
For Double Screen Mode

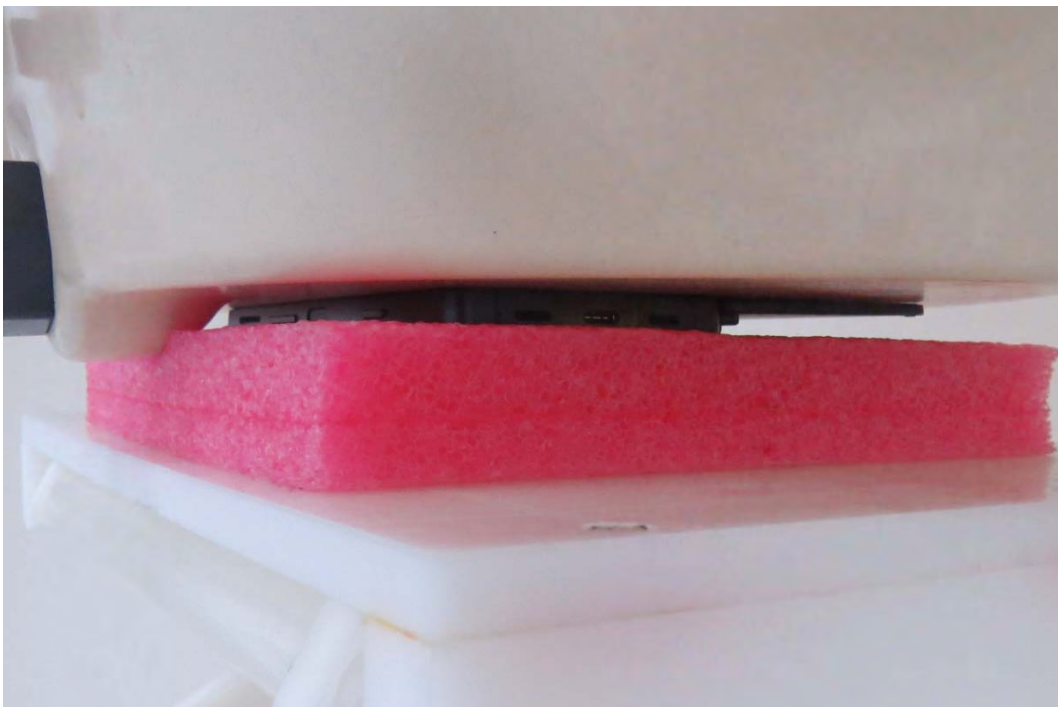

Picture 33: Front Side, the distance from handset to the bottom of the Phantom is 0mm
For Double Screen Mode



Picture 34: Top Side, the distance from handset to the bottom of the Phantom is 0mm
For Double Screen Mode



Picture 35: Bottom Side, the distance from handset to the bottom of the Phantom is 0mm
For Double Screen Mode