

FIXEDRFID READER

FR901

QUICK GUIDE


BLUEBIRD
A **TSC** Company



This user manual is protected by copyright.

Copyright © 2026 Bluebird Inc. All rights reserved.
Bluebird Inc. is the designer and manufacturer of Bluebird handheld mobiles.
This manual and the programs in this device are protected under international copyright laws, and may not be copied, distributed, translated, or removed by any means.

Registered Trademark

BLUEBIRD is an emerging global brand, striving to lead the market in performance and mobility. Their products represent reliability, innovation, and innovative technology. Bluebird is a registered trademark from the global brand of Bluebird Inc. and is copyright protected.

- Bluebird and stylized Bluebird Logo are registered trademarks and symbols of Bluebird Inc.
- Adobe® is a registered trademark of Adobe Systems Inc.
- All other trademarks and copyrights are the property of their respective owners.

User’s Guidance

Device type	User’s guidance
Class A Device	This device has qualified the electromagnetic wave suitable registration and can be used at business, industrial and commercial environment.
Type Registration	This wireless device may cause propagation interference, and so, it cannot be used for life-saving services.

Revision History

Revised Version	Revised Date	Revised Details
1.0.0	8 December 2025	First version released

Contents

Contents

1 About This Manual

2 Safety Information	5
2.1 Symbols	5
2.2 Device	5
2.3 Environment	6
2.4 Frequency Interference	6

2 Overview

2.1 Package Contents	7
2.2 Your Device	8
2.2.1 Front	8
2.2.2 Back	8
2.2.3 Bottom of Front	9

3 Installing and Connecting

3.1 PFR901 LED Status	10
3.2 Installing and Connecting the Reader	10
3.3 Detailed Installation Procedures	11
3.3.1 Step 1 : Position the FR901 Reader and install the Reader	11
3.3.2 Step 2 : Connect the Antenna(s) to the FR901 Reader	12
3.3.3 Step 3 : Power the Reader	12
3.3.4 Step 4 : Connect the FR901 Reader to the Network	12
3.3.5 Step 5 : Configure the Region Setting	15
3.3.6 Step 6 : Test the Reader	15
3.4 GPIO interface Connection	16

4 Configuring and Monitoring

4.1 Configuring FR901 Reader	17
4.1.1 Device Configuration	17
4.1.2 RF Configuration	18
4.2 Monitoring FR901	22
4.2.1 Viewing Network Parameters and Statistics	22
4.2.2 Viewing the States of the FR901 Reader	22

5 Device Specification

5.1 Physical Characteristics 23

5.2 RFID Characteristics 23

5.3 User Environment Characteristics..... 23

5.4 Performance Characteristics 23

5.5 Connectivity 24

Appendix A Troubleshooting

Appendix B Warranty and Support

Appendix C Safety Regulatory

1 Safety Information



1.1 Symbols

This manual uses the following symbols to indicate hazards and additional information.

Symbol	Name	Description
	Warning	Indicates situations that could cause injury to yourself or others.
	Caution	Indicates situations that could cause damage to your device or other equipment.
	Note	Indicates additional information that can help you get the most out of the device.

 Please read this safety precaution information carefully. Failure to follow the information provided may result in fire, electric shock, or other property damage or bodily injuries.

1.2 Device

- 
 - Do not plug the Power on the device if the device is wet or do not touch adapter or power cord with wet hands. There is risk of electric shock.
 - Do not use your device in an explosive danger zone.
 - If your device becomes wet, do not put your device in heaters, microwaves, etc. to dry it. There is a risk of explosion or malfunction.
- 
 - Although this device is very sturdy, do not drop, hit, bend, or sit on it on purpose. It can be broken.
 - Do not modify, take apart, or repair the device. Contact to your customer service center. Failure to do so will void your warranty.
 - Do not attempt to modify your hardware or software. It may cause device malfunction and void your warranty.
 - Backup the data and information from your device. Your data may be erased during repairs or upgrades.
 - Do not paint your device. It can damage your screen or your device's exterior.
 - Avoid using or storing this device at extreme temperatures. This device is designed to work at temperatures between -40°C and 65°C (-40°F and 149°F), and humidity level between 5% and 95%.



1.3 Environment

- Do not use the device while driving or operating heavy machinery. Doing so may result in death or serious injury.
- Do not use the device in locations with combustible goods. Doing so may result in an explosion.
- Do not use the device in dusty or hot locations. Doing so may damage the device.
- Do not expose your device to direct sunlight such as on the dashboard of a car for extended periods of time.
- Do not use the device in humid locations. Doing so may damage the device and void the warranty.
- Do not keep the device close to air conditioner vents. Corrosion within the device may occur due to condensation from changes in temperature.
- Do not allow children to play with the device.

1.4 Frequency Interference




- The device emits an electromagnetic fields. It may interfere with your medical devices.
- Do not place credit cards, phone cards, bankbook, and tickets next to the device. The magnetic field of the device can damage their magnetic strips.



2.1 Package Contents


The package includes:

Standard FR901

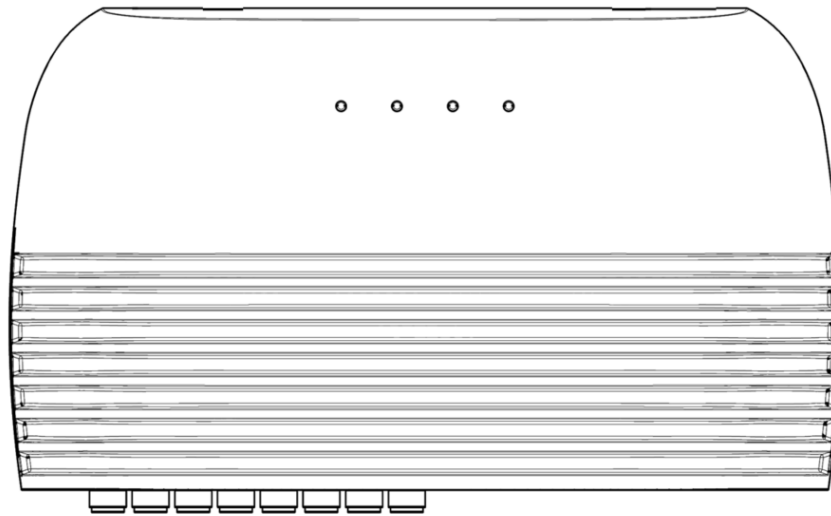

FR901 device

FR901 with WIFI

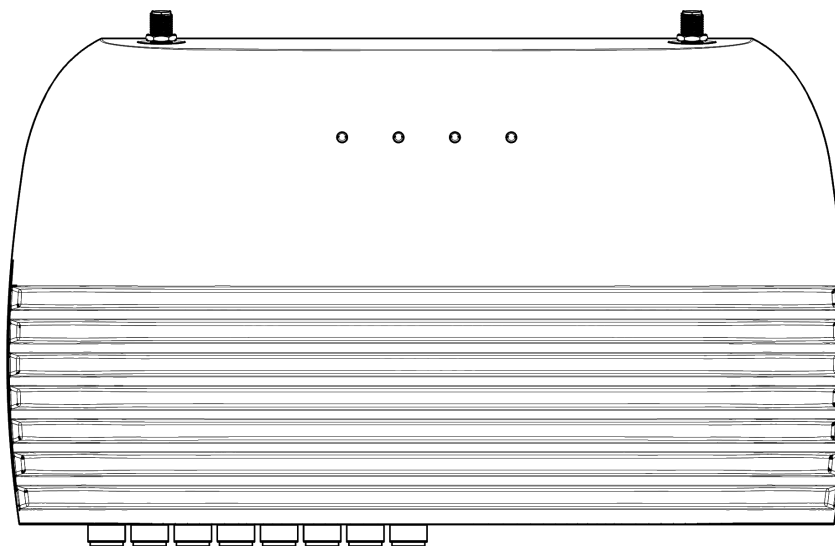


FR901 device (WIFI SKU)




2.2 Your Device

2.2.1 Front


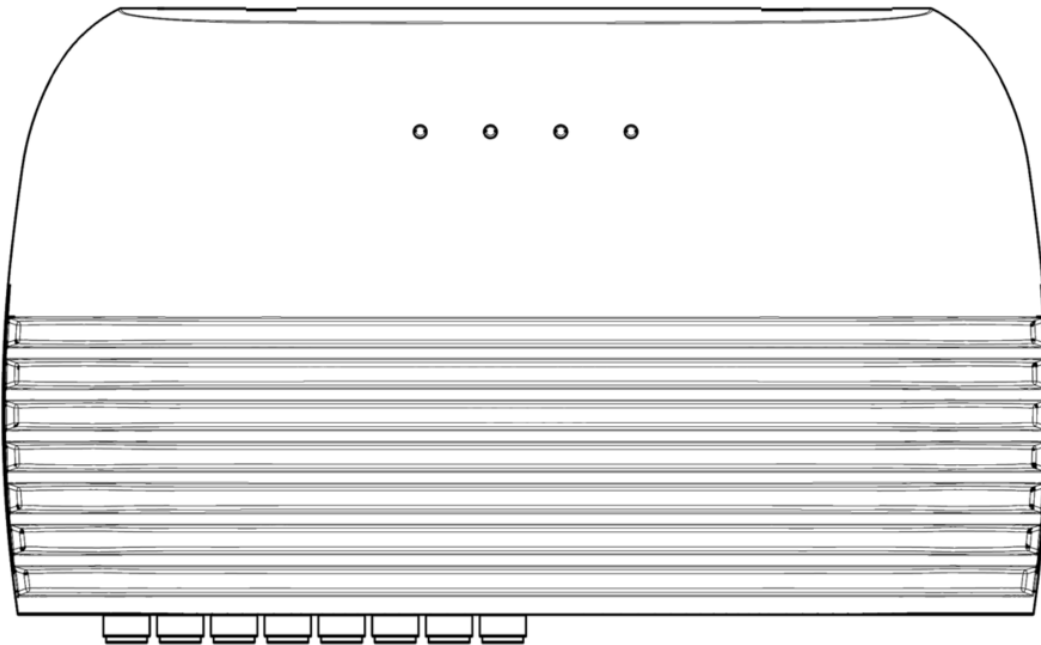


2.2.2 Back

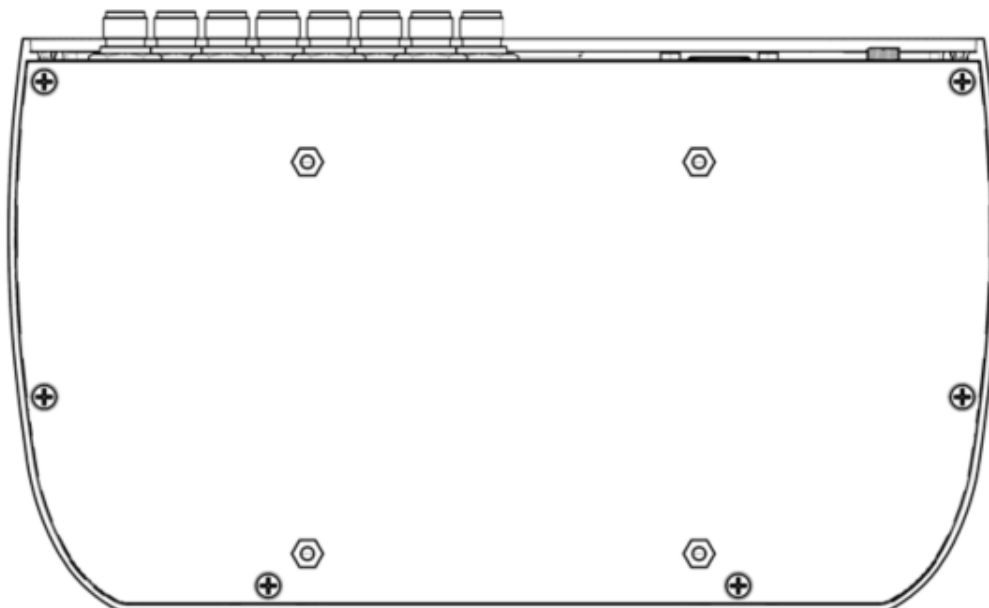



2.2.3 Bottom of Front

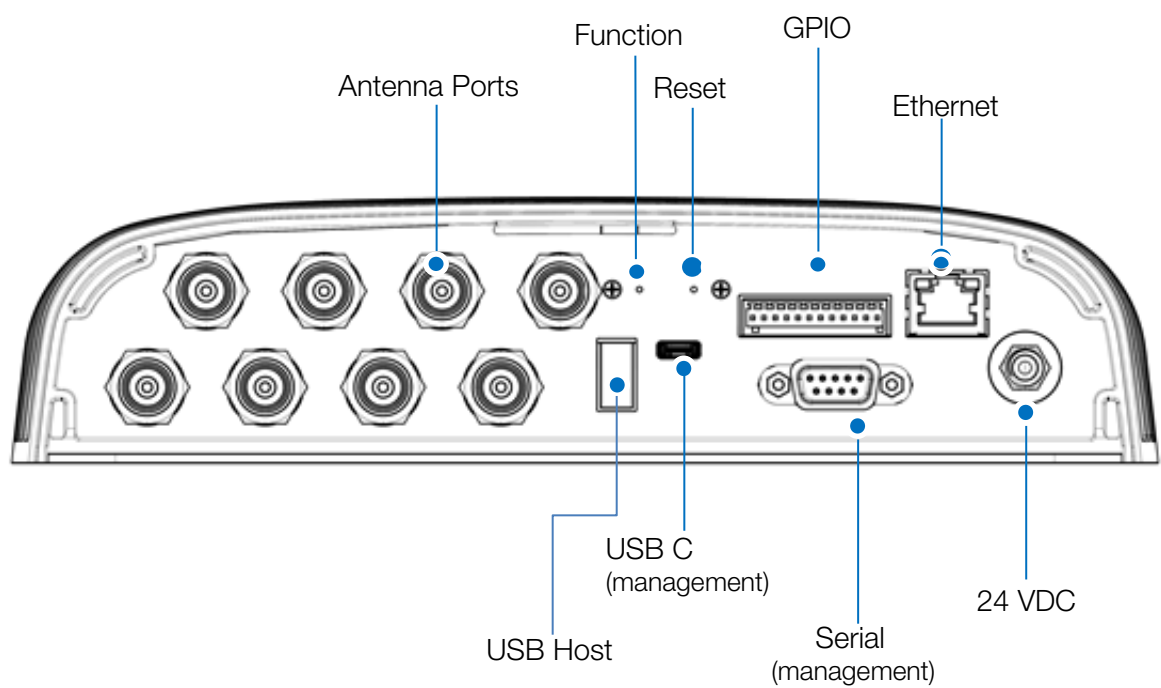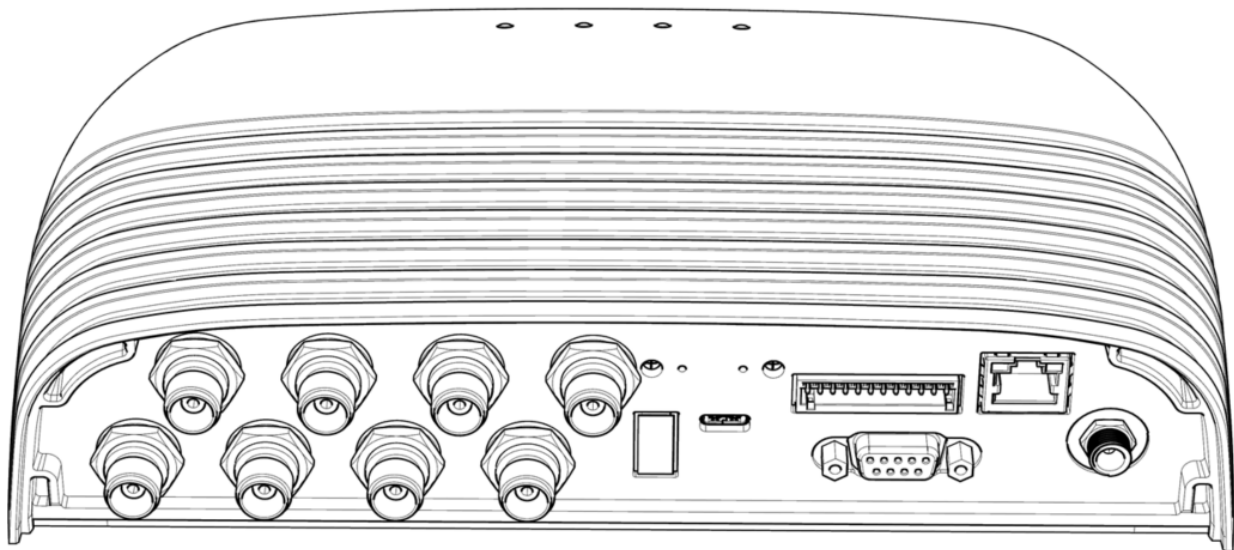

3 Installing and Connecting



This section provides details about FR901 I/O ports and status LEDs. It also explains how to install the Reader and connect it to your network

3.1 FR901 LED Status

	PWR	ACTV	STAT	Connect
Power	Green	---	---	---
Tag Reading	---	Green (Blink)	---	---
No Antenna Connect	---	Red (5sec)	---	---
Factory Reset	---	---	Orange	---
Booting	---	---	Orange	---
SW Update	---	---	Orange	---
SW Update Fail	---	---	Red	---
Firmware Update	---	---	Orange	---
Wifi Connected	---	---	---	Green
Wifi Connecting	---	---	---	Orange
Wifi Error	---	---	---	Red

3.2 Installing and Connecting the Reader

The primary installation and connection steps for FR901 are:

- 1.Position the Reader appropriately for your environment.
- 2.Connect the antenna (s) to the appropriate ports on the Reader.
- 3.Connect power to the Reader (either POE or VDC).
- 4.Connect the Reader to the network.
- 5.Configure region setting on the Reader.
- 6.Test the Reader installation by reading tags.




3.3 Detailed Installation Procedures

This section provides the details for each installation and connection step.

3.3.1 Step 1: Position the FR901 Reader and install the Reader.

Choose a suitable location for your Reader. The device should be placed away from direct sunlight, high humidity, extreme temperatures and sources of electromagnetic interference.

To power the reader using an external universal power supply, make sure the outlet is nearby.

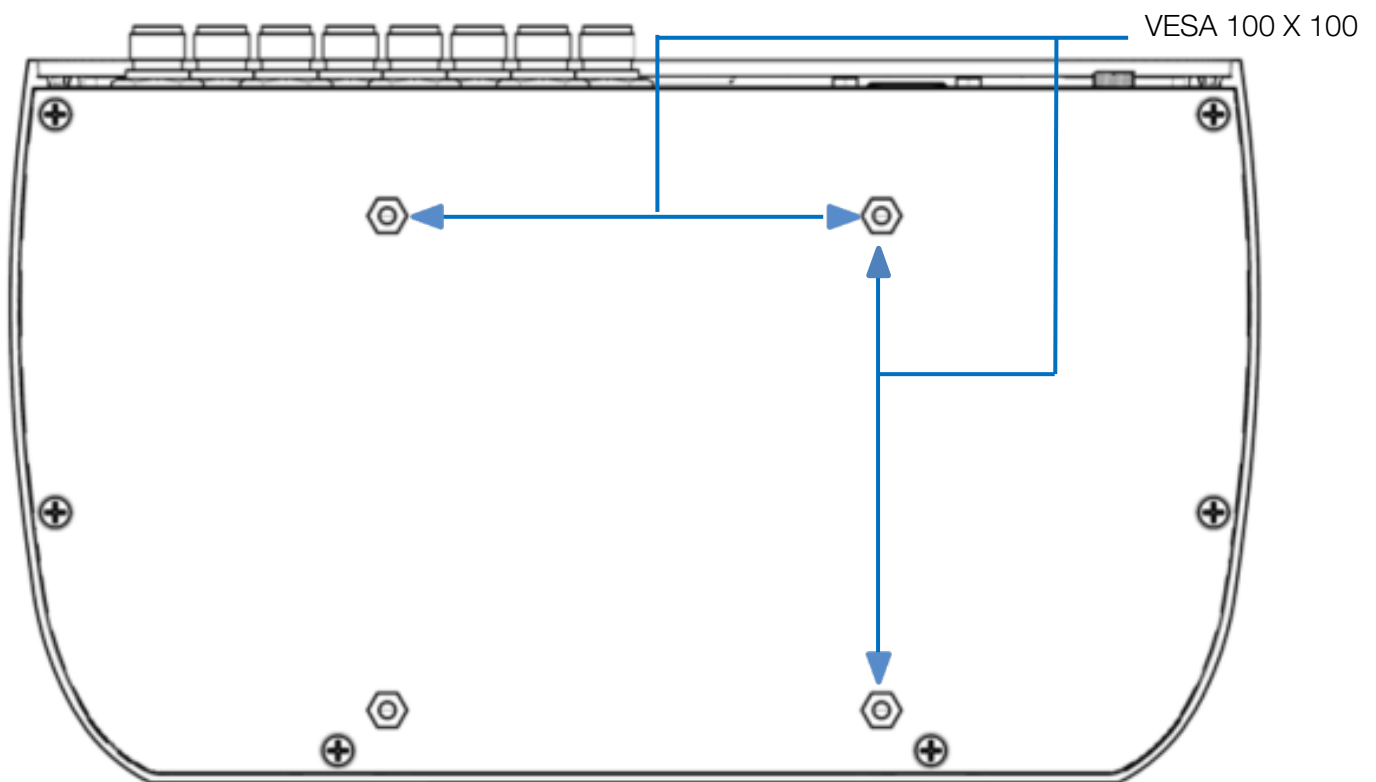

- The FR901 is mounted via four VESA hole on 100 mm x 100 mm pattern.
- The FR901 can be mounted on floor, desks, etc. through brackets with VESA 100mm x 100mm patterns.



It is recommended to install it by fixing it to the floor or desk, not the wall or ceiling.



3.3.2 Step 2: Connect the Antenna(s) to the FR901 Reader

FR901 Reader has eight antenna ports. Each port is independent, bidirectional, and full duplex TX / RX (monostatic).

To connect the antenna(s) to the Reader:

1. Position each Reader antenna, keeping the following points in mind:
 - Position the antenna(s) to achieve the most effective and efficient tag reads.
 - Position the antenna(s) to maximize operator safety.
2. Mount the antenna(s) according to the instructions provided by the antenna manufacturer.
3. Attach the antenna cable(s) to the antenna port(s) on the Reader.
4. Finger-tighten each connection, making sure the connection is secure.

3.3.3 Step 3: Power the Reader

External universal power supply

Connect the AC power plug into a suitable 100–240 VAC, 50–60 Hz power outlet.

The Power and Status LEDs on the Reader alert you to the status.

For more information, see section 3.1 FR901 Ports and LEDs.



Power off the reader before connecting antennas. Never disconnect the antennas while the reader is powered on or reading tags. This can damage the reader.

Do not turn on the antenna ports from a host when the antennas are not connected.

Maximum antenna gain (including any cable loss) cannot exceed 6.7 dBiL. Ensure that the device is correctly set to the country where the reader is being used to assure regulatory compliance.

When mounting the antennas outside the building, equipment shall permanently connect to building earth (ground) by a skilled person. Perform this in accordance with applicable national electrical installation codes. To connect the antennas to the reader, attach the RP-TNC connector coming from each antenna to an antenna port and secure the cable using wire ties. Do not bend the cable beyond the rated bend radius.

3.3.4 Step 4: Connect the FR901 Reader to the Network

You are now ready to connect the installed FR901 Reader to your network. You have two options:

- If your network supports DHCP, you can connect the Reader directly to your Ethernet network. After the Reader is powered, immediately communicate with it via SSH (TCP/IP).
- If your network does not support DHCP, or if you want to connect a PC directly to the Reader via Ethernet cable, the Reader defaults to the following fixed IP address: 169.254.1.1.

Setting	Description
Hostname	FR901-XX-XX-XX where XX-XX-XX is the last three bytes of the Reader's MAC address (which is printed on the version label attached to the Reader case).
DHCP	Default Enabled. The Reader also reports its hostname to the DHCP server. Note: When the reader is plugged into a network that doesn't have a DHCP server OR when the PC is connected directly to the Reader via Ethernet cable, the Reader defaults to a fixed IP address (169.254.1.1).

3 Installing and Connecting



To connect the FR901 Reader to the Ethernet network

Using a standard Ethernet cable, connect the RJ-45 connector on the Reader to a LAN drop or network switch. A typical network configuration is shown in Figure 3.1.

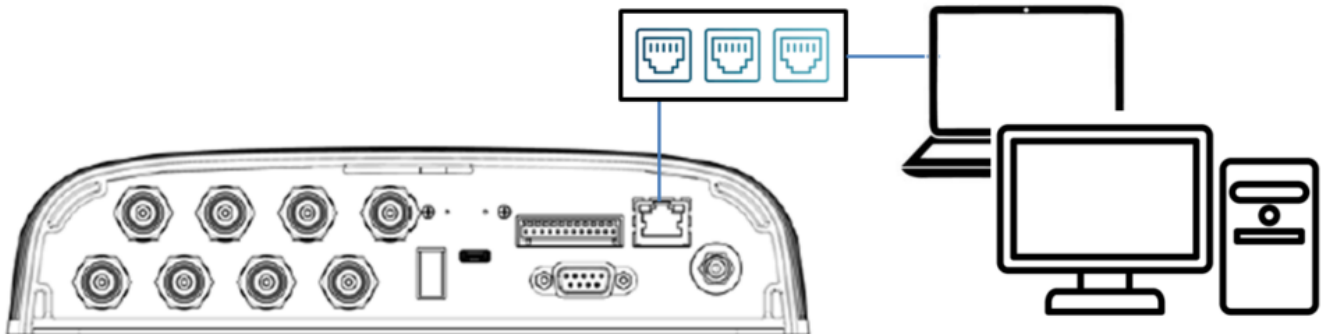


Figure 3.2 Connecting the FR901 Reader to the Ethernet Network

To connect a FR901 Reader to your PC over a usb connection

1. Confirm that you have the latest version of Putty, a free and reliable SSH, and serial client. Putty version 0.60 or later contains support for serial connections.
2. Use a USB A-C or C-C cable to connect your PC's usb port on the Reader, as shown in Figure 3.3

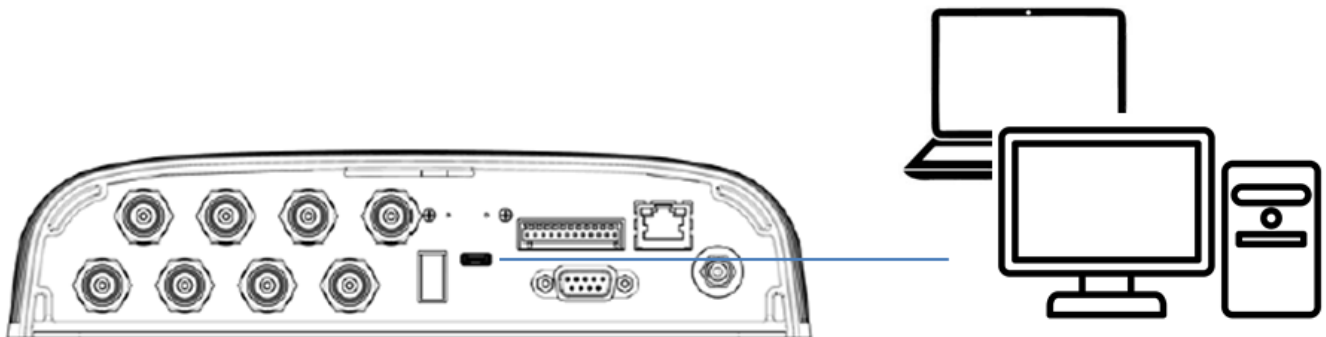


Figure 3.3 FR901 USB Connection (management)

3. Power up the Reader and wait for the boot sequence to complete.
4. On the PC, run the Putty application and select the Serial connection option.
5. On the Putty Configuration dialog, shown in Figure 3.4, verify that Serial line to connect to is set to COMX
6. Set Speed to 115200.
7. Set Flow control to None, and then click Open.

3 Installing and Connecting

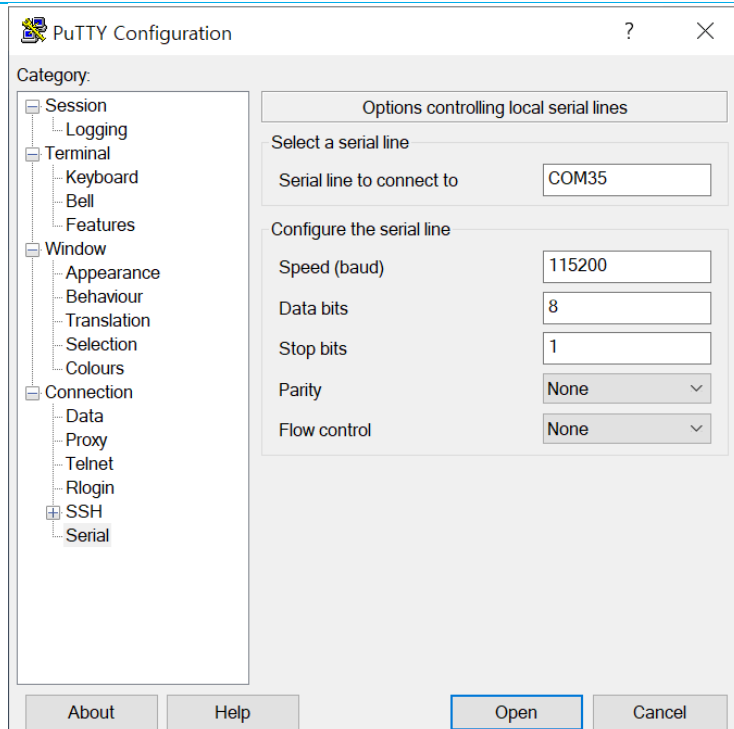


Figure 3.4 Putty Configuration Settings

8. At the BB Shell login prompt shown in Figure 3.5, log in with the Default password.

- user name: root
- password: bluebird



Figure 3.5 BB Shell login prompt

9. When the BB Shell command-line prompt displays, begin configuring the network settings for the Reader. For more information, see Section 4.1.1 Using BB Shell to Configure Network Settings for FR901.

10. When you have completed configuration of the appropriate network settings, connect the Reader to your Ethernet network.

3 Installing and Connecting



3.3.5 Step 5: Configure the Region Setting

Configure the region if necessary. The region can be configured using the config system region command in the BB Shell.

Note that FCC, ETSI, Japan, and Australia Readers cannot be altered and only operate per the regulatory laws in USA/Canada, the European Union, Japan, and Australia.

Command1	Descriptions
region	Configure the region of Reader. ASCII characters are allowed. You must use capital letters. You can only configure the region defined in the region table.

The config system region command allows the user to configure Reader's region. ASCII characters are allowed. You must use capital letters. You can only configure the region defined in the region table.

0	KOREA	9	INDIA	18	NEW_ZEALAND	27	VENEZUELA	36	CAMBODIA
1	ETSI	10	INDONESIA	19	PAKISTAN	28	VIETNAM	37	MYANMAR
2	FCC	11	IRAN	20	PERU	29	RUSSIA	38	ETSI_UPPER
3	AUSTRALIA	12	ISRAEL	21	PHILIPPINES	30	ALGERIA	39	PARAGUAY
4	BANGLADESH	13	JAPAN_1	22	SINGAPORE	31	EGYPT		
5	BRAZIL	14	JAPAN_2	23	SOUTH_AFRICA	32	CHILE		
6	BRUNEI	15	JORDAN	24	TAIWAN	33	GUATEMALA		
7	CHINA	16	MALAYSIA	25	THAILAND	34	MACAO		
8	HK	17	MOROCCO	26	URUGUAY	35	NICARAGUA		

Table 3.1 region table

*This list is not related to product Certification

Example :

```
[FR901] config system $ region Korea
```

```
Return='0,Success'
```

3.3.6 Step 6: Test the Reader

Read the tag and verify that the connections and functions are correct. DemoApp, BLUEBIRD's Windows PC test application, makes it easy to check Reader operation. Use DemoApp to configure various settings and then run a simple inventory operation



3.4 GPIO Interface Connection

The GPIO port supports up to four input lines and four output lines, and provides a +24 VDC supply for powering external sensors and signaling equipment. The GPIO circuitry is electrically isolated from the reader's chassis ground; however, when an external 24 VDC supply is used, the GPIO ground is tied to the return path of that supply.

The GPIO inputs are designed with flexibility in mind. Each input is internally pulled up to +5 VDC and can be driven low simply by connecting it to ground. The inputs are compatible with most industrial NPN-type sensors and can be connected directly to relay contacts or mechanical switches. They can also be driven by standard 5V logic devices. In the low state, the reader sources approximately 3 mA, which can be handled by common logic families. In the high state, the input current is nearly zero.

Pin #	Description
1	Output voltage : 24V (it is only output 1A when the adapter is connected).
2	GND
3	GPIO OUTPUT 1
4	GPIO OUTPUT 2
5	GPIO OUTPUT 3
6	GPIO OUTPUT 4
7	GND
8	GPIO INPUT 1
9	GPIO INPUT 2
10	GPIO INPUT 3
11	GPIO INPUT 4
12	GND

4 Configuring and Monitoring



This section provides a high-level overview of the configuration and monitoring options available for FR901 Reader

4.1 Configuring FR901 Reader

You can think of FR901 Reader configuration in two categories: configuring the device itself and configuring the Reader's RF behavior. This section provides the basics for each type of configuration.

4.1.1 Device Configuration

BB Shell is a proprietary command-line management interface used to configure and manage network settings, firmware upgrades, and other device-oriented operations. This section introduces the BB Shell commands to use to install and connect the Reader. The BB Shell Reference Manual provides full details and syntax for all BB Shell commands.

The following procedure outlines the BB Shell commands you might need to connect the Reader to your network.

1. Open the BB Shell console.

2. View the Reader's current configuration settings by entering the show network summary command at the BB Shell command prompt as shown in the following example:

```
> show network summary
Hostname : FR901-96-69-23
Ethernet Mode : static
IP address : 192.168.50.115
Subnet Mask : 255.255.255.0
Gateway : 192.168.50.1
Return='0,Success'
```

3. Configure the appropriate TCP/IP parameters for your environment. The applicable commands are:
Setting Hostname

```
> config network hostname <HOSTNAME>
```

Setting Static IP Address

```
> config network ip static <IP ADDRESS> <NETMASK> <GATEWAY>
```

Note: The IP address is required, however the other parameters are optional. The default value is used if an optional parameter is omitted from the ip command.

Note: The reader MUST be rebooted for this command to take effect.

Enabling DHCP

```
> config network ip dhcp
```

Configuring NTP Servers

```
> config network ntp add <NTP SERVER ADDRESS>
```

4. After successfully configuring all required network settings, connect the Reader to the network through the FR901 Ethernet port.



4.1.2 RF Configuration

FR901_SDK_DEMOAPP is an example of a PC client application. Regardless of the application you're using, the underlying protocol is the same, Low-Level Reader Protocol (LLRP).

LLRP is a standard, asymmetric, binary protocol used for communication between a client application and the Reader. LLRP controls the configuration of the antenna transmit power, the receive sensitivity, the operating Reader, and more. For more information about LLRP, see the following documents:

- LLRP Standard This document provides the specifics of the LLRP standard ratified by EPCglobal. http://www.epcglobalinc.org/standards/llrp/llrp_1_0_1-standard-20070813.pdf

Using DemoApp to Configure and Test FR901
BLUEBIRD provides a LLRP application to use to configure and test the basic RF behavior of FR901. The DemoApp is available from the BLUEBIRD support Web site . To use DemoApp, your computer must be running a minimum of Windows 7 and have .NET Framework 4.6.1 installed.

This section describes how to connect to and configure a Reader's RF parameters by using DemoApp. It also provides a high-level description of each parameter.

To configure and test a Reader by using DemoApp

1. Launch the Demo App. The screen shown in Figure 4.1 displays.

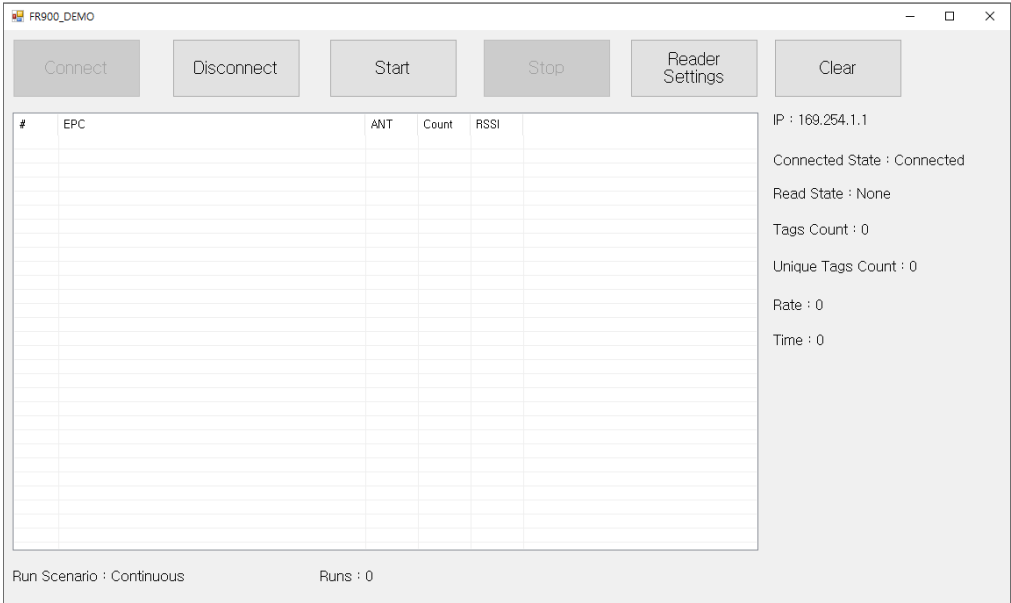


Figure 4.1 DemoApp initial screen

4 Configuring and Monitoring



2. Click Reader Settings. The Reader Settings screen displays

Figure 4.2 Demo App Reader Settings Connection Screen

IP : Enter the IP or hostname of the FR901

Note: You can find out the name and the IP address by using the BB Shell show network summary command. The show network summary command provides the dynamic values that are returned by DHCP or LLA if the current configuration is dynamic. The local hostname resolution feature (mDNS) gives the Reader a local hostname in addition to an IP address as its network identity. On an isolated network that lacks DNS service but that has mDNS enabled, a Reader with hostname FR901-A1-B2-C3, for example, can be reached using FR901-A1-B2-C3.local.

Reader Mode : Specifies the rules to use for communication between the Reader and the tag.

- Default : Mode 1
- Fastest : Mode 3

Session : To control when and how often the Reader reads a tag. Each tag contains a flag that is flipped from A to B or from B to A when it is read. The Session value controls how long the flag retains its value before reverting back to the original tag value. Search Mode controls which flag values the Reader reads and, in some cases, what happens to the flag value after the tag is read.

When you set Session to Dual Target, the Reader reads all the tags that have A flags.

Then, after reading the tags, the Reader flips each tag to B. When there are no more A tags to read, the Reader reads all the B tags, flipping each one to A after it has been read. It continues this process back and forth from A to B and back to A. Session 1 ensures that there is a persistence period that prevents tags from reverting before they have all been read.

- Session 0 (Auto Toggle On) : Continue reading the same tag
- Session 1 (Auto Toggle On) : The same tag is read every 0.5 ~ 1 second
- Session 2 or 3 (Auto Toggle On) : The same tag reads only once

Population : 1 to 65535 can be set. Set to 100 if there are 100 tags in front of the antenna.

Rx Sensitivity : -103db

Rx limit (RSSI) If set to -50db, RSSI below -50db will not be read.

Filter : If set to 1234, only EPCs starting with 1234 are read

Memory Bank : Reserved , EPC, TID, User (Usually use EPC)

Bit Pointer : Memory offset (bit) at filter, 32bit offset for EPC, 0bit for rest

Length : Double the length of the filter text

4 Configuring and Monitoring



Run Scenario

- Continuous : Press start button to start, continue reading until stop button is pressed
- Timed : Press start button to repeat start / stop every set time.

On time : Reading Time

Off time : Stop Time

Total Run : Repeat count

If set as below, it stops automatically after 10 times of 10 seconds Read-10 seconds stop.

The screenshot shows the 'ReaderSettings' application window. The 'Run Scenario' section has 'Timed - Runs for Specific Interval' selected. The 'Timed' section has 'On Time (s): 10', 'Off Time (s): 10', and 'Total Runs: 10'. The 'RFID Configuration' section shows 'Antennas' 1-8 with 'Power' 30 dBm, 'Population' 100, 'Session' 'Session 0', 'Reader Mode' 'Mode 1', 'Rx Sensitivity' 'Max -70', 'Filtering' 'Filter', 'Memory Bank' 'Epc', 'Bit Pointer' 32, and 'Length' 0. A 'Save Settings' button is at the bottom right.

Figure 4.3 Demo App Reader Settings Time mode

- GPI : Press the Start button to start reading when GPIX is high and to stop reading when it is low.
Set when using sensor.

The screenshot shows the 'ReaderSettings' application window. The 'Run Scenario' section has 'GPI - Run Controlled by GPI Triggering' selected. The 'Timed' section has 'On Time (s): 10', 'Off Time (s): 10', and 'Total Runs: 10'. The 'RFID Configuration' section shows 'Antennas' 1-8 with 'Power' 30 dBm, 'Population' 100, 'Session' 'Session 0', 'Reader Mode' 'Mode 1', 'Rx Sensitivity' 'Max -70', 'Filtering' 'Filter', 'Memory Bank' 'Epc', 'Bit Pointer' 32, and 'Length' 0. A 'Save Settings' button is at the bottom right.

Figure 4.4 Demo App Reader Settings GPI mode

Antenna Port & Power : Power can be set for each antenna.

- Antenna Port : 1~8
- Antenna Power : 0 ~ 33

The optimal setting depends on many things:

- how you are powering the Reader
- length of the cable that connects the antenna to the Reader
- number of antennas in the area
- distance anticipated between the antenna and the tags

Use the default value of 30 dBm for testing purposes.

4 Configuring and Monitoring



3. Test your Reader installation. Place one or more tags in the read-zone of one or more of the attached antennas. On the DemoApp screen, click Connection and Start. Tag reads appear under Inventory, as shown in Figure 4.5.

The screenshot shows the FR900_DEMO application window. At the top, there are buttons for Connect, Disconnect, Start, Stop, Reader Settings, and Clear. Below these is a table with columns: #, EPC, ANT, Count, and RSSI. The table contains four rows of data. To the right of the table, there is a status panel with the following information: IP : 169.254.1.1, Connected State : Connected, Read State : None, Tags Count : 40, Unique Tags Count : 4, Rate : 0, and Time : 0. At the bottom of the window, it says 'Run Scenario : Continuous' and 'Runs : 4'.

#	EPC	ANT	Count	RSSI
1	29140160449100000000000001	1	10	-39
2	29140160449300000000000000	1	10	-50
3	29140160449200000000000000	1	10	-28
4	29140160449400000000000000	1	10	-47

IP : 169.254.1.1
Connected State : Connected
Read State : None
Tags Count : 40
Unique Tags Count : 4
Rate : 0
Time : 0

Run Scenario : Continuous Runs : 4

Figure 4.5 DemoApp Reader Settings Connection and Start

- Inventory Start / Stop
- You can check the total tag count, unique tag count, rate, and reading time.
- You can check EPC information, Antenna and RSSI.



4.2 Monitoring FR901

Use BB Shell to monitor the health and performance of the Reader when FR901 is up and running.

This section presents the primary BB Shell commands to use for viewing network and RFID statistics, in addition to the Reader logs. For more information about these commands, see the BB Shell Reference Manual

4.2.1 Viewing Network Parameters and Statistics

Use the BB Shell show network command to display networking parameters and statistics. When you use this command with the parameters shown in Table 4.1, you can see the following information:

Command	Descriptions
summary	Display summary of network settings
hostname	Display hostname
dns	Display stored DNS Server list.
ip	Display IP address
mdns	Display the current state of mdns service
ntp	Display stored ntp Server list and current state.
http	Display the current state of http service.
ssh	Display the current state of ssh service
ftp	Display the current state of ftp service

Table 4.1 BB Shell Monitoring Command

4.2.2 Viewing the State of the FR901 Reader

To display information about the current state of the Reader itself, use the BB Shell show system command. When you use this command, you can see the following statistics:

Command	Descriptions
summary	Displays a summary of system info
CPU	Displays CPU information, OS version information, memory and storage usage.
region	Displays current region and available region

Table 4.2 BB Shell Monitoring System Command



Physical Characteristics

Dimension	253 x 150 x 56 mm
Weight	1.1 kg
Visual Status Indicators	Multicolor LEDs : Power, Activity, Status, Connect

RFID Characteristics

Max Receive Sensitivity	-103 dBm monostatic
Return Loss (Min)	10dB
Air Protocols	ISO 18000-63 (EPC Class 1 Gen 2 V2) , Gen2X
Frequency (UHF Band)	US: 902-928 MHz EU: 865-868 MHz; 916.3, 917.5 and 918.7MHz JP1: 916-921 MHz, JP2: 916~923 MHz CN: 920.5-924.5 MHz
Transmit Power Output	PoE : 0-31.5dBm 24V DC : 0-30dBm configurable in 1 dB steps
Max Tag Read	1300+ Tags / Sec

Environmental

Operating Temp	-20° to +65° C / -4° to +149° F
Storage Temp	-40° to +70° C / -40° to +158° F
Humidity	5-95% non-condensing

Performance Characteristic

Processor	QCM 6490
Memory	4 GB RAM / 64 GB UFS Flash 6 GB RAM / 8 GB RAM (Optional)
Operating System	Linux / Android (Optional)

5 Device Specification



Connectivity

WLAN (Optional) *Require Dipole Antenna	Radio : WiFi 802.11 a/b/g/n/ac/ax 2x2 MIMO Data Rate : 5GHz PHY data rates up to 1.2Gbps / 2.4GHz PHY data rates up to 458Mbps Channel : 1–14: 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14 Channel 36–165: 36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140, 144, 149, 153, 157, 161, 165 Channel Bandwidth: 20, 40, 80 MHz
WPAN (Optional)	Class 1, Bluetooth v5.3 with BLE (Optional)
Communications	10/100 BaseT Ethernet; USB Host & Client (Type A&C) DB9 1ea, RJ-45 1ea, HW Reset Button
General Purpose I/O	4 inputs, 4 outputs optically isolated (Terminal Block)
Power Supply	POE(15.4W)/ POE+(30W) + 24V DC Universal Power Supply
Antenna Ports	8 monostatic ports (Reverse Polarity TNC) 2 Port Dipole Antenna for WIFI (SMA)



Please ask your sales representative for the specifications not listed above or for the future upgradeable specifications

6 Troubleshooting



I dropped the device in the water.

Turn off the device. Place the device in a dry place. Let it dry completely for a considerable period of time, and then turn the device back on. If it does not turn back on, contact our service center.

My device gets too hot to touch.

It is normal for the device to warm up while it is receiving a poor signal, performing an intense workload, It should cool down if you stop using the device for a certain amount of time. If the problem continues, contact the manufacturer. It may result in fire.

How do I get the repair service?

You can contact your local sales representative or you can send the device via a delivery service to Bluebird's Korean headquarters. When sending the package, make sure you pay for the shipping fee in advance. When the repair is finished, Bluebird will cover the shipping cost.



Customer support

Before asking for after-sales service, please back up the data on the device. We do not back up data from the products sent to the Customer Service Center. Therefore, we assume no responsibility for loss/deletion of data.

Customer Service Center

#1103, Gplus Kolon Digital Tower 11F,
Digital-ro 26-gil 123, Guro-gu, Seoul, Republic of Korea(08390)

- Fax: +82-2-6499-2242
- Email: rma@bluebirdcorp.com
- Hours: 9:30 a.m. - 6:30 p.m. (GMT Time: +9 Hours)



The center is closed on Saturdays, Sundays, and Korean national holidays.

Registering for After-Sales Service

- We receive the products for our after-sales service through mail, delivery services and hand delivery only in principle.
- If you bought the product from a party other than Bluebird or an authorized Bluebird reseller, you need to register the product before using our after-sales service.
- Please enclose an evidence of purchase or the product receipt for our after-sales service.
- Please enclose your name, telephone number, address and details of the problem for a prompt service.
- You can ask for our after-sales service by contacting your authorized Bluebird dealer or the Customer Service Center in the head office.
- Do not intentionally damage the label on the product.
- A damaged label may result in a disadvantage to the customer.
- When you return the product to Bluebird for service, please put the product in a protective box.
- The warranty will not cover any damage which occurs during delivery. We advise you to use the box and protective cover supplied with the product.
- Make sure to deliver the product in a safe way. Bluebird assumes no responsibility for the loss of the product during delivery.



Charged services

- In the following cases, it will be charged when requesting for after-sales service.
 - Service request due to inappropriate use of the device by the customer
 - Use of programs that might affect the program (over-clock, forceful changes in the input of the system, personal developments)
- Faults caused by the customer.
 - Defect due to inappropriate or careless use of the product (dropping, submersion under water, shock, damage, unreasonable operations, etc.)
 - Defect due to a repair or unauthorized technician
 - Defect caused intentionally or by the carelessness of the customer
 - Defect due to the use of fraudulent parts or components
- Other cases
 - Defect due to nature (damage caused by fire, wind, flooding, etc.)
 - Accessories are out of warranty (accessories like cable/adaptor, etc. have a warranty of 6 months)
- Regulations for repairs after charged services
 - If the same fault occurs in the part that has been repaired within a 1 month (30 days), the part will be repaired free of charge.



No refunds will be offered in the following situations:

- The product seal has been removed (if applicable).
- The product has been damaged due to careless use by the customer or due to a natural disaster (floods, rain, fire, etc.).
- Loss of product or other components (manual, connecting cables, etc).
- DOA (Dead on Arrival) policy
If your product is DOA (Dead on Arrival), or has malfunction within 30 days of purchase (DOA period), the product will either be exchanged or provided with after-sales service.

7 Warranty and Support



Warranty certificate

Thank you for purchasing a product from Bluebird Inc.

- In case of accessories, only those that match the sales list managed by the Customer Service Center will be eligible for customer service.

Name of Product	Fixed RFID Reader
Name of Model	FR901
Date of Purchase	
Manufacture Number	
Place of Purchase	
Term of Guarantee	1 year from purchase

Warranty information

- Bluebird Inc. (hereinafter referred to as Bluebird) provides the warranty service for its products in compliance with the Bluebird's warranty program.
- Upon receiving a notification on a defect of its product within the range of warranty during the warranty period, Bluebird will repair or replace the defective product according to its warranty policy.
- If the defective product within the range of warranty is not repairable or replaceable, Bluebird shall refund the purchasing price within a designated period from the date of receiving a notice of defect.
- Bluebird assumes no responsibility for repairing, replacement or refund until it receives the defective product from the customer. The replacement shall be equivalent to a new product in the aspect of performance.
- Bluebird products may contain the recycled products, components or materials equivalent to new products in the aspect of performance.
- This warranty is applied to software products only when the programming commands are not executed. Bluebird does not guarantee interruption-free or error-free performance.

8 Safety Regulatory



FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions :

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 30 cm between the radiator & your body.

This device is restricted to indoor use only.

8 Safety Regulatory



IC Warning

- This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause

undesired operation of the device.

Le présent appareil est conforme aux CNR Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le

brouillage est susceptible d'en compromettre le fonctionnement

- RF warning for Mobile device:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 30cm between the radiator & your body.

L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF. Cet équipement doit être installé et utilisé avec une distance minimale de 30 cm entre le radiateur et votre corps.

This device is restricted to indoor use only.

Transmitters in the 5.925-7.125 GHz band are prohibited from operating to control or communicate with unmanned aircraft systems.



BLUEBIRD CUSTOMER SERVICE

Operating Hours

Monday to Friday 9:30 A.M. - 6:30 P.M.

(GMT Time: +9 Hours)

The center is closed on Saturdays, Sundays, and Korean national holidays.

Customer Service Center

#1103, Gplus Kolon Digital Tower 11F, Digital-ro
26-gil 123, Guro-gu, Seoul, Republic of
Korea(08390)

**Bluebird constantly strives to bring
utmost satisfaction to all our customers.**