 


7. Deleting Devices

 
- 1) Press and hold the UC500  setup key or the UC100/UC200  home screen key for 3 seconds to move to the setup mode.

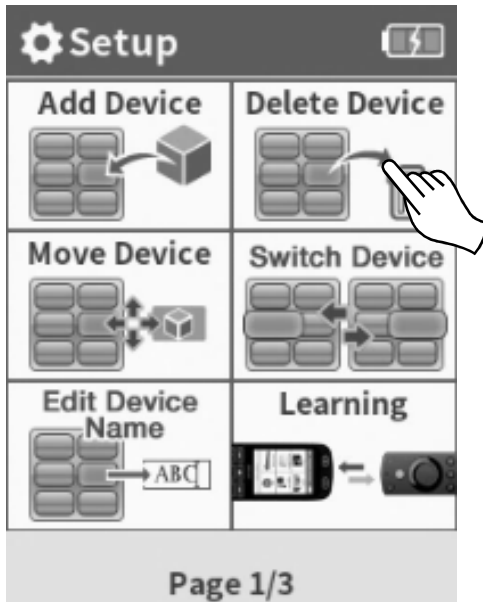

- 2) Select Delete Device




- 3) Select device to delete

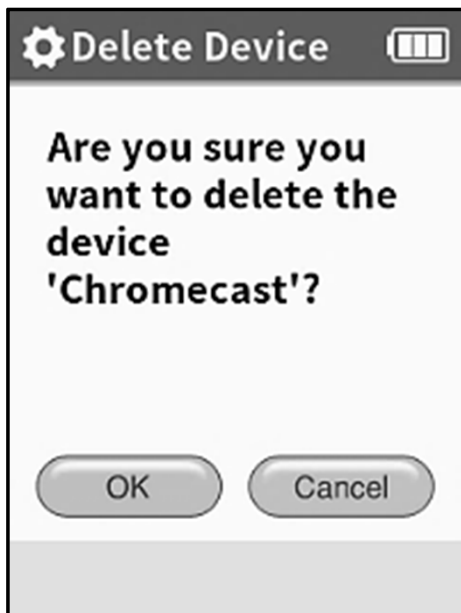

- 4) Press OK key


(※ All button information stored in the device will be deleted upon deletion.)

 8. Deleting Devices (Bluetooth)

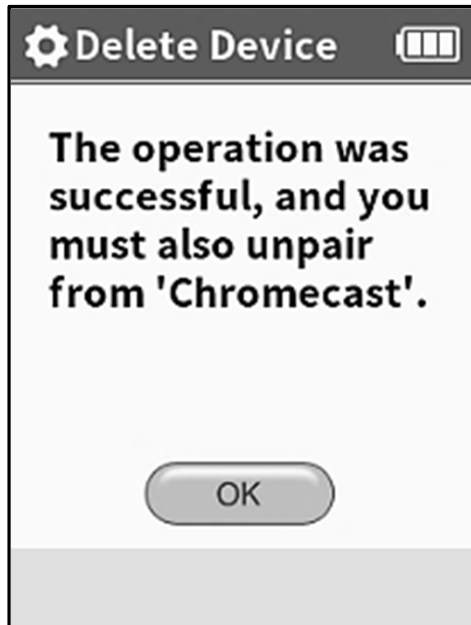


5) In case of deleting Bluetooth devices, a confirmation window is displayed once more.

 ※ Ex) Delete Chromecast device

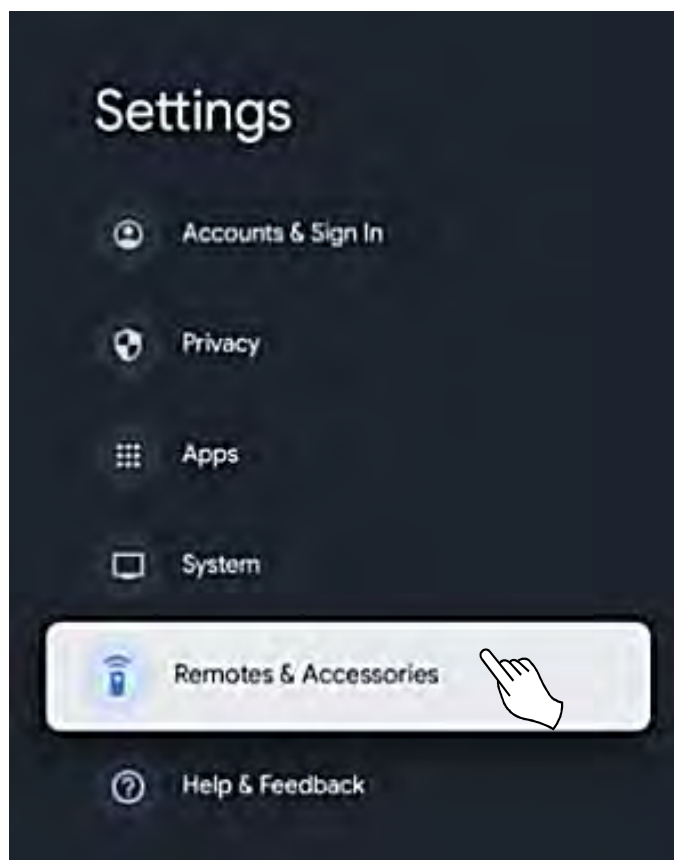


6-1) Chromecast Settings → Select "Remote & Accessories".

 8. Deleting Devices (Bluetooth)

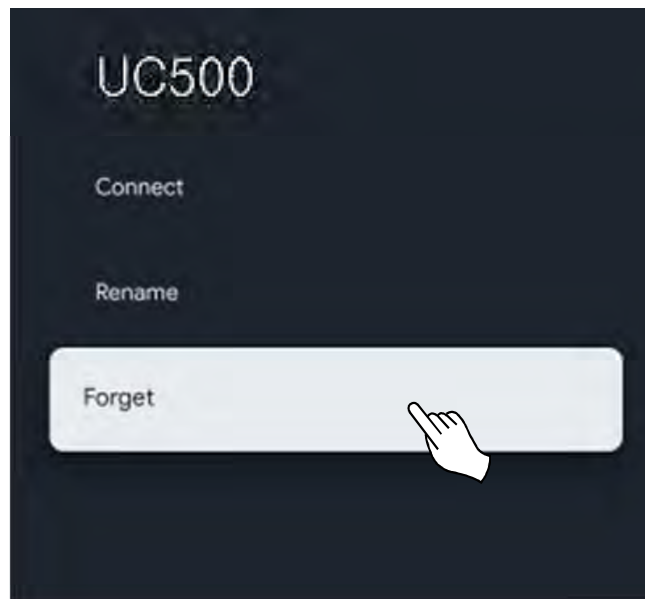

 6-2) After selecting the UC500 device, select "Don't Save".

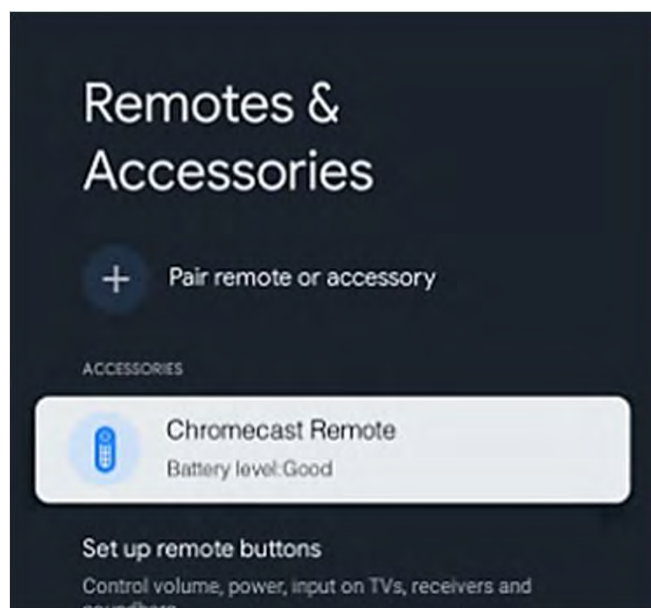



6-3) Make sure the "UC500" device is removed from the "Remotes & Accessories" menu.

13. Devices Moving



- The BECSY multi-remote controller can easily change the device screen configuration by moving the location of the registered device.

※ Press and hold the UC500  setup key or the UC100/UC200

   home screen key for 3 seconds to move to the setup mode.

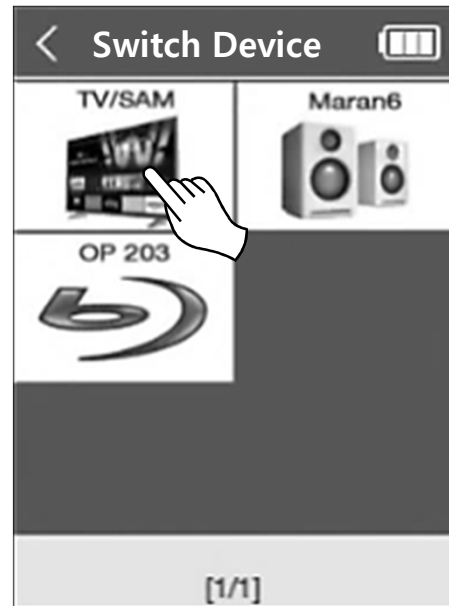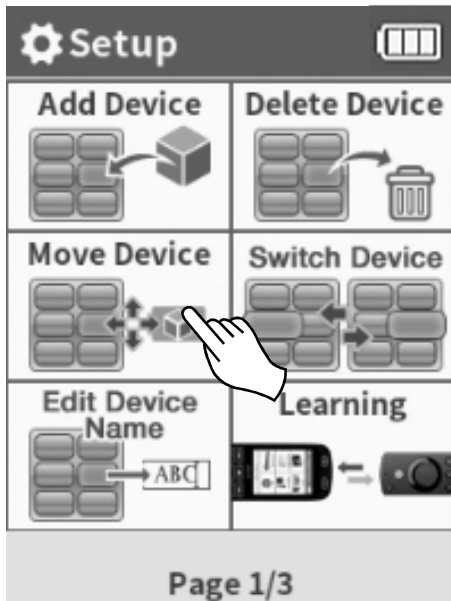

  - 1) Select Move Device on the second page of Basic Setup.
- 2) Select the device to be moved.

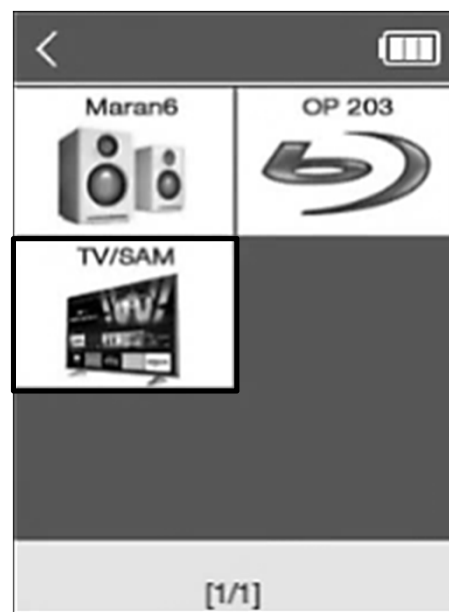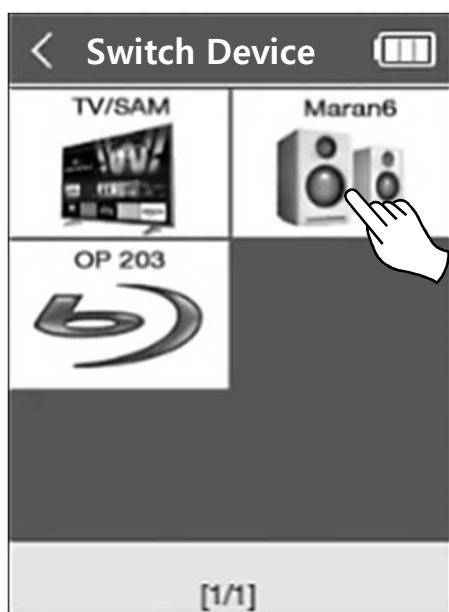


- 3) Select the location you want to move to.
- 4) It is automatically sorted after being moved.


10. Device Exchange

The BECSY multi remote control can exchange positions between two registered devices.

 
※ Press and hold the UC500  setup key or the UC100/UC200  home screen key for 3 seconds to move to the setup mode.

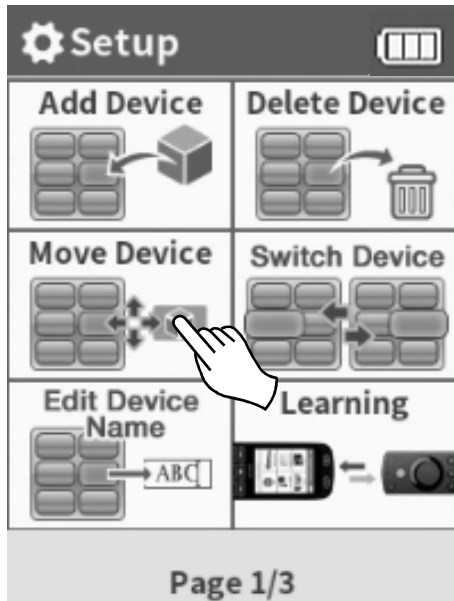

 1) How to use after selecting device exchange Select "Next".

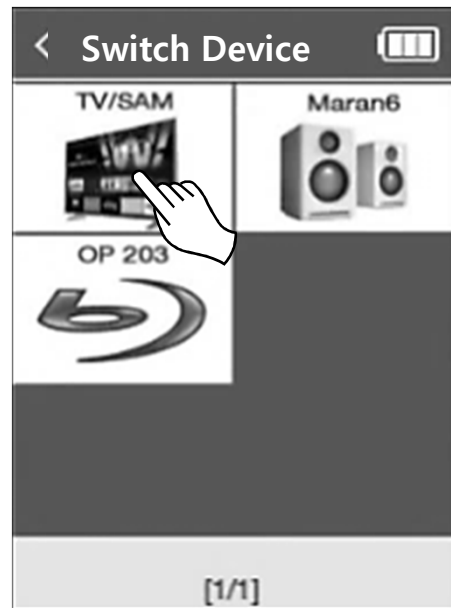

 
2) Select the device you want to exchange.

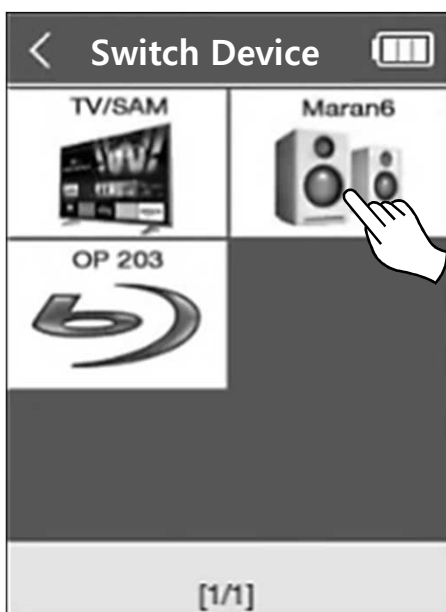


3) Select the location where the exchange will take place.

14. Changing Devices Names

 - 1) Press and hold the UC500  setup key or the UC100/UC200  home screen key for 3 seconds to move to the setup mode.

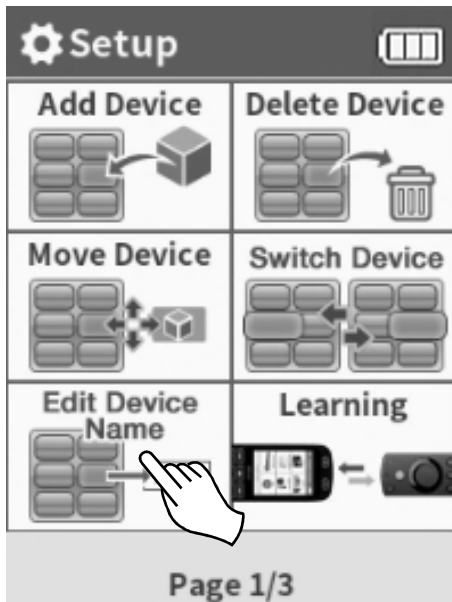

 - 2) Select Edit Device Name on the second page of Basic Setup.

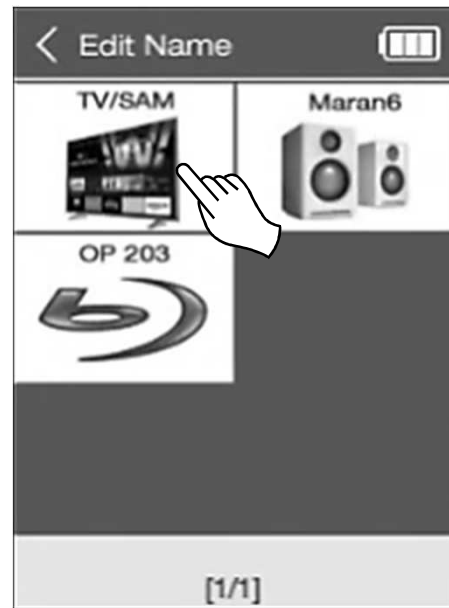

- 3) Select the device to be renamed.



- 4) Change name.



- 5) Press "OK" when changing device name and icon together. Press "Cancel" in case of changing only the name.

14. Changing Devices Names ---

 


- 6)) If you select "OK" to change the name and icon together, select the device icon to be changed to switch the name and icon.

9. Keys Adding

※ Press and hold the UC500  setup key or the UC100/UC200


 home screen key for 3 seconds to move to the setup mode.

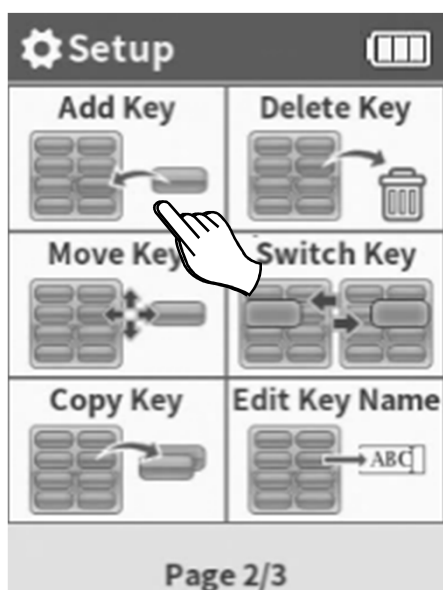

1) Select Add Key.

2) Select the default keys.

 
(add number keys, multimedia keys, etc.)

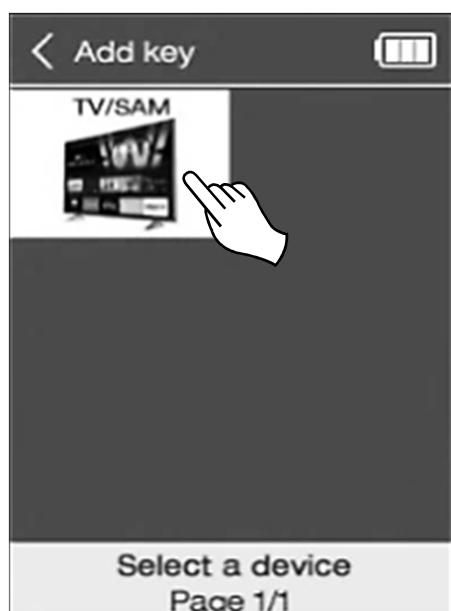

3) Sets the name of the key to be added.

4) You can check the key created in the selected device (ex> TV).

 
9. Keys Adding

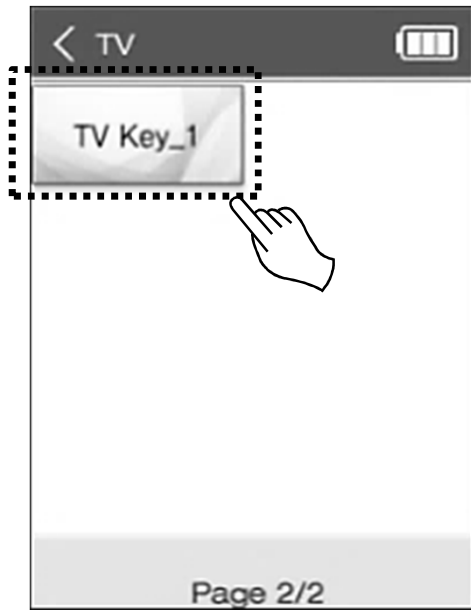


- 5) You can check the key created in the selected device (ex> TV).

10. Deleting Keys

 
- 1) Press and hold the UC500  setup key or the UC100/UC200  home screen key for 3 seconds to move to the setup mode.

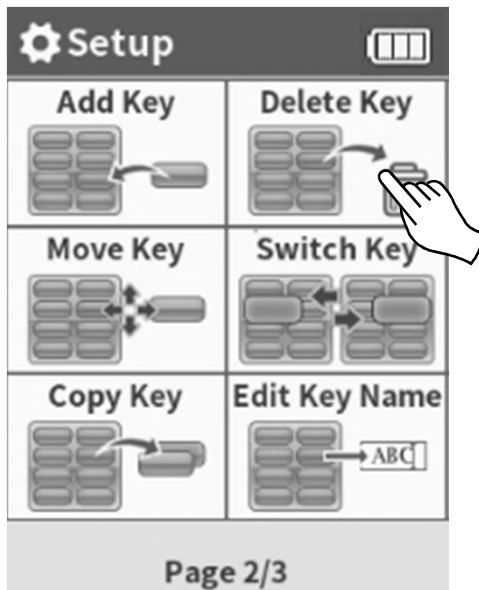

 - 2) Select Delete Key.

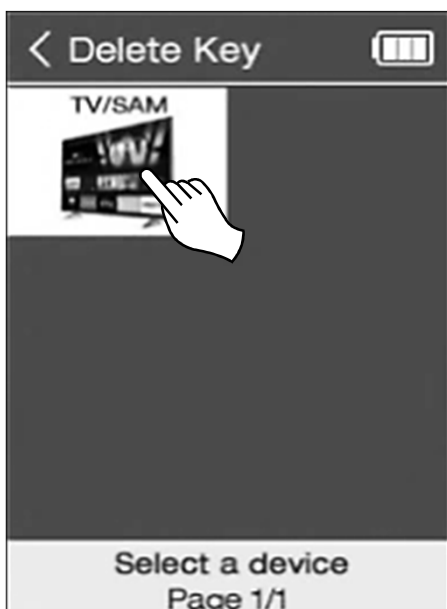


 
- 3) Select the device that has the key to delete.

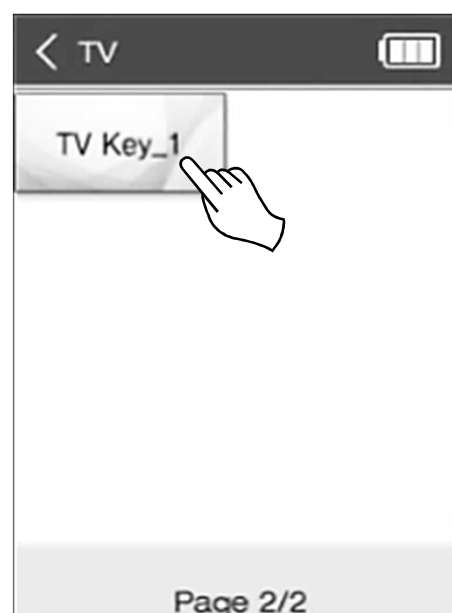

- 4) Select the key to delete.


15. Move Key

  - 1) Press and hold the UC500  setup key or the UC100/UC200  home screen key for 3 seconds to move to the setup mode.

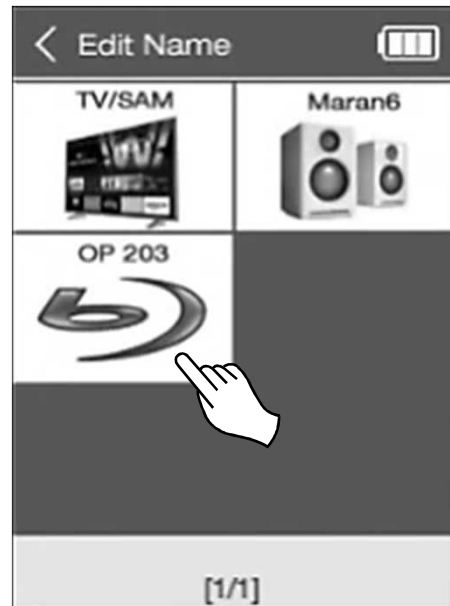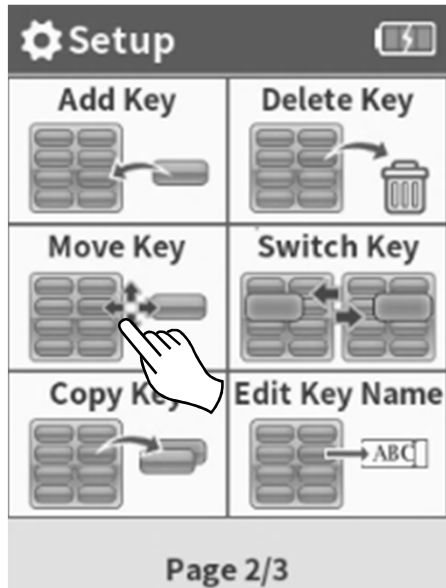

- 2) Select Move Key on the second page of Basic Setup.

 
- 3) Select the device to move the key to.

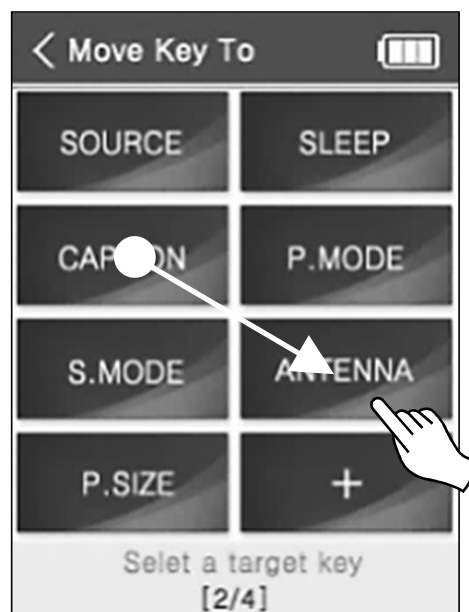

- 4) Select the soft button you want to move.

- 5) Select the button of the location to be moved.

 15. Move Key

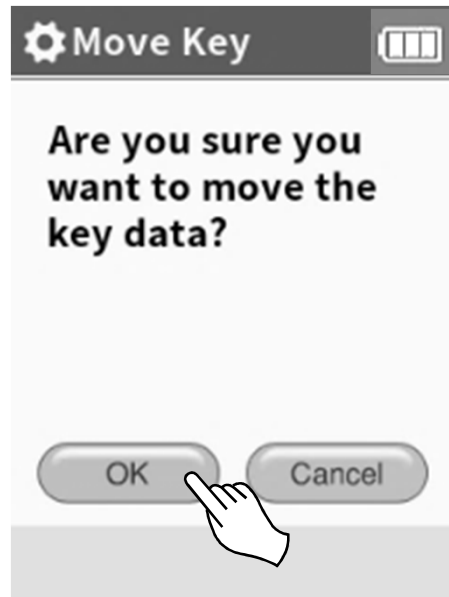


6) Confirm by pressing OK.

12. Coping Keys

- You can copy the settings of all buttons (actual buttons, number pad keys, and soft buttons) registered on a device to other devices and other buttons.

 ※ Press and hold the UC500  setup key or the UC100/UC200  home screen key for 3 seconds to move to the setup mode.

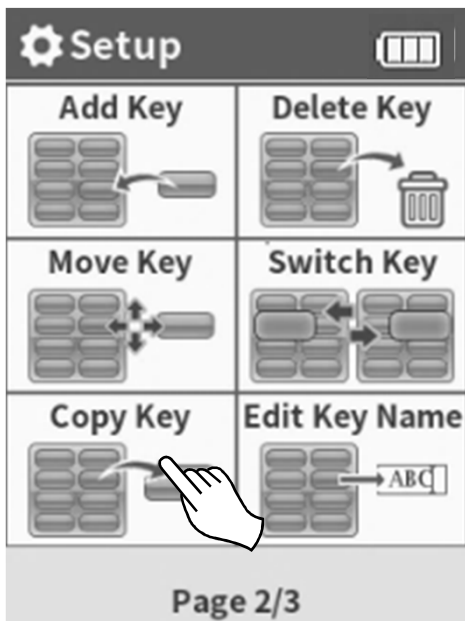

2) Select Copy Key.



3) Select the device on which the button you want to copy is registered.

 


4) Select the button to copy.



5) Select the device to copy to.

12. Copying Keys

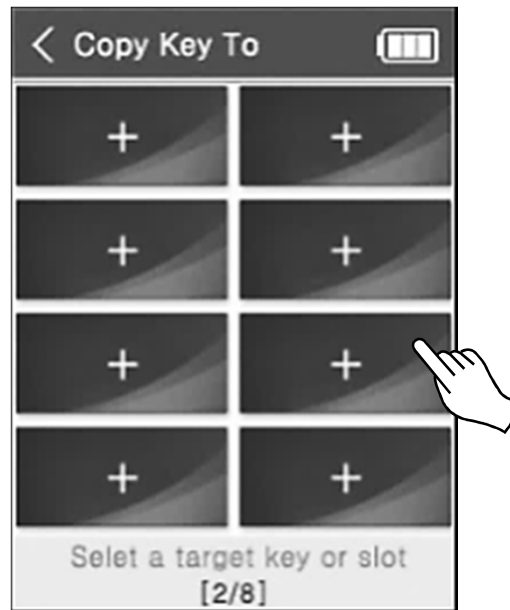

6) Select the button of the position (slot) to be copied.

 
You can select not only the Soft Button but also the actual button on the remote controller.

16. Renaming Keys

- The key (button) name change function can only change the name of the screen soft button.

※ Press and hold the UC500  setup key or the UC100/UC200

 home screen key for 3 seconds to move to the setup mode.

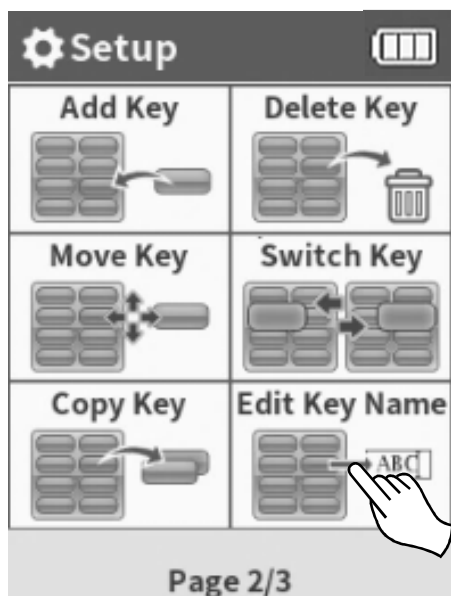


2) Select Edit Key Name on the second page of Basic Setup.



3) Choose whether to edit the text or change it to an icon.



 3) Select device.

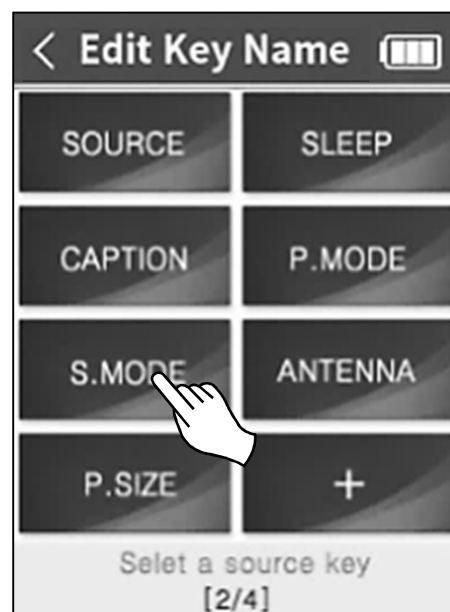

4) Select Soft button to rename.

17. Renaming Keys



- 5) After entering the name, confirm with the SEL button.

※ If you change it to an icon.



- 1) After selecting Change Icon on p.40-2, select the button to change.



 
- 2) Select an icon.

18. How to create a macro button

- The Macro function allows you to perform multiple key actions at once (e.g., turning on the TV and audio simultaneously, or automatically changing the input when the TV turns on, etc.).

※ Press and hold the UC500  setup key or the UC100/UC200

 home screen key for 3 seconds to move to the setup mode.

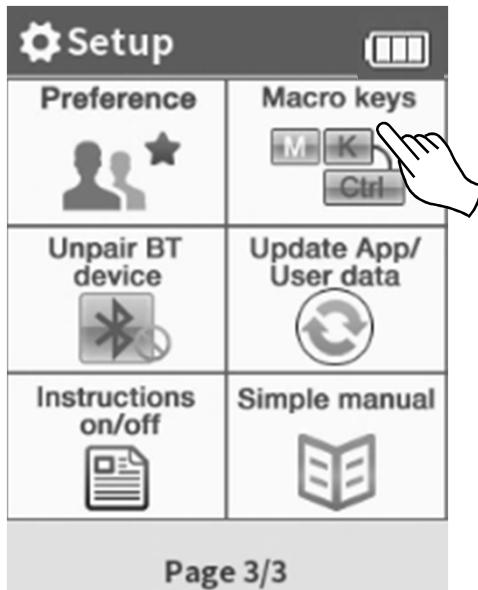


- 1) After selecting the macro button, select "Next" for usage instructions.
- 2) Select the device you want to assign as a macro key.



- 3) Select the button you want to make into a macro. Or create a new button.
- 4) OK Select

 
18. How to create a macro button

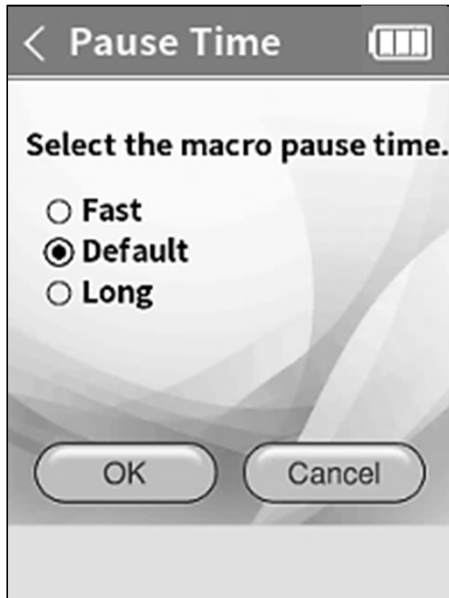


5) Set the speed of macro actions.



 6) OK Select

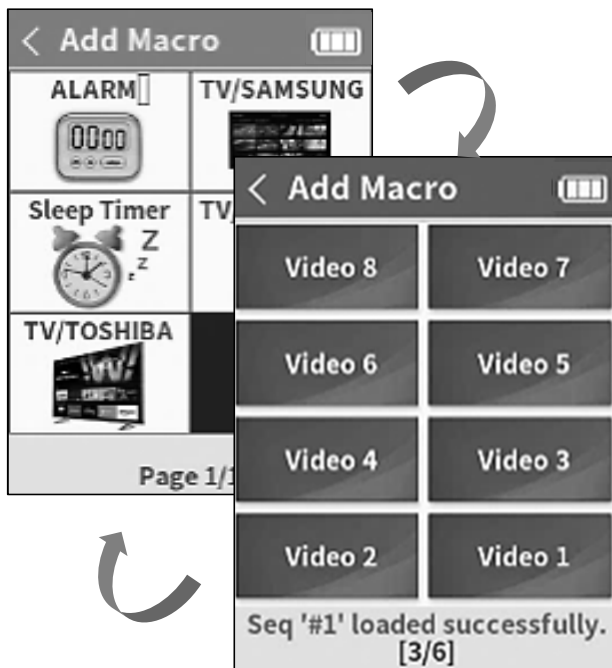

 7) Select the key you want to add to the macro and add it. (You can move and select multiple devices)

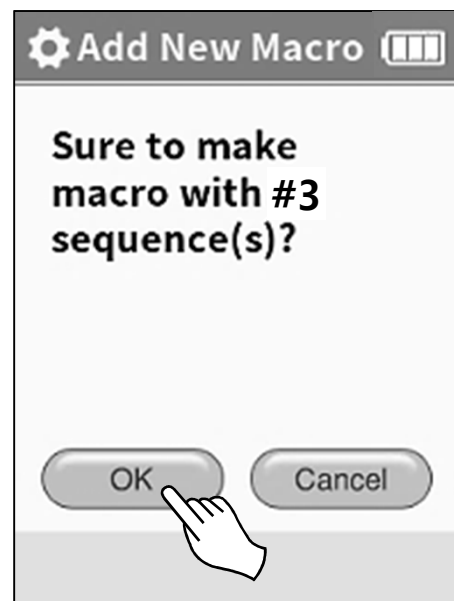


9) OK Select

8) Once you are done adding keys, press the Settings button.


17. Preference

- The Preference menu in Basic Setup mode consists of 7 menus: Macro key setting, Sleep timer, Display, Sound, Other, Unpair device, and Setup Assistance.

 ※ Press and hold the UC500  setup key or the UC100/UC200  home screen key for 3 seconds to move to the setup mode.

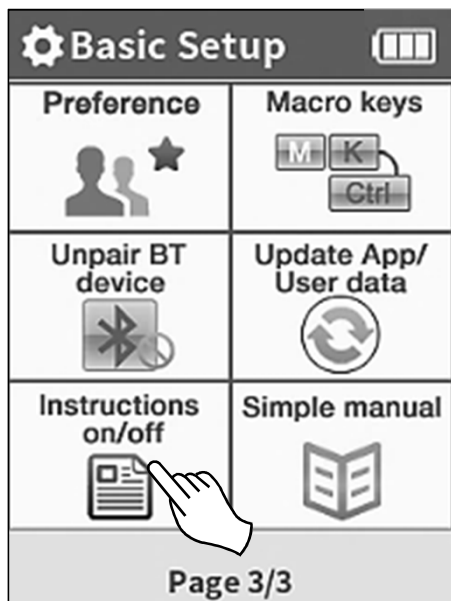

 1) Select Edit Key Preference on the second page of Basic Setup.

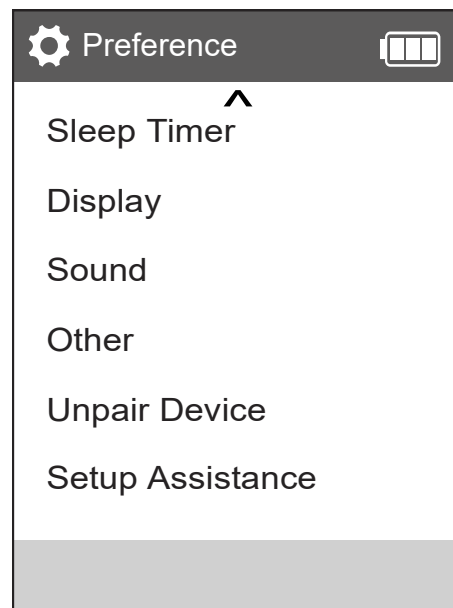

2) Select menu.

- **Change screen display**

Change display settings such as screen auto-off, language, etc.

- **Set beep sound**

key beep ON/OFF.

- **Change name**

Change the name of the BECSY integrated remote control

17. Preference

- **Other**

Set other functions.

- **Keyboard Settings**

Set the keyboard.

- **Reset settings**

Resets the settings.

- **System Information**

Displays system information.

20. Unpair Bluetooth

- Unpair from Bluetooth device.

21. Update app/user data

 
- You can update software and back up and download database and user data.
 - Software update
 - Database download
 - User data download
 - User data backup
 - Single device download
 - Single device backup
 - Factory reset
- If you press the Exit key three times during download and update, you will exit the page.

22. Manual on/off

- You can set whether to display the instructions for use when selecting a menu.


23. English User Manual

19. Troubleshooting

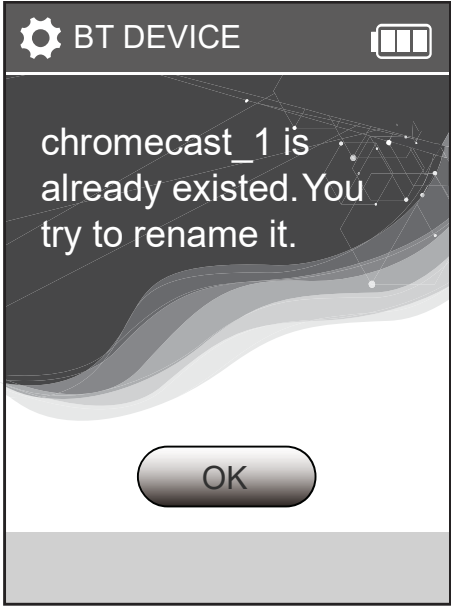Error Screen Display	Action
1 	▪ The same Bluetooth device name cannot be duplicated.
2 	▪ When the pairing standby time (3 minutes and 30 seconds) has passed.

19. Troubleshooting

	Error Screen Display	Action
3	■ Error message when connecting to an existing registered device during pairing attempt 	▪ After turning off the Bluetooth of the Android_tv_n10 device, try pairing.
4	■ Message that occurs when a connection request is received from an unknown Bluetooth host device during pairing attempt 	▪ Occurs if you do not delete the previously connected pairing information. Find the device you are trying to connect to, delete the pairing information, and try pairing.

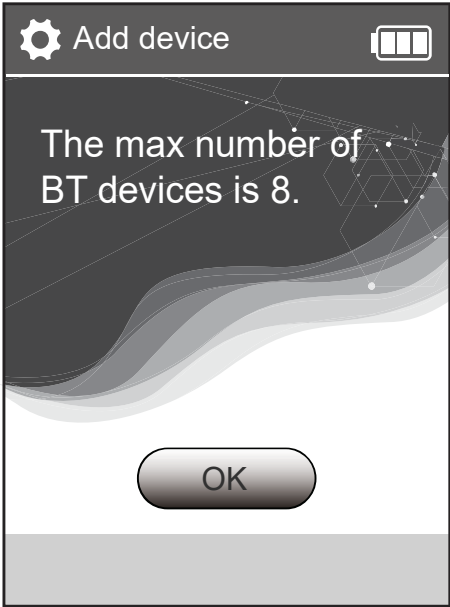 Error Screen Display	Action
5 	▪ This message is displayed when registering more than 8 Bluetooth devices that can be registered. Delete one or more Bluetooth devices and try pairing again.
	※ The maximum number of Bluetooth devices registered is 8.

20. Product Specifications

Model	UC100/UC200	UC500
IR	Infrared Rx/Tx	
Bluetooth	BLE 5.x	
USB	USB Type C	
Battery	Li-ion 2000 mAh	Li-ion 2600 mAh
Dimensions	115 x 54 x 17(mm)	204 x 54 x 31(mm)
Weight	100g	176g
COO	Republic of Korea	

21. Product Warranty

After-sales service processing regulations

In case of defects in performance and function of the product that occur during normal use of the product, free after-sales service is available only for 1 year from the date of purchase.

<Repair fee will be charged for breakdowns caused by customer negligence such as damage due to impact or submersion, etc.>

- Customer Center : AS@becsy.net

- Contact -

4F. S dong, Gangnam Paragon, 338, Hakdong- ro, Gangnam- gu,
Seoul, 06099 Republic of Korea

- www.becsy.net



The contents of the user manual are subject to change without notice to improve functions and performance.

<Ver.1.0>

▪ **Product Safety Guidelines**

※ **Read the safety instructions carefully before using this product.**

- Keep out of reach of children.
- Do not disassemble the product or replace parts yourself.
- Replacement of components (if not applicable) and parts may be carried out by an authorized dealer or service provider.
- Keep your device in a safe place. Don't place the product exposed to rain, moisture, or liquid.
- If the product is overheated, damaged by dropping, or dropped into liquid, stop using it and contact the after-sales service center.
- If smoke or strange smells occur, turn off the power and discontinue use.
- Lightning may break the charging cable connected to the product.
- Be careful when transporting the product. (Falling may cause injury.)
- Be careful not to expose it to direct sunlight.
- Be sure to use certified charging adapters.
- When charging the product with a USB cable, use a USB cable suitable for the product.
- Before maintenance and cleaning, unplug the product and wipe it with a dry or slightly wet clothes.
- Store away from volatile liquids such as pesticides.
- To maintain a long battery life, charge the battery at least once every 3 months.
- Do not insert sharp metal objects such as keys, hairpins, nails, etc.
- Do not put in dishwasher, oven or washing machine.

▪ Battery Safety Guidelines

※ For products with batteries, observe the following.

"CAUTION "

- Improper handling of the battery installed in the product may cause a fire or get burned chemically.
- Dispose of replaceable batteries after use according to regulations and, if possible, recycle them. Batteries may explode if damaged.
- Throwing it away as household waste or throwing it into the fire can explode.

Dispose of the product according to the regulations

Refer to additional instructions and more information at

www.becsy.net

▪ FCC

a. Rule Part 15.19(a)(3): This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

b. Rule Part 15.21: The users manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

▪ Product Approval Label

To check authentication information,
please visit the link below.

<https://www.becsy.co.kr/support.html>



UC100



UC200



UC500

BECSY