

For High Power Continuous Transmission Setting:

- 1. From the normal operating mode, press [MODE] button once to enter the channel selection menu. The CHAN indicator will begin to flash and the radio's current Channel will be shown.
- 2. Use the [UP] or [DOWN] buttons to select channel 4 while the CHAN indicator is flashing.
- 3. Then press [MODE] button 3 times to enter the HI/LOW POWER selection menu. The PO indicator will appear Lo/HI. Use the [UP] buttons to change the Output Power to HI.
- 4. Then press [MODE] button 2 more times to enter the VOX selection menu.
- 5. Use the [UP] buttons 1 time to change the VOX sensitive level to 1.
- 6. press the [PTT] button will be transmitted continuously.
- 7. To stop the continuous transmission, press and hold the [POWER] key 1 second.



For Low Power Continuous Transmission Setting:

- 1. From the normal operating mode, press [MODE] button once to enter the channel selection menu. The CHAN indicator will begin to flash and the radio's current Channel will be shown.
- 2. Use the [UP] or [DOWN] buttons to select channel 11 while the CHAN indicator is flashing.
- 3. Then press [MODE] button 3 times to enter the HI/LOW POWER selection menu. The PO indicator will appear Lo/HI. Use the [DOWN] buttons to change the Output Power to Lo.
- 4. Then press [MODE] button 2 more times to enter the VOX selection menu.
- 5. Use the [UP] buttons 1 time to change the VOX sensitive level to 1.
- 6. press the [PTT] button will be transmitted continuously.
- 7. To stop the continuous transmission, press and hold the [POWER] key 1 second.



Manufacturing tolerance

462.5500~462.7125MHz	
Target (dBm)	32.0
Tolerance ±(dB)	1.0
467.5625~467.7125MHz	
Target (dBm)	26.00
Tolerance ±(dB)	1.0