




Wave AP Gen2

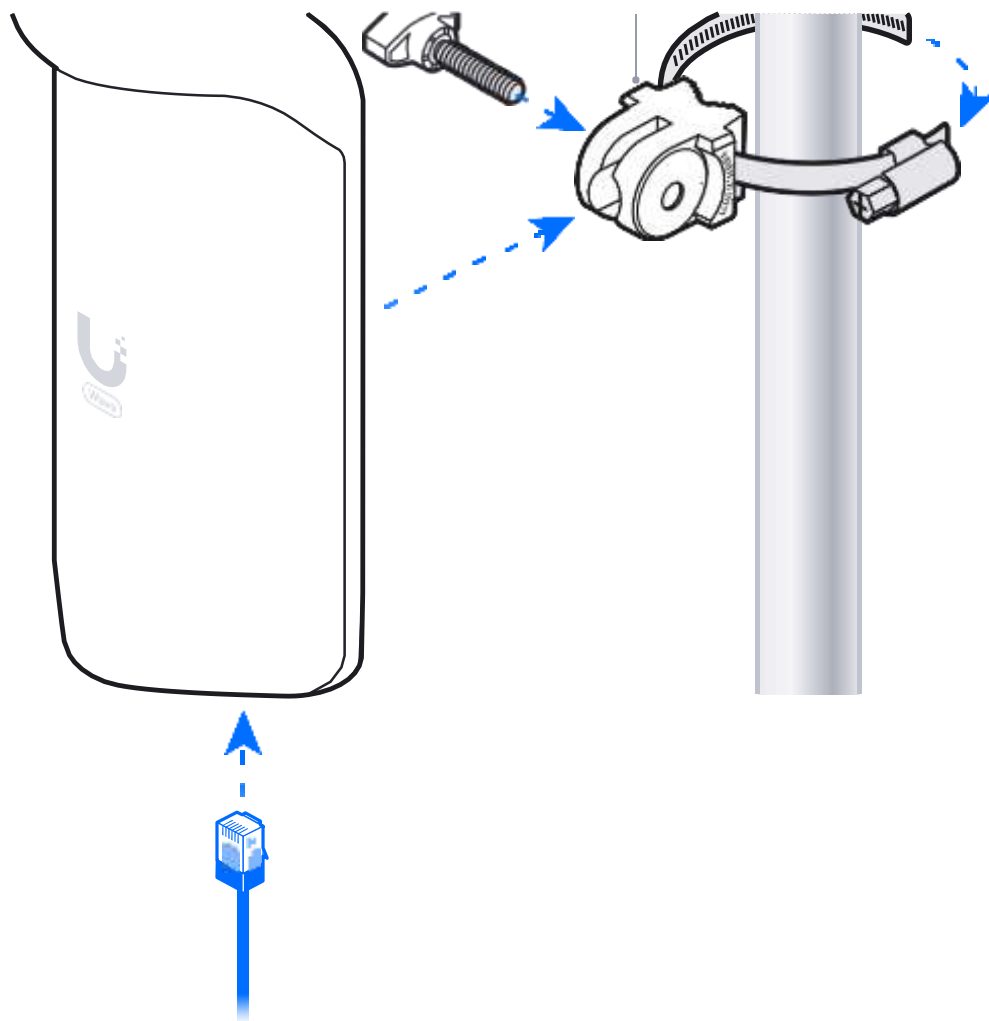


1



1x



1x

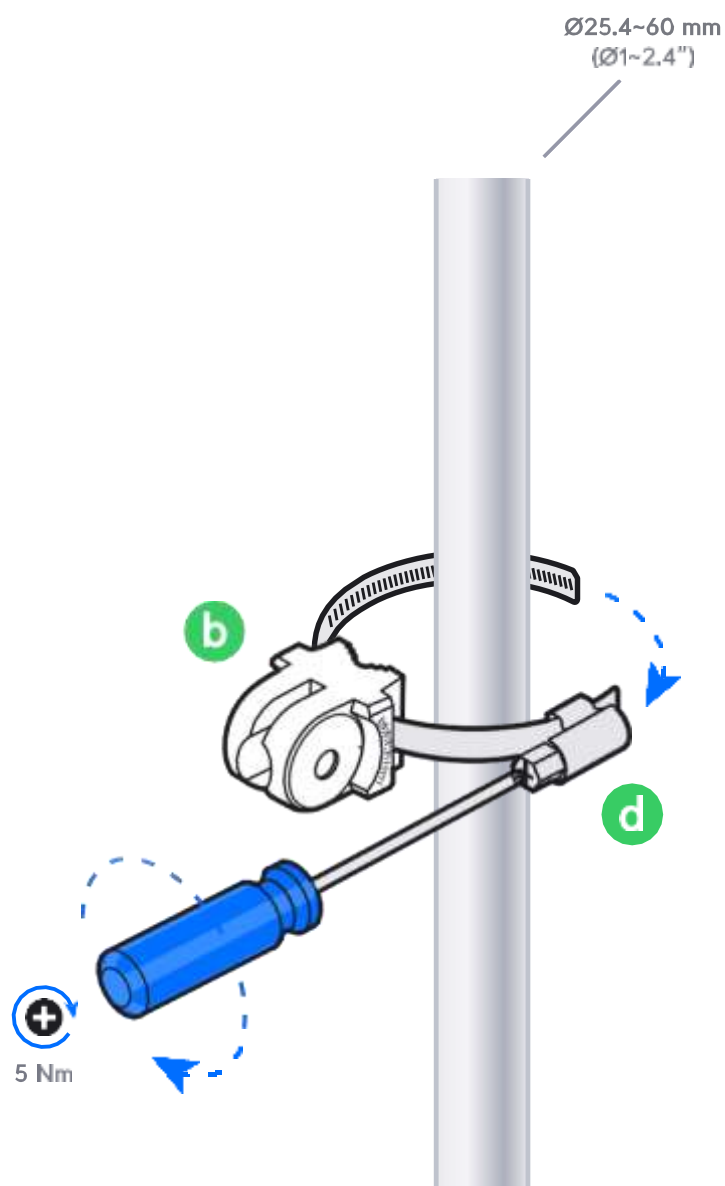



2



1x

a

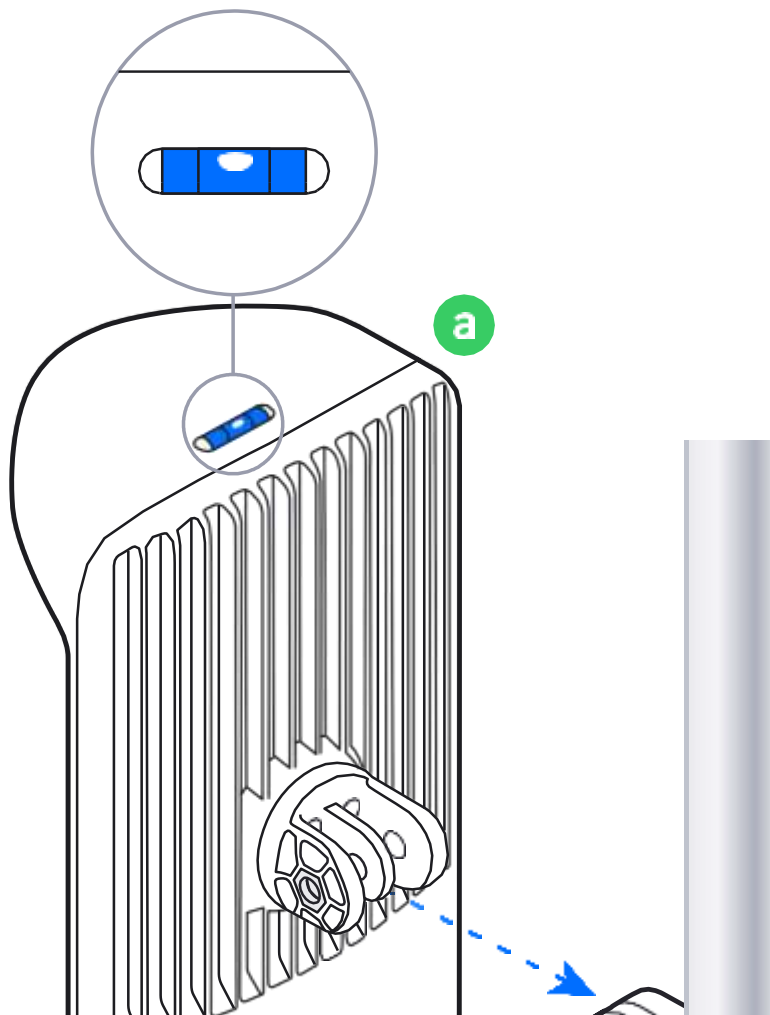


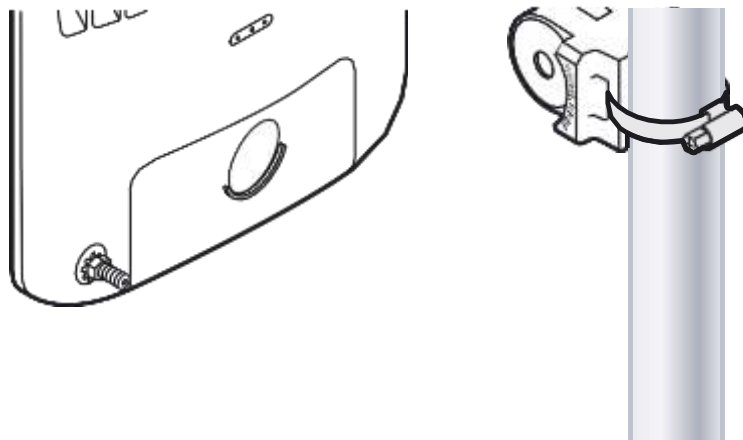


3



1x

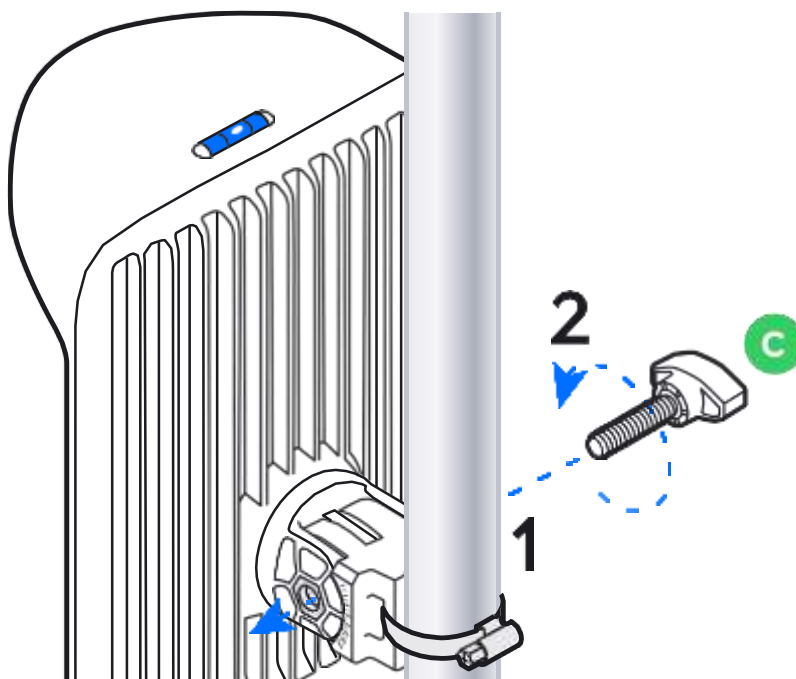


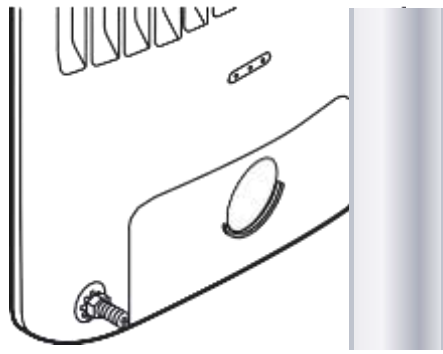


4








1x


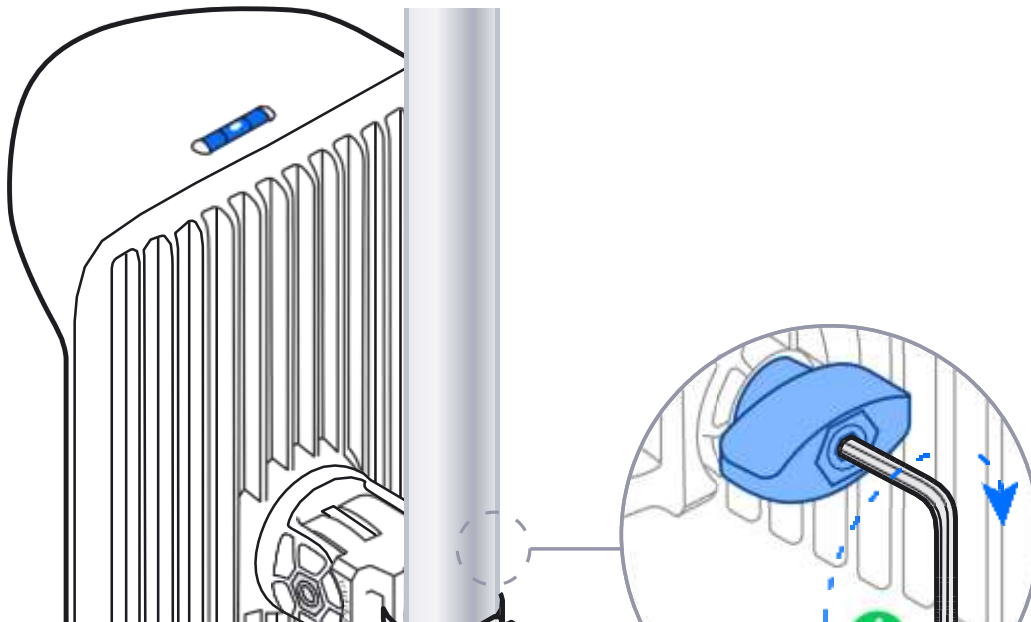


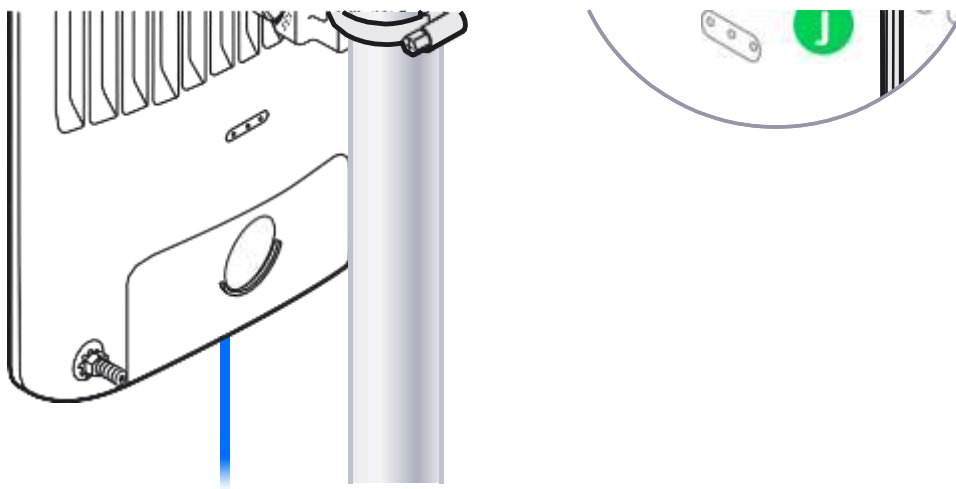

5

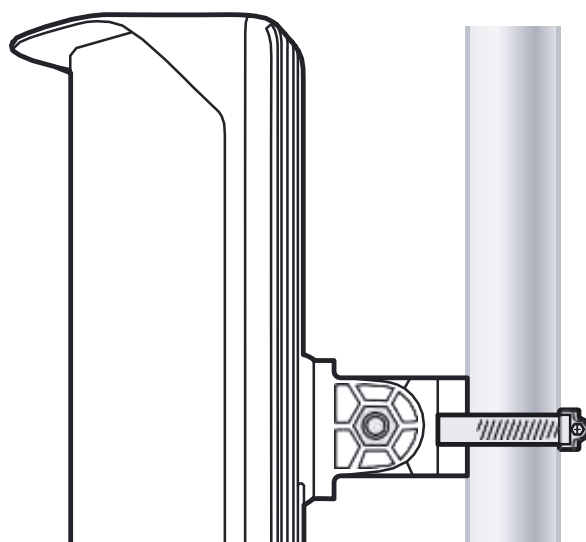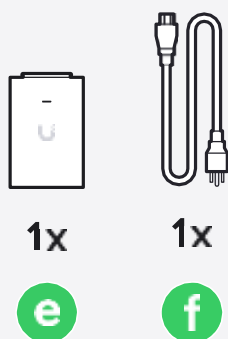

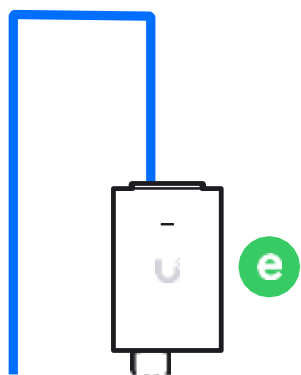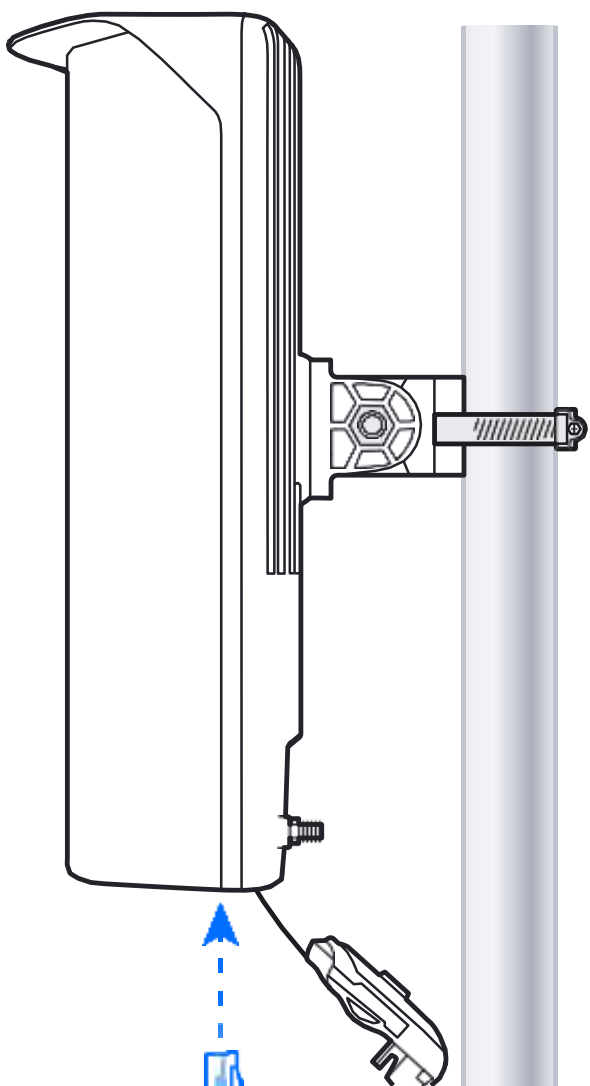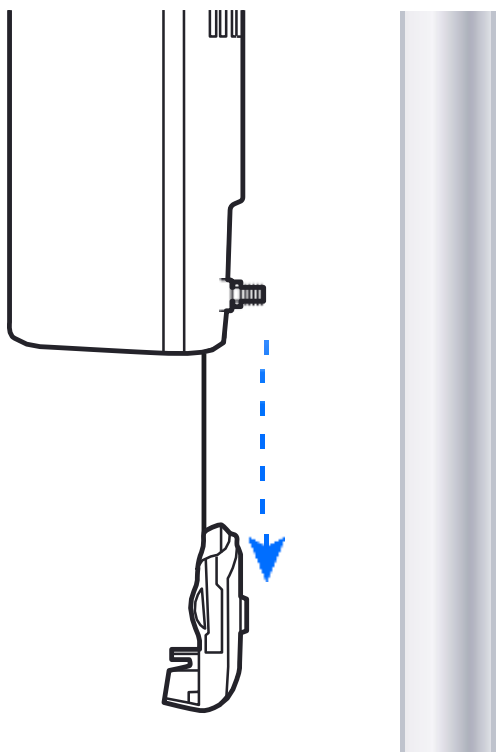

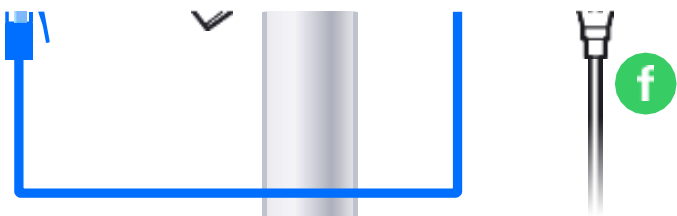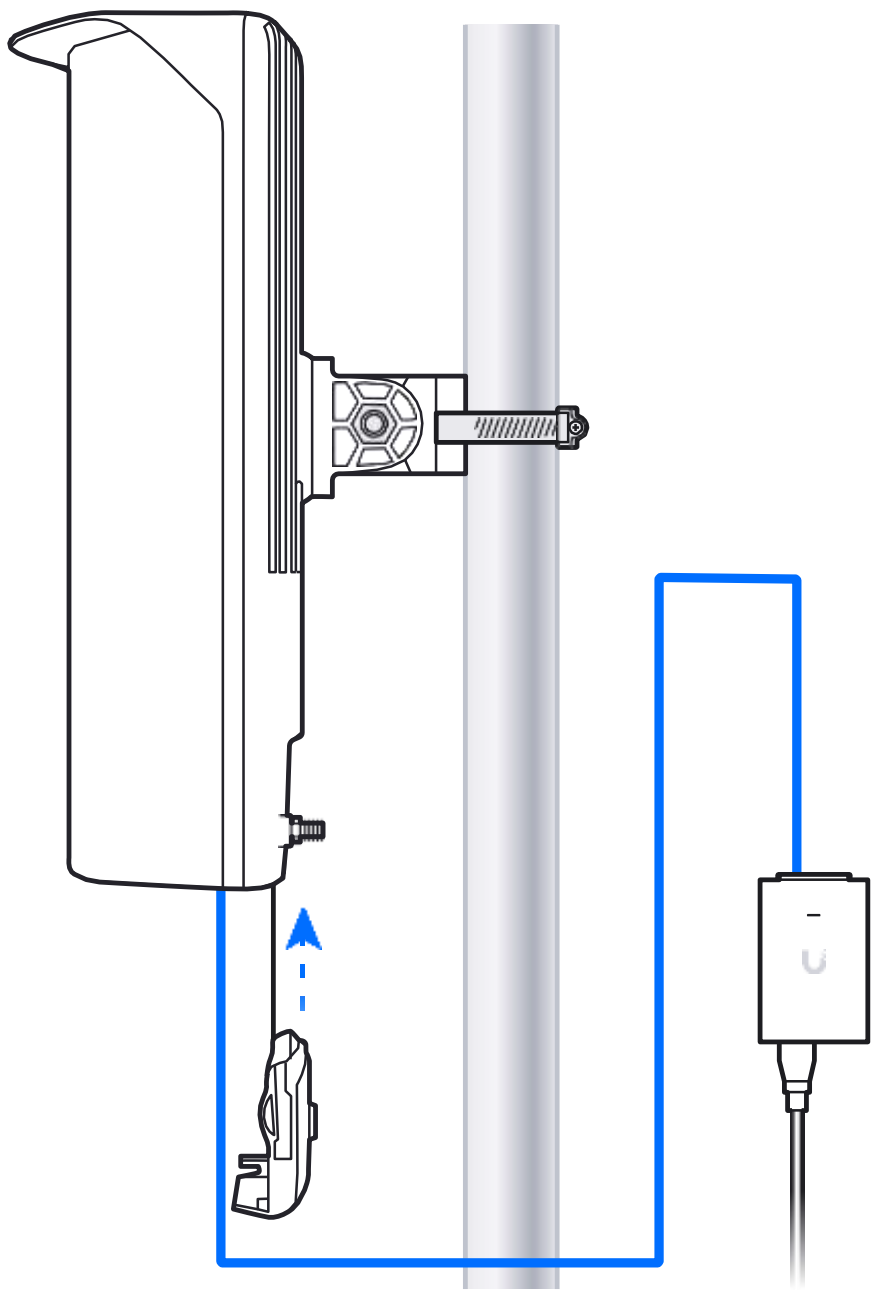







Internet



UISP Console

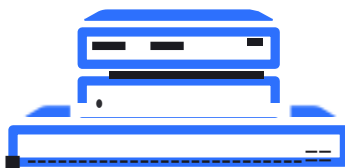

UISP Switching

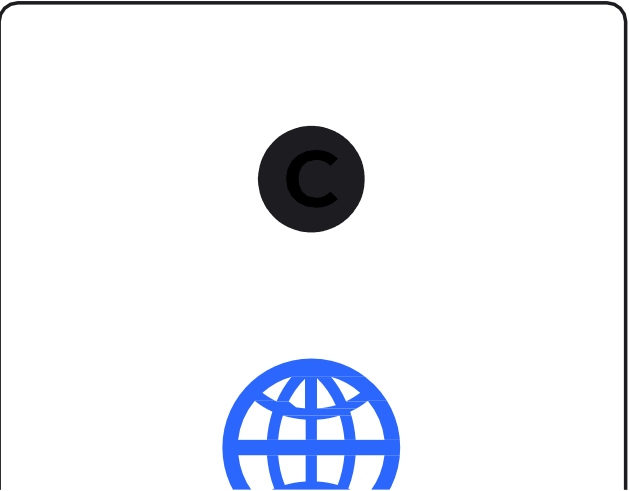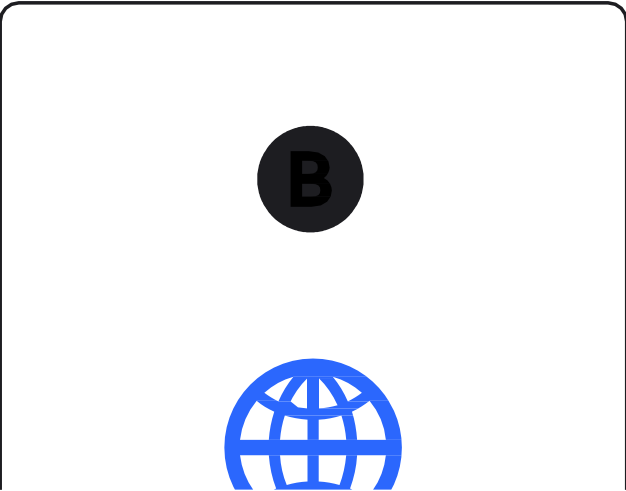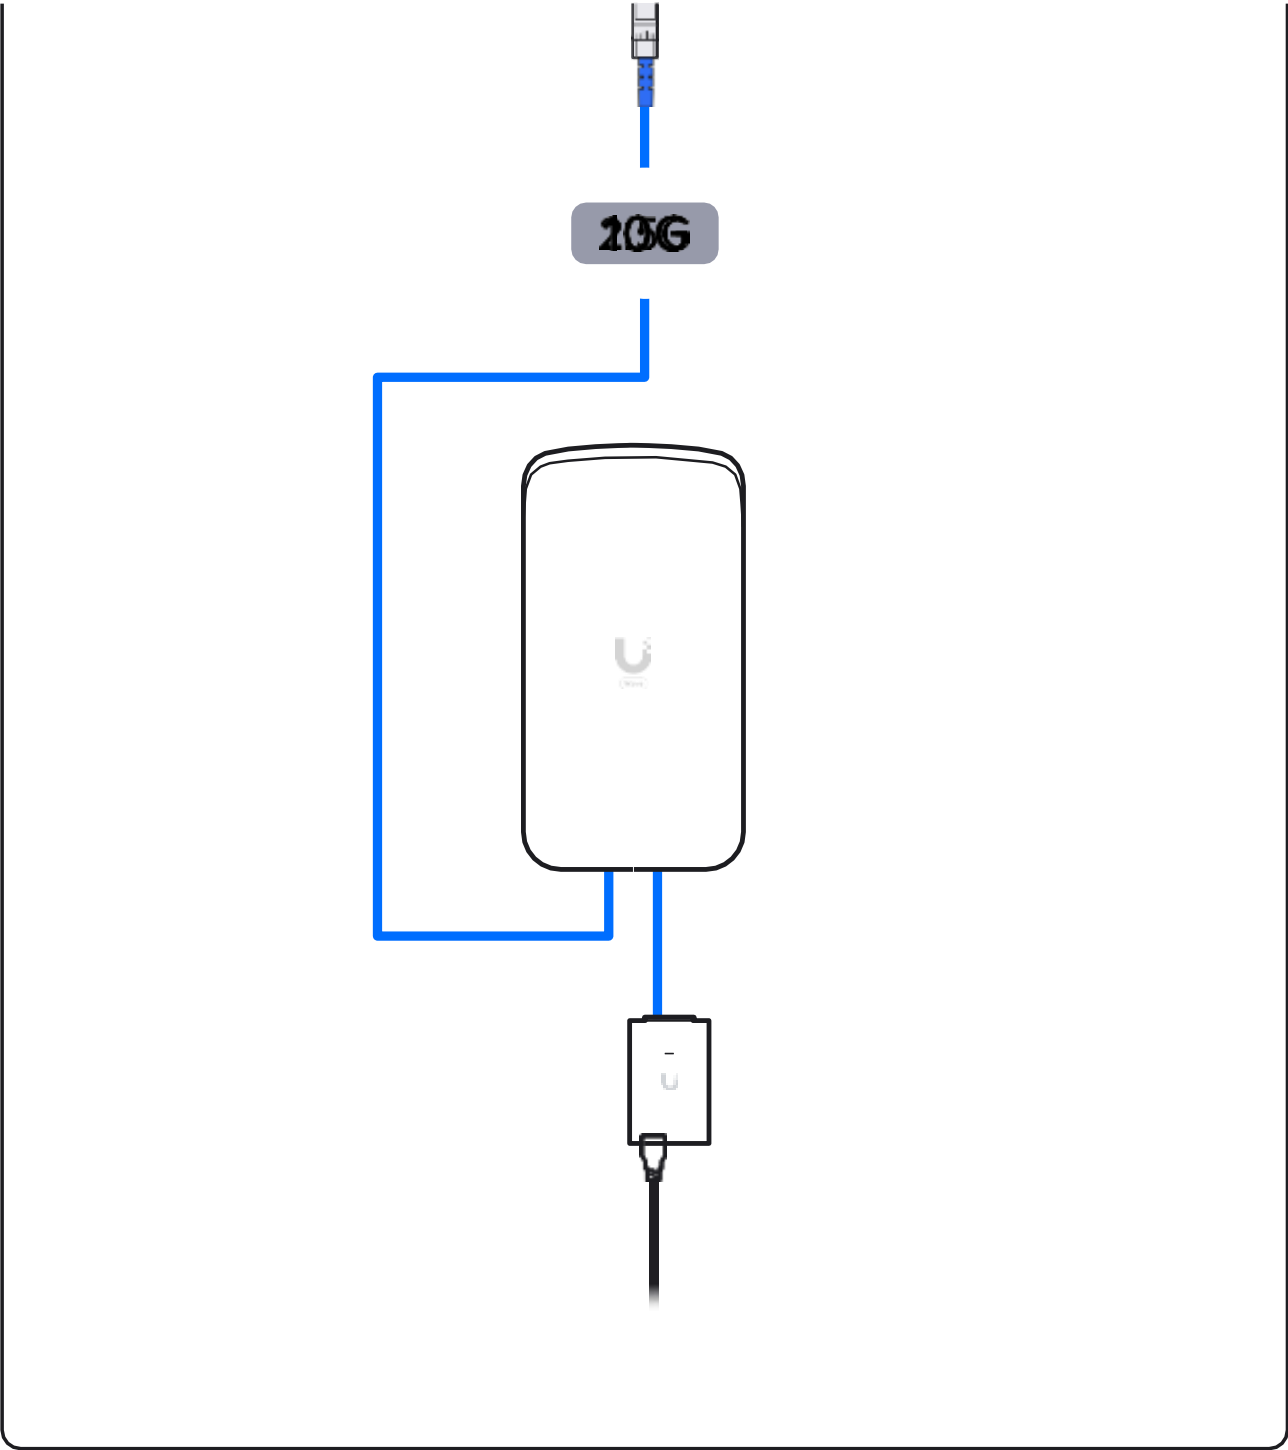




Internet



UISP Console

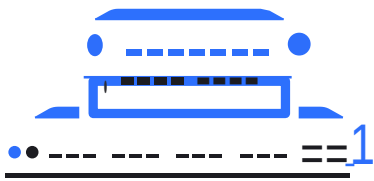

UISP Switching



Internet



UISP Console




UISP Switching




4-Pair PoE

2.SG



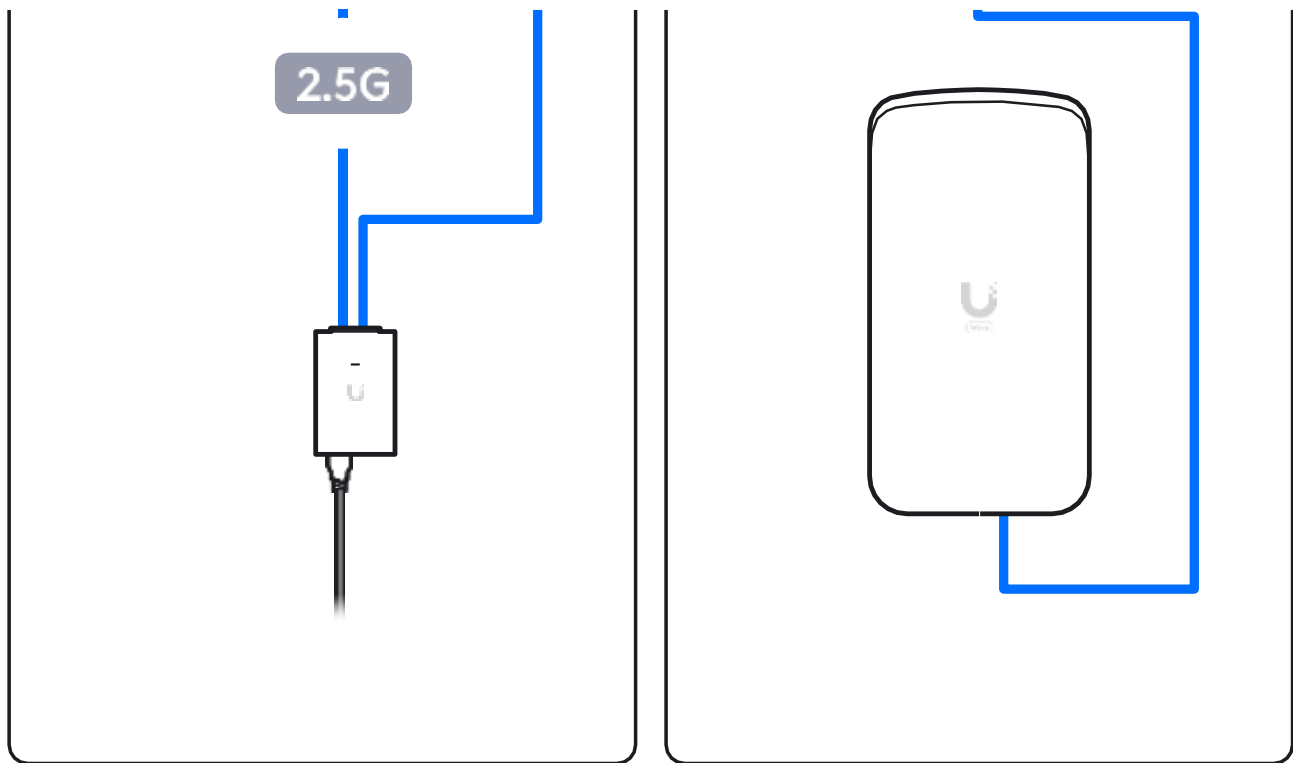

7

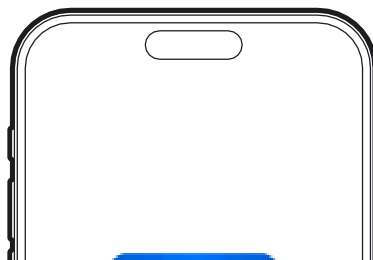

Installer will scan a QR Code that is in the equipment box. The QR Code sends them to a web page that looks like this.

Imbedded in the link(s) are the following two web sites for setup information.

Apple Link

<https://apps.apple.com/us/app/unifi-network/id1057750338>

Android Link


<https://play.google.com/store/apps/details?id=com.ubnt.easyunifi>




8




1x

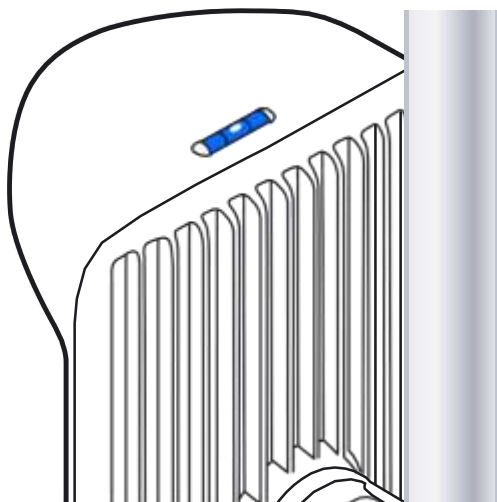


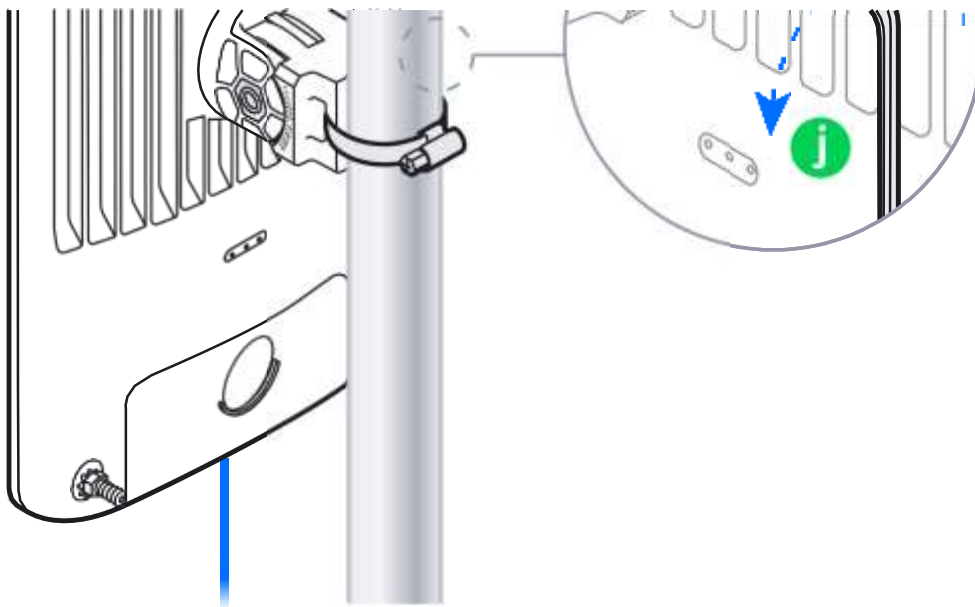


9

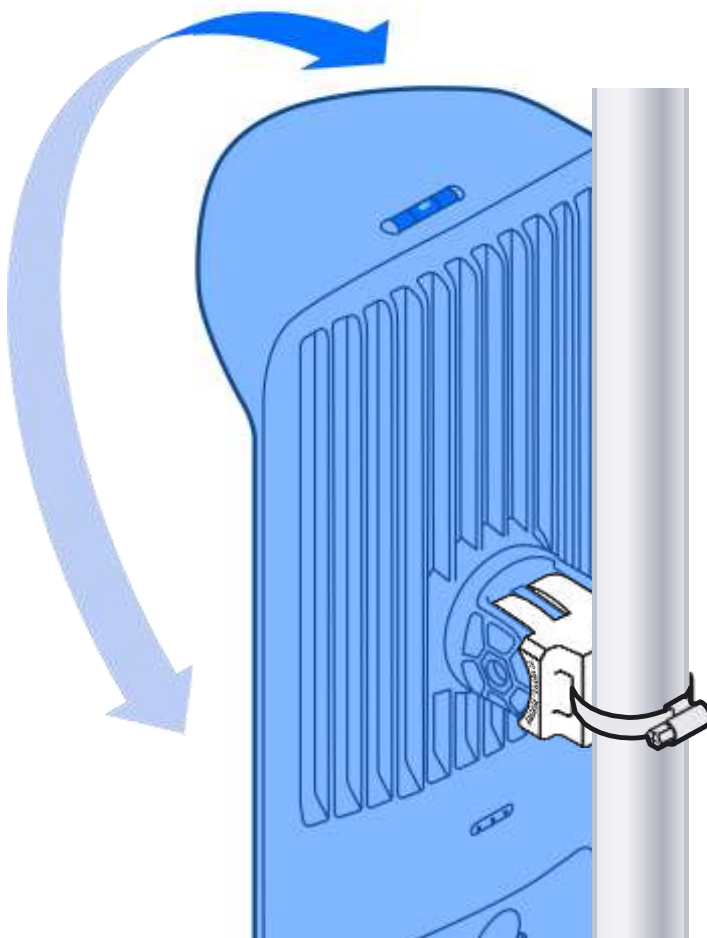


10

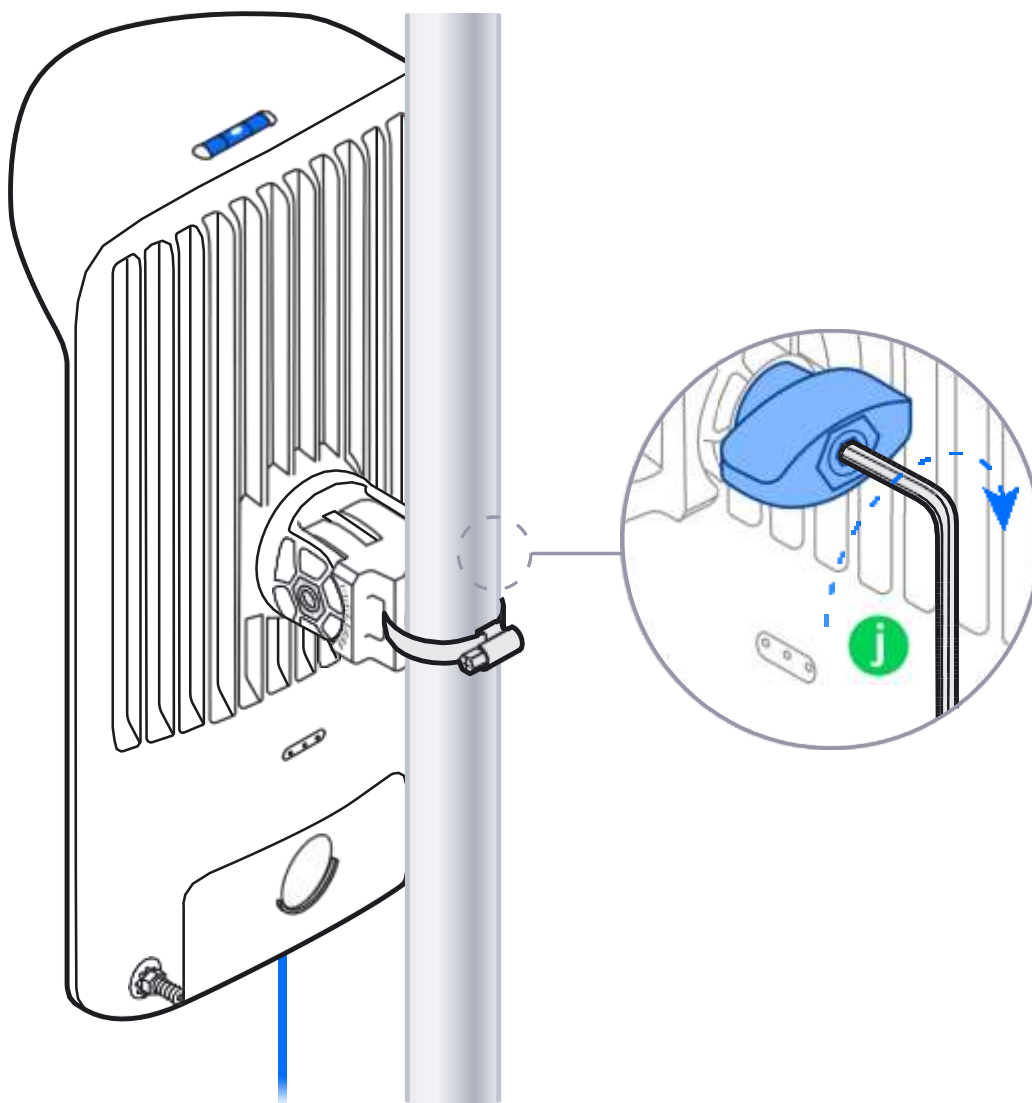

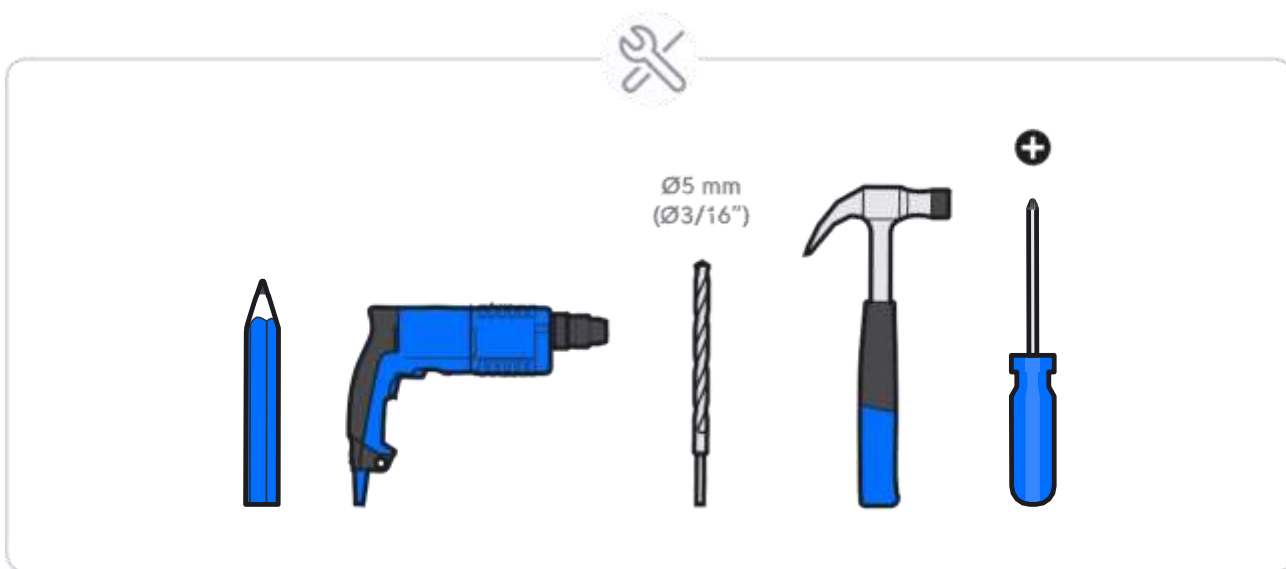


1

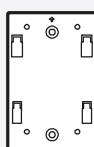




1x




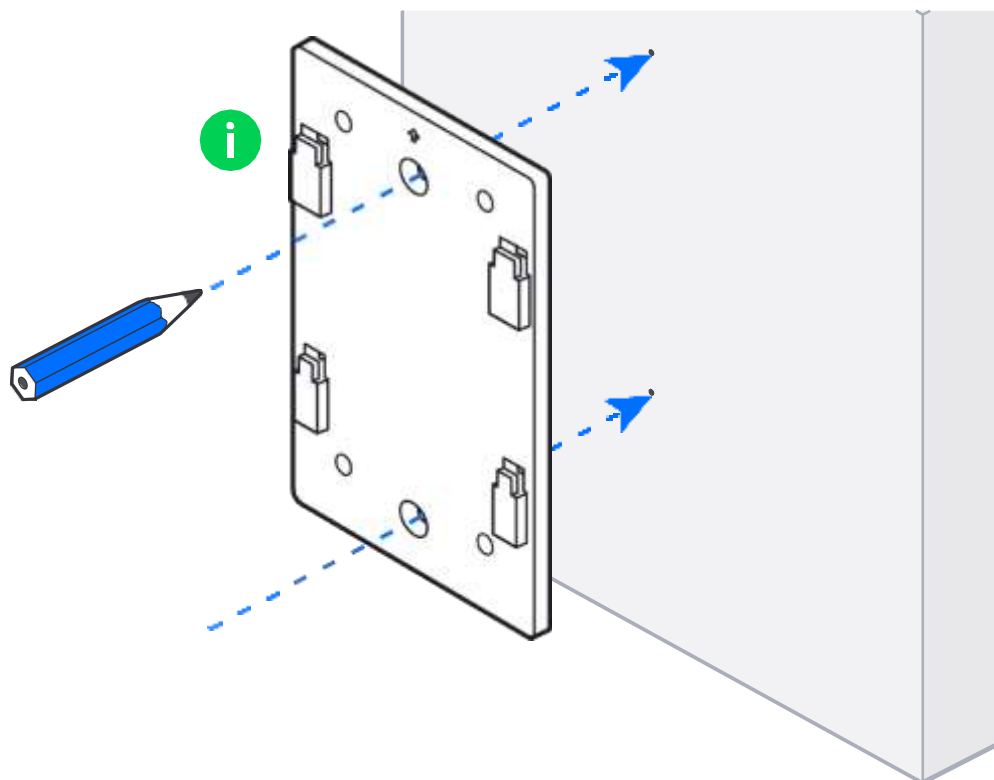



2

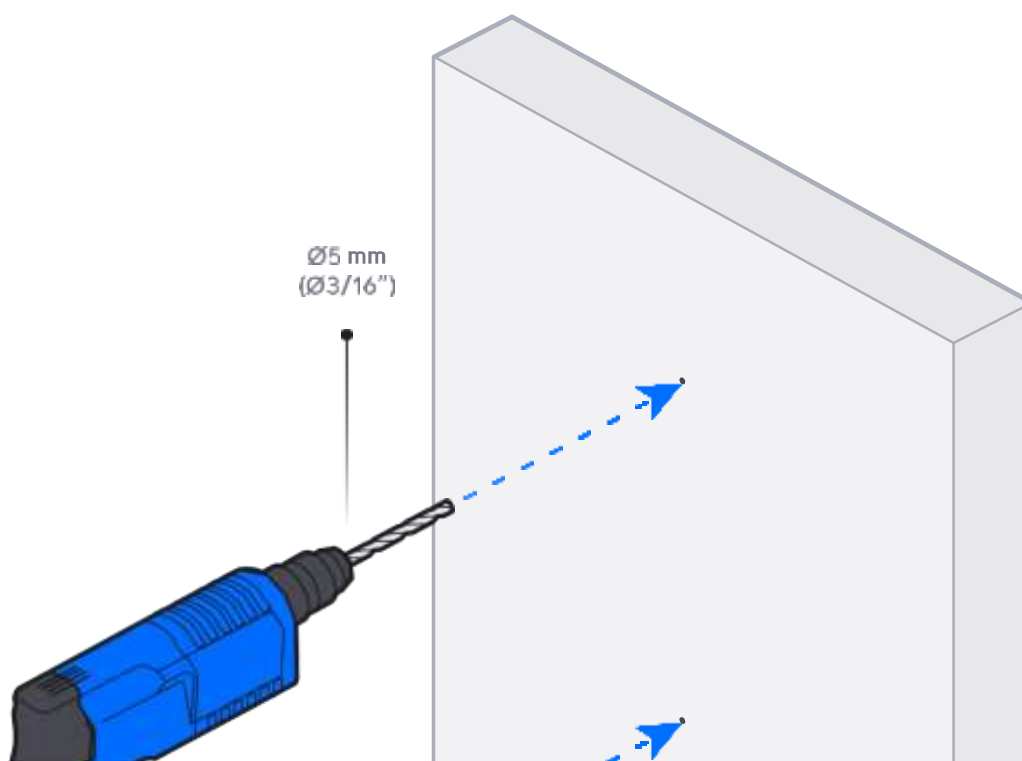

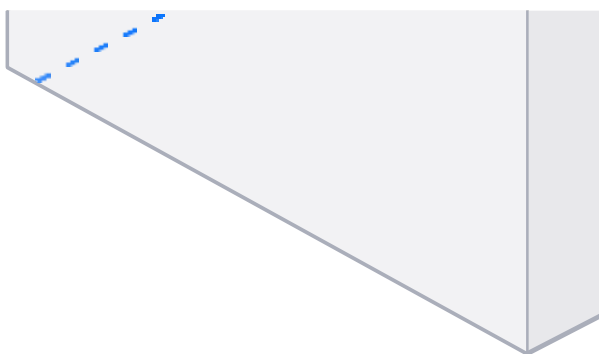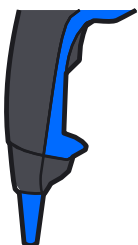

3

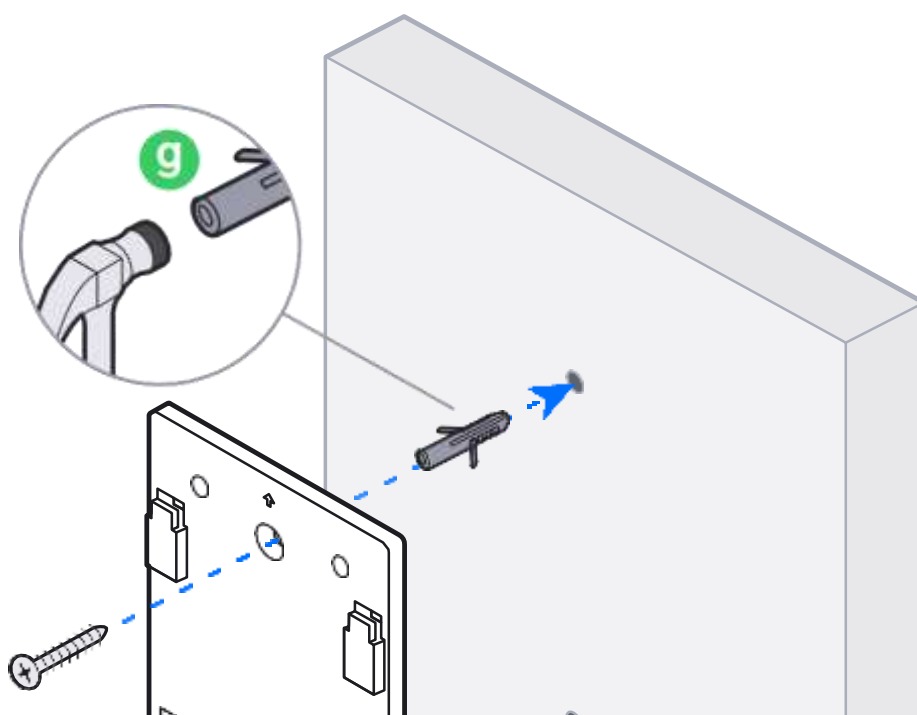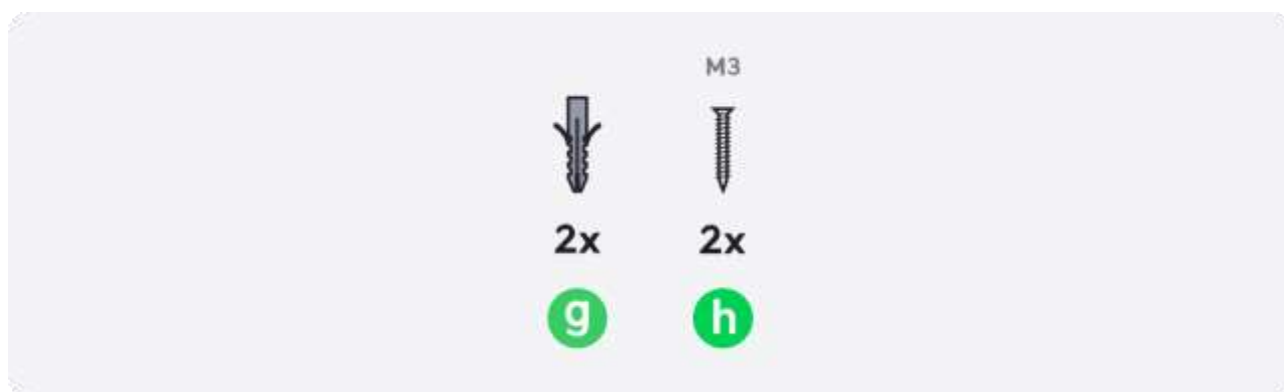

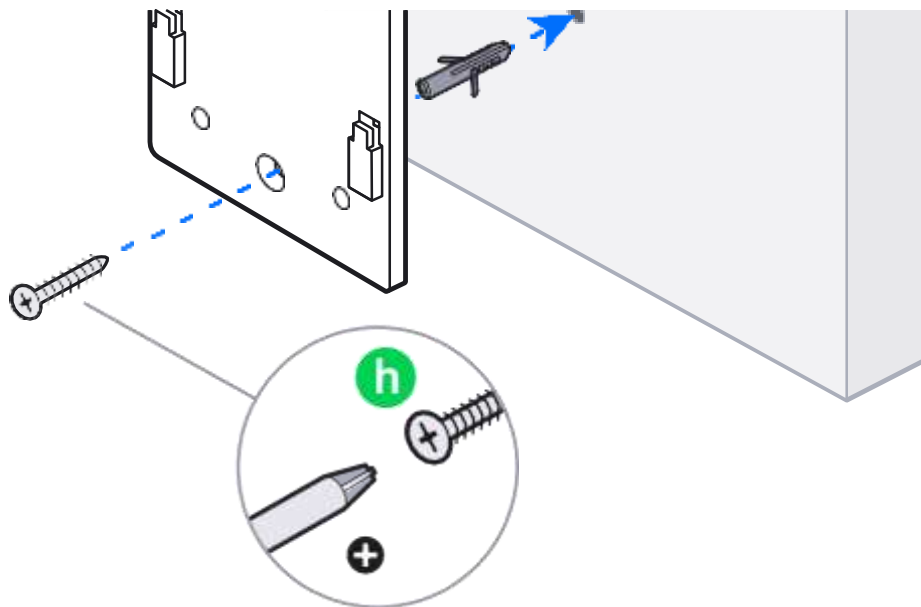


4




1x

e

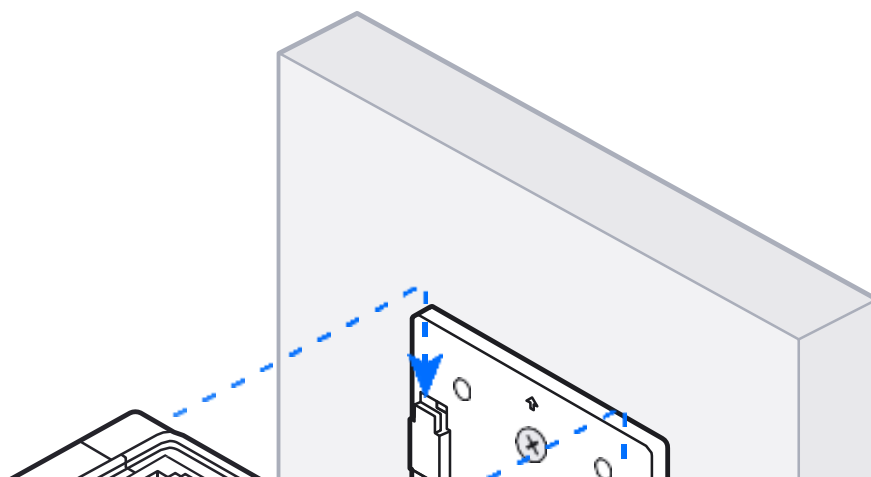

e

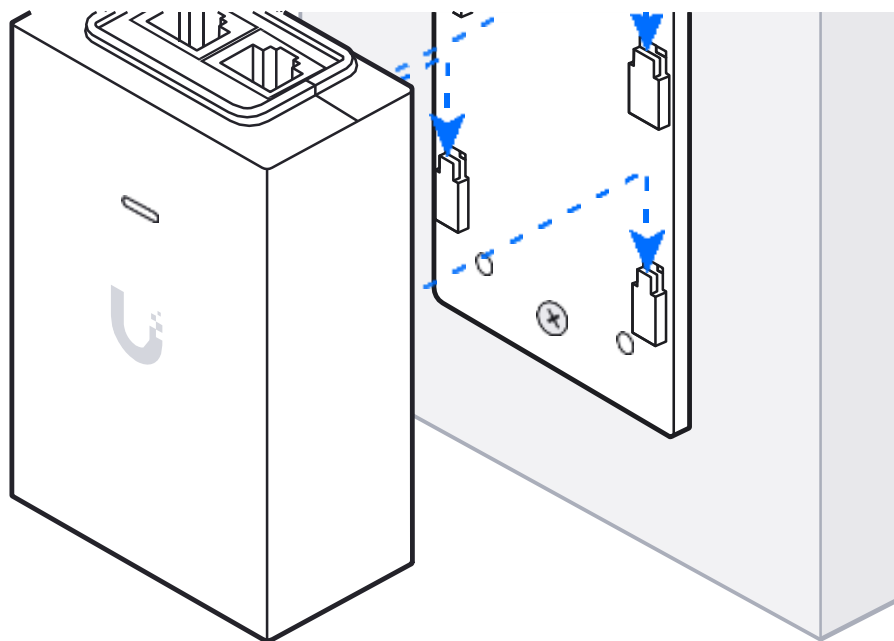


Grounding Wire





1



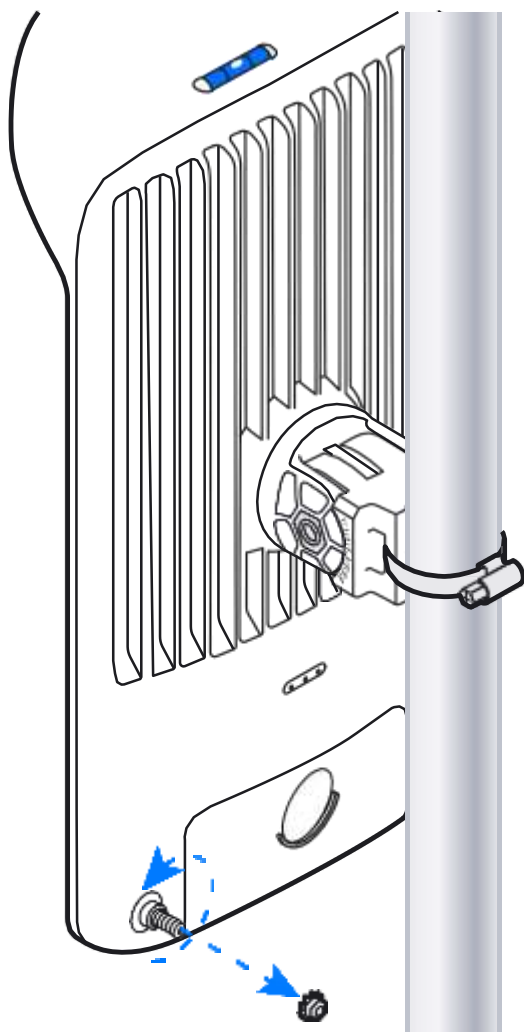

2

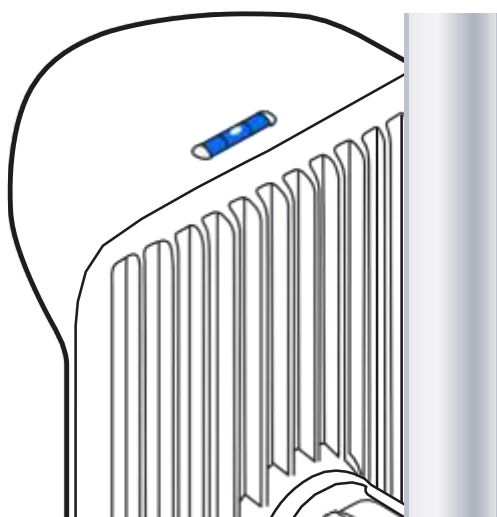


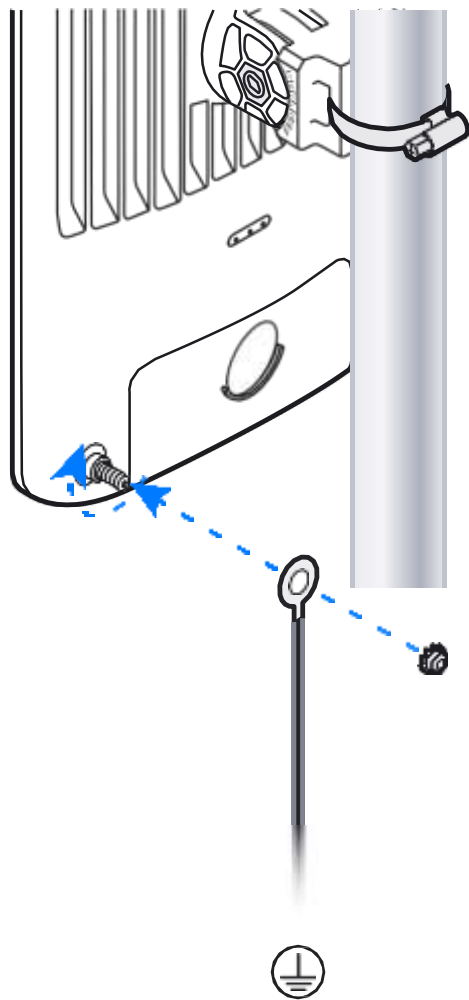


8 mm
(5/16")




1

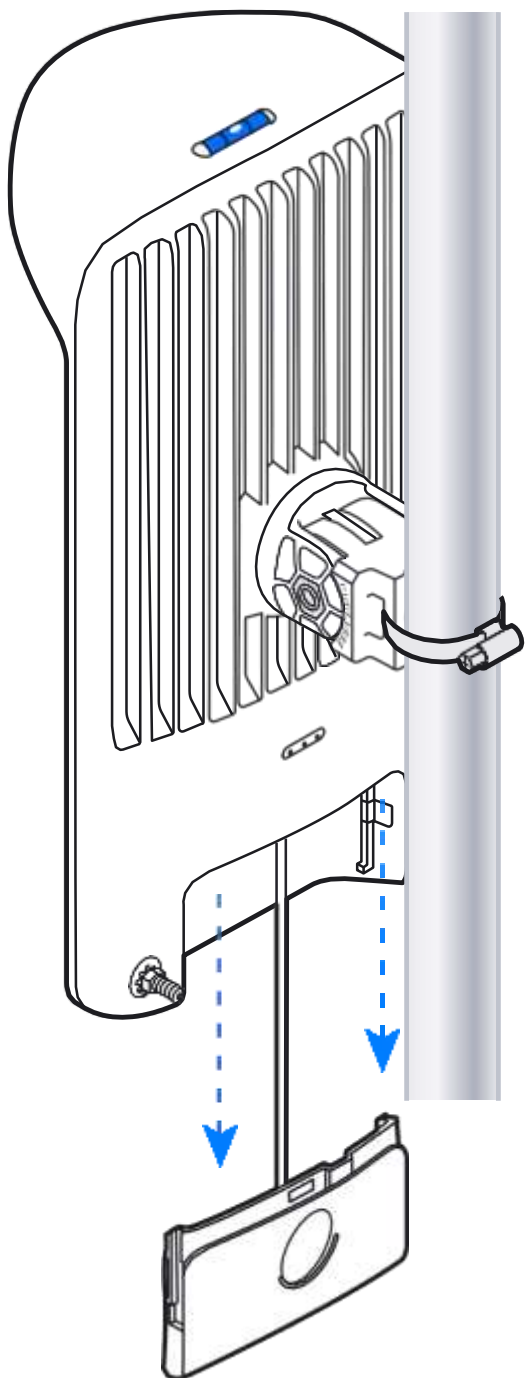


2

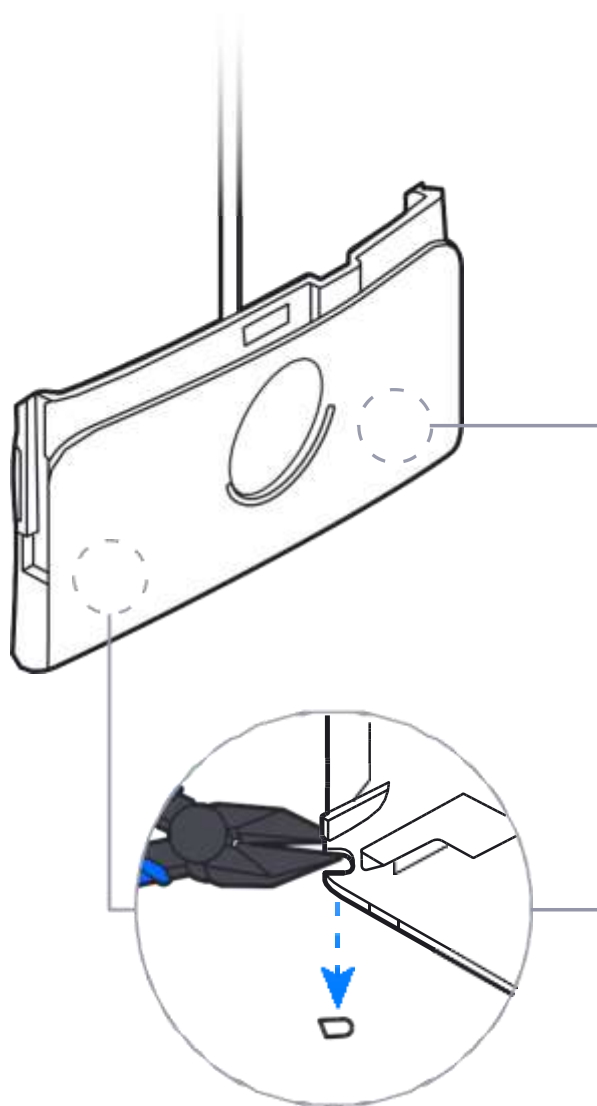



3

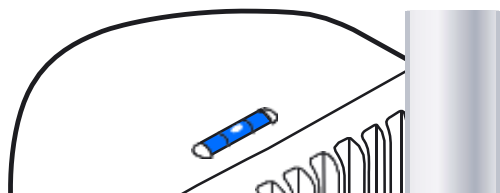

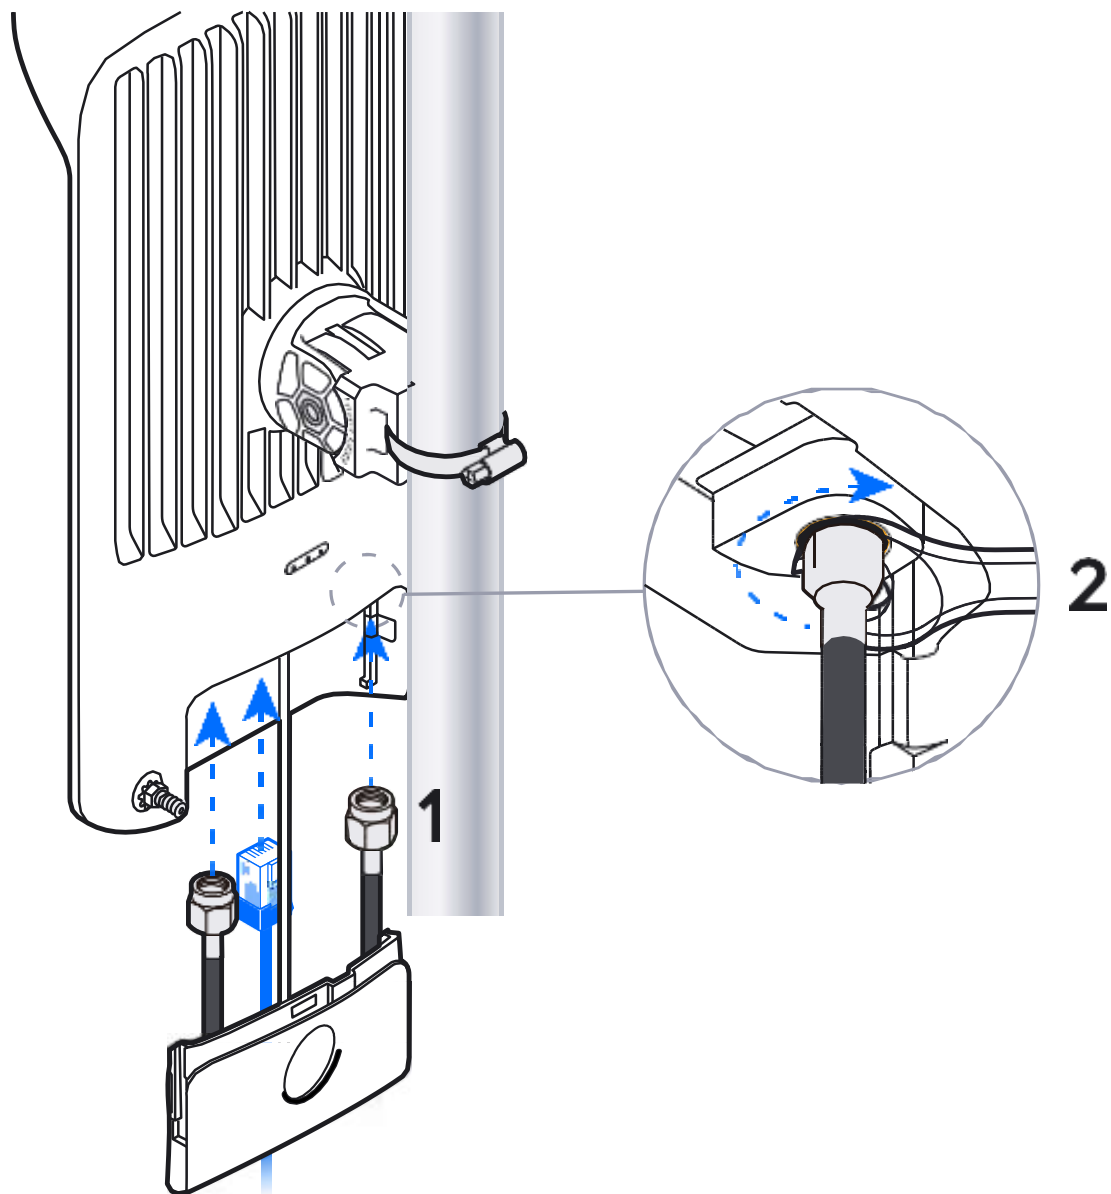

4

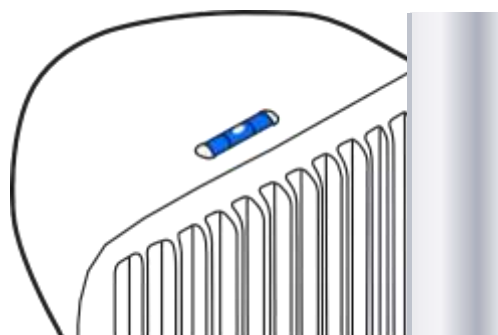

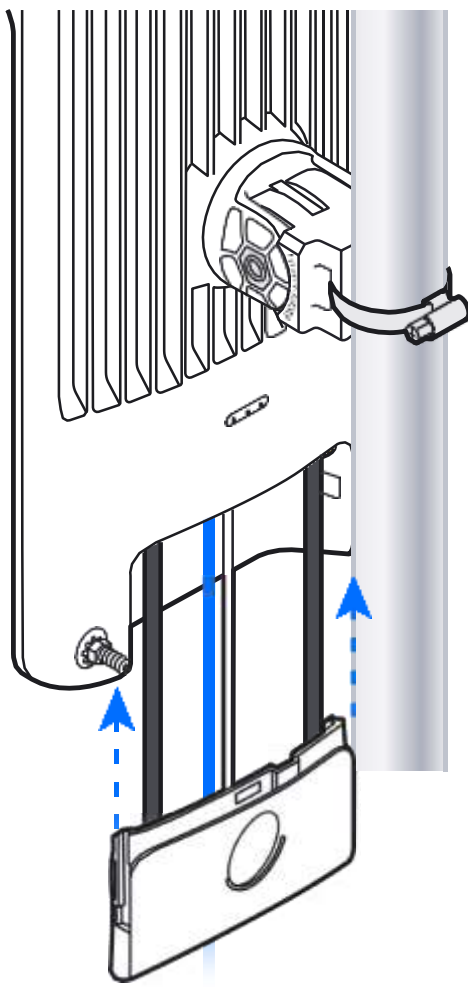

If you need further assistance, visit our [Help Center](#) or contact [Ubiquiti Support](#).

