

警告注意事项 (CAUTION)

- 本车年龄仅适应于14周岁以上
- 操控时请远离其它遥控设备、通信设备等干扰源，否则可能造成失控。
- 本遥控车在高速行驶时无法立即停稳，操控时敬请注意，以免造成意外。
- 本遥控车为完成品，对本产品自行改造、升级，更换配件所造成的事故，厂商概不负责。
- 在高速行驶时与其它障碍物产生直接或间接碰撞均可能造成零配件损坏。
- The Car is not for years under 14.
- Keep away from the other RC communication facility etc otherwise you may lose control of your model.
- Please pay attention the model can not stop immediately when driving. This may lead to accidents.
- The model is assembled and pre-adjusted in the factory.
- The manufacturer can't take responsibility for the accidents which caused by self-arrangement upgrade or changing parts.

适合专业赛场

It's better to operate in the professional racing area

禁止在能与水接触的环境操控遥控车，以免车子受潮造成故障。
Do not operate it under the areas with water it may lead to accidents.



禁止在对人、动物、车辆造成干扰的场所操控本车！


Do not operate the car under the areas where people animals and traffic will be bothered.



避免操控环境有相同频率的遥控设备或通讯设备，以免相互干扰造成失控。

Never share the same frequency with RC facility or communication facility. It may lead to accident!

(EXPLODED VIEW)

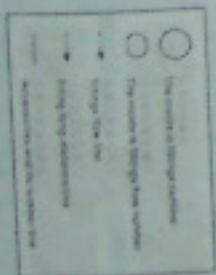

050/00002RF

遥控器的功能说明 MANUAL OF RADIO

功能概术 (SYSTEM)

- ① STEERING WHEEL
- ② REVERSE SWITCH
- ③ SWITCH (ON/OFF)
- ④ ST TRIM
- ⑤ TH TRIM
- ⑥ THE SOCKET OF THE CHARGER



- ⑧ 电源开关
- ⑨ 方向微调钮
- ⑩ 油门微调钮
- ⑪ 充电接口
- ⑫ 舵角限制钮
- ⑬ 油门选择
- ⑭ 电源电量指示灯
- ⑮ 天线
- ⑯ 方向轮
- ⑰ 正反控制开关


遥控器使用简要说明 (OPERATION)



旋转方向轮，控制驾驶方向。
What steering wheel control the driving dir.



- ① 电源开关
- ② 方向微调钮
- ③ 油门微调钮
- ④ 充电接口
- ⑤ 舵角限制钮
- ⑥ 油门选择
- ⑦ 电源电量指示灯
- ⑧ 天线
- ⑨ 方向轮
- ⑩ 正反控制开关

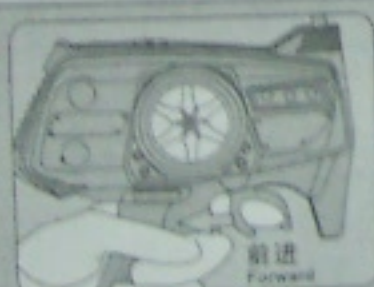

前进
Forward


往油门方向拉动油门杆，按油门杆侧面的按钮，用于加速油门。



1

刹车

往油门方向拉动油门杆，第一档油门杆侧面的按钮为油门杆侧面的按钮，用于减速。

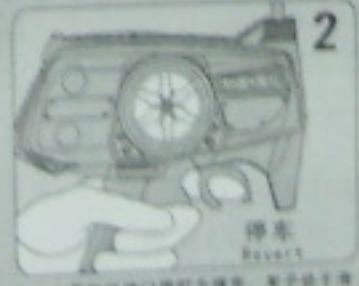

2

倒车

Reverse

往油门方向拉动油门杆，第二档油门杆侧面的按钮为油门杆侧面的按钮，用于加速油门。




3

退车


Reverse

再次拉动油门杆时油门杆，油门杆侧面的按钮为油门杆侧面的按钮，用于加速油门。

遥控器电池及天线的安装 (OPERATION OF BATTERY AND TRANSMITTER ANTENNA)

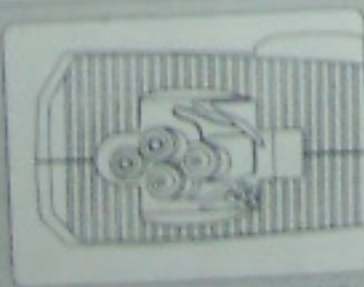

将图中所示的电池插入遥控器电池盒。

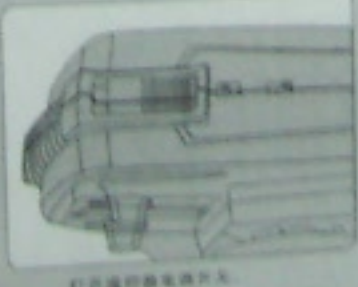

打开遥控器电池开关。



将天线插入遥控器天线接口。




将天线插入遥控器天线接口，并拧紧。

050100002RF


遥控器的功能使用及遥控车的调试 (OPERATION OF RADIO AND CAR)

遥控车组件安装与调试 ASSEMBLY AND OPERATION


BATTERY ASSEMBLY

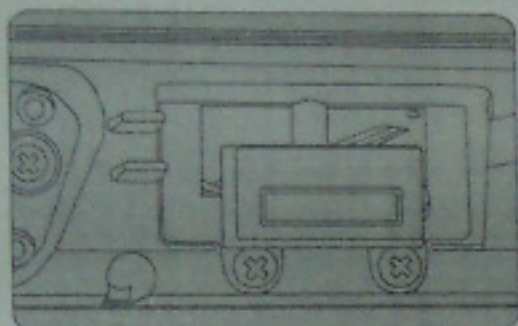

将遥控车电源开关置于OFF状态。

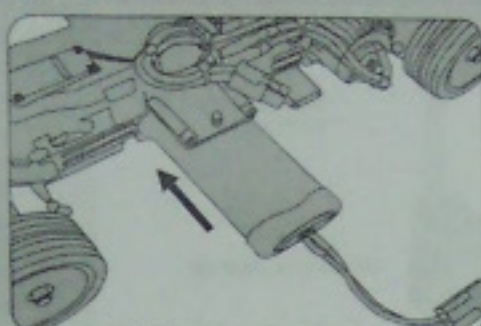



按照箭头所指示方向装入动力电池。

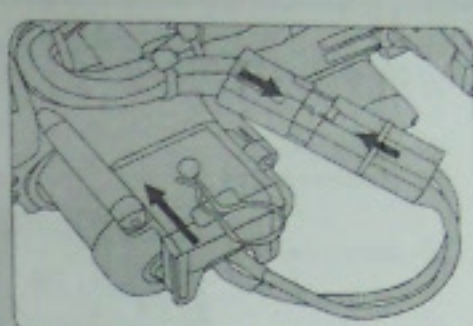


按照箭头所指示方向装好电池盖固定，连接好动力电池接头。

Transmitter Antenna Assembly

将接收天线箭头指示穿入套管中，然后将其竖起插于天线固定孔中。

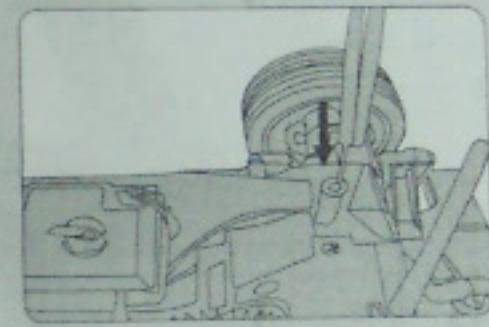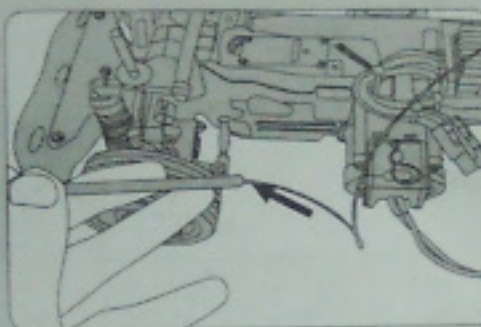

遥控车的调试操作流程 OPERATION PROCESSES

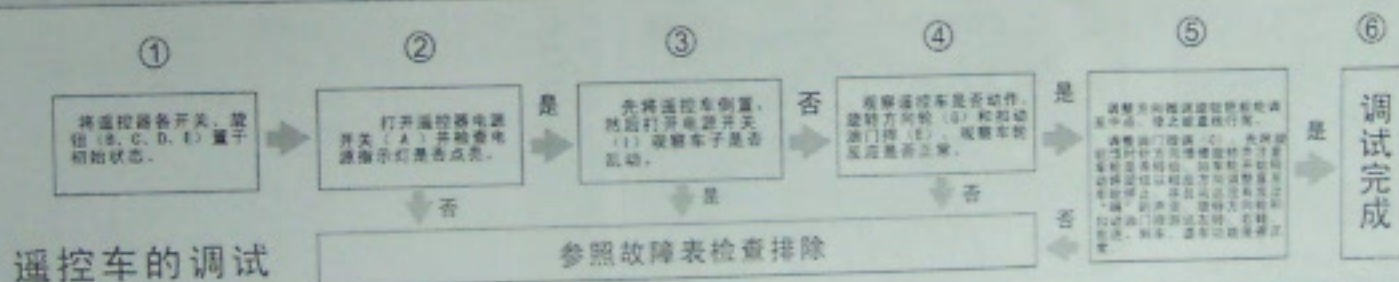

遥控车的调试

参照故障表检查排除

前轮束角调整

FRONT WHEEL LINKAGE ADJUSTMENT

按图2箭头所示，用小板手旋动六角螺栓可使前轮束角。

前轮内束角可使车子跑得又稳又快，但其缺点是弯道性能不佳。所以适合直道竞速。



前轮外束角可主要体现在弯道的可操控性，但其缺点是直道表现不佳。适合“肠道型”赛场竞技。

ASPI.2 Shavs screw hex.bott with to constriet the front wheels wrench

Constnit the insi olese tfvont whtds,the car can run sbeadly amd quicklhtc no better cameer.


Conotriect the outciole of front wheels,the sitnatin is in verse,ketter camber,net good dineet-run

①

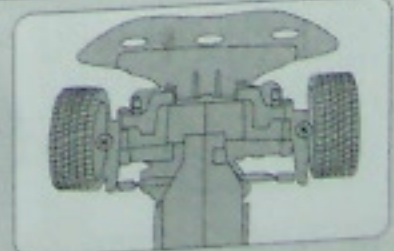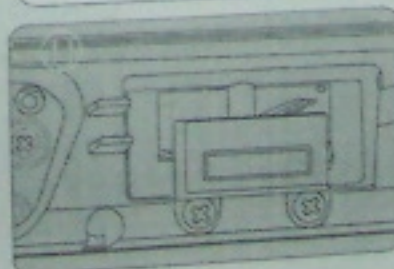

050100002PF


驾驶练习及保养

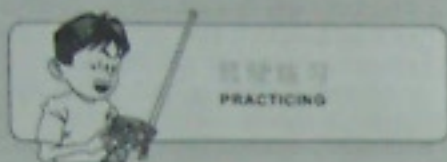

必须先选择较宽阔的场地操控，避免在短距离内连续进退及长时间低速运转，以免对车体零部件及遥控设备造成损伤。
Operate the car in open areas, other it the parts & radio will be scathing if operating long time for low speeding runing and control from a distance and retreat in limited arems.

打开通 打开通 练习 关闭通 关闭通
控开关 控车开关 控车开关 控车开关 控车开关

打开关闭遥控车时，请按以上流程操作。

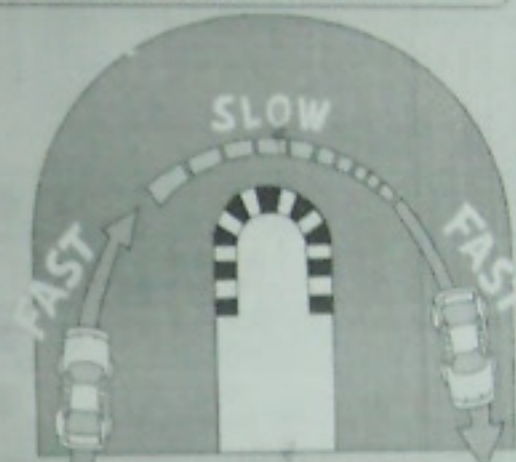

练习操控时以一定的参照物绕出“0”或“8”字型路线。
run "0" or "8" route

180度转弯技巧：在进入弯道时开始刹车减速，进入弯道顶点后开始加速。
180° swerveskiu brake to slowdown when the car runs on crooked road, and speedup when goes to the top of crooked moor.

遥控车的保养

Maintain



在不使用遥控车时请把动力电池从车上取下。
Make sure to disconnect/remce all bateries.



请用纯棉软布擦拭车身所付有的尘土，并检查车体部件是否受损，及时加以修理。
Completely remove sand, mud, dirt etc.

存放前机械滑动部分及金属部件用润滑油加以润滑，以防生锈。

Apply grease to suspension, gears, bearings, etc



保养工作完成后请将遥控车放置于干燥处，并与电池分开存放。
Store the car and batteries separately when not in use.



长时间存放后需重新检查调试！

长时间存放后重新启用时请按照右图标注点（●）检查各部件并加注润滑油后再按初使用时方法加以调试。



遥控车操控前的准备工作 (BEFORE YOU START)

动力电池的充电

海博星动力电池必需使用海博星专用充电器

使用专用充电器对动力电池进行充电。大约需要5小时左右。充电后电池须静置1小时方可使用，以发挥电池最佳性能。



CHARGE


Specail dynamic BAttery must be charged by adaptor

The charge twi is aboid 5hovrs. Using it after an hour fullchowge the battery nwe the best efficioney

R/C 零件连接图


RC G11 1015 1015

LM406FB-RD一体化
微电脑比例调速电子驱动器
Efedromc Speed Contret

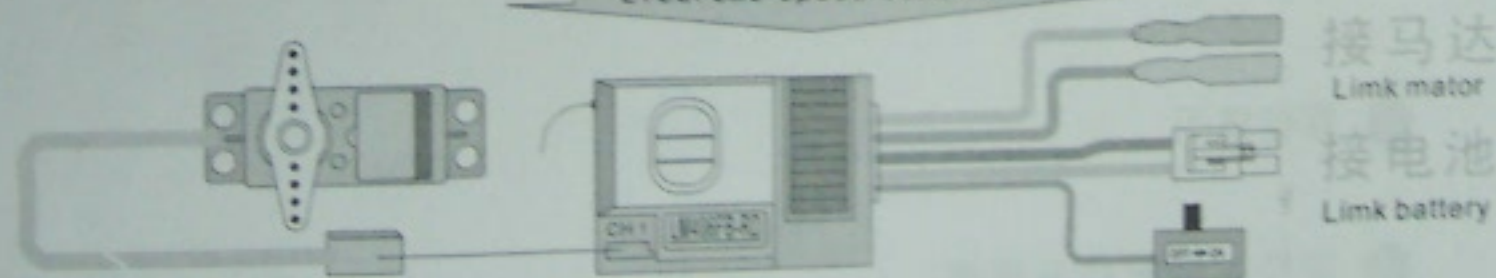

LM406FB微电脑
比例调速电子驱动器
Efedromc Speed Contret

DR-R102-06
AM数字比例接收机

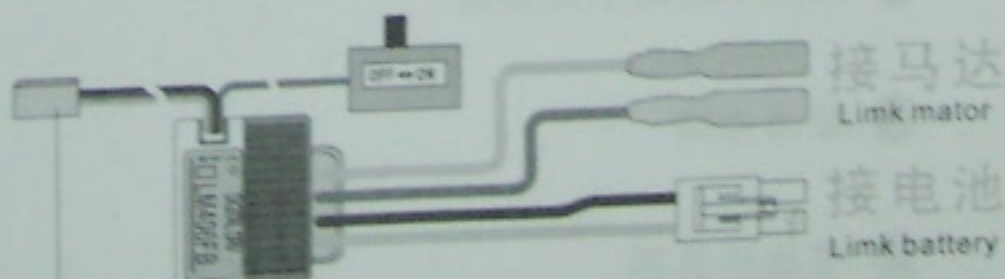

SERVO3200

故障检索对照表 (TROUBLE SHOTING)

故障检索 TROUBLE LIST			故障现象 PROBLEMS										处理方法 SHOOTING.	
			电量指示灯不亮 Electricity not	时常不动 Not move	控制距离不够 control distance	不能退车 No go base	马达不动 Motor no taeou	舵机响应迟钝 Sowness	舵机反应不正常 Abnormality	马达转动时抖动 Comnot work properly	功能混乱 Function confusim	没有反应 No responses		
故障原因 CANSE														
遥控器 Telecontrol	电池 Battery	电量耗尽 Electricity exhaust	●	●	●				●	●	●	●	●	更换电池 Replacng new battery
		极性装反 Polarity roversed	●									●	●	重新安装 RE-assemble
		接触不良 Contact bad	●	●					●		●	●	●	弹簧变形或氧化。修正清理 Spring ro benchng or xidatre amend it ar clear it
	天线 Antenna	松脱 Loose ord emer sion		●						●	●		●	重新旋紧 Tighteh it
		没有完全拉出 Hior lakeout compitody		●	●					●	●			全部拉出 Take out
	晶振 Crystal	松脱 Loose ord emer sion		●							●	●	●	重新插入 RE-Insert
		不同频段 Differ frequency					●				●	●	●	重新配对 RE-match
	微调 Spinner	类型不同 Differ types					●				●	●	●	确认类型 (AM或FM) Coofrim type
		参数被调乱 Disorder parameter				●					●			重新调整 RE-adjust
	接收机 Receiver	电池 Battery	电量耗尽 Electricity exhaust		●			●	●	●		●	●	●
接触不良 Contact bad				●			●				●	●	●	整理触点 Oheck contaot point
天线 Antenna		靠近其他导线或马达 Near other lead or rootor		●	●				●	●	●			绕开其他导线远离马达 Keep away from the lead amrtoo
		被剪短		●	●	●				●	●			送修 Send to maintain
晶振 Crystal		松脱 Loose ord emer sion		●					●		●	●	●	重新插入 RE-Insert
		不同频段 Differ frequency					●				●	●	●	重新配对 RE-match
		类型不同 Differ types					●				●	●	●	确认类型 (AM或FM) Coofrim type
连接插头 Joint pin		插入方向错误 Wrong intervene direction					●		●			●	●	重新正确安装 RE-assemble
		松脱 Loose ord emer sion					●	●					●	重新插入 RE-Insert
舵机 Speed control		有声音但不动作 With sound butno action							●					更换或送修 Chanfe ot mom toln
	卡死或松脱 Lock or loose							●	●				卸下检查重装 Dis charae the reass 增加抗扰电容 Add anli nerlieivelj paci thos	
马达 Motor	火花干扰 Spark disturb		●	●	●				●	●	●	●	重新连接 Re-link	
	连接头脱落 Linkage loose						●					●	更换或送修 Change er mainttan	
	损坏 Broken						●							