 
 


MAGNETIC WIRELESS PORTABLE GOLF SPEAKER

User's Manual

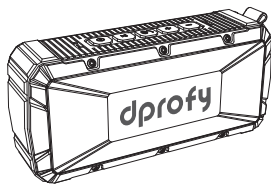 


INTRODUCTION >>>

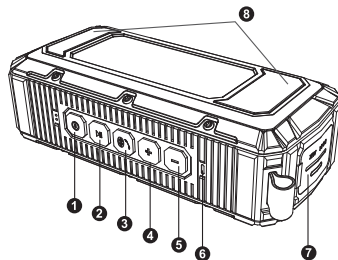

- 1 Power On/Off
- 2 Play/Pause button
- 3 Mode switch button (Long press to disconnect the Bluetooth connection)
- 4 Short press Next Track Long press Volume+
- 5 Short press Previous Track Long press Volume-
- 6 Status indicator
- 7 DC IN/AUX in Jack/ Micro SD Slot
- 8 Powerful magnet

HOW TO CONNECT >>>

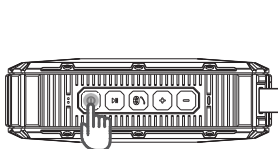

- 1 Long press the power on/off button and it will be in Bluetooth mode the Blue indicator flashes



- 2 Connect to your device Setting>Bluetooth>Choose device >dprofy V3M-- Connected successful Blue indicator steadily on

Note: It can be any letter, representing different version numbers.

WIRELESS STEREO LINK >>>



The following is the manual pairing connection method. The 2pcs version does not require manual pairing. The two speakers will automatically pair after being powered on at the same time.

1. After the two speakers are turned on, the speakers will enter in bluetooth mode (the indicator light flashes). Long press (0) button of any speaker, the speakers will enter in bluetooth pairing mode; VWhen the prompt tone "Di Di"sounded (it is the main speaker), the speaker will automatically search for another speaker.
2. When you hear prompt tone (the main speaker) which means pairing successfully between 2 speakers.
The blue indicator of main speaker is flashes, and blue indicator of auxiliary speaker is keeps on.
3. Open the bluetooth of mobile, search and connect the main speaker, the blue indicator of main speaker will keeps on after connected successfully.

 
Note:

This version of V3M cannot be used with the following versions (V3M-H, V3M-S, V3M-K) to form a TWS pair, please understand!

OTHER >>>

Charging

Using a USB-C cable to connect to a computer or buy USB charger separately.
(The red light is always on when charging, and turns off when fully charged.)

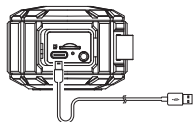

Power Bank

USB-C output for emergency charge for your device.

(When charging, the status indicator is solid white, and when the charging is completed, the white light is off.)

Note:

When using the mobile power mode to charge external devices, it is recommended that the speaker does not play songs, so as to avoid the battery voltage in the speaker being low and causing the speaker to automatically shut down.




SPECIFICATIONS >>>

Bluetooth version:	5.3
Driver spec:	Φ40mm 4D/8Wx2
Size:	L149.5*W47*H68.6 mm
Net weight:	441g ±3.0 g
RMS:	8W x 2
Frequency response:	80HZ - 20KHZ
Sensitivity:	80db
S/N ratio:	≥70db
Distortion:	≤0.1% @1W
Working distance:	about 33 feet
Transmission Power:	Class2 , ≤4dbm
Output Quick Charge Protocol:	PD3.0/ PD2.0/ QC3.0/ QC2.0 AFC/FCP/ PEZ/OPES/1/1/5FCP
Enter the fast charging protocol:	PD3.0/ PD2.0/ AFC/FCP

Bluetooth profiles:	A2DP, AVRCP, HFP
Frequency range:	2.400~2.480GHz
Working current:	≤600mA
Working voltage:	3.3V-4.2V
Battery capacity:	3350mAh
Output / Charge Power:	18W
Output/ Input voltage:	5V ~ 3A/ 9V ~ 2A/ 12V ~ 1.5A
Charging time:	about 1.5h
Playtime at full volume:	about 5H
Playtime at 60% volume:	about 24H
Waterproof:	IPX6
IPX6:	No harm for 3-5 minutes water flushing, but don't soak!

 
PAIR WITH FIND MY APP >>>




1. Open Find My app, Turn on your iOS device's Bluetooth.



 
2. Press and hold the play button on the speaker to activate the anti-loss function, accompanied by a beeping sound.

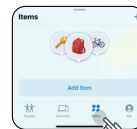

 3. Tap "Items" and then "Add Item". Select "Other Supported Item".



 4. Follow the in-app instruction to complete pairing.



5. Tap "Play Sound" The speaker's buzzer sounded.


Notes:

The Apple Find My feature is only supported on iPhone, iPad, or Mac devices logged in with an Apple ID. This feature relies on the Apple Find My network, and there may be delays in device location updates. Apple Find My is only used for device positioning and tracking, and does not affect the speaker's basic playback functions. This product does not include AirTag, nor does it have all the functions of AirTag.


STATUS INDICATOR >>>

Flashing Blue	Status of waiting for connecting
Solid Blue	Connected to Bluetooth source or connected to aux-in devices
Flashing White	Low voltage state
Solid White	Charging for external devices

 WARNING >>>

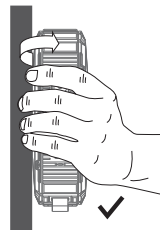

 It is recommended to pick up from the side

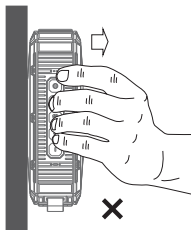

It is not recommended to directly remove it vertically



CONTAIN >>>



WARRANTY POLICY >>>

Your Bluetooth speaker is covered by a limited warranty. It is backed by 1 year performance warranty against any manufacturing defects in material or workmanship from the date of original purchase. This warranty entitles the purchaser to get the product repaired or replaced under the following conditions:

- The warranty applies to the original purchaser. Proof of original purchase is required
- The warranty does not cover the damage caused by misuse, abuse or improper storage.
- In no event shall Gsou be responsible for any direct, incidental, consequential or other damages of any kind.

The company reserves the right to the product modification for appearance and function, which is subject to change without prior notice.

FCC Warning >>>

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions.

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure.

FC