

General RF Info for Both Node and B50FEBnet

FHSS, FSK

Reference Frequency: 10245000 Hz
Start Channel: 903150000 Hz
Deviation (TX): 10000 Hz
Intermediary Freq (RX): -10700000 Hz
Step: 300000 Hz
Number of channels: 50

CONFIDENTIAL

Channel	Frequency	Channel	Frequency
0	903150000	25	910650000
1	903450000	26	910950000
2	903750000	27	911250000
3	904050000	28	911550000
4	904350000	29	911850000
5	904650000	30	912150000
6	904950000	31	912450000
7	905250000	32	912750000
8	905550000	33	913050000
9	905850000	34	913350000
10	906150000	35	913650000
11	906450000	36	913950000
12	906750000	37	914250000
13	907050000	38	914550000
14	907350000	39	914850000
15	907650000	40	915150000
16	907950000	41	915450000
17	908250000	42	915750000
18	908550000	43	916050000
19	908850000	44	916350000
20	909150000	45	916650000
21	909450000	46	916950000
22	909750000	47	917250000
23	910050000	48	917550000
24	910350000	49	917850000

Pseudorandom channel hopping sequence:

0,37,45,39,7,29,30,11,28,9,4,33,35,27,23,12,8,34,5,36,16,10,48,14,26,17,49,22,2,41,46,1
9,20,43,21,44,15,24,38,18,32,1,42,6,31,40,25,13,47,3