


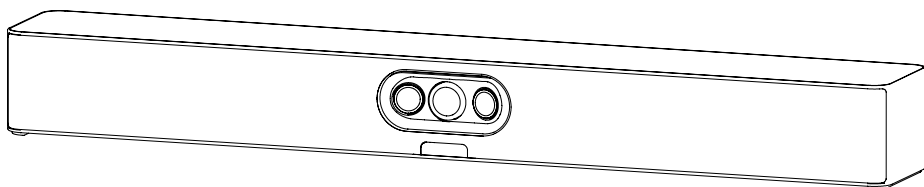

MeetingBar A25

 


Quick Start Guide V1.0


1 Package Contents



MeetingBar A25



 
(3.5 m, 11.48 ft)
Power Adapter



(3 m, 9.84 ft)
CAT5e UTP
(RJ45 - RJ45) Cable



(1.8 m, 5.91 ft)
HDMI 2.0 Cable

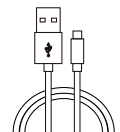

(3.0m, 9.84ft)
USB 3.1 (A - C) Cable



× 2



× 2



× 3



 
× 1

φ 6*30 mm
Polyamide


T4*30 mm

1/4 inch*12 mm

1/4 inch*13 mm



Mounting Bracket

 


Cable Cover



× 5

 (20 * 200 mm)
Cable Ties



Quick Start
Guide

 
Optional Packages

A




VCR11 and
AAA Battery × 2

B



CTP25

C

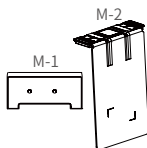

TV-Clip Mount

D

 



Table-top Stand

NOTE

- We recommend that you use the accessories provided or approved by Yealink. The use of unapproved third-party accessories may result in reduced performance.
- Put the magnetic ring on the HDMI cable to prevent electromagnetic interference.


WARNING: Operation of this equipment in a domestic environment may cause radio interference.

2 Hardware Interface Instructions

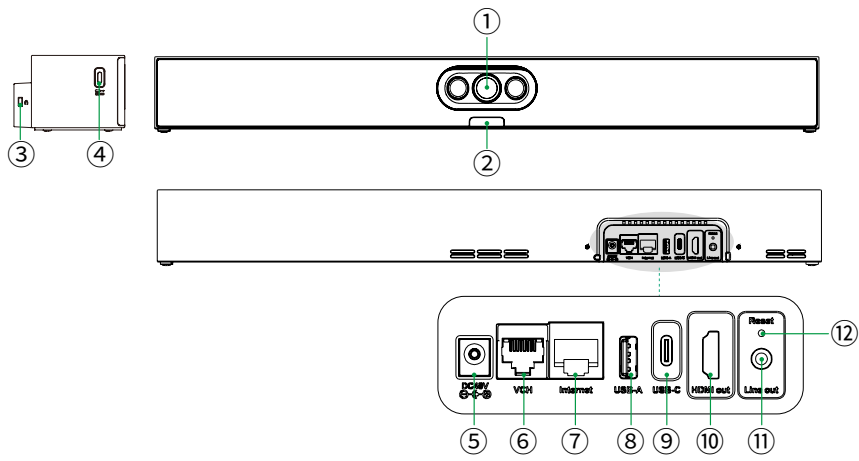

No.	Item	Description
1	Camera	Camera with an electric privacy shutter.
2	LED Indicator	Indicate the device status.
3	Security Slot	Connect a universal security cable to the device so that you can lock it down.
4	USB-C 2.0 (side)	Connect to a Yealink Wireless Presentation Pod for pairing.
5	Power Supply Port	Connect to a power adapter.
6	VCH	Connect to a Yealink CTP Touch Panel.
7	Internet	Connect directly to the network for internet access.
8	USB-A	Connect a USB accessory, such as a mouse.
9	USB-C	Connect to PC for content sharing or as BYOD.
10	HDMI-Out port	Connect to a display for video image output.
11	Reset	Reset to factory defaults.
12	Line out	Connect to an hearing aid device via a 3.5mm audio cable.

3 Connection

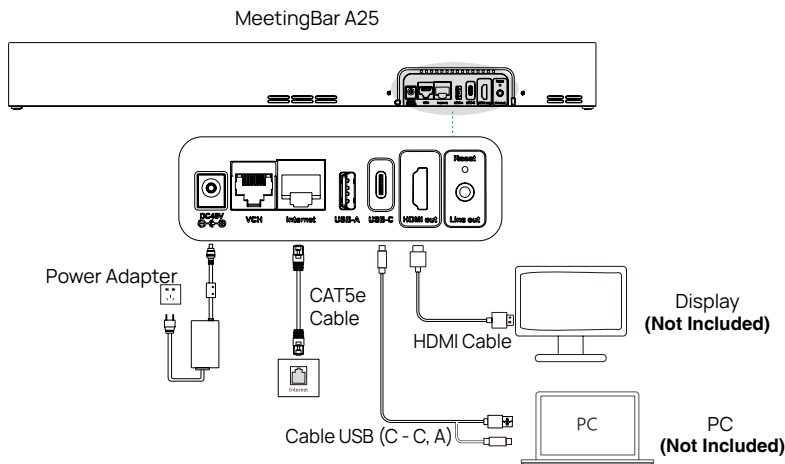


4 Installation

- Before placing the A25, please ensure that the wiring is completed (it is recommended to pass through the Mounting Bracket).

Mount on a wall

Step 1: Determine MeetingBar A25 position


The mounting height affects your camera view. The recommended installation height is 100 cm above the ground, and the reserved distance between A25 and TV should be greater than 1 cm.

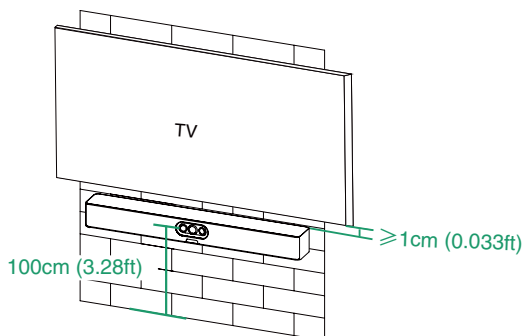

- It is recommended to maintain the A25 camera at 10-20 cm above desk height.


Step 2: Mount the A25 to the wall.

Hole depth: 30 mm (0.098ft)
Hole diameter: 6 mm (0.02ft)

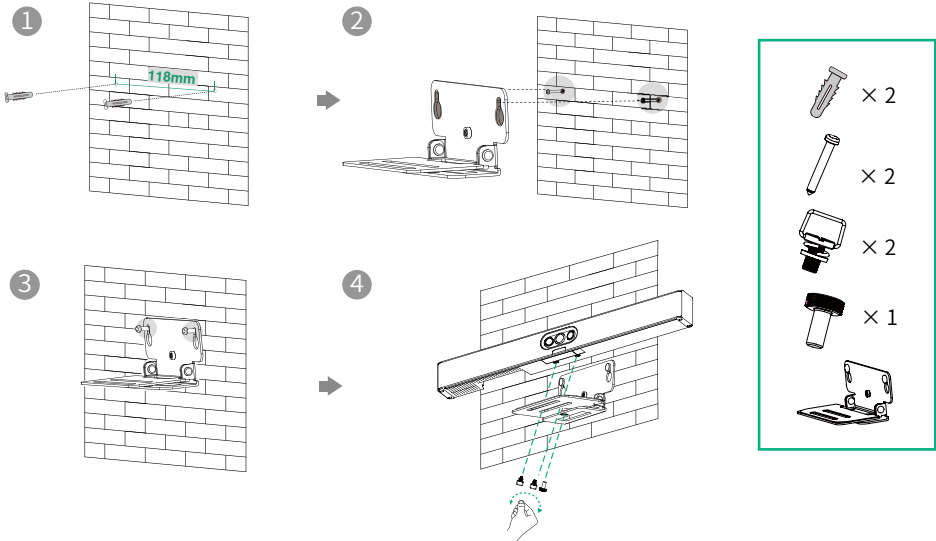

5 VCR11 (Optional)

i You can use the remote control or CTP25 to operate the A25. If a touch display device is connected, you can also operate the A25 directly on the touch screen .

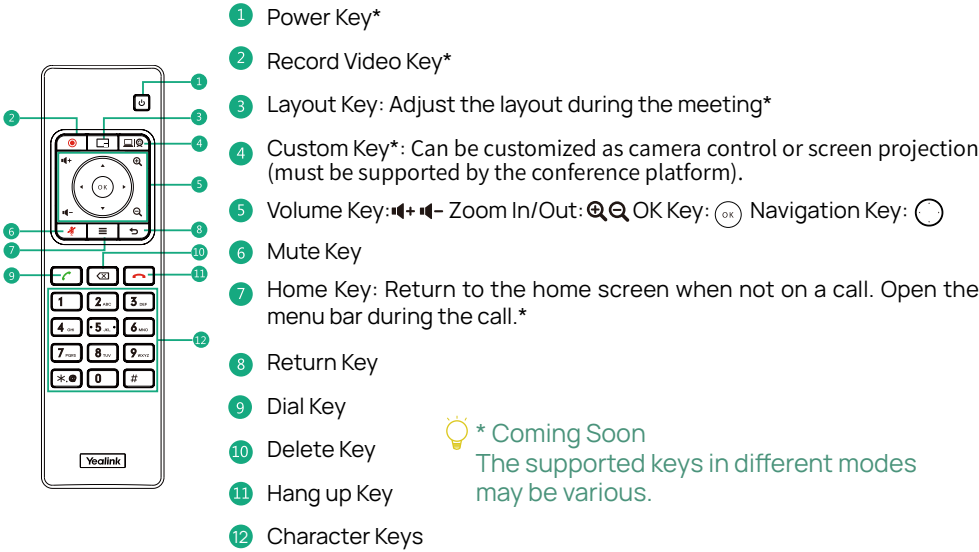


6 Pair with the CTP25 (Optional)

i For a better pairing experience, we recommend starting the A25 first and then the CTP25.


Pair manually

i If you purchased a bundle kit or connected CTP25 to A25 via a network cable, A25 and CTP25 would be paired automatically. You can go to **Initialization** directly.

On the CTP25, enter the IP address and pairing code of the A25 on display.

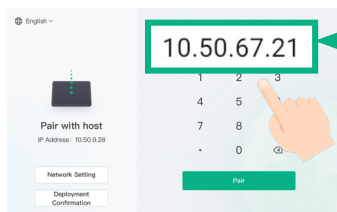

CTP25

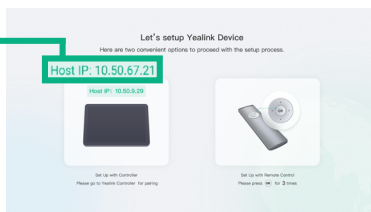

MeetingBar A25

Initialization

1. If the CTP25 is restored to factory settings, you need to change the default password (0000) of the CTP25.
2. Initialize **Language**, **Network**, **Date&Time** and **Device Mangement**, and select the desired platform. If you select **General Mode**, refer to the **7 General Mode** section.
3. Change the default password (0000) of the A25.

Account login

i Contact the corresponding service provider to obtain an account.

 
Follow the prompts on A25 and CTP25 to sign in to the same account.

7 General Mode

1. Do one of the following to select **General Mode**:
 - When selecting a platform during power-on initialization, select **General Mode**.
 - After logging in, reset to factory to switch platforms.
2. Refer to the **8 Content Sharing and BYOD** section to share content or use the BYOD function.

8 Content Sharing and BYOD (Optional)

Content Sharing



BYOD

- i** Go to the web interface, and enter **System > UC Provider** to enable **BYOD Enable**.

Use the USB-C cable to connect the CTP25 to the PC, and follow the prompts to enter BYOD mode.

9 Update the Firmware

Auto Update

Do one of the following:

- During power-on initialization, turn on **Yealink Cloud Service** > turn on **Auto Update**.
- In settings, turn on **Auto Update**.

Manual Update

- i** Update the firmware of MeetingBar A25 and CTP25 separately.

1. Obtain the IP address.
2. Open a web browser and enter the device's IP address in the address bar. For example, <https://10.82.24.11/>, and press **Enter**.
3. Enter the administrator username and the password, and click **Login**. (The default user name is "admin", the password is "0000").
4. Go to **System > Update**.
5. On the right side of **Device Firmware**, click **Select File** to upload the desired firmware.
6. Click **Update**.

Please get the latest firmware at <https://support.yealink.com/>.

About Yealink

Yealink (Stock Code: 300628) is a global-leading provider of Unified Communication & Collaboration Solutions specialized in video conferencing, voice communications, and collaboration, dedicated to helping every person and organization embrace the power of "Easy Collaboration, High Productivity".

With best-in-class quality, innovative technology, and user-friendly experiences, Yealink is one of the best providers in more than 140 countries and regions, ranks No.1 in the global market share of IP Phone, and is the Top 5 leader in the video conferencing market (Frost & Sullivan, 2021).

Technical Support

Visit Yealink WIKI (<http://support.yealink.com/>) for firmware downloads, product documents, FAQ, and more. For better service, we sincerely recommend you to use Yealink Ticketing system (<https://ticket.yealink.com>) to submit all your technical issues.



YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD.

Web: www.yealink.com

Addr: No.666 Hu'an Rd,Huli District Xiamen City, Fujian, P.R.
China

Copyright©2025 Yealink Inc. All right reserved.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Innovation, Science, and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:
(1) this device may not cause interference, and
(2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et*
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.*

This equipment complies with FCC/ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other

antenna or transmitter.

L'appareil est conforme aux limites d'exposition aux rayonnements spécifiées par la FCC/ISED pour les environnements non contrôlés. La distance entre le radiateur et le corps doit être d'au moins 20 cm lors de l'installation et du fonctionnement de l'appareil.

Cet émetteur ne doit pas coexister ou fonctionner conjointement avec toute autre antenne ou émetteur.

The device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.
Operation of 5250-5350 MHz is restricted to indoor use only.

L'appareil destiné à fonctionner dans la bande 5150–5250 MHz est uniquement destiné à une utilisation en intérieur afin de réduire le risque d'interférence nuisible aux systèmes mobiles par satellite utilisant le même canal.
L'utilisation de la bande 5250-5350 MHz est limitée à une utilisation en intérieur uniquement.