

A

Features

硬件介绍 | Funktionen | Características | Fonctionnalités

LED Indicator
LED 指示灯
LED-Anzeige
Indicador LED
Voyant LED

Mute Key
静音键
Stummschalttaste
Tecla Mute
Touche muet

Hookswitch Key
摘挂机键
Gabelschaltertaste
Tecla Hookswitch
Touche commutateur

Speaker
扬声器
Lautsprecher
Altavoz
Haut-parleur

Volume Control Keys
音量加减键
Lautstärketasten
Teclas de control de volumen
Touches de contrôle du volume

Charging Contacts
充电接口
Ladekontakte
Contactos de carga
Contacts de charge

Microphone
麦克风
Mikrofon
Micrófono
Microphone

LED Indicator
LED 指示灯
LED-Anzeige
Indicador LED
Voyant LED

Mute Key
静音键
Stummschalttaste
Tecla Mute
Touche muet

Hookswitch Key
摘挂机键
Gabelschaltertaste
Tecla Hookswitch
Touche commutateur

Speaker
扬声器
Lautsprecher
Altavoz
Haut-parleur

Volume Control Keys
音量加减键
Lautstärketasten
Teclas de control de volumen
Touches de contrôle du volume

Charging Contacts
充电接口
Ladekontakte
Contactos de carga
Contacts de charge

Microphone
麦克风
Mikrofon
Micrófono
Microphone

B

Charge the Handset

充电 | Aufladen des Mobilteils | Cargue el auricular | Charger le combiné

Solid red: charging
红灯常亮: 充电中
Dauerhaft rot: wird geladen
Rojo fijo: cargando
Rouge fixe : en cours de chargement

Solid green: full charge
绿灯常亮: 充满电
Dauerhaft grün: vollständig geladen
Verde fijo: carga completa
Vert fixe : pleine charge

LED Indicator
LED 指示灯
LED-Anzeige
Indicador LED
Voyant LED

Mute Key
静音键
Stummschalttaste
Tecla Mute
Touche muet

Hookswitch Key
摘挂机键
Gabelschaltertaste
Tecla Hookswitch
Touche commutateur

Speaker
扬声器
Lautsprecher
Altavoz
Haut-parleur

Volume Control Keys
音量加减键
Lautstärketasten
Teclas de control de volumen
Touches de contrôle du volume

Charging Contacts
充电接口
Ladekontakte
Contactos de carga
Contacts de charge

Microphone
麦克风
Mikrofon
Micrófono
Microphone

LED Indicator
LED 指示灯
LED-Anzeige
Indicador LED
Voyant LED

Mute Key
静音键
Stummschalttaste
Tecla Mute
Touche muet

Hookswitch Key
摘挂机键
Gabelschaltertaste
Tecla Hookswitch
Touche commutateur

Speaker
扬声器
Lautsprecher
Altavoz
Haut-parleur

Volume Control Keys
音量加减键
Lautstärketasten
Teclas de control de volumen
Touches de contrôle du volume

C

Pair & Connect with Your IP Phone

1. Place the handset on the phone handset cradle.
2. Follow the on-screen prompts to connect BTH88 to your phone.

配对和连接 IP 话机
1. 将手柄放到话机的手柄槽上。
2. 根据屏幕提示连接话机和手柄。

Koppeln und Verbinden mit Ihrem IP-Telefon
1. Legen Sie das Mobilteil in die Ladestation.
2. Folgen Sie den Anweisungen auf dem Bildschirm, um das BTH88 an Ihr Telefon anzuschließen.

Emparejar y conectar con su teléfono IP
1. Coloque el auricular en la base del auricular del teléfono.
2. Siga las instrucciones de la pantalla para conectar BTH88 a su teléfono.

Appairer et connecter votre téléphone IP
1. Placez le combiné sur le socle du combiné du téléphone.
2. Suivez les invites à l'écran pour connecter BTH88 à votre téléphone.

Regulatory Notices

Operating Ambient Temperatures
• Operating temperature: +32 to 104°F (0 to 40°C)
• Relative humidity: 5% to 90%, noncondensing
• Storage temperature: -22 to +160°F (-30 to +70°C)

Warranty
Our product warranty is limited only to the unit itself, when used normally in accordance with the operating instructions and the system environment. We are not liable for damage or loss resulting from the use of this product, or for any claim from a third party. We are not liable for problems with Yealink device arising from the use of this product; we are not liable for financial damages, lost profits, claims from third parties, etc., arising from the use of this product.

Explanation of the symbols
• DC symbol
— is the DC voltage symbol.
• WEEE Warning symbol
To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect

Restriction of Hazardous Substances Directive (RoHS)

This device complies with the requirements of the EU RoHS Directive. Statements of compliance can be obtained by contacting support@yealink.com.

Safety Instructions
Save these instructions. Read these safety instructions before use!

General Requirements
• Before you install and use the device, read the safety instructions carefully and observe the situation during operation.
• During the process of storage, transportation, and operation, please always keep the device dry and clean, avoid collision and crash.
• Please attempt not to dismantle the device by yourself. In case of any discrepancy, please contact the appointed maintenance center for repair.
• Please refer to the relevant laws and statutes while using the device. Legal rights of others should be respected as well.

Environmental Requirements
• Place the device at a well-ventilated place. Do not expose the device under direct sunlight.
• Keep the device dry and free of dusts.
• Do not place the device on or near any inflammable or fire-vulnerable object, such as

2. Connect it to another wall outlet.

The usage environment is out of operating temperature range.

1. Use in the operating temperature range.

The cable between the unit and the Yealink device is connected incorrectly.

1. Connect the cable correctly.

You cannot connect the cable properly.

1. You may have connected a wrong Yealink device.

2. Use the correct power supply.

Some dust, etc., may be in the port.

1. Clean the port.

Contact your dealer or authorized service facility for any further questions.

Contact Information

YEALINK NETWORK TECHNOLOGY CO.,LTD.

309, 3rd Floor, No.16, Yun Ding North Road, Huli District, Xiamen City, Fujian, P.R.C

YEALINK (EUROPE) NETWORK TECHNOLOGY B.V.

Strawinskylaan 3127, Atrium Building, 8th floor, 1077ZX Amsterdam, The Netherlands

YEALINK (USA) NETWORK TECHNOLOGY CO., LTD.

999 Peachtree Street Suite 2300, Fulton, Atlanta, GA, 30309, USA

Made in China

disconnect the grounding cable until you disconnect all other cables.

⚠ Battery Requirements

- Do not immerse the battery into water, which could short-circuit and damage the battery.
- Do not expose the battery to an open flame or leave the battery where it could be subjected to extremely high temperatures, which could cause the battery to explode.
- Do power the handset off before removing the battery.
- Do not try to use the battery for the power supply of any device other than this handset.
- Do not open or mutilate the battery, released electrolyte is corrosive and may cause damage to your eyes or skin.
- Use only the rechargeable battery pack delivered with the handset or those rechargeable battery packs expressly recommended by Yealink.
- Defective or exhausted battery should never be disposed of as municipal waste. Return old battery to the battery supplier, a licensed battery dealer or a designated collection facility.

⚠ Cleaning Requirements

- Before cleaning the device, disconnect it from the power supply.
- Use a piece of soft, dry and anti-static cloth to clean the device.
- Keep the power plug clean and dry.

Troubleshooting

The unit cannot supply power to Yealink device.

There is a bad connection with the plug.

1. Clean the plug with a dry cloth.

rubber-made materials.

- Keep the device away from any heat source or bare fire, such as a candle or an electric heater.

⚠ Operating Requirements

- Do not let a child operate the device without guidance.
- Do not let a child play with the device or any accessory in case of accidental swallowing.
- Please use the accessories provided or authorized by the manufacturer only.
- The power supply of the device shall meet the requirements of the input voltage of the device. Please use the provided surge protection power socket only.
- Before plugging or unplugging any cable, make sure that your hands are completely dry.
- Do not spill liquid of any kind on the product or use the equipment near water, for example, near a bathtub, washbowl, kitchen sink, wet basement or near a swimming pool.
- During a thunderstorm, stop using the device and disconnect it from the power supply. Unplug the power plug and the Asymmetric Digital Subscriber Line (ADSL) twisted pair (the radio frequency cable) to avoid lightning strike.
- If the device is left unused for a rather long time, disconnect it from the power supply and unplug the power plug.
- When there is smoke emitted from the device, or some abnormal noise or smell, disconnect the device from the power supply, and unplug the power plug immediately.
- Contact the specified maintenance center for repair.
- Do not insert any object into equipment slots that is not part of the product or auxiliary product.
- Before connecting a cable, connect the grounding cable of the device first. Do not

Yealink

V1.0

BTH88 Bluetooth Handset Quick Start Guide

