


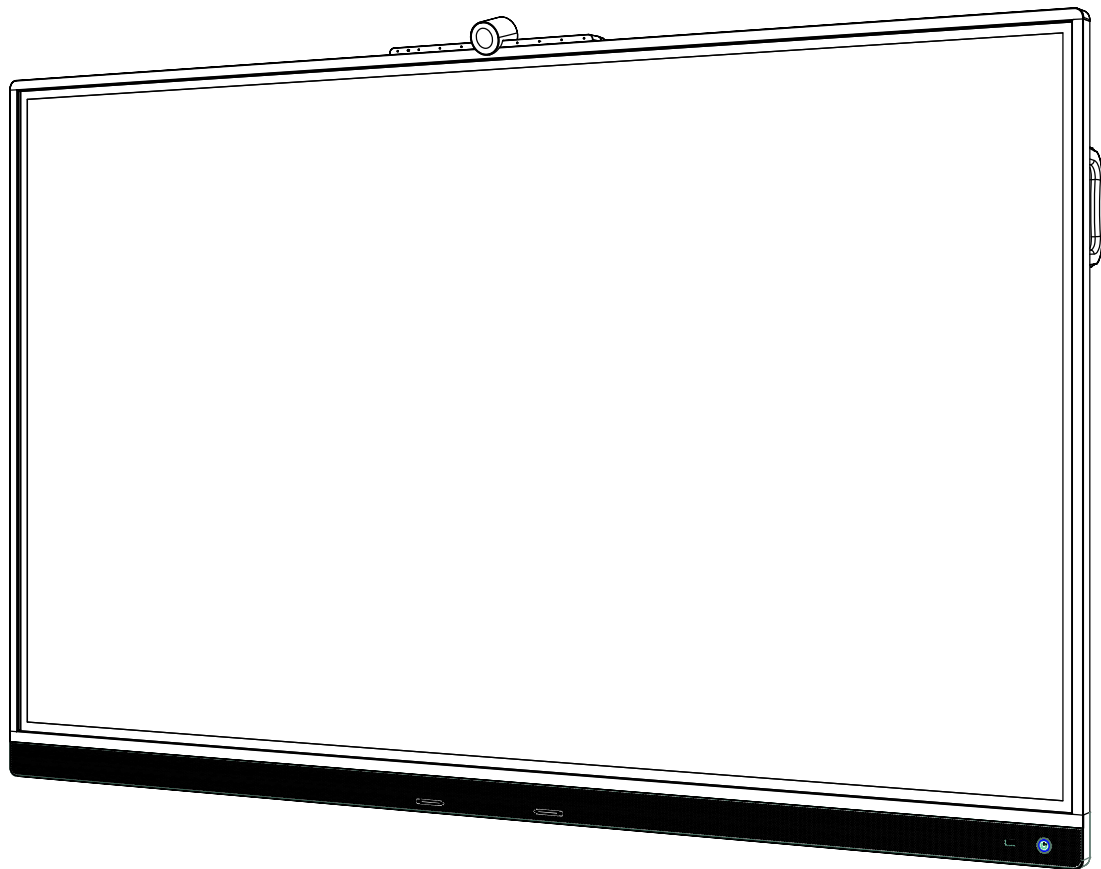

MeetingBoard 75C

Quick Start Guide (V1.0)




Please read this guide before installation to avoid unnecessary personal injury and damage to the endpoint.

1 Package Contents



- The pictures of the endpoint and accessories in this guide are for reference only.
- Please use the accessories in the package, and follow the guide for installation. Yealink assumes no responsibility for any damage caused by improper installation.


Standard Accessories

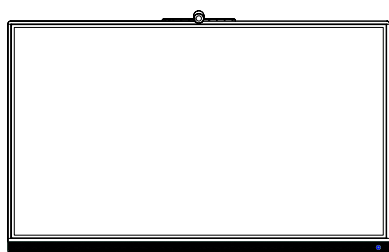


MeetingBoard 75C




Pen × 2

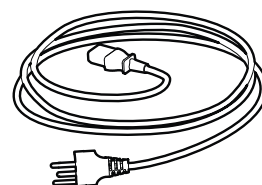


3 m Power Cable
(220 V)

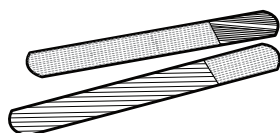

Cable Tie × 3
(20 * 200 mm)

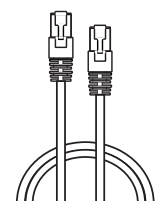


3 m CAT5e UTP
(RJ45, RJ45)
Cable

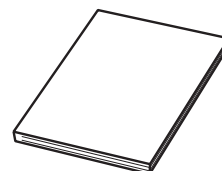


Quick Start Guide


Optional Accessories

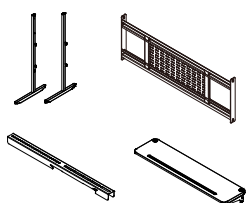


VESA Floor Stand Kit

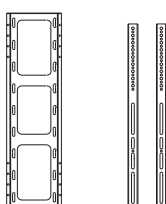

Wall Mount Bracket Kit

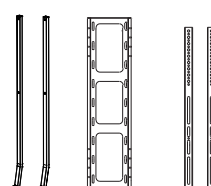


Wall Stand Kit

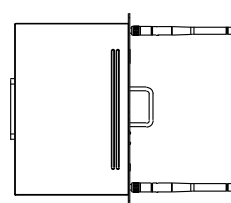

Windows OPS

2 Hardware Overview & Wiring

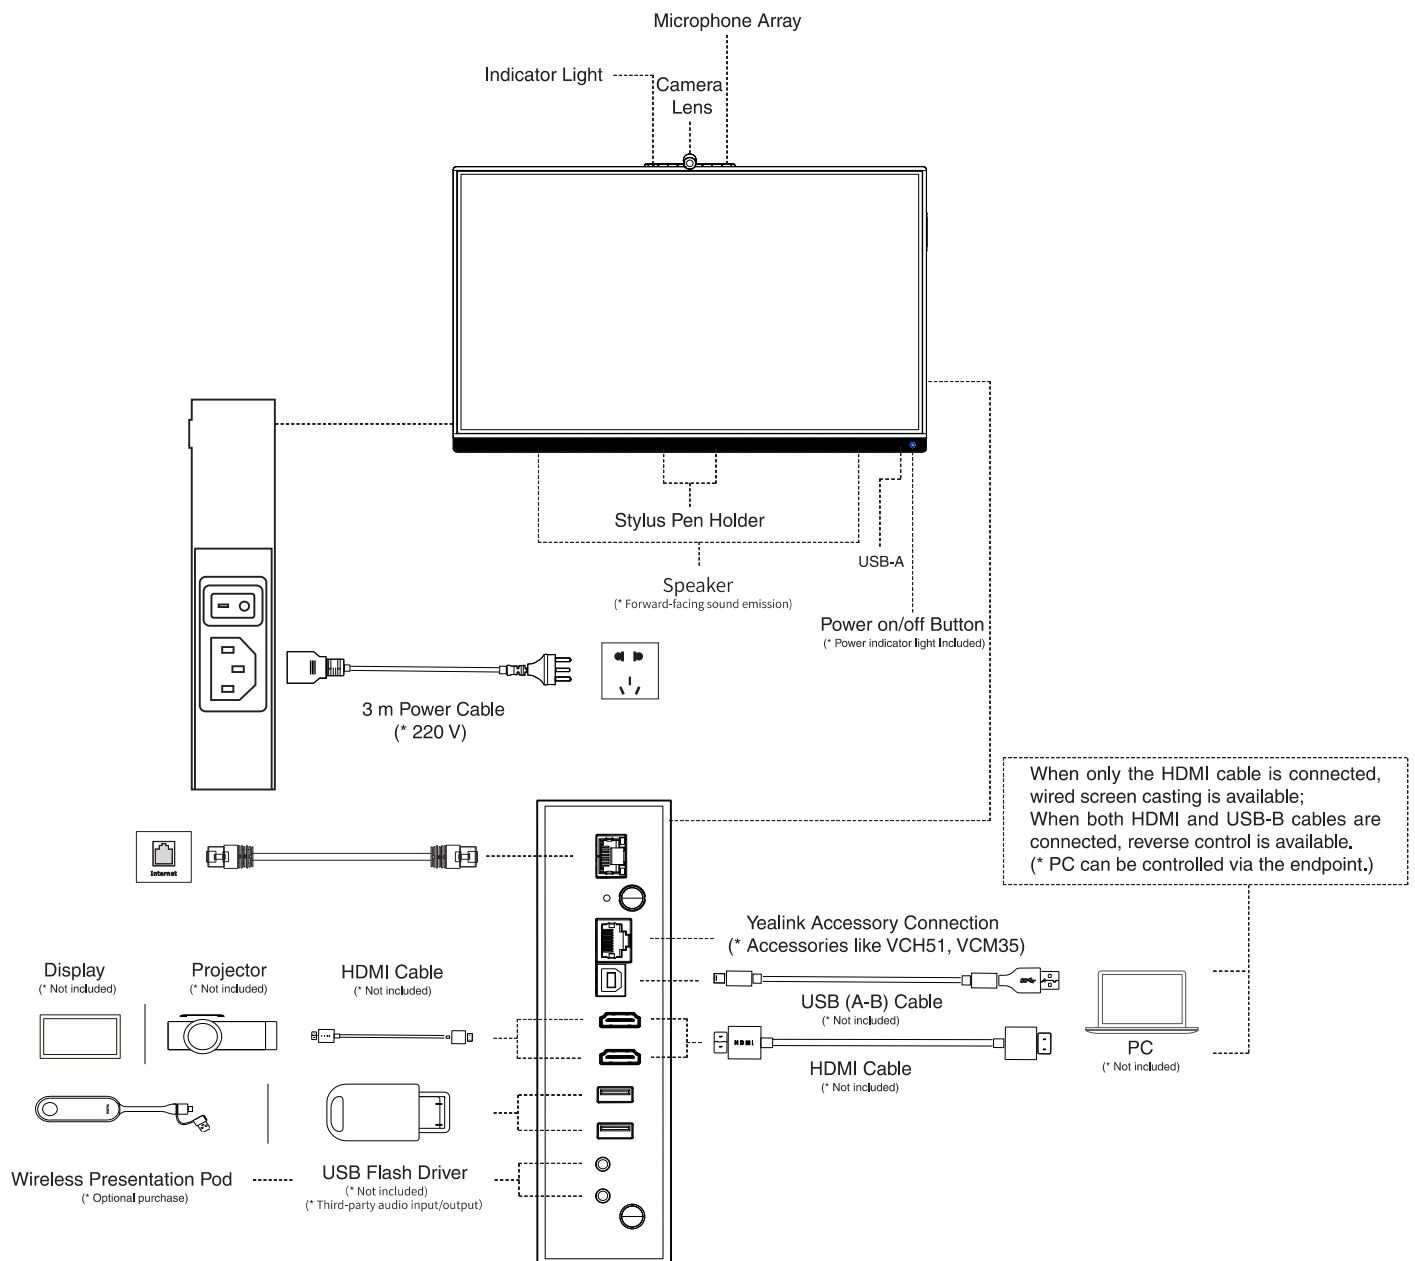


Requirements for the accessories (not included):

- Display: 1080p and above; HDMI interface included.
- PC: HDMI or USB-A interface included.
- USB Flash Driver: USB-A interface included.
- HDMI: Standard HDMI cable.
- USB-B Cable: USB 2.0 (A - B) cable.

3 *Endpoint Installation*



- Take and place all components gently to avoid damage.
- At least 2 people are required to transport and install the 75-inch host.

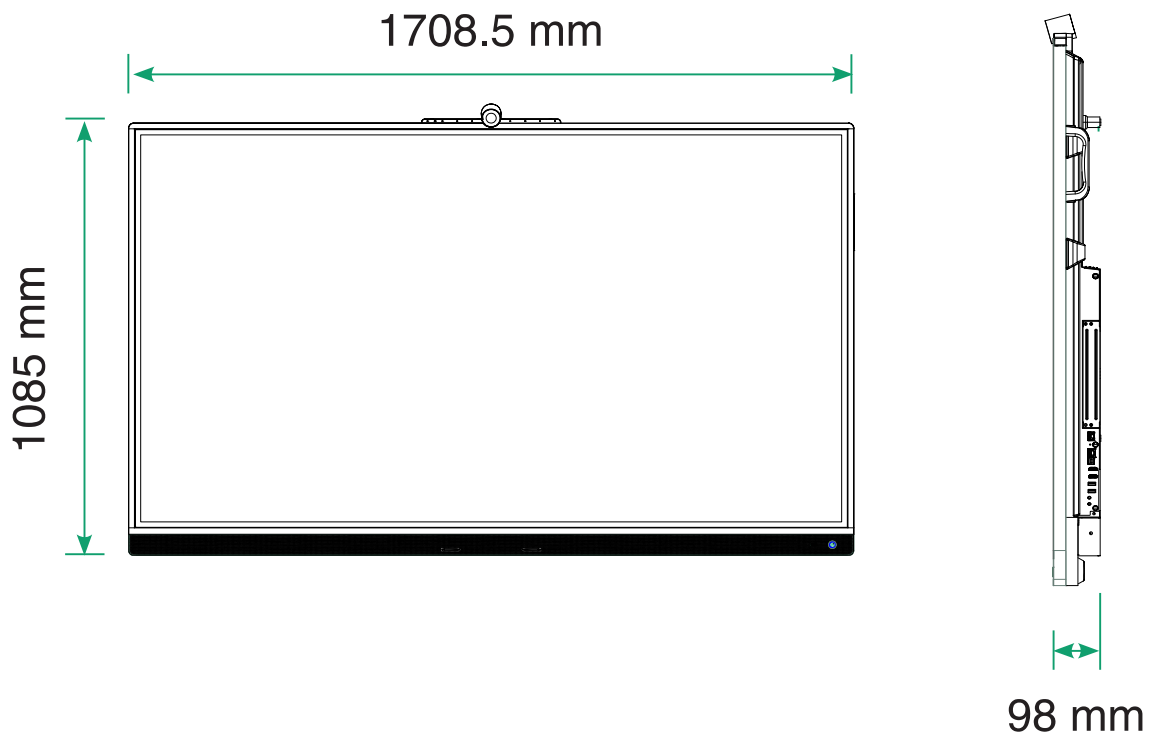

Install Wall-Mounted Bracket (Optional)




- You need to purchase an additional bracket to install the equipment. You can choose either the Yealink standard wall mount bracket or a third-party bracket.
- If you use the Yealink standard wall mount bracket, please refer to the **Quick Start Guide (Wall-Mounted Bracket Installation)**.

Recommended Size of Yealink Wall-Mounted Bracket

Model	Wall-Mounted Bracket Model	Bracket Installation Height (from the ground)	Recommended Screw Hole Position for VESA Vertical Rod
75C	MB-WallMount-860	1475 mm	It is recommended that the screw be locked to the 5th hole of the wall mount



The following is the installation diagram of height and hole position. Users can install according to the recommended installation height and screw hole position. If the installation height is slightly inappropriate, it can also be adjusted according to actual needs.

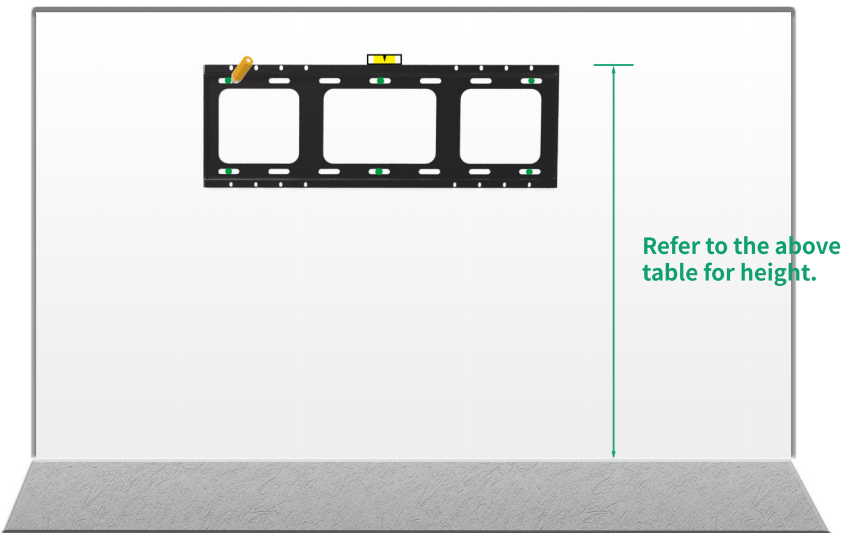


Installation Video

Install VESA Floor Stand (Optional)



- You need to purchase an additional floor stand to install the equipment. You can choose either the Yealink VESA floor stand or a third-party stand.
- If you use the Yealink VESA floor stand, please refer to the **Quick Start Guide (VESA Floor Stand Installation)**.

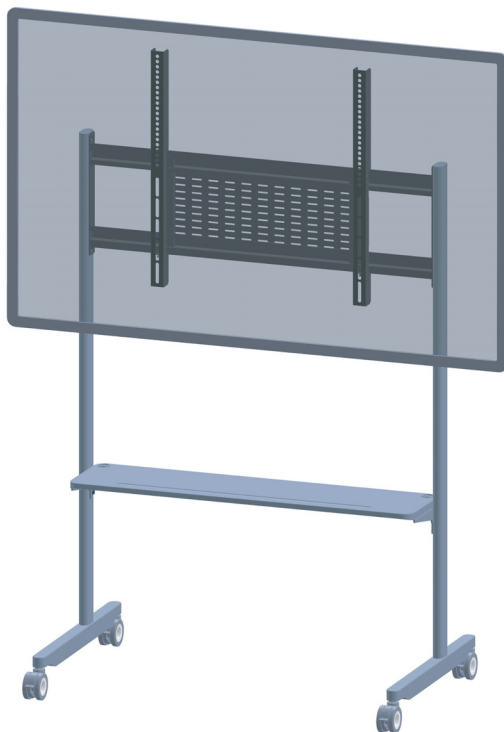


Installation Video

Install Wall Stand (Optional)



- You need to purchase an additional wall stand to install the equipment. You can choose either the Yealink standard wall stand or a third-party stand.
- If you use the Yealink standard wall stand, please refer to the **Quick Start Guide (Wall Stand Installation)**.

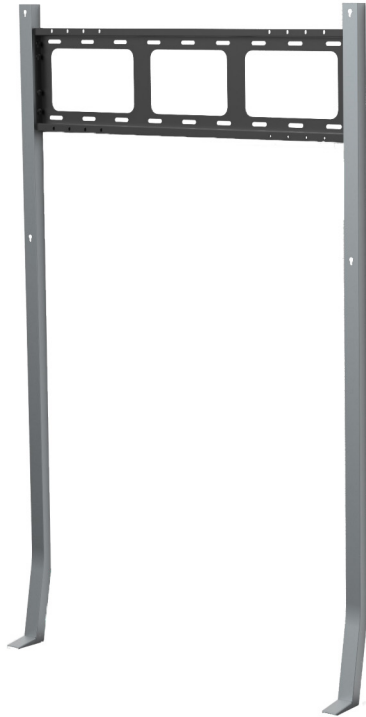

Installation Video

Install Windows OPS (Optional)



You need to purchase Windows OPS separately. For installation, please refer to the **MCORE-OPS Quick Start Guide** included in the corresponding package.



Installation Video


Precautions for Purchase and Installation of Third-Party Bracket



If a third-party wall bracket is used, the following items should be paid attention to when purchasing and installing:

- VESA hole size of MeetingBoard 75C is 800 mm (horizontal) × 400 mm (Vertical).
- The load of the wall bracket of MeetingBoard series equipment shall be more than three times of its own weight, that is, the load capacity of the wall bracket for MeetingBoard 75C shall be greater than 156 KG.
- During installation, the recommended distance from the bottom of MeetingBoard 75C equipment to the ground is 880 mm.

4 Power on

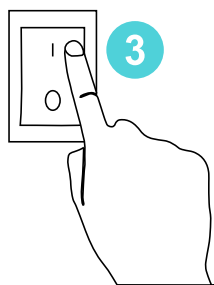

1. Insert the end of the power cable into the power port of the endpoint.
2. Insert the power cable plug into the outlet.
3. Turn the rocker switch button on the right rear of the endpoint to "I" to turn on the endpoint.




- Upon first power-on of the endpoint, follow the on-screen setup wizard to initialize configuration like language, time, and network. The initialization operations vary with software versions.
- After the endpoint is started for the first time or restored to factory settings, go to settings on the touchscreen to configure the admin password (default password: 0000).

LED Indicator Status

Status	Power indicator light	Indicator light
Description	• Quick flashing red: Powering on. • Slow flashing red: Sleeping. • Solid red: UI off, muted during a call.	• Solid red: Muted during a call. • Off: Powered off, not in a call.

5 Power off

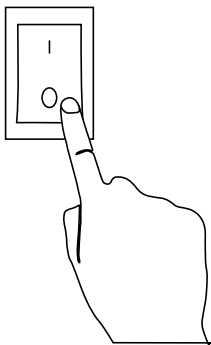


Turn the rocker switch button on the right rear of the endpoint to "O" to turn off the endpoint.


6 Help Center



On the MeetingBoard homepage, tap **Sidebar > Help Center** to view more function documents.

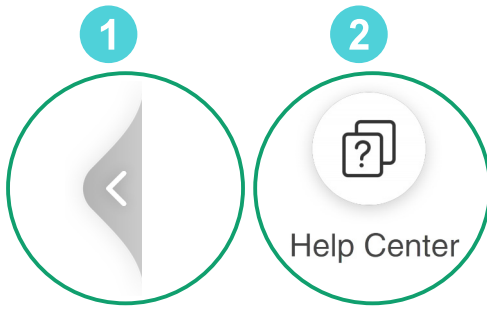

It is recommended that the OPS antenna be placed as follows, with the highest signal strength.

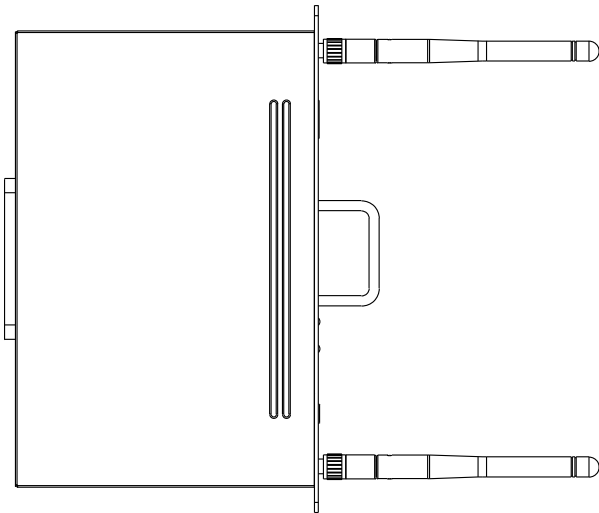



HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

Class A Product Notice

This is a Class A product. In a residential environment, it may cause radio interference. In such cases, the user may need to take practical measures to mitigate the interference.

About Yealink

Yealink (Stock Code: 300628) is a global-leading provider of Unified Communication & Collaboration Solutions specialized in video conferencing, voice communications, and collaboration, dedicated to helping every person and organization embrace the power of "Easy Collaboration, High Productivity".

With best-in-class quality, innovative technology, and user-friendly experiences, Yealink is one of the best providers in more than 140 countries and regions, ranks No.1 in the global market share of IP Phone, and is the Top 5 leader in the video conferencing market (Frost & Sullivan, 2021).

Technical Support

Visit Yealink WIKI (<http://support.yealink.com/>) for firmware downloads, product documents, FAQ, and more. For better service, we sincerely recommend you to use Yealink Ticketing system (<https://ticket.yealink.com>) to submit all your technical issues.



YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD.
Web: www.yealink.com.cn
Addr: No.666 Hu'an Rd, Huli District Xiamen City, Fujian, P.R.
China
Copyright©2022 YEALINK(XIAMEN) NETWORK
TECHNOLOGY CO.,LTD.All rights reserved.