


MCore 4



Quick Start Guide(V1.0)

Package Contents

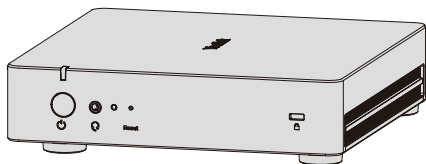


MCore 4



Mounting Bracket



 Cable Cover



(2.1 m, 6.89 ft)
Power Adapter
(19V/4.7A)



x3

3M Tape



HDMI Cable (1.8 m)



φ 6*30 mm
Expansion Plug
T4*30 mm
Self-tapping Screw



Silicone pad




Quick Start
Guide



We recommend that you use the accessories provided or approved by Yealink.

The use of unapproved third-party accessories may result in poor performance.


Hardware Interface

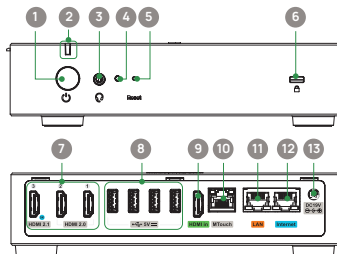

- | | | | |
|-----------------------|-----------------|------------------------|----------------------|
| ① Power on/off Button | ② LED Indicator | ③ 3.5mm Headphone Port | ④ HDD LED Indicator |
| ⑤ Reset | ⑥ Security Slot | ⑦ HDMI-Out Port | ⑧ USB3.0 Type-A Port |
| ⑨ HDMI-In Port | ⑩ MTouch Port | ⑪ LAN Port | ⑫ Internet Port |
| ⑬ Power Supply Port | | | |


MCore 4 Connection

- When starting up the MCore 4 for the first time, you need to connect a mouse to complete the initial configuration. We recommend that you use the wireless mouse and keyboard kit.
- When the MCore 4 works with Microsoft Teams Rooms, it is recommended to set the output resolution of MCore 4 to 1080P. If it cannot be configured normally, please purchase an EDID emulator.

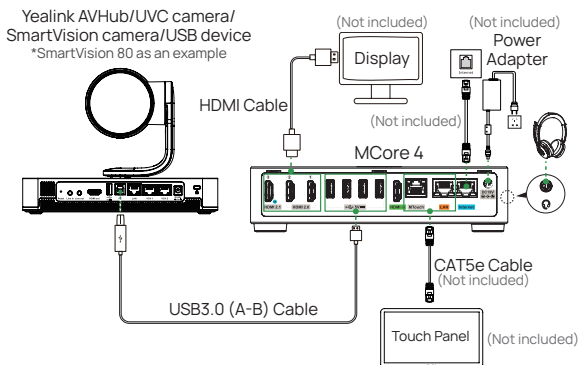

Connect MTouch Plus/E2 with MCore 4


- Use a network cable to connect the MTouch Plus/E2 to the MCore 4.

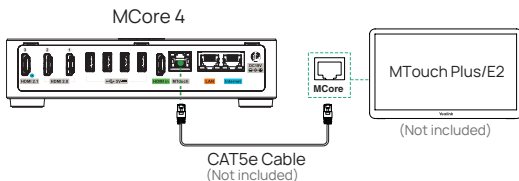

Connect IP Touch Console with MCore 4


Option 1: Direct Connection with an Ethernet Cable

- Use a network cable to connect the IP Touch Console to the MCore 4.

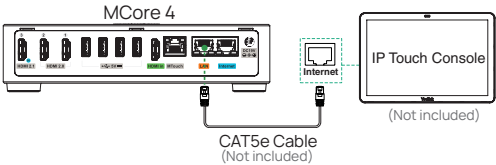

Option 2: Connection on the Same LAN


- MCore 4 and IP Touch Console need to be on the same LAN.

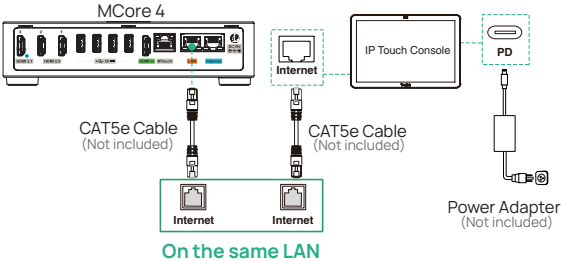

MCore 4 Installation




1. Not suitable for completely enclosed scenarios, such as fully enclosed cabinets or boxes.
2. There should be no obstructions within 1 cm of the side air outlet and air inlet of the device.
3. If the cable is too thin, it is recommended to install a silicone pad to secure the cable before wiring. As shown in the figure below.

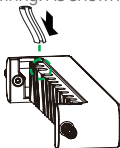

Mount on the Wall


Hole depth: 30 mm
Hole diameter: 6 mm

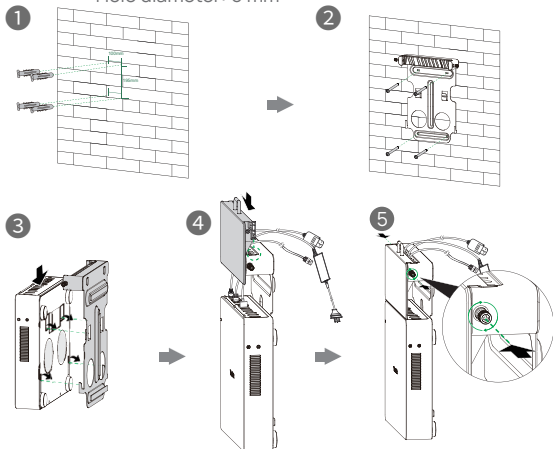

Before mounting the bracket, you need to confirm the direction of the MCore 4 installation. Once the bracket is mounted, the installation direction of the MCore 4 cannot be changed.


Mount on the TV

- After applying the 3M tape, you need to use a pen or other cylindrical object to roll the tape firmly.
- After the Mounting Bracket is attached to the TV, you need to wait for one day before installing the MCore 4.

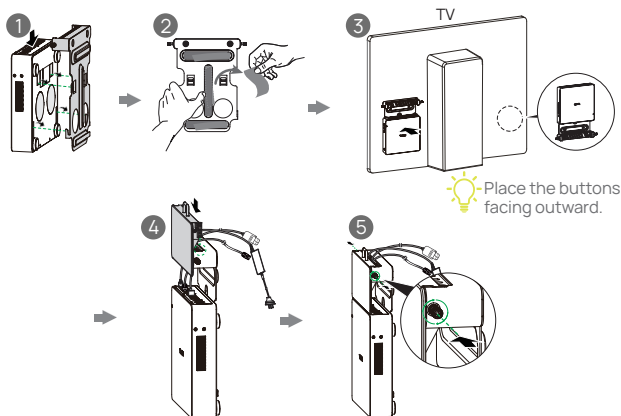

- Before mounting the bracket, you need to confirm the direction of the MCore 4 installation. Once the bracket is mounted, the installation direction of the MCore 4 cannot be changed.

Replace the cable

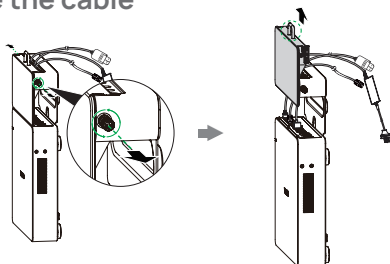

Regulatory Notices

Operating Ambient Temperatures

- Operating temperature: +32 to 104°F (0 to 40°C)
- Relative humidity: 5% to 90%, noncondensing
- Storage temperature: -22 to +158°F (-30 to +70°C)

Warranty

Our product warranty is limited only to the unit itself, when used normally in accordance with the operating instructions and the system environment. We are not liable for damage or loss resulting from the use of this product, or for any claim from a third party. We are not liable for problems with Yealink device arising from the use of this product; we are not liable for financial damages, lost profits, claims from third parties, etc., arising from the use of this product.

Explanation of the symbols

- DC symbol (Apply for DC powered products)

 is the DC voltage symbol.

- WEEE Warning symbol



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

Restriction of Hazardous Substances Directive (RoHS)

This device complies with the requirements of the EU RoHS Directive. Statements of compliance can be obtained by contacting support@yealink.com.

Safety Instructions

Save these instructions. Read these safety instructions before use!



General Requirements

- Before you install and use the device, read the safety instructions carefully and observe the situation during operation.
- During the process of storage, transportation, and operation, please always keep the device dry and clean, avoid collision and crash.
- Please attempt not to dismantle the device by yourself. In case of any discrepancy, please contact the appointed maintenance center for repair.
- Please refer to the relevant laws and statutes while using the device. Legal rights of others should be respected as well.



Environmental Requirements

- Do not cover ventilation openings, this equipment is not intended to be used on soft support.
- The marking information is located at the exterior of the bottom.
- Place the device at a well-ventilated place. Do not expose the device under direct sunlight.
- Keep the device dry and free of dusts.
- Do not place the device on or near any inflammable or fire-vulnerable object, such as rubber-made materials.
- Keep the device away from any heat source or bare fire, such as a candle or an electric heater.



Operating Requirements

- Do not let a child operate the device without guidance.
- Do not let a child play with the device or any accessory in case of accidental swallowing.
- Please use the accessories provided or authorized by the manufacturer only.
- The power supply of the device shall meet the requirements of the input voltage of the device. Please use the provided surge protection power socket only.
- Before plugging or unplugging any cable, make sure that your hands are completely dry.
- Do not spill liquid of any kind on the product or use the equipment near water, for example, near a bathtub, washbowl, kitchen sink, wet basement or near a swimming pool.
- During a thunderstorm, stop using the device and disconnect it from the power supply. Unplug the power plug and the Asymmetric Digital Subscriber Line (ADSL) twisted pair (the radio frequency cable) to avoid lightning strike.
- If the device is left unused for a rather long time, disconnect it from the power supply and unplug the power plug.
- When there is smoke emitted from the device, or some abnormal noise or smell, disconnect the device from the power supply, and unplug the power plug immediately.
- Contact the specified maintenance center for repair.
- Do not insert any object into equipment slots that is not part of the product or auxiliary product.

- Before connecting a cable, connect the grounding cable of the device first. Do not disconnect the grounding cable until you disconnect all other cables.



Cleaning Requirements

- Before cleaning the device, disconnect it from the power supply.
- Use a piece of soft, dry and anti-static cloth to clean the device.
- Keep the power plug clean and dry.



Battery Precautions (Apply for lithium battery products)

- Do not immerse the battery into water, which could short-circuit and damage the battery.
- Do not expose the battery to an open flame or leave the battery where it could be subjected to extremely high temperatures, which could cause the battery to explode.
- Do power the handset off before removing the battery.
- Do not try to use the battery for the power supply of any device other than this device.
- Do not open or mutilate the battery, released electrolyte is corrosive and may cause damage to the your eyes or skin.
- Use only the rechargeable battery pack delivered with the device or those rechargeable battery packs expressly recommended by Yealink.
- Defective or exhausted battery should never be disposed of as municipal waste. Return old battery to the battery supplier, a licensed battery dealer or a designated collection facility.

Troubleshooting

The unit cannot supply power to Yealink device.

There is a bad connection with the plug.

1. Clean the plug with a dry cloth.
2. Connect it to another wall outlet.

The usage environment is out of operating temperature range.

1. Use in the operating temperature range.

The cable between the unit and the Yealink device is connected incorrectly.

1. Connect the cable correctly.

You cannot connect the cable properly.

1. You may have connected a wrong Yealink device.
2. Use the correct power supply.

Some dust, etc., may be in the port.

1. Clean the port.

Contact your dealer or authorized service facility for any further questions.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ISED WARNING

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Les communications effectuées au moyen de cet appareil ne sont pas nécessairement protégées des indiscrétions.

The device for operation in the band 5150 – 5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

Operation of 5250-5350 MHz is restricted to indoor use only.

L'appareil destiné à fonctionner dans la bande 5150 – 5250 MHz est uniquement destiné à une utilisation en intérieur afin de réduire le risque d'interférence nuisible aux systèmes mobiles par satellite utilisant le même canal.

L'utilisation de la bande 5250-5350 MHz est limitée à une utilisation en intérieur uniquement.

The following applies to products used at a distance greater than 20cm:

This equipment complies with FCC/ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

L'appareil est conforme aux limites d'exposition aux rayonnements spécifiées par la FCC/ISED pour les environnements non contrôlés. La distance entre le radiateur et le corps doit être d'au moins 20 cm lors de l'installation et du fonctionnement de l'appareil.

EU Regulatory Information

Support Frequency Bands and Power:

DECT 1.8GHz-1.9GHz< 24 dBm (Apply to products with DECT technology)

Bluetooth 2.4GHz< 20 dBm (Apply to products with Bluetooth technology)

WLAN 2.4 GHz < 20 dBm; (Apply to products with Wi-Fi 2.4GHz technology)

WLAN 5150-5250 MHz < 23 dBm; (Apply to products with Wi-Fi 5GHz technology)

WLAN 5250-5350 MHz < 20 dBm; (Apply to products with Wi-Fi 5GHz technology)

WLAN 5470-5725 MHz < 27 dBm; (Apply to products with Wi-Fi 5GHz technology)

WLAN 5745-5825 MHz <14 dBm; (Apply to products with Wi-Fi 5GHz technology)

Hereby, Yealink declares that this product is in compliance with essential requirements and other relevant provisions of Directive 2014/30/EU(wired products), 2014/35/EU(wired products), RED 2014/53/EU(wireless products), and other applicable EU directive requirements. For further information, please consult the Declarations of Conformity section at <https://support.yealink.com>.

Contact Information

AIXCOM TECHNOLOGY PTE. LTD.
3 TEMASEK AVENUE #27-02 CENTENNIAL TOWER SINGAPORE (039190)
Made in Vietnam



BE	BG	CZ	DK	DE	EE	IE	EL
ES	FR	HR	IT	CY	LV	LT	LU
HU	MT	NL	AT	PL	PT	RO	SI
SK	FI	SE	NO	IS	LI	CH	TR

In all EU member states, operation of 5150-5350 MHz is restricted to indoor use only.

Technical Support

Visit Yealink WIKI (<http://support.yealink.com/>) for firmware downloads, product documents, FAQ, and more. For better service, we sincerely recommend you to use Yealink Ticketing system (<https://ticket.yealink.com>) to submit all your technical issues.



430104003215