



MeetingDisplay 65/75/86

Quick Start Guide V1.0



To avoid unnecessary personal injury and equipment damage, read this guide prior to installation.

1 Package Contents

The pictures of the endpoint and accessories in this guide are for reference only. Please use the accessories in the package, and follow the guide for installation. Yealink assumes no responsibility for any damage caused by improper installation methods.

Standard Accessories




Host




Remote control




Mcore bracket

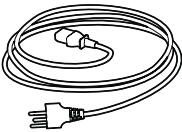


3M Power Cable
(220V)

 

3M CAT5e UTP
(RJ45, RJ45) Cable

 

Harness
(20*200mm)

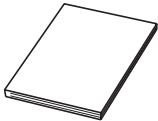

Quick Start Guide

2 installation environment

- 1. Recommended ambient temperature: 0° C-40° C
- 2. Recommended ambient humidity: 10-95%

3 Endpoint Installation



1. Install the wall mount bracket

- i

Additional brackets are required to install the equipment, with the option of purchasing one hundred million units of standard wall brackets or third-party brackets recommended.
If you are using a billionaire standard wall mount, refer to the quick start guide (wall mount installation) in the corresponding mount kit.

Device model	applicable Yealink Wall mount model
MeetingDisplay 65	MB-WallMount-650
MeetingDisplay 75	MB-WallMount-860
MeetingDisplay 86	MB-WallMount-860

(2) Fixed display back hanger



- i

If the installation height is slightly inappropriate, the user can adjust the screw installation hole according to the actual needs.

 
- i

If the conference room outlet and network interface are located on the wall on the back of the host that will be installed, connect the cables before installing the host.

(3) Mounting Host



Take and place all components gently to avoid damage.




MeetingDisplay 6575

At least 2 people move and install 65"/75" host.




MeetingDisplay 86


At least 2 people move and install 86" host.

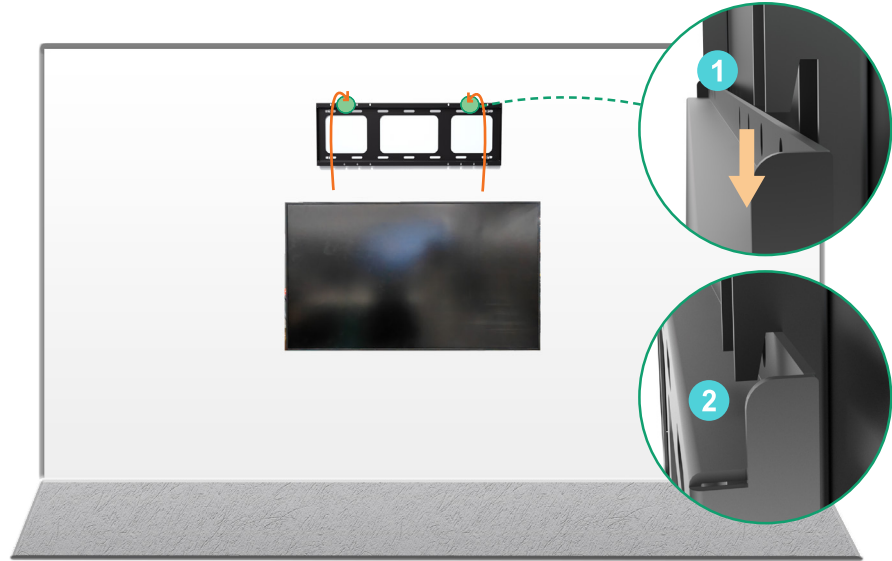

4 Hardware Component Instructions

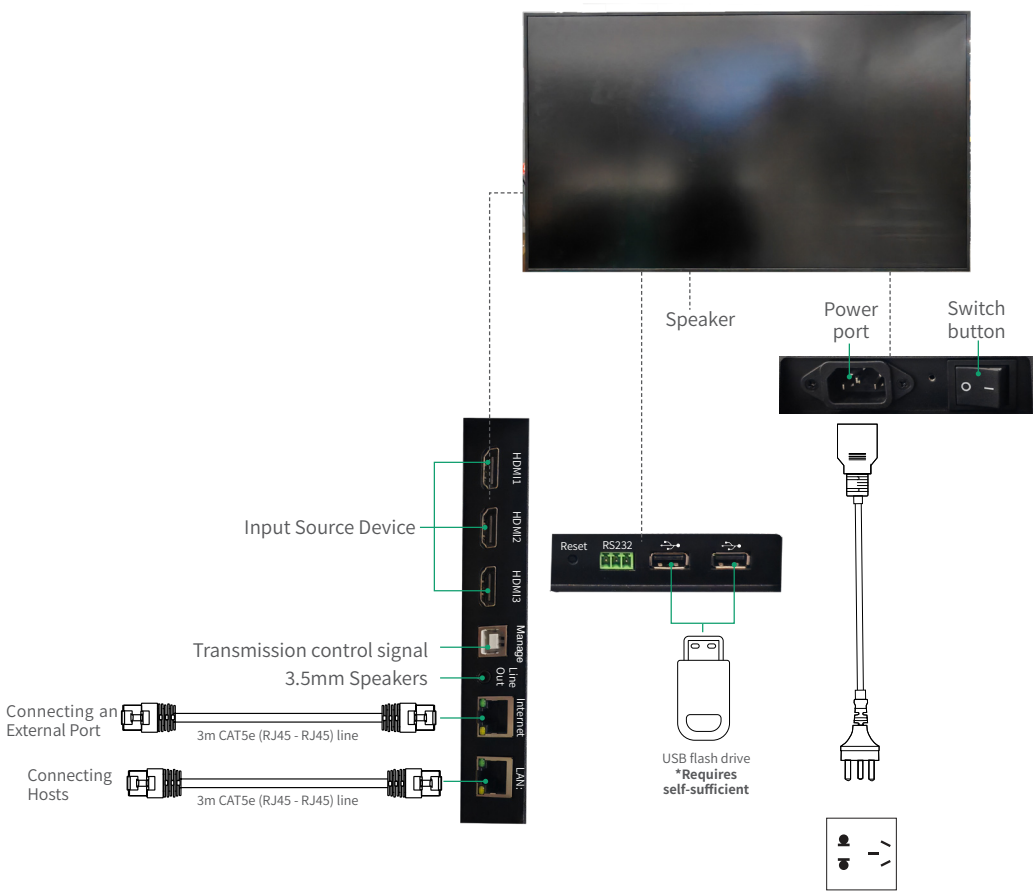

5 Power on

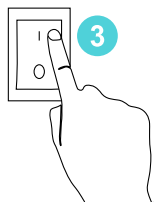


1. Insert the end of the power cable into the power port of the endpoint.
2. Insert the power cord plug into the outlet. Turn the rocker switch button on the right rear of the endpoint to "I" to turn on the endpoint.
3. Turn on the main switch.

Upon first power-on of the endpoint, follow the on-screen setup wizard to configure language, time, network, etc., to initialize the configuration. The initialization operations vary with software versions.

i After the endpoint is started for the first time or restored to factory settings, go to settings on the touchscreen to configure the admin password (default password:0000).

6 Power outage

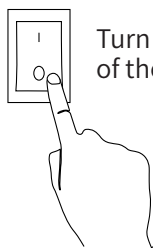

Turn the rocker switch button on the right rear of the endpoint to "O" to turn off the endpoint.

Operating Ambient Temperatures

- Operating temperature: +32 to 104°F (0 to 40°C)
- Relative humidity: 10% to 95%, noncondensing
- Storage temperature: -22 to +158°F (-30 to +70°C)

Warranty

Our product warranty is limited only to the unit itself, when used normally in accordance with the operating instructions and the system environment. We are not liable for damage or loss

resulting from the use of this product, or for any claim from a third party. We are not liable for problems with Yealink device arising from the use of this product; we are not liable for financial

damages, lost profits, claims from third parties, etc., arising from the use of this product.

Explanation of the symbols

DC symbol



is the DC voltage symbol.

WEEE Warning symbol



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol.

Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

Restriction of Hazardous Substances Directive (RoHS)

This device complies with the requirements of the EU RoHS Directive. Statements of compliance can be obtained by contacting support@yealink.com.

Safety Instructions

Save these instructions. Read these safety instructions before use!



General Requirements

- Before you install and use the device, read the safety instructions carefully and observe the situation during operation.
- During the process of storage, transportation, and operation, please always keep the device dry and clean, avoid collision and crash.
- Please attempt not to dismantle the device by yourself. In case of any discrepancy, please contact the appointed maintenance center for repair.
- Please refer to the relevant laws and statutes while using the device. Legal rights of others should be respected as well.



Environmental Requirements

- Do not cover ventilation openings, this equipment is not intended to be used on soft support.
- The marking information is located at the exterior of the bottom
- Place the device at a well-ventilated place. Do not expose the device under direct sunlight.
- Keep the device dry and free of dusts.
- Do not place the device on or near any inflammable or fire-vulnerable object, such as rubber-made materials.
- Keep the device away from any heat source or bare fire, such as a candle or an electric heater.



Operating Requirements

- Do not let a child operate the device without guidance.
- Do not let a child play with the device or any accessory in case of accidental swallowing.
- Please use the accessories provided or authorized by the manufacturer only.
- The power supply of the device shall meet the requirements of the input voltage of the device. Please use the provided surge protection power socket only.
- Before plugging or unplugging any cable, make sure that your hands are completely dry.
- Do not spill liquid of any kind on the product or use the equipment near water, for example, near a bathtub, washbowl, kitchen sink, wet basement or near a swimming pool.
- During a thunderstorm, stop using the device and disconnect it from the power supply. Unplug the power plug and the Asymmetric Digital Subscriber Line (ADSL) twisted pair (the radio frequency cable) to avoid lightning strike.
- If the device is left unused for a rather long time, disconnect it from the power supply and unplug the power plug.

- When there is smoke emitted from the device, or some abnormal noise or smell, disconnect the device from the power supply, and unplug the power plug immediately.
- Contact the specified maintenance center for repair.
- Do not insert any object into equipment slots that is not part of the product or auxiliary product.
- Before connecting a cable, connect the grounding cable of the device first. Do not disconnect the grounding cable until you disconnect all other cables.



Cleaning Requirements

- Use a piece of soft, dry and anti-static cloth to clean the device.

Troubleshooting

The usage environment is out of operating temperature range.

1. Use in the operating temperature range.

The cable between the unit and the Yealink device is connected incorrectly.

1. Connect the cable correctly.

Some dust, etc., may be in the port.

1. Clean the port.

Contact your dealer or authorized service facility for any further questions.

FCC CAUTION:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio

frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ISED WARNING:

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This Class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Les communications effectuées au moyen de cet appareil ne sont pas nécessairement protégées des indiscretions.

This equipment complies with FCC/ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

L'appareil est conforme aux limites d'exposition aux rayonnements spécifiées par la FCC/ISED pour les environnements non contrôlés. La distance entre le radiateur et le corps doit être d'au moins 20 cm lors de l'installation et du fonctionnement de l'appareil.

Cet émetteur ne doit pas coexister ou fonctionner conjointement avec toute autre antenne ou émetteur.

The device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

Operation of 5250-5350 MHz is restricted to indoor use only.

L'appareil destiné à fonctionner dans la bande 5150–5250 MHz est uniquement destiné à une utilisation en intérieur afin de réduire le risque d'interférence nuisible aux systèmes mobiles par satellite utilisant le même canal.

L'utilisation de la bande 5250-5350 MHz est limitée à une utilisation en intérieur uniquement.

EU Regulatory Information

Support Frequency Bands and Power:

WLAN 2.4 GHz < 20 dBm;

WLAN 5150-5250 MHz < 23 dBm;

WLAN 5250-5350 MHz < 20 dBm;

WLAN 5470-5725 MHz < 27 dBm;

WLAN 5745-5825 MHz < 14 dBm;



BE	BG	CZ	DK	DE	EE	IE	EL
ES	FR	HR	IT	CY	LV	LT	LU
HU	MT	NL	AT	PL	PT	RO	SI
SK	FI	SE	NO	IS	LI	CH	TR

In all EU member states, operation of 5150-5350 MHz is restricted to indoor use only.



- ENERGY STAR®
- Yealink's ENERGY STAR qualified products save you money by
- reducing energy costs and helps protect the environment without
- sacrificing features or performance. Acer is proud to offer our

- customers products with the ENERGY STAR mark.
- What is ENERGY STAR?
- Products that are ENERGY STAR qualified use less energy and prevent
- greenhouse gas emissions by meeting strict energy efficiency guidelines
- set by the U.S. Environmental Protection Agency. Yealink is committed to offer
- products and services worldwide that help customers save money,
- conserve energy and improve the quality of our environment. The more
- energy we can save through energy efficiency, the more we reduce
- greenhouse gases and the risks of climate change. More information
- refers to <http://www.energystar.gov>.
- Yealink ENERGY STAR qualified products:
 - • Produce less heat and reduce cooling loads, and warmer climates.
 - • Automatically go into "display sleep" within 5 minutes of inactivity.
 - • Wake the monitor when it is in Active Off mode, move the mouse or
 - press any keyboard key.

ENERGY STAR and the ENERGY STAR mark are registered U.S. marks

Contact Information

YEALINK NETWORK TECHNOLOGY CO.,LTD.

No.666 Hu'an Rd,Huli District Xiamen City, Fujian, P.R. China

Yealink (Europe) Network Technology GmbH

Georg-Muche-Straße 5, 80807 Munich

YEALINK (USA) NETWORK TECHNOLOGY CO., LTD.

Suite 160, 5445 legacy drive, Plano, Texas, 75024, United States

Made in China



The HDMI, HDMI logo, and HDMI HD multimedia interfaces are Trademark or registered trademark of HDMI Licensing Administrator, Inc.

About Yealink

Yealink (Stock Code: 300628) is a global-leading provider of Unified Communication & Collaboration Solutions specialized in video conferencing, voice communications, and collaboration, dedicated to helping every person and organization embrace the power of "Easy Collaboration, High Productivity".

With best-in-class quality, innovative technology, and user-friendly experiences, Yealink is one of the best providers in more than 140 countries and regions, ranks No.1 in the global market share of IP Phone, and is the Top 5 leader in the video conferencing market (Frost & Sullivan, 2021).

Technical Support

Visit Yealink WIKI (<http://support.yealink.com/>) for firmware downloads, product documents, FAQ, and more. For better service, we sincerely recommend you to use Yealink Ticketing system (<https://ticket.yealink.com>) to submit all your technical issues.



YEALINK(XIAMEN) NETWORK TECHNOLOGY
CO.,LTD.

Web: www.yealink.com

Addr: No.666 Hu'an Rd,Huli District Xiamen City,
Fujian, P.R. China

Copyright©2024 Yealink Inc. All right reserved.