

Yealink

 
T74LTE(US)

4G LTE Desk Phone




Package Contents


The following items are included in your package.

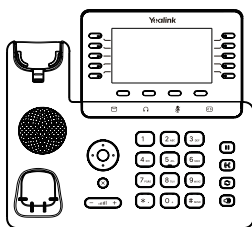


Phone

 


Handset

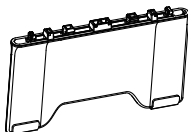 

Stand

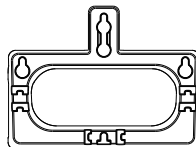 


Wall-mount bracket
(optional)

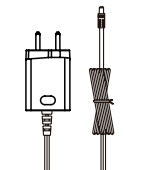 


Power adapter



 Ethernet Cable
(2m CAT5E UTP Cable)
(Optional)



Handset cord

 

Screw
Screwdriver



SIM card cover

 
 


Quick-start guide



Assembling the Phone

1. Desk-mount


Attach the Stand

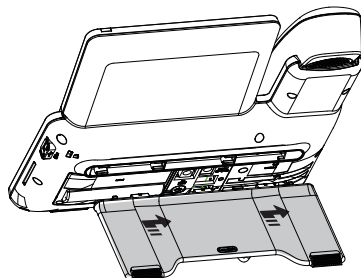


Low-Angle side up.

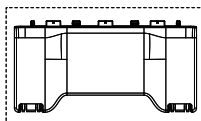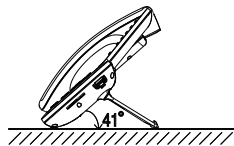  

Another side up.

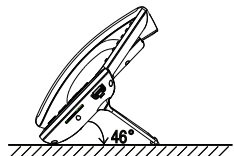 


 2. Connect Cables

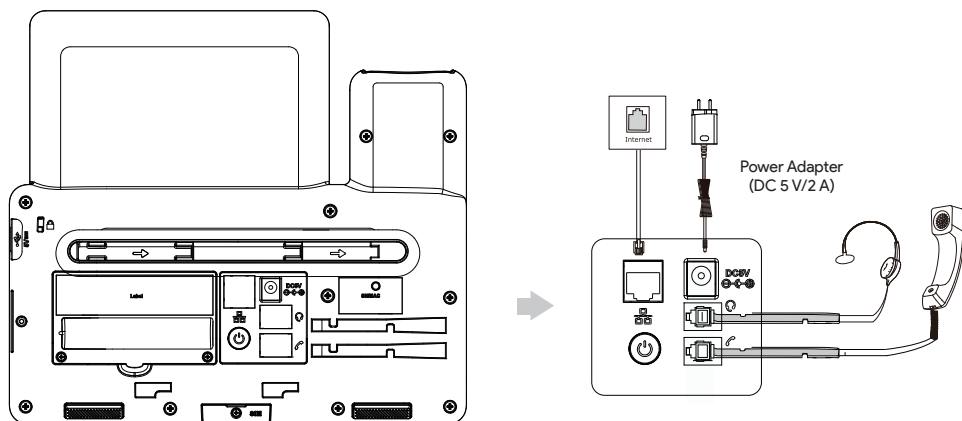


Note: The T74LTE(US) Desk phone should be used with Yealink original power adaptor (5 V/2 A) only. The use of the third-party power adaptor may cause the damage to the phone.

 3. Optional: Connect the USB Devices

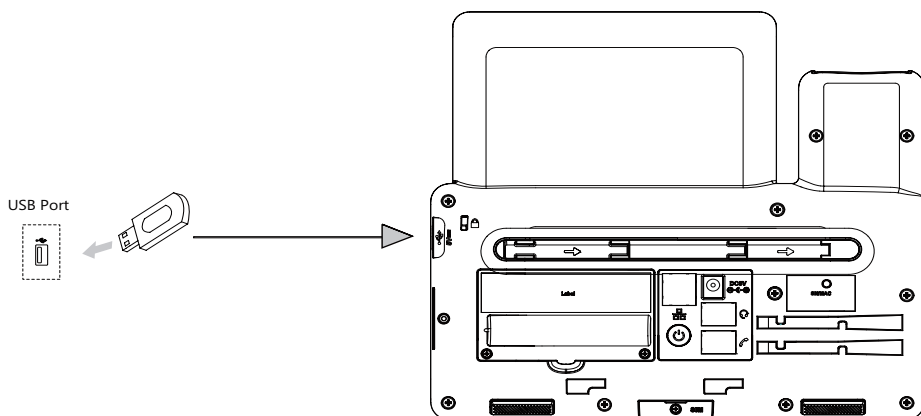


Note: The USB port (5 V/0.5A) can also be used to connect other USB devices.

 4. Insert a Nano SIM Card

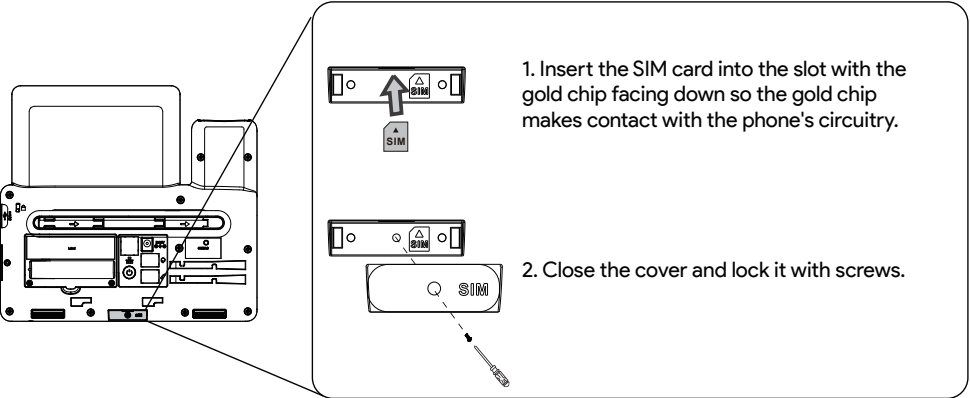

Note: You can look for the small picture on the phone indicating how the notched corner on the SIM fits into the slot.
Push the card harder to remove the card.

 Hardware Introduction

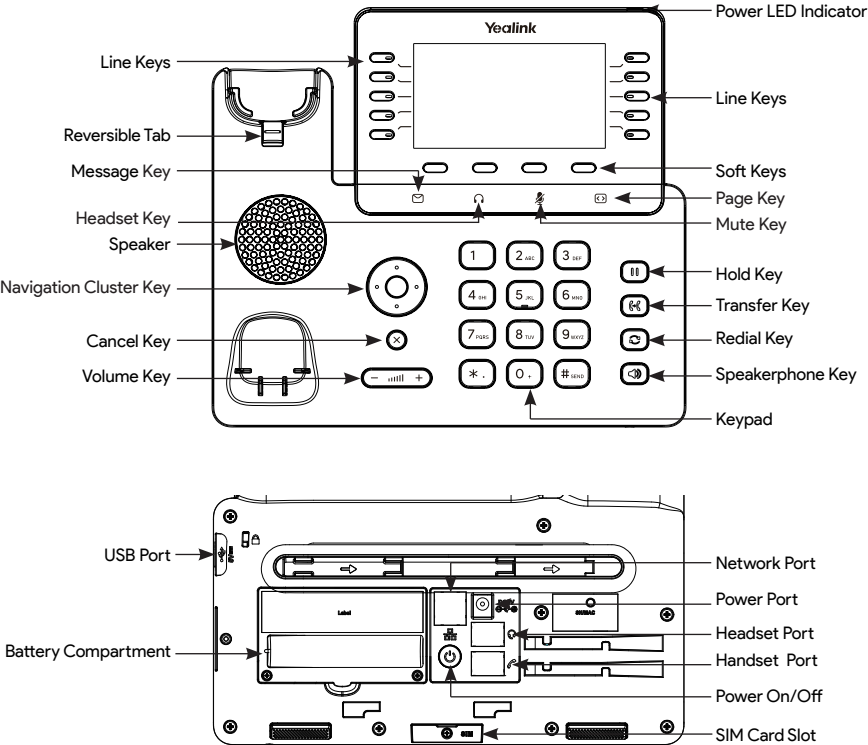

Configure Your Phone

Configure via Web User Interface

Access the web user interface:

1. Press the **OK** key when the phone is idle to obtain the IP address of the phone.
2. Open a web browser on your computer, enter the IP address into the address bar (e.g., "http://192.168.0.10" or "192.168.0.10"), and then press **Enter**.
3. Enter the user name (default: admin) and password in the login page and click **Login**.

Network Settings: Click **Network**→**Basic**→**IPv4 Config**.

You can configure the network settings in the following ways:

DHCP: By default, the phone attempts to contact a DHCP server in your network to obtain its valid network settings, e.g., IP address, subnet mask, gateway address and DNS address.

Static IP: If your phone can not contact a DHCP server for any reason, you need to configure the IP address, subnet mask, gateway address, primary DNS address and secondary DNS address for the phone manually.

Note:

1. The IP phone also supports IPv6, but IPv6 is disabled by default.
2. The wrong network settings may result in the inaccessibility of your phone and may have an impact on the network performance. Contact your system administrator for more information.

Account Settings: Click **Account**→**Register**→**Account X (X=1,2,3...11,12)**

Parameters of the account:

Parameter	Description
Register Status	It shows the register status of the current account.
Line Active	You can select Enabled/Disabled to enable/disable the account.
Label	It is shown on the LCD screen to identify the account.
Display Name	It is shown as Caller ID when placing a call.
Register Name	It is an authenticated ID for authentication provided by ITSP (required).
User Name	It is provided by ITSP for registration (required).
Password	It is provided by ITSP for registration (required).
Server Host	It is provided by ITSP for registration (required).

Register status icons on the LCD screen:



Registered



Registering



Register Failed

Note: Check with your system administrator if any error appears during the registration process or a specific configuration is required for your registration.

Configure via Phone User Interface

Network Settings:

Press the **Menu** soft key when the phone is idle, select **Advanced**→**Network**→**LTE/PC-WAN Port/Wi-Fi Port/VLAN/Web Server/802.1x/VPN/LLDP/CDP/NAT** to configure the network.

Account Settings:

Press the **Menu** soft key when the phone is idle, select **Advanced**→**Accounts** to configure the account.

Note: For more information on account parameters, refer to **Configuring via web user interface** above.

Basic Call Features

Place a Call

Use the handset:

1. Pick up the handset.
2. Enter the number, and then press the **Call** soft key.

Use the speakerphone:

1. With the handset on-hook, press .
2. Enter the number, and then press the **Call** soft key.

Use the headset:

1. With the headset connected, tap  to activate the headset mode.
2. Enter the number, and then press the **Call** soft key.

Note: During a call, you can alternate between the headset, hands-free speakerphone and handset modes by pressing the **Headset** key, the **Speakerphone** key or by picking up the handset. Headset mode requires a connected headset.

Answer a Call

Use the handset:

Pick up the handset.

Use the speakerphone:

Press .

Use the headset:

Tap .

Note: You can reject an incoming call by pressing the **Reject** soft key.

End a Call

Use the handset:

Hang up the handset or press the **End Call** soft key.

Use the speakerphone:

Press  or the **End Call** soft key.

Use the headset:

Press the **End Call** soft key.

Redial

- Press  to enter the placed call list, press the **Navigation Cluster** key to select the desired entry, and then press  or the **Call** soft key.
- Press  twice when the phone is idle to dial out the last dialed number.

Call Mute and Un-mute

- Tap  to mute the microphone during a call.
- Tap  again to un-mute the call.

Call Hold and Resume

To place a call on hold:

Press the **Hold** soft key/  during an active call.

To resume the call, do one of the following:

- If there is only one call on hold, press the **Resume** soft key/ .
- If there is more than one call on hold, press the **Navigation Cluster** key to select the desired call, and then press the **Resume** soft key/ .

Call Transfer

You can transfer a call in the following ways:

Blind Transfer

1. Press the **Transfer** soft key/  during an active call. The call is placed on hold.
2. Enter the number you want to transfer to.
3. Press the **B Transfer** soft key.

Semi-Attended Transfer

1. Press the **Transfer** soft key/  during an active call. The call is placed on hold.
2. Enter the number you want to transfer to, and then press the **Call** soft key.
3. Press the **Transfer** soft key/  when you hear the ring-back tone.

Attended Transfer

1. Press the **Transfer** soft key/  during an active call. The call is placed on hold.
2. Enter the number you want to transfer to, and then press the **Call** soft key.
3. Press the **Transfer** soft key/  when the second party answers.

Call Forward

To enable call forward:

1. Press the **Menu** soft key when the phone is idle, and then select **Features**→**Call Forward**.
2. Select the desired forward type:
 - **Always Forward**—Incoming calls are forwarded unconditionally.
 - **Busy Forward**—Incoming calls are forwarded when the phone is busy.
 - **No Answer Forward**—Incoming calls are forwarded if not answered after a period of time.
3. Enter the number you want to forward to. For **No Answer Forward**, press the **Navigation Cluster** key to select the desired ring time to wait before forwarding from the **After Ring Time** field.
4. Press the **Save** soft key to accept the change.

Call Conference

1. Press the **Conference** soft key during an active call. The call is placed on hold.
2. Enter the number of the second party, and then press the **Call** soft key.
3. Press the **Conference** soft key again when the second party answers. All parties are now joined in the conference.
4. Press the **End Call** soft key to disconnect all parties.

Note: You can split the conference call into two individual calls by pressing the **Split** soft key.

Speed Dial

To configure a speed dial key:

1. Press the **Menu** soft key when the phone is idle, and then select **Features**→**Dsskey**.
2. Select the desired DSS key, and then press the **Enter** soft key.
3. Select **SpeedDial** from the **Type** field, select the desired line from the **Account ID** field, enter a label in the **Label** field and then enter the number in the **Value** field.
4. Press the **Save** soft key to accept the change.

To use the speed dial key:

Press the speed dial key to dial out the preset number.

Voice Message

Message waiting indicator on the idle screen indicates that one or more voice messages are waiting at the message center. The power indicator LED slowly flashes red.

To listen to voice messages:

1. Tap  or the **Connect** soft key.
2. Follow the voice prompts to listen to your voice messages.

Customize Your Phone

Call History

1. Press the **History** soft key when the phone is idle, press the **Navigation Cluster** key to scroll through the list.
 2. Select an entry from the list, you can do the following:
 - Press the **Call** soft key to call the entry.
 - Press the **Delete** soft key to delete the entry from the list.
- If you press the **Option** soft key, you can also do the following:
- Select **Detail** to view detailed information about the entry.
 - Select **Add to Contacts** to add the entry to the local directory.
 - Select **Add to Blocklist** to add the entry to the blocklist.
 - Select **Delete All** to delete all entries from the list.

Contact Directory

To add a contact:

1. Press the **Directory** soft key when the phone is idle, and then select **All Contacts**.
2. Press the **Add** soft key to add a contact.
3. Enter a unique contact name in the **Name** field and contact numbers in the corresponding fields.
4. Press the **Save** soft key to accept the change.

To edit a contact:

1. Press the **Directory** soft key when the phone is idle, and then select **All Contacts**.
2. Press the **Navigation Cluster** key to select the desired contact, press the **Option** soft key and then select **Detail** from the prompt list.
3. Edit the contact information.
4. Press the **Save** soft key to accept the change.

To delete a contact:

1. Press the **Directory** soft key when the phone is idle, and then select **All Contacts**.
2. Press the **Navigation Cluster** key to select the desired contact, press the **Option** soft key and then select **Delete** from the prompt list.
3. Press the **OK** soft key when the LCD screen prompts "Delete selected item?".

Note: You can add contacts from call history easily. For more information, refer to **Call History** above.

Volume Adjustment

- Press   during a call to adjust the receiver volume of the handset/speakerphone/headset.
- Press   when the phone is idle or ringing to adjust the ringer volume.
- Press   to adjust the media volume in the corresponding screen.

Ring Tones

1. Press the **Menu** soft key when the phone is idle, and then select **Settings**→**Basic**→**Sound**→**Ring Tones**.
2. Press the **Navigation Cluster** key to select **Common** or the desired account and then press the **Enter** soft key.
3. Press the **Navigation Cluster** key to select the desired ring tone.
4. Press the **Save** soft key to accept the change.

Regulatory Notices

Operating Ambient Temperatures

- Operating temperature: +32 to 104°F (0 to 40°C)
- Relative humidity: 5% to 90%, noncondensing
- Storage temperature: -22 to +158°F (-30 to +70°C)

Warranty

Our product warranty is limited only to the unit itself, when used normally in accordance with the operating instructions and the system environment. We are not liable for damage or loss resulting from the use of this product, or for any claim from a third party. We are not liable for problems with Yealink device arising from the use of this product; we are not liable for financial damages, lost profits, claims from third parties, etc., arising from the use of this product.

Explanation of the symbols

- DC symbol (Apply for DC powered products)
- is the DC voltage symbol.
- WEEE Warning symbol



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, and users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol.

Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

Restriction of Hazardous Substances Directive (RoHS)

This device complies with the requirements of the EU RoHS Directive. Statements of compliance can be obtained by contacting support@yealink.com.

Safety Instructions

Save these instructions. Read these safety instructions before use!



General Requirements

- Before you install and use the device, read the safety instructions carefully and observe the situation during operation.
- During the process of storage, transportation, and operation, please always keep the device dry and clean, avoid collision and crash.
- Please attempt not to dismantle the device by yourself. In case of any discrepancy, please contact the appointed maintenance center for repair.
- Please refer to the relevant laws and statutes while using the device. Legal rights of others should be respected as well.



Environmental Requirements

- Do not cover ventilation openings, this equipment is not intended to be used on soft support.
- The marking information is located at the exterior of the bottom.
- Place the device at a well-ventilated place. Do not expose the device under direct sunlight.
- Keep the device dry and free of dusts.
- Do not place the device on or near any inflammable or fire-vulnerable object, such as rubber-made materials.
- Keep the device away from any heat source or bare fire, such as a candle or an electric heater.



Operating Requirements

- Do not let a child operate the device without guidance.
- Do not let a child play with the device or any accessory in case of accidental swallowing.
- Please use the accessories provided or authorized by the manufacturer only.
- The power supply of the device shall meet the requirements of the input voltage of the device. Please use the provided surge protection power socket only.
- Before plugging or unplugging any cable, make sure that your hands are completely dry.
- Do not spill liquid of any kind on the product or use the equipment near water, for example, near a bathtub, washroom, kitchen sink, wet basement or near a swimming pool.
- During a thunderstorm, stop using the device and disconnect it from the power supply. Unplug the power plug and the Asymmetric Digital Subscriber Line (ADSL) twisted pair (the radio frequency cable) to avoid lightning strike.
- If the device is left unused for a rather long time, disconnect it from the power supply and unplug the power plug.
- When there is smoke emitted from the device, or some abnormal noise or smell, disconnect the device from the power supply, and unplug the power plug immediately.
- Contact the specified maintenance center for repair.
- Do not insert any object into equipment slots that is not part of the product or auxiliary product.
- Before connecting a cable, connect the grounding cable of the device first. Do not disconnect the grounding cable until you disconnect all other cables.



Cleaning Requirements

- Before cleaning the device, disconnect it from the power supply.
- Use a piece of soft, dry and anti-static cloth to clean the device.
- Keep the power plug clean and dry.



Battery Precautions (Apply for lithium battery products)

- Do not immerse the battery into water, which could short-circuit and damage the battery.
- Do not expose the battery to an open flame or leave the battery where it could be subjected to extremely high temperatures, which could cause the battery to explode.
- Do power the handset off before removing the battery.
- Do not try to use the battery for the power supply of any device other than this device.
- Do not open or mutilate the battery, released electrolyte is corrosive and may cause damage to the your eyes or skin.
- Use only the rechargeable battery pack delivered with the device or those rechargeable battery packs expressly recommended by Yealink.
- Defective or exhausted battery should never be disposed of as municipal waste. Return old battery to the battery supplier, a licensed battery dealer or a designated collection facility.

Troubleshooting

The unit cannot supply power to Yealink device.

There is a bad connection with the plug.

1. Clean the plug with a dry cloth.
2. Connect it to another wall outlet.

The usage environment is out of operating temperature range.

1. Use in the operating temperature range.
- The cable between the unit and the Yealink device is connected incorrectly.

1. Connect the cable correctly.
- You cannot connect the cable properly.
1. You may have connected a wrong Yealink device.
2. Use the correct power supply.

Some dust, etc., may be in the port.

1. Clean the port.

Contact your dealer or authorized service facility for any further questions.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: ① This device may not cause harmful interference, and ② this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must be co-located or operating in conjunction with any other antenna or transmitter.

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of this equipment is a label that contains, among other information, a product identifier in the format US:T2LIPNANT74L TEUS

The following applies to products using Wi-Fi 5GHz 5150-5350 MHz:

The device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

les dispositifs fonctionnant dans la bande 5150-5250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux.

The following applies to products used at a distance greater than 20cm:

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The equipment should be installed and operated with minimum distance 20cm between the radiator and your body.



AT BE CY CZ DK EE FI
FR GB HU IE IT LV
LT LU MT NL PT PL
SI ES SE UK BG RO HR

In all EU member states, operation of 5150-5250 MHz is restricted to indoor use only.

EU Regulatory Information

Support Frequency Bands and Power:

- DECT 1.8GHz-1.9GHz < 24 dBm (Apply to products with DECT technology)
- Bluetooth 2.4GHz < 20 dBm (Apply to products with Bluetooth technology)
- WLAN 2.4 GHz < 20 dBm; (Apply to products with Wi-Fi 2.4GHz technology)
- WLAN 5150-5250 MHz < 23 dBm; (Apply to products with Wi-Fi 5GHz technology)
- WLAN 5250-5350 MHz < 20 dBm; (Apply to products with Wi-Fi 5GHz technology)
- WLAN 5470-5725 MHz < 20 dBm; (Apply to products with Wi-Fi 5GHz technology)
- WLAN 5745-5825 MHz < 14 dBm; (Apply to products with Wi-Fi 5GHz technology)

Hereby, Yealink declares that this product is in compliance with essential requirements and other relevant provisions of Directive 2014/30/EU(wired products), 2014/35/EU(wired products), RED 2014/53/EU(wireless products), and other applicable EU directive requirements. For further information, please consult the Declarations of Conformity section at <https://support.yealink.com>.

Contact Information

YEALINK NETWORK TECHNOLOGY CO., LTD.

No.666 Hu'an Rd.Huli District Xiamen City, Fujian, P.R. China

support@yealink.com

Made in China

Yealink (Europe) Network Technology GmbH

Georg-Mueller-Straße 5, 80807 Munich

EUROPE@yealink.com

YEALINK (USA) NETWORK TECHNOLOGY CO., LTD.

Suite 160, 5445 legacy drive, Plano, Texas, 75024, United States

Made in China

Technical Support

Visit Yealink WIKI (<http://support.yealink.com/>) for the latest firmware, guides, FAQ, Product documents, and more.
For better service, we sincerely recommend you to use Yealink Ticketing system (<https://ticket.yealink.com>) to submit all your technical issues.



YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD.
Web: www.yealink.com
Copyright©2025 YEALINK(XIAMEN) NETWORK
TECHNOLOGY CO.,LTD. All rights reserved.