

8. DISCLAIMER

The manufacturer, distributor and retailer will not take responsibility for any loss or liability resulting from the use of this product. When the Mini Reminder is normally used, it will reduce the possibility of loss of protected objects. However, the Mini Reminder is no substitute for strict attention to children, pets and objects of value, but is meant as an added tool to limit the possibility of loss either by theft, kidnapping or negligence.

READ FIRST BEFORE USE

1. Turn the Transmitter unit on first before turning the Receiver to VS.
2. Reshape the antenna into an oval loop, but do not cut it off.

Mini Reminder Troubleshooting Guide

Symptom	Possible Causes	Remedy
1) Receiver activates continuously or occasionally within the monitoring range.	* Transmitter battery is low. * Transmitter is off, or Receiver failed code learning * Transmitter antenna is broken * Antenna is twisted. * Antenna is loose.	* Change the battery. (See manual) * Turn on transmitter first before tuning on Receiver. * Replace antenna. (See manual) * Re-shape antenna. (See manual) * Re-tighten antenna. (See Manual)
2) Receiver activates when the Transmitter is very close to some RF wireless devices. The monitoring range may vary.	* Transmitter and Receiver may catch some RF interference.	* Set the Receiver distance switch to L. * Slightly move or rotate the protected object if possible.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID No.: T2EUT-MRR05-GENIS

A Product of
Genis International Corporation
Miami, Florida 33181
Web Page : www.minireminderusa.com
China

Patent Pending

(4)

 
MR INSTRUCTION MANUAL

Model #: MRR05

Mini Reminder™

1. Contents


- * One Receiver unit
- * One Transmitter unit
- * One nylon necklace
- * One key-hook
- * One spare Transmitter antenna
- * One wrist Velcro™ band (Long)
- * One extra safety Velcro™ band (Short)
- * Three bottom Velcro™ mounts for objects
- * Instruction manual

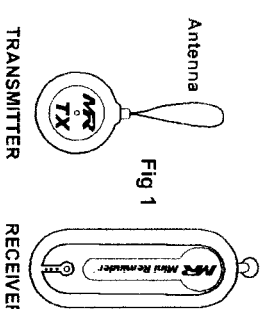

2. Initial Set-up


2.1 Receiver unit

- a. Remove the 'READ FIRST BEFORE USE' Sticker.
- b. Receiver unit can be used with a necklace or metal key-hook as desired. (See Fig. 2)

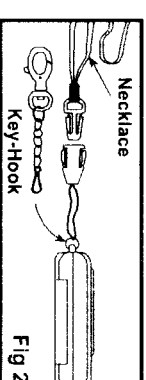

2.2 Transmitter unit

- a. Transmitter unit is pre-installed with a 3V Li-Ion battery (CR-2032 or equivalent, included).
- b. The Transmitter can be attached to the object you wish to protect with Velcro mount or Velcro band. The Transmitter is pre-attached with a top Velcro mount on the back. (See Fig. 3)
- c. Three pieces of bottom Velcro mounts (included) can be attached to three different objects with a flat surface (non-metal).
- d. The Transmitter can be attached on the wrist Velcro band. **WARNING:** An extra safety Velcro band may be needed to hold the Transmitter tightly in order to prevent small children from taking it off and swallowing it by accident. It also can be used on pets for the same safety purpose. (See Fig. 4)

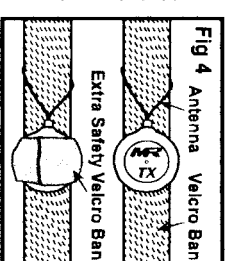

3. Testing

Transmitter - Turn the Transmitter power switch to **ON** position. The LED indicator should flash continuously.

Notes : 1) *Do not cut off the antenna. The broken antenna can be removed and replaced by spare one (included). The antenna must be in good condition to normally operate the Mini Reminder.*

(1)