


PROFESSIONAL FM TRANSCEIVER

POC Radio

Super anti-fall super clear sound quality

USER'S MANUAL

familiar with this machine

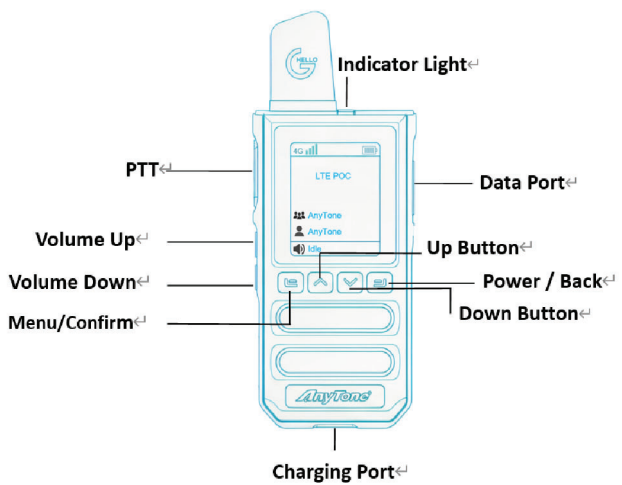

Preface

Welcome to use the company developed the public network digital trunking interphone. High-capacity polymer lithium batteries, high-fidelity speakers and other high-tech configuration, The utility model has the advantages of simple operation, practical function, power saving and durable, clear communication, low price and good quality. This machine has excellent audio decoding technology, super energy-saving control chip, microwave digital voice intercom system. In order to make you fully understand the advantages of the product. Safe use, please read this manual carefully before use.

Statement of Rights

Reproduction, transmission, distribution and storage of any content in this manual in any form is strictly prohibited without the prior written permission of the Company. In line with the principle of continuous improvement and sustainable development, the Company reserves without prior notice, The right to modify or improve any product described in this manual. Under no circumstances shall the Company make any loss of data or otherwise, Or any direct or indirect damage caused by any special event or accident. The contents of this manual are provided as they are. No warranty of any kind, express or implied, is given as to its accuracy, reliability or content, unless otherwise provided by applicable law, This includes, but is not limited to, guarantees of merchantability and practicality for specific purposes. The Company reserves the right to amend or withdraw this manual at any time without prior notice. If the contents described in this manual do not match your walkie-talkie, please refer to the walkie-talkie. The company reserves the right of final interpretation of this manual.

Keys and parts

Introduction of the names and functions of mobile phones

Name	Function
Volume Key	Adjust the volume
Boot key	Turn on the intercom
PTT Key	Standby state, press the key to enter the interphone function. In the interphone function, press the key can be PTT intercom function operation.
Side keys	Shortcut keys
Menu key	Standby state, press the key to enter the main menu operation function. In the interphone function, function ipsilateral key. In the Interphone function, into the friends list or group members list, you can select the list to form a temporary group to talk.
Return key	Returns the parent menu during a menu operation When editing new information, short press this key to delete the characters in front of the cursor, long press this key to delete all the characters in front of the cursor.
Navigation keys	Move the selection bar during a menu operation.

Install UIM card

After the shutdown. The UIM card has a chip side, along the direction of the card slot can be inserted to the end.

3.Basic operation

3.1Power on and off

- A.Press the " boot button " for 2 seconds until the display appears boot animation.
- B.Shutdown standby state, long press the " shutdown button " until the screen appears shutdown screen.

2.Start using

Battery charge

- Use the original charger to charge.
 - Please charge the battery before the first use.
 - Plug the charger into the data / charging port of the intercom.
 - Plug the charger into an electrical outlet and start charging.
 - After charging, unplug the charger from the electrical outlet and then unplug the plug from the intercom.
 - After charging, the battery is about 95% full. Please keep charging for more than half an hour.
- 1.When the phone has a low power alarm, its LED flashes to remind it of the need to charge, while the UI part of the battery status bar flashes. Before inserting the charger, there will be periodic " Didi " low-power alarm to remind users to charge.
2. When the charger is plugged in, the red light flashes to remind you that it is charging; when the charging is complete, the receiving light is always on.
3. Press the card key to boot animation + boot ringtone completed, search network + start interphone application completed, standby interface display native name + current group name.

C.Switching groups

- a. Press the Menu Key to go to the Menu List and go to the Select Groups menu.
- b. Press the menu key to enter the group and view the list of group members.
- c. Press " return key " to return, press " PTT key " to send voice.

D.Selection function

- a. This machine has two types of call options, group call and buddy call.
- b. Group members: When using this method, each member can not join more than 64 groups, and the total number of members of all groups that the user joins can not exceed 200, otherwise the intercom may not be used properly.

E. ModE of transmission

When you press the PTT key, when the light is on, it means you are in send mode and the other person will hear what you are saying. When it is being sent, a higher level of user initiated intercom, it will exit the send mode, into the receive mode, at this time you can only passively receive each other's voice, What you say can't be heard. If you have been followed by the PTT key intercom, then the other party to send the end, will directly into send mode. When in send mode, the LCD screen displays " Native Speaking... " .

All users are assigned speech permissions, which are high, medium, and low. A high-priority user can steal a low-priority user's speech.

F. Reception model

When the receiving light is on, it will exit the receiving intercom mode in order to answer the other speaker:

1.When the native priority is higher than the other priority, pressing the PTT key will enter the send mode.

2.When in receive mode, the other user's name is displayed on the LCD screen.

a. Take the group list as an example to use the following method (friends members use the same way.

b.only the background Settings different) press the " menu key " to enter the menu.

c. Press the menu key to get to the group list.

d. Select the group of users you want to speak to individually, and press Menu Key to enter the group to see the list of members of the group.

e. Select the users in the group you want to talk to individually (only online users can choose to call, offline users can not choose to call).

f.Press the PTT key to create a temporary group.

g. When the conversation is complete, press the return key to exit and return to the current group.

Note: Only on-line users (that is, the other party has been turned on and successfully logged in) can be selected.

FCC compliance statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference including received interference that may cause undesired operation.

The grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user’s authority to operate the equipment.

Replacement of any transmitter component (crystal, semiconductor, etc.) not authorized by the FCC equipment authorization for this radio could violate FCC rules.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Statement:

SAR tests are conducted using standard operating positions accepted by FCC with the device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. Before a new model is an available for sale to the public, it must be tested and certified to the FCC that is does not exceed the exposure limit established by the FCC. Tests for each product are performed in positions and locations as required by the FCC. For body worn operation, this device has been tested and meets the FCC RF exposure guidelines when used with and accessory designated for this product or when used with and accessory that contains no metal. To maintain compliance with FCC RF exposure guidelines, hold the transmitter and antenna at least 1 inch (2.5 centimeters) from your face and speak in a normal voice, with the antenna pointed up and away from the face.