




AC1200 Wireless Dual Band VDSL2 Gigabit VoIP IAD

Quick Installation Guide




1.Package Contents

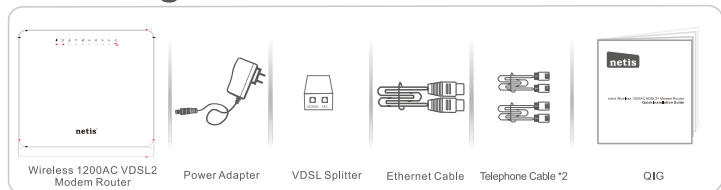

* This QIG is for all netis wireless AC1200 VDSL2 modem routers, including models- DL4480V, etc.

* The product model shown in this QIG is DL4480V, as an example.

2.Hardware Connection

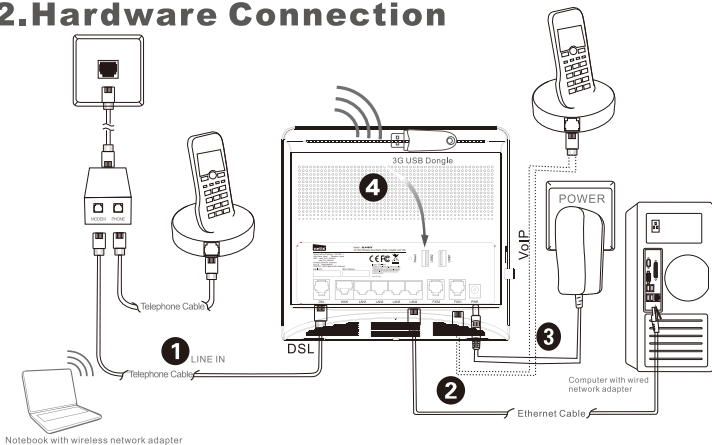

2.1. Connect the DSL line with the attached telephone cable.

- Connect the **LINE** port of VDSL Splitter to the wall jack with a telephone cable.
- Connect the **MODEM** port of VDSL Splitter to the **DSL** (or **PHONE** port for VoIP telephone) port on netis Modem Router with the other telephone cable.
- Connect your telephone to the **PHONE** port of VDSL Splitter.

Tip: If no telephone is needed, please connect the DSL port on netis Modem Router to the wall jack with the phone cable directly.

2.2. Connect your computer to one of the LAN port on netis Modem Router with an Ethernet cable.

2.3. Plug the provided Power Adapter into the **DC-IN** jack of netis Modem Router and the other end to a standard electrical socket.

2.4. Wait for one minute then check if the LED indicators of the Modem Router display normally.

- **POWER:** Solid on.
- **DSL:** Solid on when the modem is synchronized.
- **LAN:** Solid on or flashing if the corresponding LAN port is connected.

Tip: If the LED indicators display abnormally, please check if all the cables are well connected. If the DSL LED is off or flashing, please contact your ISP (Internet Service Provider) to check the Internet connection.

3. Configure the Modem Router via Web Management Page

3.1. Necessary Information before the configuration.

For a successful setup, you're recommended to contact your ISP first and ask for the following network parameters which will be required during the configuration procedures.

- Username&Password
- Connection Type;
- Encapsulation Type (Optional);

3.2. Set the IP address of the wired network adapter on your computer as **"Automatic"** or **"DHCP"**.

For Windows Vista and above

- 1) Go to **"Start"** (Win 7/Vista)/**"Settings"** (Others)> **"Control Panel"**.
- 2) Left-click on **"Network and Internet">"Network and Sharing Center">"Manage network connections"** (Win Vista)/ **"Change adapter settings"** (Others).
- 3) Right-click on **"Local Area Connection"** and left-click on **"Properties"**.
- 4) Double-click on **"Internet Protocol Version 4 (TCP/IPv4)"**.
- 5) Select **"Obtain an IP address automatically"** and **"Obtain DNS server address automatically"** then left-click on **"OK"**.

 
For Windows XP/2000

- 1) Go to **"Start">"Control Panel"**.
- 2) Left-click on **"Network and Internet Connections">"Network Connections"**.
- 3) Right-click on **"Local Area Connection"** and left-click on **"Properties"**.
- 4) Double-click on **"Internet Protocol (TCP/IP)"**.
- 5) Select **"Obtain an IP address automatically"** and **"Obtain DNS server address automatically"** then left-click on **"OK"**.


For MAC OS

- 1) Click on the **"Apple"** menu> **"System Preferences"**.
- 2) Click on the **"Network"** icon.
- 3) Click on **"Ethernet"** in the left side box and click on **"Advanced"** in the lower right corner.
- 4) In the top options, select **"TCP/IP"**.
- 5) In the pull-down menu next to **"Configure IPv4"** select **"Using DHCP"**.
- 6) Click **"OK"** then **"Apply"**.


- 3.3. Open your browser and type **192.168.1.1** in the address field. Then type in the username **guest** and password **guest** to login the web management page.




3.4. Enter the Wizard, click “**START**”

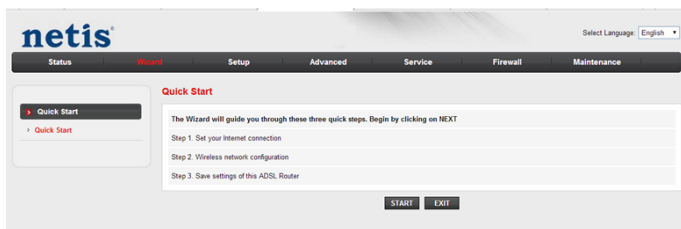

3.5. Select the Internet connection type given by your ISP. Click **NEXT** to continue

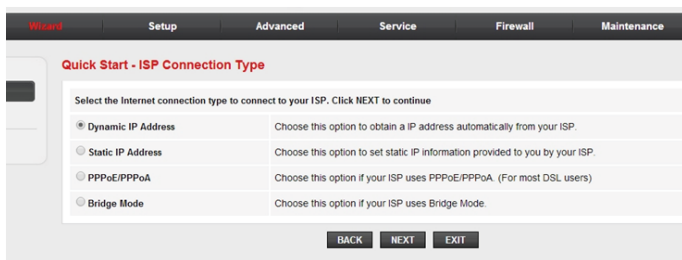

1) if “Dynamic IP Address” is selected ,select the connection type defined by your ISP , the router will automatically receive the IP parameters from your ISP

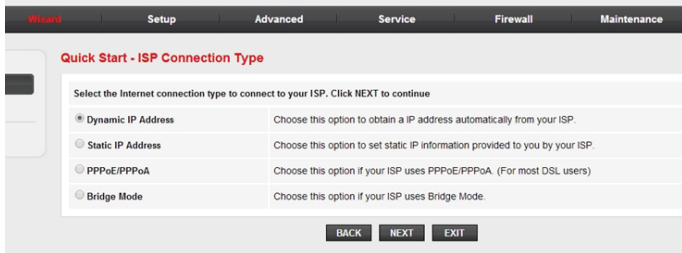

2)if “Static IP Address” is selected, click on “next”, and then fill the local IP address / remote IP address/ subnet Mask offered by your ISP.

Quick Start - Static IP Address

Enter the static IP information provided to you by your ISP. Click NEXT to continue.

Local IP Address:	0.0.0.0
Remote IP Address:	0.0.0.0
Subnet Mask	0.0.0.0

3)if “PPPoE/PPPoA” is selected, click on “next” , and then fill the username and password offered by your ISP.

Quick Start - PPPoE/PPPoA

Enter the PPPoE/PPPoA information provided to you by your ISP. Click NEXT to continue.

User Name:	
Password:	

4) if the “Bridge Mode” is selected, select the connection type by your ISP

Tip 1:

Default IP address: **192.168.1.1** Default login username: **guest**

Default SSID: **netis_2.4G_XXXXXX** **netis_5G_XXXXXX**

Default login password: **guest**

Default wireless password: **password**

Tip 2:

After the basic Internet settings, you may open some popular websites to check your Internet connection. If you cannot access the Internet, please refer to the instructions in “**Troubleshooting**”.

3.6. Set up the wireless SSID and password at 2.4Ghz and 5Ghz. And then click on next. Then Wizard will be finished.

Quick Start - Wireless Setting

This page is used to configure the parameters for WLAN clients which may connect to your Access Point. Here you may change wireless encryption settings as well as wireless network parameters. Click NEXT to continue.

☐ Disable WLAN Interface

SSID (5GHz):	netis_5G_22B808
Broadcast SSID:	☒ Enabled ☐ Disabled
Authentication Type:	WPA-PSK/WPA2-PSK
Password:	password (Please enter any 8-63 characters (ASCII characters A-Z,a-z,0-9))

☐ Disable WLAN Interface

SSID (2.4GHz):	netis_2G_22B808
Broadcast SSID:	☒ Enabled ☐ Disabled
Authentication Type:	WPA-PSK/WPA2-PSK
Password:	password (Please enter any 8-63 characters (ASCII characters A-Z,a-z,0-9))

4. Troubleshooting

Q How do I restore my netis Modem Router's configuration to its default settings?

A With the router powered on, use a pin to press and hold the **RESET** button on the rear panel for 8 to 10 seconds before releasing it. The router will reboot and all configurations are back to factory default.

Q What can I do if my Internet cannot be accessed?

- A**
- 1) Check to verify the hardware connections are correct.
Please refer to the "**Hardware Connection**" step.
 - 2) Login to netis Modem Router's web management page and ensure that you input the correct network parameters.
You'd better contact your ISP to make sure that the Connection Mode, Username & Password are correct.
 - 3) If you still cannot access the Internet, please restore your Modem Router to its factory default settings and try the "**Wizard**" again.
 - 4) Please feel free to contact netis Technical Support if possible.

Q How to apply the USB function on DL4480V?

A 1) Connect 3G dongle

Check the supported 3G dongle model list from www.netis-systems.com and make sure that your 3G dongle model is in the compatibility list.

Click "**Setup**"> "**WAN**"> "**3G**" to enable **3G WAN** and input the **Dial Number/APN/Username/Password** from your mobile ISP, then click **Apply Changes**.

Status	Wizard	Setup	Advanced	Service	Firewall	Maint
WAN WAN Mode Ethernet WAN PTM WAN ATM WAN ATM Settings DSL Settings 3G LAN WLAN0 (5GHz) WLAN1 (2.4GHz) IPv6						
3G Settings This page is used to configure the parameters for your 3G network access.						
3G WAN: * Disable Enable						
PIN Code:						
APN: internet						
Dial Number: *99#						
Authentication: NONE						
User Name:						
Password:						
Connection Type: Continuous						
Idle Time (min): 60						
NAPT: * Disable Enable						
Default Route: * Disable Enable						
MTU: 1500						
Backup for ADSL: * Disable Enable						
Backup Timer (sec): 60						
Apply Changes Reset						

2) Connect USB storage device

This function is based on FTP service and there's no need to configure the netis router. Please just download and install third-party FTP software from Internet for your computer. And the FTP software will automatically detect the connected USB storage device for access.

Q : How to apply the VoIP function on the DL4480V ?

- A**
- 1)Check to verify the hardware connections are correct, please refer to the **"Hardware Connection"** step.
 - 2)Click **"service">"VoIP"**, and input the correct parameters as your ISP offered. You'd better contact your ISP to make sure that the related parameters is correct.

Default Proxy	
Select Default Proxy	Proxy0 ▾
Proxy0	
Proxy0	
Display Name	
Number	phone number
Login ID	login account
Password	login password
Proxy	☒ Enable
Proxy Addr	SIP Server IP or Domain Name
Proxy Port	5060
SIP Domain	SIP Server IP or Domain Name
Reg Expire (sec)	3600
Outbound Proxy	☐ Enable
Outbound Proxy Addr	SIP Server IP or Domain Name
Outbound Proxy Port	5060
Enable Session timer	☒ Enable
Session Expire (sec)	1800
Register Status	Register Fail

3) click the **"Network"**, and input the correct parameters as your ISP offered. Then click **"Apply"** (You'd better contact your ISP to make sure that the related parameters is correct.)

VoIP Interface Selection	
VoIP Port1 Port1 DSP Tone Ring Other Config Network	VoIP Interface Any_WAN ▾ SIP DSCP Class 3 (DSCP 0x18) ▾ RTP DSCP EF (DSCP 0x2e) ▾ H.228.1 Enable ▾ Apply Reset

Appendix:

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure Statement

1. The equipment complies with RF exposure limits set forth for an uncontrolled environment. The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.
3. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference and
- (2) this device must accept any interference received, including interference that may cause undesired operation

Technical Support:

USA/ Canada:

Toll Free: +1 866 71 network (+1 866 716 3896)

E-mail: usa_support@netis-systems.com

Manufacture warranty: one year from date of purchase.

Other Regions:

E-mail: support@netis-systems.com

NETIS SYSTEMS CO., LTD.
www.netis-systems.com
MADE IN CHINA

PKUM06094
10013482