

IMPORTANT PLEASE READ!



WARNING!
CHOKING HAZARD-Small parts
Not for children under 3 years.

CAUTION ELECTRICALLY OPERATED PRODUCT:

Not recommended for children under 5 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

CAUTION:

- Do not mix old and new batteries.
- Do not mix battery types.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Exhausted batteries are to be removed from toy.
- The supply terminals are not to be short-circuited.
- Non-rechargeable batteries are not to be recharged.
- Remove batteries from toy when not in use.
- Batteries are to be inserted with the correct polarity.
- Do not touch wheels or tires when bike is in motion.
- NEVER run the bike in standing water, rain or moisture.
- Can also be powered by many manufacturers of 9.6v rechargeable battery packs-sold separately.

ATTENTION:

You are advised to keep all information relating to this product for future reference.
All materials used for packing or fastening purposes are not part of the toy and should be discarded.

FCC NOTE:

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications void the user's authority to operate equipment.

THE ANTENNA PROVIDED IS A UNIQUE ANTENNA. BY INSTALLATION OF UNAUTHORIZED ANTENNA TO THIS EQUIPMENT. SUCH UNAUTHORIZED INSTALLATION COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

IMPORTANT PLEASE READ!

BATTERY REQUIREMENTS:(9v BATTERY FOR CONTROLLER NOT INCLUDED)

VEHICLE: 1 '9.6v' rechargeable battery. (INCLUDED)

CONTROLLER: 1 '9v' battery. (NOT INCLUDED)

HOW TO INSTALL 9v BATTERY IN CONTROLLER: **SEE DIAGRAM #1**

1. Push the ON/OFF to OFF position on controller.
2. Unscrew battery cover on back side of controller using a standard philips screwdriver.
3. Insert 1 '9v' battery matching positive and negative polarities.
4. Replace battery cover.

HOW TO INSTALL 9.6v RECHARGEABLE BATTERY IN VEHICLE: **SEE DIAGRAM #2**


1. Push the ON/OFF to OFF position on vehicle. **SEE DIAGRAM #2**
2. Unscrew battery cover on underside of vehicle using a standard philips screwdriver.
3. Plug the 9.6v rechargeable battery pack into the cable by 'snapping' the jack and socket tightly. Be sure to match positive and negative polarities.
4. Replace battery cover.

Always follow battery manufacturers' guidelines for proper use of their batteries.


RADIO CONTROL FUNCTIONS: **SEE DIAGRAM #3**

1. **POWER** and **4 BAND SELECTOR** SWITCHES.
2. **LEFT BUTTON** operates the **SURROUND SOUND** FUNCTION.
3. **RIGHT BUTTON** operates the **BURNOUT** FUNCTION.
4. **LEFT JOYSTICK** operates the **FORWARD** and **REVERSE** FUNCTION.
5. **RIGHT JOYSTICK** operates the **LEFT** and **RIGHT** turn FUNCTION.

■ **DIAGRAM #1**

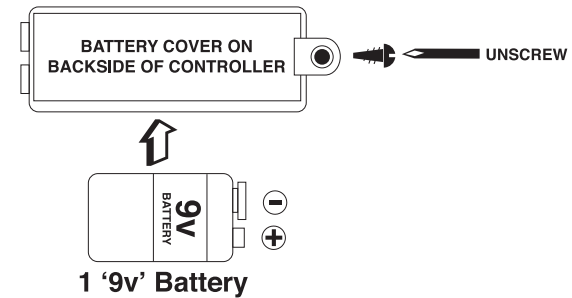

■ **DIAGRAM #2**

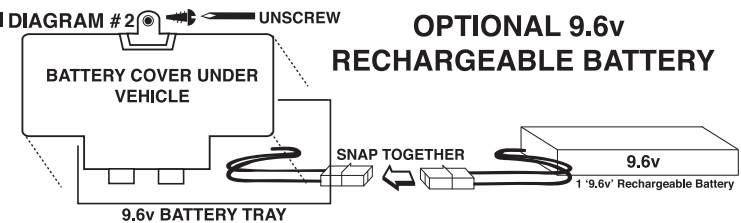

OPTIONAL 9.6v RECHARGEABLE BATTERY

■ **DIAGRAM #3**

POWER
SURROUND SOUND
BURNOUT
FORWARD/REVERSE
LEFT/RIGHT TURN
4 BAND SELECTOR

