

Pairing your remote with a Roku TV™




Step 1: Turn TV on

Stay on the Roku home screen

Step 2: Insert batteries

Slide open the battery cover on the back of your remote. Insert Duracell® batteries placing the negative (-) ends in first.

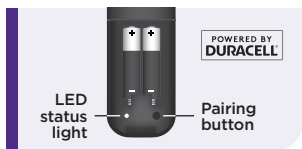

Press and hold the Pairing button down for 5 seconds until you see the LED status light begin flashing.

Step 3: Pair

Point your new remote at your Roku TV and wait 30 seconds while the remote pairs.

NOTE:

1. Your TV's software must be updated to version 9.4 or higher to pair.
2. If the remote pairing dialog does not appear on your TV screen repeat steps 1 through 3.

 
For help pairing your remote, visit go.roku.com/remotehelp

© 2020 Roku, Inc. All rights reserved. ROKU, ROKU TV and the ROKU logo are the registered trademarks of Roku, Inc. All other logos and trademarks herein not owned by Roku, Inc. are the property of their respective owners.




4100000540_2

Roku® Voice Remote

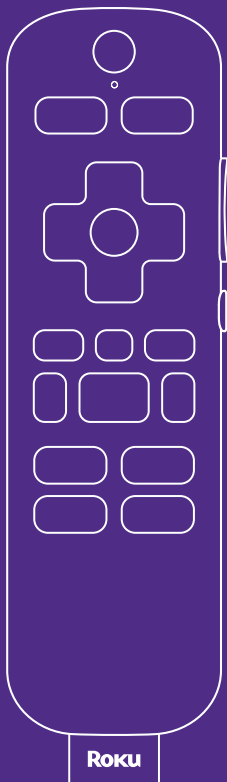

Pairing your remote with a Roku device

 See back page for “Pairing your remote with a Roku TV”

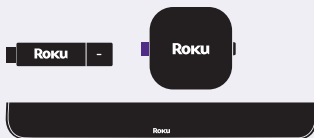

Step 1: Turn off Roku device


Remove the power cable, wait 5 seconds, and plug it back in.

Step 2: Wait for home screen

When your Roku player displays the home screen, insert the batteries into your remote.

Step 3: Insert batteries

On the back side of the remote, slide open the battery cover. Insert Duracell® batteries placing the negative (-) ends in first.

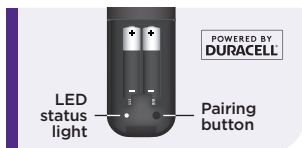

Press and hold the Pairing button down for 5 seconds until you see the LED status light begin flashing.

Step 4: Pair

Wait 30 seconds while your remote pairs with your player.

Setting up TV power and volume control

1: Press the **Home** button on your new Roku remote.

2: Select the **Settings** menu.

3: Select **Remotes & devices** and then select Remote.

4: Select **Set up remote for TV control**. Follow the on-screen instructions.

Easy voice search

Search for your favorite entertainment, launch channels, and more with one-touch access on your voice remote.

Here are a few things to try:
“Launch the Roku Channel”
“Show me comedies”
“Turn captions on”

NOTE:

1. Your player's software must be updated to version 9.4 or higher to pair.
2. If the remote pairing dialog does not appear on your TV screen repeat steps 1 through 4.

For help pairing your remote, visit [go.roku.com/remotehelp](https://www.roku.com/remotehelp)