


Label and Label location

FCC ID Label




IC label

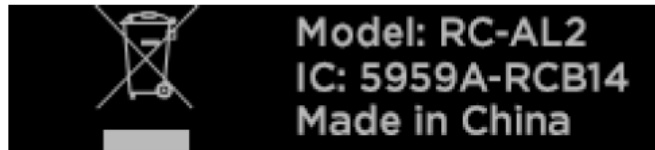

Location – Label is placed inside the battery holder

Remote

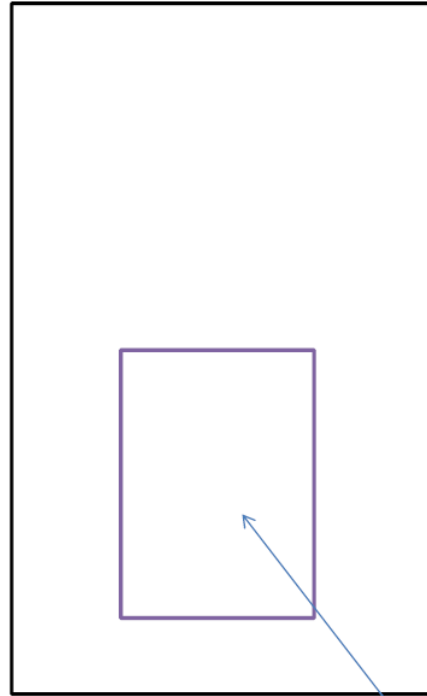

Label (Inside Battery Compartment)