


## Label and Label location

### FCC ID Label




### IC label

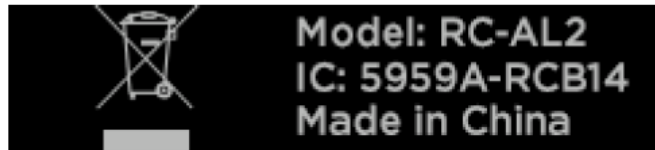

## Location – Label is placed inside the battery holder

Remote

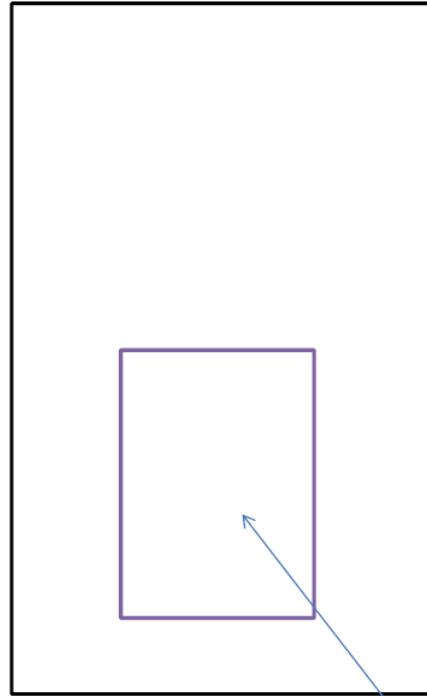

Label (Inside Battery Compartment)