

Hi! Let's get started.

 


Roku® Streaming Stick™
(HDMI® Version)

Roku®


Know your Roku® Streaming Stick™

(HDMI® Version)

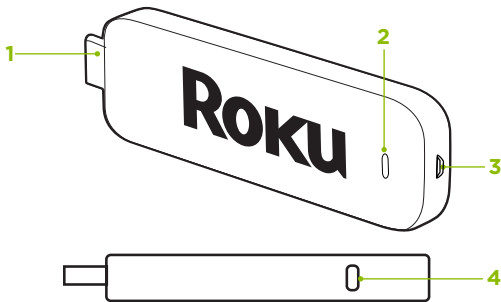

- [HDMI CONNECTOR]** Plugs into the HDMI port on the back of your TV
- [STATUS LIGHT]** Indicates it is on when lit, or activity when flashing
- [POWER INPUT]** Used to power your Roku Streaming Stick
- [RESET BUTTON]** Used to reset your Streaming Stick (you probably won't ever have to use this)

 Meet your Roku® remote


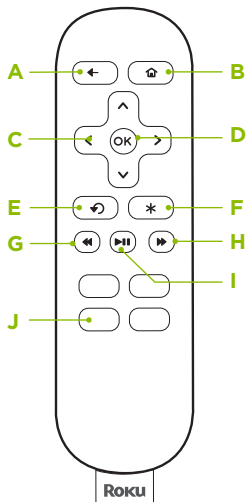


- A** **[BACK]** Return to previous screen
- B** **[HOME]** Return to Roku Home screen
- C** **[UP] or [DOWN]**
Move up or down
[LEFT] or [RIGHT]
Move left or right
- D** **[OK]** Select a menu option
- E** **[INSTANT REPLAY]** Replay last 7 seconds of video
- F** **[OPTIONS]** View more options
- G** **[REV SCAN]** Rewind, scroll left one page at a time
- H** **[FWD SCAN]** Fast forward, scroll right one page at a time
- I** **[PLAY/PAUSE]** Start or pause playback
- J** **[CHANNEL SHORTCUT]** Instant access to favorite channels

Get Started!

Step 1: Plug it in.

  Plug the Roku® Streaming Stick™ into an HDMI port on your TV.

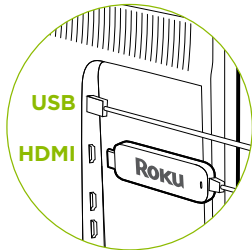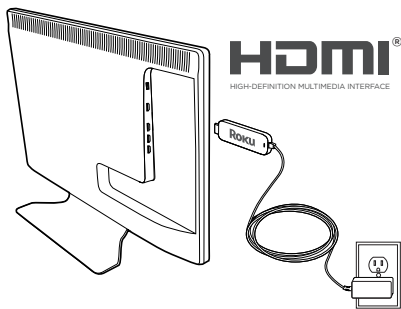


Power your Streaming Stick:

Connect the micro-USB cable (included) between the Stick and the included power adapter. Plug the power adapter into an A/C power outlet for instant-on connectivity.

Or: In some cases you may prefer to power your Stick directly from a USB port on your TV. However, this can result in longer start times, and is not reliable on all TVs. If available, use wall power.

Step 2: Power on your remote.

 Power your Roku® remote by inserting the included batteries:

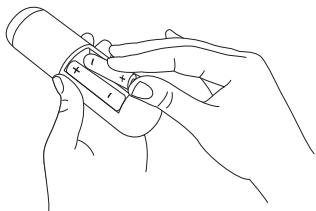

- Locate the battery door on the back of the remote
- Press the battery door latch down to remove the battery door
- Insert each battery negative (-) side first
- Replace the battery door and press gently to secure into place
- Your remote should automatically pair with your Roku® Streaming Stick™ (HDMI® Version)

Now turn on the TV. Look for a Roku logo to fill the screen.

Blank screen? Make sure your TV input matches the physical connection used to connect your Roku player. Press the Input button (also called Source) on your TV or TV remote to cycle through the various video inputs available until you see a Roku screen.

Step 3: Connect to wireless network.

The Roku® Streaming Stick™ (HDMI® Version) will automatically detect wireless networks in your area. Using your Roku remote:

- Select your network from the list of available networks
- Enter your network password, if you use one.
Remember, network passwords are case sensitive

Step 4: Connect to Roku® account.

Continue to follow the on-screen instructions and you'll:

- Get the latest software
- Link the Roku Streaming Stick to your Roku account from your web browser



Your Roku account Roku accounts are free and secure. And while a valid credit card number is required to create your account, rest assured you will only be charged if you authorize purchases of apps from the Roku Channel Store.

And setup is done...**congratulations!**

Do more with your smartphone or tablet

Get the Mobile App

With the free Roku app, you can control, cast, and search from your iOS® or Android™ device.



iOS®



Android™

Things you can do:

- Search across top streaming channels such as Netflix, Hulu Plus, and Amazon Instant Video with voice or your mobile keyboard.
- Control your Roku Streaming Stick from your phone or tablet. Includes all the play/pause, forward/back, instant replay and options buttons.
- Play personal videos, photos and music locally stored on your smartphone or tablet with the Play on Roku feature (video applies to iOS and select Android devices only).
- Browse, add and launch channels in the Roku Channel Store.

Need more **help?**

www.roku.com/setup Get the most out of your Roku Streaming Stick (HDMI® Version). Check out our FAQs, instructional videos and user forums.

© 2014 Roku, Inc. All rights reserved. Roku® and Happy Streaming™ are the trademarks of Roku, Inc. All other logos and trademarks herein not owned by Roku, Inc. are the property of their respective owners.



ROKU®