



User Guide

AC2600 Wireless Dual Band Gigabit Router
EC440-G4u

Contents

About This Guide	1
Chapter 1. Get to Know Your Router	2
1. 1. Product Overview	3
1. 2. Physical Appearance	3
1. 2. 1. Front Panel	3
1. 2. 2. Back Panel	5
Chapter 2. Connect the Hardware	6
2. 1. Position Your Router	7
2. 2. Connect Your Router	7
Chapter 3. Log In to Your Router	10
Chapter 4. Set Up Internet Connection	12
4. 1. Use Quick Setup Wizard	13
4. 2. Manually Set Up Your Internet Connection	13
4. 3. Set Up an IPv6 Internet Connection	15
Chapter 5. Multi-SSID	17
Chapter 6. USB Settings	20
6. 1. Access the USB Storage Device	21
6. 1. 1. Access the USB Device Locally	21
6. 1. 2. Access the USB Device Remotely	23
6. 1. 3. View USB Storage Device	24
6. 1. 4. Customize the Access Settings	25
6. 2. Media Sharing	28
Chapter 7. Parental Controls	30
Chapter 8. QoS	34
Chapter 9. Network Security	39
9. 1. Firewall & DoS Protection	40

9. 2.	Service Filtering	41
9. 3.	Access Control	42
9. 4.	IP & MAC Binding	44

Chapter 10.NAT Forwarding..... 46

10. 1.	Translate Address and Port by ALG.....	47
10. 2.	Share Local Resources over the Internet by Virtual Server.....	48
10. 3.	Open Ports Dynamically by Port Triggering.....	49
10. 4.	Make Applications Free from Port Restriction by DMZ.....	50
10. 5.	Make Xbox Online Games Run Smoothly by UPnP	51

Chapter 11.VPN Server 53

11. 1.	Use OpenVPN to Access Your Home Network.....	54
11. 2.	Use PPTP VPN to Access Your Home Network	55

Chapter 12.Customize Your Network Settings..... 60

12. 1.	Change LAN Settings.....	61
12. 1. 1.	Change the LAN IP Address.....	61
12. 1. 2.	Use the Router as a DHCP Server	61
12. 1. 3.	Reserve LAN IP Addresses.....	62
12. 2.	Configure IPv6 LAN Settings.....	63
12. 2. 1.	Configure the RADVD Address Type	63
12. 2. 2.	Configure the DHCPv6 Server Address Type.....	64
12. 3.	Set Up a Dynamic DNS Service Account	65
12. 4.	Create Static Routes.....	66
12. 5.	Set Up the IPv6 Tunnel.....	69
12. 5. 1.	Use the Public IPv6 Tunnel Service-6to4	69
12. 5. 2.	Specify the IPv6 Tunnel with Parameters Provided by Your ISP.....	70
12. 6.	Specify Wireless Settings.....	71
12. 6. 1.	Specify Basic Wireless Settings.....	71
12. 6. 2.	View Wireless Information	72
12. 6. 3.	Advanced Wireless Settings	73
12. 7.	Use WPS for Wireless Connection	75
12. 7. 1.	Method 1: Use the WPS button.....	75
12. 7. 2.	Method 2: Use the WPS button on the web management page	75
12. 7. 3.	Method 3: Enter the router's PIN on your client device	75
12. 7. 4.	Method 4: Enter the client device's PIN on the router	76
12. 8.	Schedule Your Wireless Function	77

Chapter 13.Manage Your Router	78
13. 1. Set System Time	79
13. 2. Test Internet Connectivity	79
13. 3. Update the Firmware.....	80
13. 4. Back Up and Restore Configuration Settings	81
13. 5. Administration Management	82
13. 5. 1. Change the Login Password	82
13. 5. 2. Local Management	82
13. 5. 3. Remote Management.....	83
13. 5. 4. ICMP Ping	84
13. 6. System Log.....	85
13. 7. CWMP Settings.....	86
13. 8. SNMP Settings	88
13. 9. Monitor the Internet Traffic Statistics.....	89
FAQ	90

About This Guide

This guide is a complement to Quick Installation Guide. The Quick Installation Guide provides instructions for quick internet setup, while this guide contains details of each function and demonstrates how to configure them.

Please note that features of your router may vary slightly depending on the model and software version you have, and on your location, language and internet service provider. All images, parameters and descriptions documented in this guide are used for demonstration only.

Conventions

In this guide the following conventions are used:

Convention	Description
<u>Underlined</u>	Hyperlinks are in teal and underlined. You can click to redirect to a website or a specific section.
Teal	Key information appears in teal, including management page text such as menus, items, buttons and so on.
>	The menu structures to show the path to load the corresponding page. For example, Advanced > Wireless > Wireless Settings means the Wireless Settings function page is under the Wireless menu that is located in the Advanced tab.
 Note:	Ignoring this type of note might result in a malfunction or damage to the device.
 Tips:	Indicates important information that helps you make better use of your device.
Symbols on the web page	 click to edit the corresponding entry.  click to delete the corresponding entry.  click to enable or disable the corresponding entry.  click to view more information about items on the page.

More Info

The latest firmware is available from the [Download Center](http://www.tp-link.com/support) at www.tp-link.com/support.

The Quick Installation Guide can be found where you find this guide or inside the package of the router.

Specifications can be found on the product page at <http://www.tp-link.com>.

A Technical Support Forum is provided for you to discuss our products at <http://forum.tp-link.com>.

Our Technical Support contact information can be found at the [Contact Technical Support](http://www.tp-link.com/support) page at www.tp-link.com/support.

Chapter 1

Get to Know Your Router

This chapter introduces what the router can do and shows its appearance.

It contains the following sections:

- [Product Overview](#)
- [Physical Appearance](#)

1.1. Product Overview

The TP-Link router is designed to fully meet the need of Small Office/Home Office (SOHO) networks and users demanding higher networking performance. The powerful antennas ensure continuous Wi-Fi signal to all your devices while boosting widespread coverage throughout your home, and the built-in Ethernet ports supply high-speed connection to your wired devices.

Moreover, it is simple and convenient to set up and use the TP-Link router due to its intuitive web interface.

1.2. Physical Appearance

1.2.1. Front Panel



The router's front panel contains LEDs and buttons. You can check the router's working status by following the LED Explanation table.

LED Explanation		
Item	Status	Indication
 Power	On	Power is on.
	Flashing	The system is starting up or the router is updating the firmware. Do not disconnect or power off your router.
	Off	Power is off.
 2.4G	On	The 2.4GHz wireless band is enabled.
	Off	The 2.4GHz wireless band is disabled.
 5G	On	The 5GHz wireless band is enabled.
	Off	The 5GHz wireless band is disabled.
 Internet	On	Internet service is available.
	Orange On	The router's WAN port is connected, but the internet service is unavailable.
	Off	The router's WAN port is unplugged.
 WAN	On	The router's WAN port is connected.
	Off	The router's WAN port is unplugged.
 LAN	On	At least a powered-on device is connected to the router's LAN port.
	Off	No powered-on device is connected to the router's LAN port.
 WPS	On/Off	Turns on when a WPS synchronization is established and automatically turns off about 5 minutes later.
	Flashing	WPS connection is in progress. This may take up to 2 minutes.
 USB1	On	The USB device connected to the USB1 port is ready to use.
	Flashing	A USB device connected to the USB1 port is being identified.
	Off	No device is plugged into the USB1 port.
 USB2	On	The USB device connected to the USB2 port is ready to use.
	Flashing	A USB device connected to the USB2 port is being identified.
	Off	No device is plugged into the USB2 port.

The Wi-Fi button, WPS button and LED button are also located on the front panel.

- **Wi-Fi button:** Press and hold the Wi-Fi button for about two seconds to turn on or off the 2.4GHz and 5GHz Wi-Fi.
- **WPS button:** Press and hold the WPS button for about two seconds to start a WPS synchronization.
- **LED button:** Press and hold the LED button for about two seconds to turn on or off all LEDs.

1. 2. 2. Back Panel



The router’s back panel contains the connection ports and buttons. Refer to the following table for detailed instructions.

Item	Description
WAN	For connecting to a DSL/Cable modem, or an Ethernet jack.
LAN1, LAN2, LAN3, LAN4	For connecting your PC or other Ethernet network devices to the router.
Reset	Press and hold down the Reset button for at least 5 seconds to reset the router to its factory default settings.
USB2	For connecting to a USB2.0 storage device.
USB1	For connecting to a USB3.0 storage device. It is also compatible with USB 2.0 devices.
On/Off	The switch for the power. Press it to power on or off the router
Power	For connecting the router to a power socket via the provided power adapter.

Chapter 2

Connect the Hardware

This chapter contains the following sections:

- [Position Your Router](#)
- [Connect Your Router](#)


2.1. Position Your Router

- The product should not be located in a place where it will be exposed to moisture or excessive heat.
- Place the router in a location where it can be connected to multiple devices as well as to a power source.
- Make sure the cables and power cord are safely placed out of the way so they do not create a tripping hazard.
- The router can be placed on a shelf or desktop.
- Keep the router away from strong devices with strong electromagnetic interference, such as Bluetooth devices, cordless phones and microwaves.

2.2. Connect Your Router

Follow the steps below to connect your router.

If your internet connection is through an Ethernet cable from the wall instead of through a DSL / Cable / Satellite modem, connect the Ethernet cable directly to the router's WAN port as Step2B, and then follow Step 4 and 5 to complete the hardware connection.

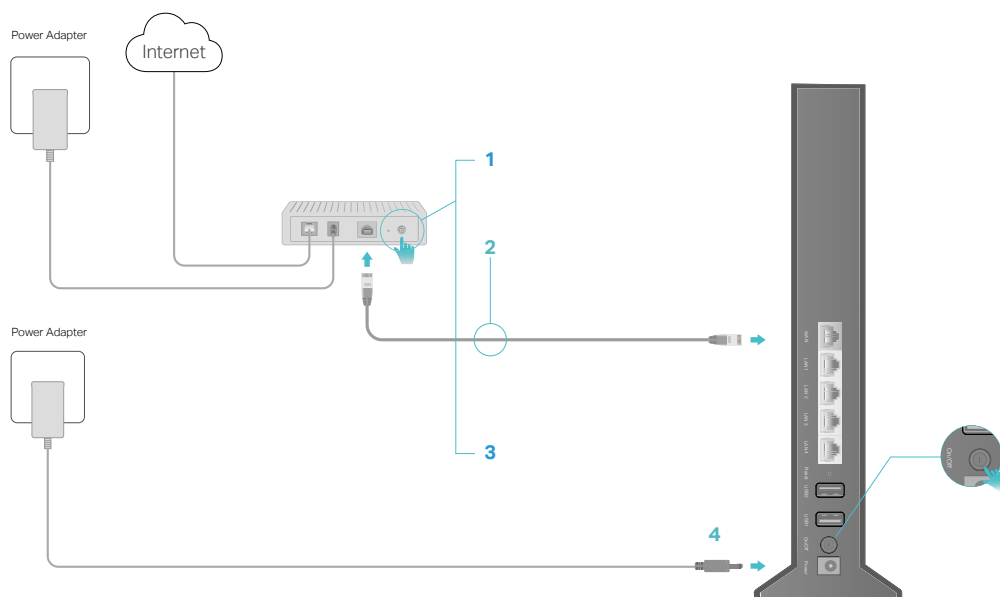

1. Turn off the modem, and remove the backup battery if it has one.
2. Connect the modem to the router's WAN port with an Ethernet cable.
3. Turn on the modem, and then wait about **2 minutes** for it to restart.
4. Connect the power adapter to the router.
5. Verify that the following LEDs are on and solid before continuing with the configuration.




Note: If the 2.4G LED and 5G LED are off, please press the WiFi button for 2 seconds and check the LEDs again a few seconds later.

6. Connect your computer to the router.


• Method 1: Wired

Turn off the Wi-Fi on your computer and connect the devices as shown below.

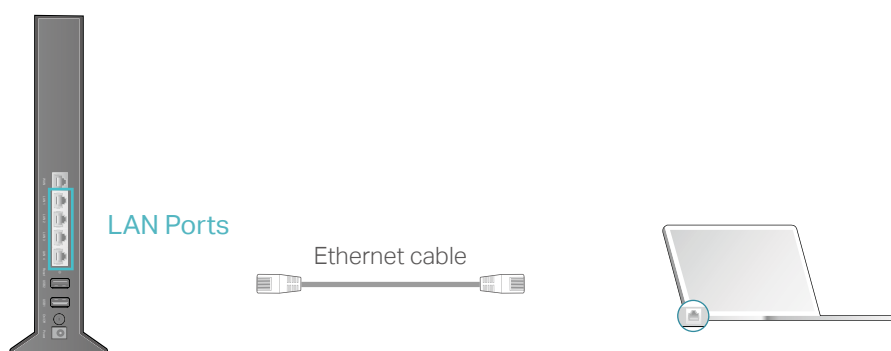


• Method 2: Wireless

- 1) Find the SSID (Network Name) and Wireless Password printed on the label at the bottom of the router.
- 2) Click the network icon of your computer or go to Wi-Fi Settings of your smart device, and then select the SSID to join the network.

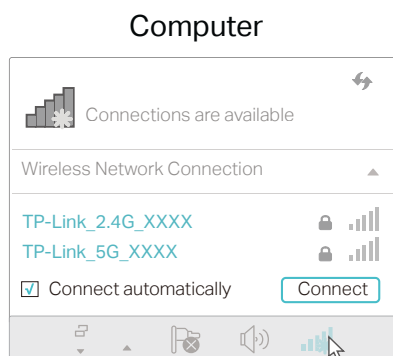

OR

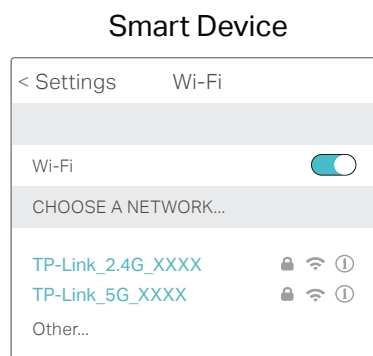


• Method 3: Use the WPS button

Wireless devices that support WPS, including Android phones, tablets, most USB network cards, can be connected to your router through this method.

Note:

- WPS is not supported by iOS devices.

- The WPS function cannot be configured if the wireless function of the router is disabled. Also, the WPS function will be disabled if your wireless encryption is WEP. Please make sure the wireless function is enabled and is configured with the appropriate encryption before configuring the WPS.
- 1) Tab the WPS icon on the device's screen. Here we take an Android phone as an example.
 - 2) Within two minutes, press and hold the WPS button on your router for about two seconds.

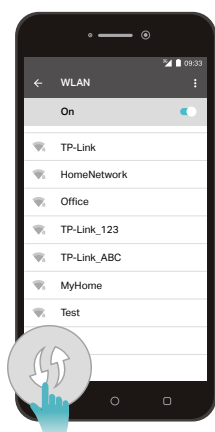

Close to




Chapter 3

Log In to Your Router

With a web-based utility, it is easy to configure and manage the router. The web-based utility can be used on any Windows, Macintosh or UNIX OS with a Web browser, such as Microsoft the Internet Explorer, Mozilla Firefox or Apple Safari.

Follow the steps below to log in to your router.

1. Set up the TCP/IP Protocol in [Obtain an IP address automatically](#) mode on your computer.
2. Visit <http://tplinkwifi.net>, and create a login password for secure management. Then enter the password again in the login page and click [Log in](#) to get log in to your router.

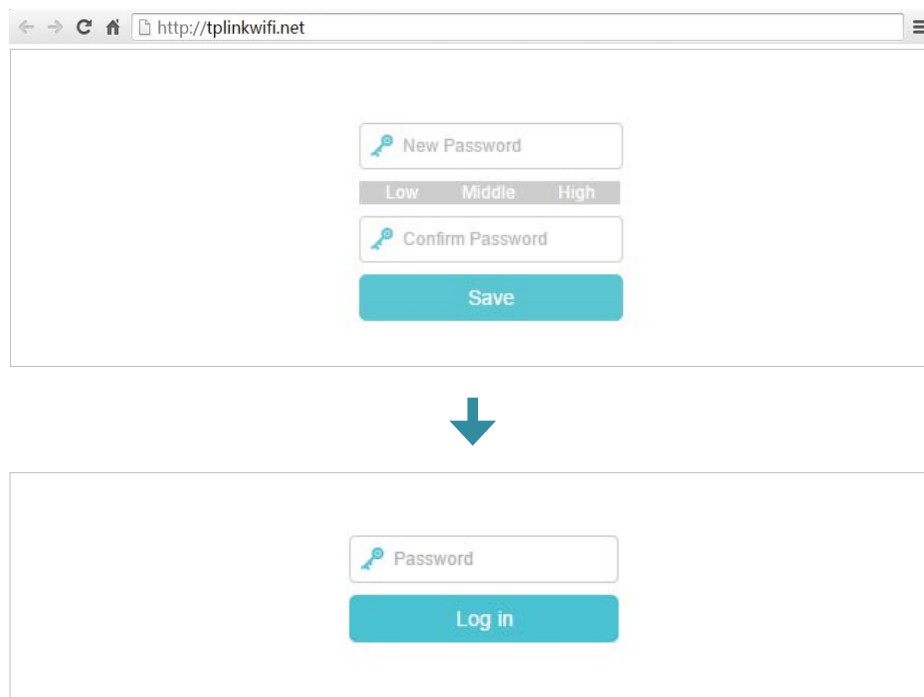

The image shows two sequential web browser screenshots. The top screenshot is from <http://tplinkwifi.net> and displays a 'New Password' form. It includes a text input for 'New Password', a strength indicator with 'Low', 'Middle', and 'High' options, a 'Confirm Password' input, and a teal 'Save' button. A large blue arrow points down to the second screenshot, which shows the 'Log in' page. This page has a 'Password' input field and a teal 'Log in' button.

Note:

If the login window does not appear, please refer to the [FAQ](#) section.

Chapter 4

Set Up Internet Connection

This chapter introduces how to connect your router to the internet. The router is equipped with a web-based Quick Setup wizard. It has necessary ISP information built in, automates many of the steps and verifies that those steps have been successfully completed. Furthermore, you can also set up an IPv6 connection if your ISP provides IPv6 service.

It contains the following sections:

- [Use Quick Setup Wizard](#)
- [Manually Set Up Your Internet Connection](#)
- [Set Up an IPv6 Internet Connection](#)

4.1. Use Quick Setup Wizard

The Quick Setup Wizard will guide you through the process to set up your router.

 Tips:

If you need the IPv6 internet connection, please refer to the section of [Set Up an IPv6 Internet Connection](#).

Follow the steps below to set up your router.

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Click **Quick Setup** on the top of the page. Then follow the step-by-step instructions to connect your router to the internet.

 Note:


If you have changed the preset wireless network name (SSID) and wireless password during the Quick Setup process, all your wireless devices must use the new SSID and password to connect to the router.

4.2. Manually Set Up Your Internet Connection

In this part, you can check your current internet connection settings. You can also modify the settings according to the service information provided by your ISP.

Follow the steps below to check or modify your internet connection settings.

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to **Basic > Internet**.
3. Select your internet connection type from the drop-down list.

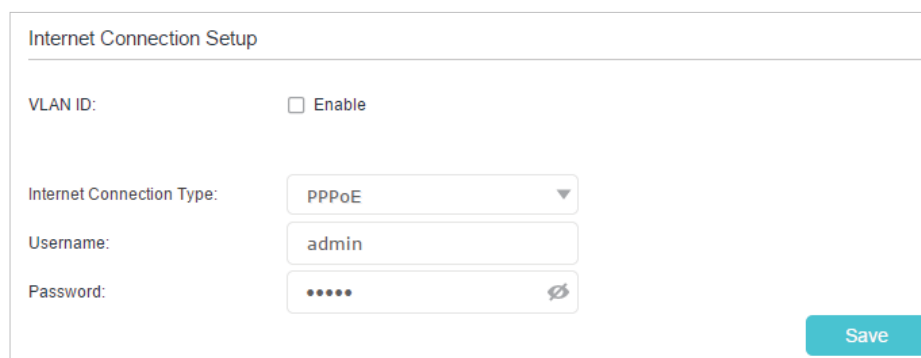

 Note:

If you are unsure of what your connection type is, you can consult your ISP. Since different connection types require different cables and connection information, you can also refer to the demonstrations in Step 4 to determine your connection type.

4. Follow the instructions on the page to continue the configuration. Parameters on the figures are just used for demonstration.

- 1) If you choose **Dynamic IP**, you just need to click **Save** to make the settings effective. Dynamic IP users are usually equipped with a cable TV or fiber cable.

Internet Connection Setup

VLAN ID: ☐ Enable

Internet Connection Type: Dynamic IP

IP Address: 0.0.0.0

Subnet Mask: 0.0.0.0

Gateway: 0.0.0.0

Save

- 2) If you choose [Static IP](#), enter the information provided by your ISP in the corresponding fields.

Internet Connection Setup

VLAN ID: ☐ Enable

Internet Connection Type: Static IP

IP Address:

Subnet Mask:

Default Gateway:

Primary DNS:

Secondary DNS: (Optional)

Save

- 3) If you choose [PPPoE](#), enter the [Username](#) and [Password](#) provided by your ISP. PPPoE users usually have DSL cable modems.

Internet Connection Setup

VLAN ID: ☐ Enable

Internet Connection Type: PPPoE

Username:

Password:

Save

5. Click [Save](#) to make the settings effective, and you can refer to [Test Internet Connectivity](#) to test the Internet connection.

Note:

It may take 1-2 minutes to make the settings effective.

 Tips:

1. You can check your internet connection by clicking [Network Map](#) on the left of the page.
2. If you use [Dynamic IP](#) and [PPPoE](#) and you are provided with any other parameters that are not required on the page, please go to [Advanced](#) > [Network](#) > [Internet](#) to complete the configuration.
3. If you still cannot access the internet, refer to the [FAQ](#) section for further instructions.

4.3. Set Up an IPv6 Internet Connection

If your ISP provides information about one of the following IPv6 internet connection types: PPPoE, Dynamic IP(SLAAC/DHCPv6) and Static IP, you can manually set up an IPv6 connection.

If your ISP provides an IPv4-only connection or IPv6 tunnel service, permit IPv6 connection by referring to [Set Up the IPv6 Tunnel](#).

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to [Advanced](#) > [Network](#) > [Internet](#).

Internet Setup				
			Refresh + Add - Delete All	
WAN Interface Name	VLAN ID	Status	Operation	Modify
ipoe_0_0_d	0	Disconnected	Renew	Edit Delete

3. Select your WAN Interface Name ([Status](#) should be [Connected](#)) and click the  (Edit) icon.
4. Scroll down the page, enable [IPv6](#), and configure the IPv6 parameters.

IPv6:	☒ Enable
IPv6 Address:	::
Prefix Length:	64
IPv6 Gateway:	::
Addressing Type:	AUTO ▼
IPv6 Gateway:	ipoe_0_0_d ▼

- **Addressing Type:** Consult your ISP for the addressing type ([DHCPv6](#) or [SLAAC](#)). [SLAAC](#) is the most commonly used addressing type.
- **IPv6 Gateway:** Keep the default setting.

 **Note:** If your ISP has provided the IPv6 address, click [Advanced](#) to reveal more settings. You can check the detailed settings of IPv6 and enter the parameters provided by your ISP.

5. Click [Save](#) to make the settings effective. Now IPv6 service is available for your network.

Chapter 5

Multi-SSID

Multi-SSID function allows you to provide Wi-Fi access for your visitors without disclosing your main network. When you have guests in your house, apartment, or workplace, you can create a multi-SSID network for them. In addition, you can customize the network settings to ensure network security and privacy.

➤ **To create a multi-SSID network:**

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to **Basic > Multi-SSID** or **Advanced > Wireless > Multi-SSID**.
3. Create the multi-SSID network as needed.

Multi-SSID 2.4GHz | 5GHz

MSSID1: ☒ Enable

Network Name (SSID): ☐ Hide SSID

Security:

See each other: ☒ Allow guests to see each other

Access my local network: ☐ Allow guests to access to my local network

USB Storage Sharing: ☐ Allow guests to access my USB Storage Sharing

MSSID2: ☐ Enable

MSSID3: ☐ Enable

- 1) Click the **2.4GHz** or **5GHz** to set the 2.4GHz or 5GHz wireless network. You can create three multi-SSID wireless networks at most in each wireless band.
 - 2) Select the **Enable** check box to create the corresponding multi-SSID network.
 - 3) Enter a new **Network Name (SSID)** or use the default name, this field is case-sensitive. Don't select **Hide SSID** unless you want your guests to manually input the SSID for Wi-Fi access.
 - 4) Select the **Security** option for the multi-SSID network, **WPA/WPA2 Personal (Recommended)** is recommended, and you can set a password the network.
- **See each other:** Select the **Allow guests to see each other** check box if you want to allow the wireless clients on your multi-SSID network to communicate with each other via methods such as network neighbors and Ping.
 - **Access my local network:** Select the **Allow guests to access my local network** check box if you want to allow the wireless clients on your multi-SSID network to communicate with the devices connected to your router's LAN ports or main network via methods such as network neighbors and Ping.

- **USB storage sharing:** Select the [Allow guests to access my USB storage sharing](#) check box if you want the guests on your multi-SSID network to access your USB device connected to the router.
4. Click [Save](#) to make the settings effective. Now your guests can access your multi-SSID network using the SSID and password if any.

 Tips:

To view multi-SSID network information, go to [Advanced](#) > [Status](#) and locate the [Multi-SSID](#) panel.

Chapter 6

USB Settings

This chapter describes how to use the USB port to share files and media from the USB storage devices over your home network locally, or remotely through the internet.

The router supports USB external flash drives and hard drives.

This chapter contains the following sections:

- [Access the USB Storage Device](#)
- [Media Sharing](#)

6. 1. Access the USB Storage Device

Insert your USB storage device into the router's USB port and then access files stored there locally or remotely.

Tips:

- If you use USB hubs, make sure no more than 4 devices are connected to the router.
- If the USB storage device requires using bundled external power, make sure the external power has been connected.
- If you use a USB hard drive, make sure its file system is FAT32 or NTFS. Some routers also support the HFS+ and exFAT file systems.
- Before you physically disconnect a USB device from the modem router, safely remove it to avoid data damage: Go to [Advanced > USB Sharing > USB Storage Device](#) and click [Safely Remove](#).

6. 1. 1. Access the USB Device Locally

Insert your USB storage device into the modem router's USB port and then refer to the following table to access files stored on your USB storage device:


Windows Computer

➤ **Method 1:**



Go to [Computer > Network](#), then click the Network Server Name ([model number](#) by default) in the [Computer](#) section.

📌 Note:

1. Operations in different systems are similar. Here we take Windows 7 as an example.
2. Network Server Name can be customized on the web management page.

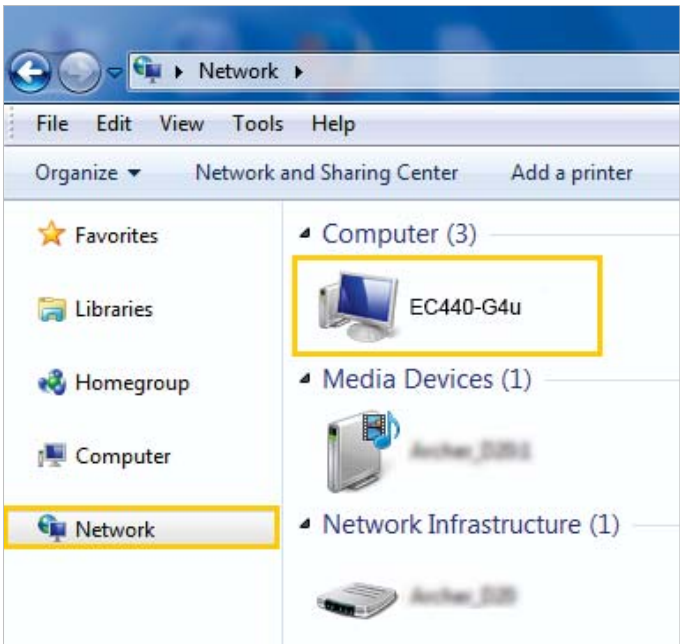

The screenshot shows the Windows 7 'Network' window. The left sidebar has 'Network' selected. The main pane shows a list of network resources: 'Computer (3)', 'Media Devices (1)', and 'Network Infrastructure (1)'. Under 'Computer (3)', a computer icon labeled 'EC440-G4u' is highlighted with a yellow rectangular box. Below it, under 'Media Devices (1)', is a device labeled 'Archer_3000'. Under 'Network Infrastructure (1)', is a device labeled 'Archer_3000'.

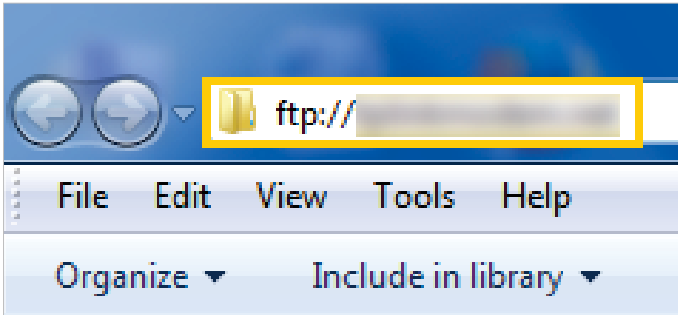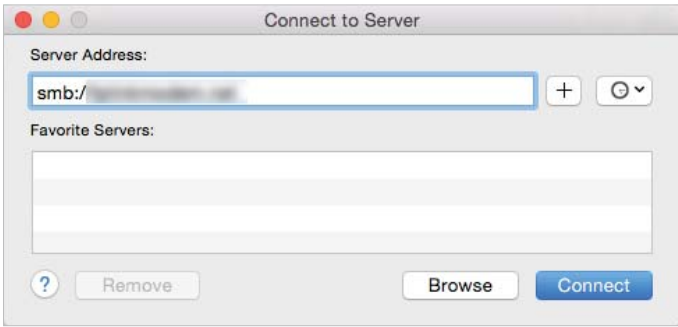Windows Computer	➤ Method 2: Open the Windows Explorer (or go to Computer) and type the server address \\tplinkwifi.net or ftp://tplinkwifi.net in the address bar, then press Enter.  ➤ Method 3: Install an SFTP client (File Zilla) in your computer and configure the protocol parameters (enter the LAN address of the router and account username and password admin).
Mac	1) Select Go > Connect to Server 2) Type the server address smb://tplinkwifi.net 3) Click Connect  4) When prompted, select the Guest radio box. (If you have set up a username and a password to deny anonymous access to the USB disks, you should select the Registered User radio box. To learn how to set up an account for the access, refer to To Set up Authentication for Data Security.)
Smart Device	Use a third-party app for network files management.

6.1.2. Access the USB Device Remotely

You can access your USB disk outside the local area network. For example, you can:

- Share photos and other large files with your friends without logging in to (and paying for) a photo-sharing site or email system.
- Get a safe backup for the materials for a presentation.
- Remove the files on your camera's memory card from time to time during your journey.

Note:

If your ISP assigns a private WAN IP address (such as 192.168.x.x or 10.x.x.x), you cannot use this feature because private addresses are not routed on the internet.

Follow the steps below to configure remote access settings.

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to **Advanced > USB Sharing > Sharing Access** page.
3. Select the **FTP (via Internet)** check box and click **Save**.

Sharing Settings


Network/Media Server Name:

EC440-G4u

Enable	Access Method	Access Address	Port
☒	Media Server	--	--
☒	Network Neighborhood	\\EC440-G4u	--
☒	FTP	ftp://192.168.0.1:21	21
☒	FTP(via Internet)	ftp://0.0.0.0:21	21

Save

4. Refer to the following table to access your USB disk remotely.

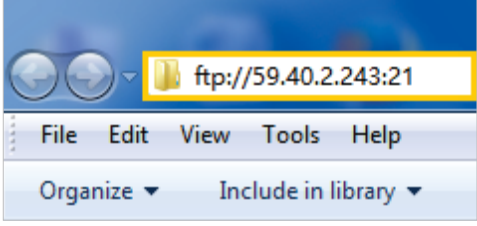Windows Computer	1) Open the Windows Explorer (or go to Computer, only for Windows users) or open a web browser. 2) Type the server address in the address bar: Type in ftp://<WAN IP address of the router>:<port number> (such as ftp://59.40.2.243:21). If you have specified the domain name of the router, you can also type in ftp://<domain name>:<port number> (such as ftp://MyDomainName:21)  The Address Bar of the Windows Explorer (Windows 7) 3) Press Enter on the keyboard. 4) Access with the username and password you set in To Set up Authentication for Data Security. Tips: You can also access the USB disk via a third-party app for network files management, which can resume broken file transfers.
	Smart Device Use a third-party app for network files management.

Tips:

Click [Set Up a Dynamic DNS Service Account](#) to learn how to set up a domain name for your modem router.

6.1.3. View USB Storage Device

➤ **To View USB Storage Device Status**

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to [Advanced > USB Sharing > USB Storage Device](#) or [Basic > USB Sharing > USB Storage Device](#).

USB Storage Device				
Scan				
Volume Name	Total		Active	Operation
G	28.8 GB	Used:1.7GB Available:27.1GB		Safely Remove

- **Scan:** Usually, router will automatically detect any newly inserted USB device. If you find that your USB device is not listed in the USB Storage Device table, you can click **Scan** to refresh the web page with the updated information.
- **Active:** By default, the newly inserted USB device is accessible to all network clients, you can click the active icon  to hide the corresponding USB device from access.
- **Operation:** Click the  **Safely Remove** button to take the USB device offline before you remove the USB device physically.

6.1.4. Customize the Access Settings

By default, all the network clients can access all folders on your USB disk. You can customize your sharing settings by setting a sharing account, sharing specific contents and setting a new sharing address on the router's web management page.

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to **Advanced > USB Sharing > Sharing Access** page.

➤ To Customize the Address of the USB Disk

You can customize the server name and use the name to access your USB disk.

1. In the **Sharing Settings** section, make sure **Network Neighborhood** is selected, and enter a Network/Media Server Name as you like, such as **MyShare**, then click **Save**.

Sharing Settings

Network/Media Server Name:

Enable	Access Method	Access Address	Port
☒	Media Server	--	--
☒	Network Neighborhood	\\MyShare	--
☒	FTP	ftp://192.168.0.1:21	21
☒	FTP(via Internet)	ftp://0.0.0.0:21	21

Save

2. Now you can access the USB disk by visiting **\\MyShare** (for Windows) or **smb://MyShare** (for Mac).

➤ To Only Share Specific Content

1. Focus on the **Folder Sharing** section. Turn off **Share All**, then click **Add** to add a new sharing folder.

Folder Sharing

Share All: ☐

[+ Add](#) [- Delete](#)

☐	ID	Folder Name	Folder Path	Media Sharing	Volume Name	Status	Modify
--	--	--	--	--	--	--	--

Volume Name:

Folder Path: [Browse](#)

Folder Name:

☐ Enable Authentication

☐ Enable Write Access

☐ Enable Media Sharing

[Cancel](#) [OK](#)

2. Select the **Volume Name** and **Folder Path**, then enter a **Folder Name** as you like.
3. Decide the way you share the folder:
 - **Enable Authentication:** By default, authentication is disabled for this folder sharing, and you can select this check box to enable authentication and you will be required to log in to the Sharing Account to access the USB disk. Refer to [To Set up Authentication for Data Security](#) to learn more.
 - **Enable Write Access:** If you select this check box, network clients can modify this folder.
 - **Enable Media Sharing:** Select this check box to enable media sharing for this folder, and you can view photos, play music and watch movies stored on the USB disk directly from DLNA-supported devices. Refer to [Media Sharing](#) to learn more.
4. Click **OK** to make the settings effective.

Tips:

The router can share 32 folders at most. You can click  on the page to detach the corresponding folder you do not want to share.




ID	Folder Name	Folder Path	Media Sharing	Volume Name	Status	Modify
1	BigWorld	G:/Big world	On	sda1		 

➤ To Set up Authentication for Data Security

You can set up authentication for your USB device so that network clients will be required to enter the username and password when accessing the USB disk.

1. In the **Sharing Account** section, choose **Use Default Account** or **Use New Account**. The user name is **admin** and the password is the login password for the default account. If you choose **Use New Account**, you can create a new username and a password.

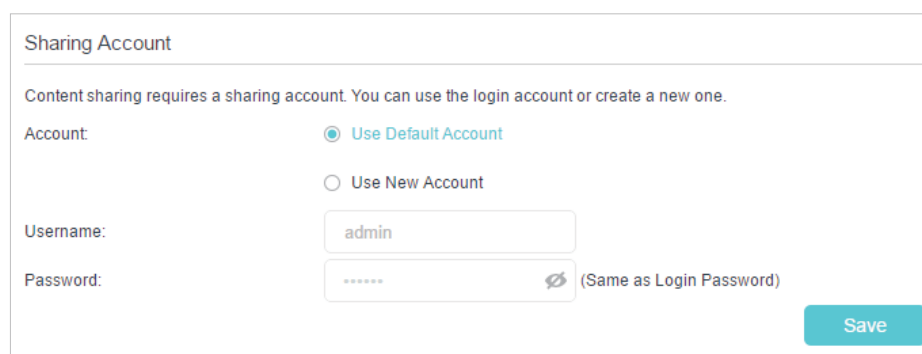
Note:

For Windows users, do not set the sharing username the same as the Windows username. Otherwise, Windows credential mechanism may cause the following problems:

- If the sharing password is also the same as the Windows password, authentication will not work since the Windows system will automatically use its account information for USB access.
- If the sharing password is different from the Windows password, the Windows system will be unable to remember your credentials and you will always be required to enter the sharing password for USB access.

2. Enable authentication to apply the account you just set.

- If you want to enable authentication for all folders, simply leave **Share All** and **Enable Authentication** turned on.

Folder Sharing

Share All:

Enable Authentication:

- If you want to enable authentication for specific folders, disable **Share All** and click **Add** to specify the folders by selecting the **Enable Authentication** check box.

Folder Sharing

Share All:

+ Add

- Delete

☐	ID	Folder Name	Folder Path	Media Sharing	Volume Name	Status	Modify
☐	1	BigWorld	G:/Big world	On	sda1		

Volume Name:

G:

Folder Path:

G:/Big world

Browse

Folder Name:

BigWorld

☒ Enable Authentication

☒ Enable Write Access

☒ Enable Media Sharing

Cancel

OK

Note:
Due to Windows credential mechanism, you might be unable to access the USB disk after changing Authentication settings. Please log out from the Windows and try to access again. Or you can change the address of the USB disk by referring to [To Customize the Address of the USB Disk](#).

6.2. Media Sharing

The feature of **Media Sharing** allows you to view photos, play music and watch movies stored on the USB disk directly from DLNA-supported devices, such as your computer, pad and PS2/3/4.


1. When your USB disk is inserted into the router, your DLNA-supported devices (such as your computer and pad) connected to the router can detect and play the media files on the USB disk.
2. Refer to the following table for detailed instructions.

28

- Go to [Computer](#) > [Network](#), then click the Media Server Name (model number by default) in the [Media Devices](#) section.

Note:

Here we take Windows 7 as an example.

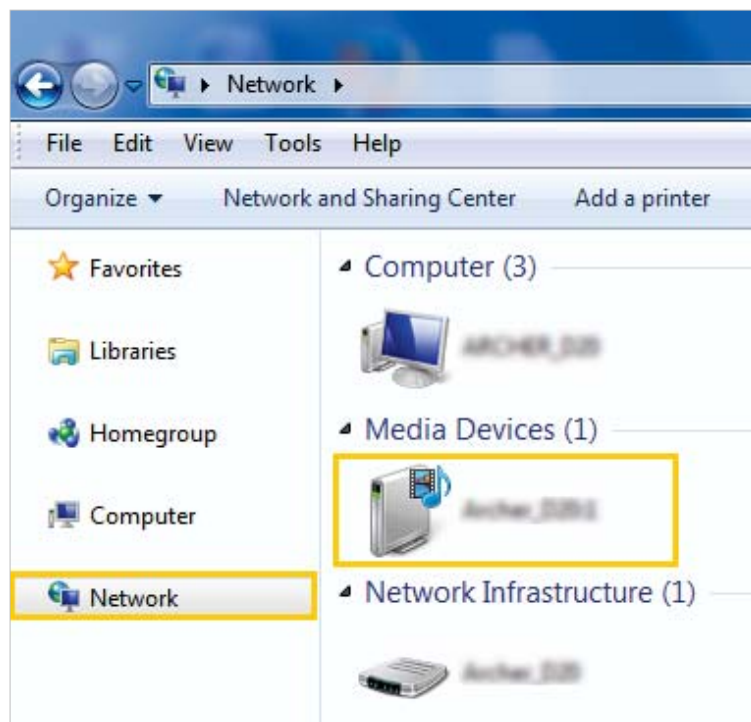

Windows
Computer

Smart
Device

- Use a third-party DLNA-supported player.

Chapter 7

Parental Controls

This function allows you to block inappropriate, explicit and malicious websites, and control access to specified websites at specified time.

I want to: Control what types of websites my children or other home network users can visit and the time of day they are allowed to access the internet.


For example, I want to allow my children’s devices (e.g. a computer or a tablet) to access only www.tp-link.com and Wikipedia.org from 18:00 (6 PM) to 22:00 (10 PM) on the weekdays and not other time.

How can I do that?

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to [Advanced](#) > [Parental Controls](#) and enable [Parental Controls](#).



3. Click [Add](#). And then Click [View Existing Devices](#), and select the connected device(s). Or, input the [Device Name](#) and [MAC Address](#) manually.

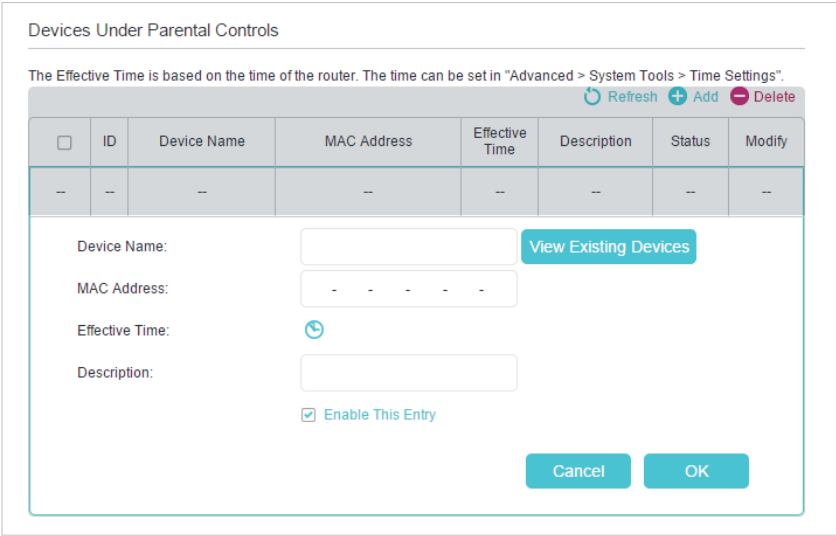

4. Click the icon to set the Effective Time. Drag the cursor over the appropriate cell(s) and click [OK](#).

	Sun	Mon	Tue	Wed	Thu	Fri	Sat
0:00							
1:00							
2:00							
3:00							
4:00							
5:00							
6:00							
7:00							
8:00							
9:00							
10:00							
11:00							
12:00							
13:00							
14:00							
15:00							
16:00							
17:00							
18:00		Effective Time	Effective Time	Effective Time	Effective Time	Effective Time	
19:00		Effective Time	Effective Time	Effective Time	Effective Time	Effective Time	
20:00		Effective Time	Effective Time	Effective Time	Effective Time	Effective Time	
21:00		Effective Time	Effective Time	Effective Time	Effective Time	Effective Time	
22:00		Effective Time	Effective Time	Effective Time	Effective Time	Effective Time	
23:00							
24:00							

Effective Time

Reset OK

5. Enter a [Description](#) for the entry, select the [Enable This Entry](#) check box, and then click [OK](#).
6. Enable [Content Restriction](#), and select [Whitelist](#) as the restriction policy.

Content Restriction

Content Restriction: ☒

Restriction Policy: ☐ Blacklist ☒ [Whitelist](#)

[+ Add a New Keyword](#)

Save

Tips:

- With [Blacklist](#) selected, the controlled devices cannot access any websites containing the specified keywords during the Internet Access Time period.
- With [Whitelist](#) selected, the controlled devices can only access websites containing the specified keywords during the Internet Access Time period.

7. Click [Add a New Keyword](#) and enter "www.tp-link.com" and "Wikipedia.org" as the keywords and click [Save](#).

Content Restriction

Content Restriction: ☒

Restriction Policy: ☐ Blacklist ☒ [Whitelist](#)

[+ Add a New Keyword](#)

www.tp-link.com - Wikipedia.org -

Save

8. You can add up to 32 keywords for either Blacklist or Whitelist.

Below are some sample entries for your reference.

- **For Whitelist:** Enter a web address (e.g. wikipedia.org) to allow access only to its related websites. If you wish to block all Internet browsing access, do not add any keyword to the **Whitelist**.
- **For Blacklist:** Specify a web address (e.g. wikipedia.org), a web address keyword (e.g. wikipedia) or a domain suffix (e.g. .edu or .org) to block access only to the websites containing that keyword or suffix.

Done!

Now you can control your children's internet access as needed.

Chapter 8

QoS

This chapter explains how to create the QoS (Quality of Service) rule to prioritize your online activities, which minimizes the impact caused by heavy internet traffic.

Prioritize Internet Traffic with QoS

QoS (Quality of Service) is designed to ensure the efficient operation of the network when network congestion is encountered.

I want to: Specify the upstream and the downstream bandwidths used by the devices connected to my router.

How can I do that?

1. Enable QoS function and set bandwidth control method.
 - 1) Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
 - 2) Go to **Advanced > QoS > Basic Settings**, and enable **QoS of Upstream** and **QoS of Downstream**.

Basic Settings

QoS of Upstream: ☒ Enable

Scheduler Algorithm: ☒ SP ☐ WRR

Total BandWidth: Kbps

QoS of Downstream: ☒ Enable

Scheduler Algorithm: ☒ SP ☐ WRR

Total BandWidth: Kbps

[Save](#)

- 3) Select a **Scheduler Algorithm** as the network scheduling discipline for upstream and downstream.
 - **SP**: Strict priority algorithm.
 - **WRR**: Weighted round robin algorithm.
 - 4) Enter the maximum upload and download speed bandwidth provided by your internet service provider in the corresponding **Total Bandwidth** boxes.
 - 5) Click **Save** to make the settings effective.
2. Specify the control mode for upstream and downstream.
 - 1) Go to **Advanced > QoS > SP/WRR Settings**, and click **Add** to create a queues for your network.

SP/WRR Settings

+ Add - Delete

☐	Queue Name	Direction	Scheduler Algorithm	Precedence	Weight	Force Weight	Status	Modify
☐	--	--	--	--	--	--	--	--

Queue Name:

Direction: Upstream ▼

Scheduler Algorithm: SP

Precedence: 1 ▼

☒ Enable this Entry

Cancel OK

- 2) Select the data flow direction, Upstream or Downstream.
- 3) Select a Precedence for the queue if you select SP as the scheduler algorithm, or enter the Weight if you select WRR as the scheduler algorithm.
 - Precedence: The queue's packets get through network more quickly with higher precedence. It ranges from 1 to 8, value 1 is the highest precedence.
 - Weight: It is the queue's quota bandwidth, calculated as percentage of the total bandwidth.
- 4) Enter a description for the queue in the Queue Name box.
- 5) Select Enable this entry. For WRR algorithm, you can select Enable force weight if you want to always keep the bandwidth quota for the queue even when it is idle.
- 6) Click OK to make the settings effective.
- 7) Repeat step 1) - 6) to set other queues according to your needs.

Tips:

You can click the icon in the SP/WRR settings table to disable the corresponding entry.

SP/WRR Settings

+ Add - Delete

☐	Queue Name	Direction	Scheduler Algorithm	Precedence	Weight	Force Weight	Status	Modify
☐	UP1	Upstream	SP	1	0	Disable		
☐	UP2	Upstream	SP	2	0	Disable		
☐	Down50	Downstream	WRR	0	50	Enable		
☐	Down20	Downstream	WRR	0	20	Enable		

3. Set the flow classification based on the queues you set.
 - 1) Go to [Advanced](#) > [QoS](#) > [Flow Classification](#), and click [Add](#) to create a new class.
 - 2) Enter a description for the class in the [Class Name](#) box and select the [Order](#).

Flow Classification

[Refresh](#) [+ Add](#) [- Delete](#)

☐	Class Name	Order	Classification Criteria	Classification Result	Status	Modify
—	—	—	—	—	—	—

Class Name:

Order: Last ▼

☒ [Enable](#)

- [Order](#): Each packet can match only one flow classification. Matching is started from the lower order to the higher order.
- 3) Specify the classification criteria. The ingress interface type is necessary and unique for each class. You can enter other matching information according to your needs.

Specify Classification Criteria(A blank criteria indicates it is not used for classification.)

Ingress Interface: LAN ▼

Ether Type: ▼

Source MAC Address:

Source MAC Mask:

Destination MAC Address:

Destination MAC Mask:

- [Ingress Interface](#): Select the interface you want to control. 2.4GHz and 5.0GHz wireless networks are regarded as an ingress interface respectively.
- 4) Specify the classification results.

Specify Classification Results(A blank criteria indicates no operation.)

Direction:	Upstream	▼
Queue:	U1	▼
Mark DSCP:		▼
	☒ Enable Policer	
Committed Rate:	100	Kbps
Committed Burst Size:	100	bytes

Cancel OK

- **Queue:** Select the queue you want to apply to this class.
- **Enable Policer:** Select this check box to specify the **Committed Rate** and **Committed Burst Size** if needed.

5) Click **OK** to make the settings effective.

6) Repeat step 1)-5) to set other flow classes according to your needs.

Done!

QoS is implemented to prioritize your internet traffic.

Chapter 9

Network Security

This chapter guides you on how to protect your home network from unauthorized users by implementing network security functions. You can block or allow specific client devices to access your wireless network using MAC Filtering, or using Access Control for wired and wireless networks, or you can prevent ARP spoofing and ARP attacks by using IP & MAC Binding.


This chapter contains the following sections:

- [Firewall & DoS Protection](#)
- [Service Filtering](#)
- [Access Control](#)
- [IP & MAC Binding](#)

9.1. Firewall & DoS Protection

DoS Protection can protect your home network against DoS attacks from flooding your network with server requests. Follow the steps below to configure DoS Protection.

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to [Advanced](#) > [Security](#) > [Firewall & DoS Protection](#).

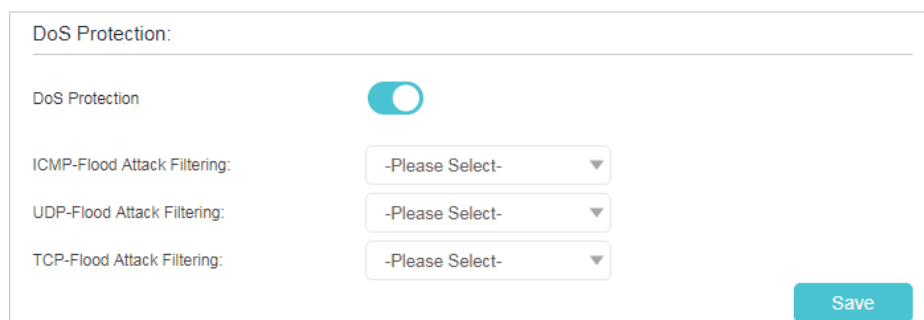

■ Note: [DoS Protection](#) and [Traffic Statistics](#) must be enabled at the same time, you can go to [Advanced](#) > [System Tools](#) > [Traffic Statistics](#) to enable traffic statistics function.

3. Enable [DoS Protection](#).
4. Set the protection level ([Low](#), [Middle](#) or [High](#)) for [ICMP-Flood Attack Filtering](#), [UDP-Flood Attack Filtering](#) and [TCP-Flood Attack Filtering](#).
 - [ICMP-Flood Attack Filtering](#) - Enable to prevent the ICMP (Internet Control Message Protocol) flood attack.
 - [UDP-Flood Attack Filtering](#) - Enable to prevent the UDP (User Datagram Protocol) flood attack.
 - [TCP-Flood Attack Filtering](#) - Enable to prevent the TCP (Transmission Control Protocol) flood attack.
5. Click [Save](#) to make the settings effective.

 Tips:

- 1. The level of protection is based on the number of traffic packets. You can specify the level under [DoS Protection Level Settings](#).

Dos Protection Level Settings

ICMP-Flood Protection Level:

Low:

3600

(5-3600) packets/sec

Middle:

2400

(5-3600) packets/sec

High:

1200

(5-3600) packets/sec

UDP-Flood Protection Level:

Low:

3600

(5-3600) packets/sec

Middle:

2400

(5-3600) packets/sec

High:

1200

(5-3600) packets/sec

TCP-SYN-Flood Protection Level:

Low:

3600

(5-3600) packets/sec

Middle:

2400

(5-3600) packets/sec

High:

1200

(5-3600) packets/sec

Save

- 2. The protection will be triggered immediately when the number of packets exceeds the preset threshold value, and the vicious host will be displayed in the [Blocked DoS Host List](#).

Blocked DoS Host List

Host Number: 0

 Refresh  Delete

☐	ID	IP Address	MAC Address
☐	--	--	--

9. 2. Service Filtering

With Service Filtering, you can prevent certain users from accessing the specified service, and even block internet access completely.

- 1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
- 2. Go to [Advanced](#) > [Security](#) > [Service Filtering](#).
- 3. Enable [Service Filtering](#).

Service Filtering

Service Filtering: 

- 4. Click [Add](#).

Filtering List

Refresh

Add

Delete

☐	ID	Service Type	Port	IP Address	Status	Modify
☐	--	--	--	--	--	--

Service Type:

Any(ALL)

Protocol:

TCP/UDP

Starting Port:

1

Ending Port:

65535

Service Type:

Any(ALL)

Filter Service For:

☐ Single IP Address

☐ IP Address Range

☒ All IP Addresses

Cancel

OK

5. Select a **Service Type** from the drop-down list and the following four fields will be automatically filled in. Select **Custom** when your desired service type is not listed, and enter the information manually.
6. Specify the IP address(es) that this filtering rule will apply to.
7. Click **OK** to make the settings effective.

Note: If you want to disable an entry, click the  icon.

9.3. Access Control

Access Control is used to block or allow specific client devices to access your network (via wired or wireless) based on a list of blocked devices (Blacklist) or a list of allowed devices (Whitelist).

I want to:

Block or allow specific client devices to access my network (via wired or wireless).

- How can I do that?

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.

2. Go to **Advanced > Security > Access Control** and enable **Access Control**.

Access Control

Access Control:

☒

3. Select the access mode to either block (recommended) or allow the device(s) to access your network.

To block specific device(s):

- 1) Select **Blacklist** and click **Save**.

Access Mode

Access Mode:

☒ Blacklist
 ☐ Whitelist

Save

- 2) Select the device(s) to be blocked in the **Online Devices** table (or click the **Add** under the **Devices in Blacklist** and enter the **Device Name** and **MAC Address** manually).

- 3) Click **Block** above the **Online Devices** table. The selected devices will be added to **Devices in Blacklist** automatically.

Devices in Blacklist

+ Add
- Delete

☐	ID	Device Name	MAC Address	Modify
☐	--	--	--	--

Online Devices

Refresh
Block

☐	ID	Device Name	IP Address	MAC Address	Connection Type
☐	1	DESKTOP-888888	192.168.0.100	8C:8C:4B:1D:8D:4B	Wired

To allow specific device(s):

- 1) Select **Whitelist** and click **Save**.

Access Mode

Access Mode:

☐ Blacklist
 ☒ Whitelist

Save

- 2) Click **Add** in the **Devices in Whitelist** section.

The screenshot shows a web interface titled "Devices in Whitelist". At the top right, there are "+ Add" and "- Delete" buttons. Below this is a table with the following structure:

☐	ID	Device Name	MAC Address	Modify
--	--	--	--	--

Below the table, there are two input fields: "Device Name:" and "MAC Address:". The "MAC Address" field has a placeholder showing five dashes. At the bottom right, there are "Cancel" and "OK" buttons.

3) Enter the **Device Name** and **MAC Address**. (You can copy and paste the information from **Online Devices** table if the device is connected to your network.)

4) Click **OK**.

Done!

Now you can block or allow specific client devices to access your network (via wired or wireless) by **Blacklist** or **Whitelist**.

9.4. IP & MAC Binding

IP & MAC Binding, namely, ARP (Address Resolution Protocol) Binding, is used to bind a network device's IP address to its MAC address. This will prevent ARP spoofing and other ARP attacks by denying network access to a device with a matching IP address in the Binding list, but an unrecognized MAC address.

I want to:

Prevent ARP spoofing and ARP attacks.

How can I do that?

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to **Advanced** > **Security** > **IP & MAC Binding** and enable **IP & MAC Binding**.

IP & MAC Binding:

Binding List

Add

Delete

	ID	MAC Address	IP Address	Status	Enable	Modify
	--	--	--	--	--	--

ARP List

Refresh

Bind

	ID	Device Name	MAC Address	IP Address	Bound	Modify
	1	W11424	84 16 F9 03 E2 D3	192.168.0.100	Unloaded	

3. Bind your device(s) according to your needs.

To bind the connected device(s):

- 1) Select the device(s) to be bound in the **ARP List**.
- 2) Click **Bind** to add to the **Binding List**.

To bind the unconnected device:

- 1) Click **Add**.

Binding List

+ Add

- Delete

☐	ID	MAC Address	IP Address	Status	Enable	Modify
☐	--	--	--	--	--	--

MAC Address:

84 - 16 - F9 - 03 - E2 - D4

IP Address:

192 . 168 . 0 . 100

☒ Enable This Entry

Cancel

OK

- 2) Enter the **MAC Address** and **IP Address** that you want to bind.
- 3) Select the **Enable This Entry** check box to enable the entry and click **OK**.

Done!

Enjoy the internet without worrying about ARP spoofing and ARP attacks.

Chapter 10

NAT Forwarding

Router's NAT (Network Address Translation) feature makes the devices in the LAN use the same public IP address to communicate in the internet, which protects the local network by hiding IP addresses of the devices. However, it also brings about the problem that external host cannot initiatively communicate with the specified device in the local network.

The router can use a forwarding feature to remove the isolation of NAT and allow external internet hosts to initiatively communicate with the devices in the local network, thus enabling some special features.

TP-Link router includes four forwarding rules. If two or more rules are set, the priority of implementation from high to low is Virtual Servers, Port Triggering, UPnP and DMZ.


This chapter contains the following sections:

- [Translate Address and Port by ALG](#)
- [Share Local Resources over the Internet by Virtual Server](#)
- [Open Ports Dynamically by Port Triggering](#)
- [Make Applications Free from Port Restriction by DMZ](#)
- [Make Xbox Online Games Run Smoothly by UPnP](#)

10.1. Translate Address and Port by ALG

ALG (Application Layer Gateway) allows customized NAT (Network Address Translation) traversal filters to be plugged into the gateway to support address and port translation for certain application layer "control/data" protocols: FTP, TFTP etc. Enabling ALG is recommended.

Visit <http://tplinkwifi.net>, and log in with the password you set for the router. Go to **Advanced > NAT Forwarding > ALG**.

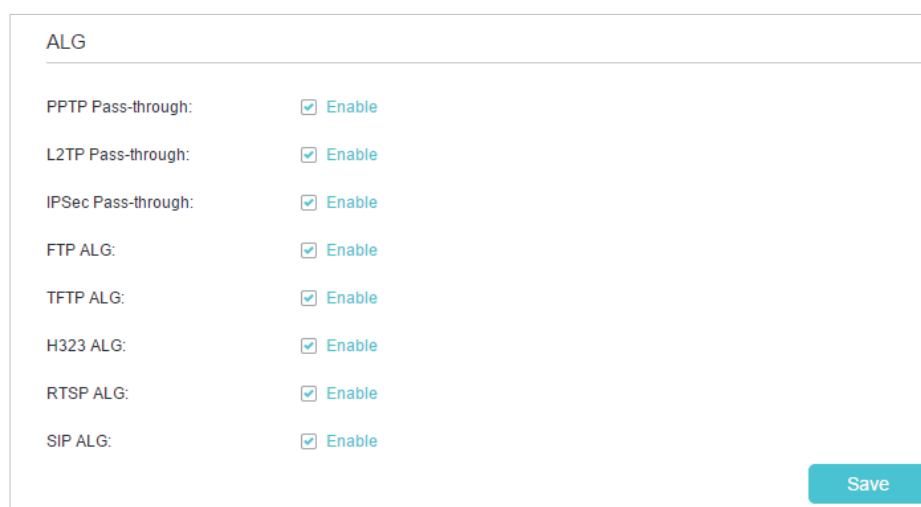

ALG	
PPTP Pass-through:	☒ Enable
L2TP Pass-through:	☒ Enable
IPSec Pass-through:	☒ Enable
FTP ALG:	☒ Enable
TFTP ALG:	☒ Enable
H323 ALG:	☒ Enable
RTSP ALG:	☒ Enable
SIP ALG:	☒ Enable

Save

- **PPTP Pass-through:** If enabled, it allows Point-to-Point sessions to be tunneled through an IP network and passed through the router.
- **L2TP Pass-through:** If enabled, it allows Layer 2 Point-to-Point sessions to be tunneled through an IP network and passed through the router.
- **IPSec Pass-through:** If enabled, it allows IPSec (Internet Protocol Security) to be tunneled through an IP network and passed through the router. IPSec uses cryptographic security services to ensure private and secure communications over IP networks.
- **FTP ALG:** If enabled, it allows FTP (File Transfer Protocol) clients and servers to transfer data via NAT.
- **TFTP ALG:** If enabled, it allows TFTP (Trivial File Transfer Protocol) clients and servers to transfer data via NAT.
- **H323 ALG:** If enabled, it allows Microsoft NetMeeting clients to communicate via NAT.
- **RTSP ALG:** If selected, it allows media player clients to communicate with streaming media servers via NAT.
- **SIP ALG:** If enabled, it allows clients communicate with SIP (Session Initiation Protocol) servers via NAT.


10.2. Share Local Resources over the Internet by Virtual Server

When you build up a server in the local network and want to share it on the internet, Virtual Server can realize the service and provide it to the internet users. At the same time virtual server can keep the local network safe as other services are still invisible from the internet.

Virtual server can be used for setting up public services in your local network, such as HTTP, FTP, DNS, POP3/SMTP and Telnet. Different service uses different service port. Port 80 is used in HTTP service, port 21 in FTP service, port 25 in SMTP service and port 110 in POP3 service. Please verify the service port number before configuration.

I want to: Share my personal website I've built in a local network with my friends through the internet.

For example, the personal website has been built on my home PC (192.168.0.100). I hope that my friends can visit my website. The PC is connected to the router with the WAN IP address 218.18.232.154.

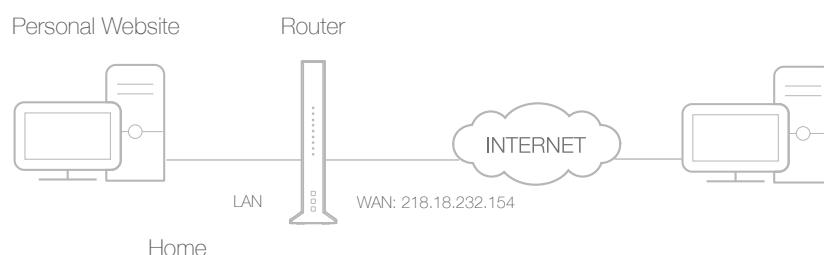

How can I do that?

1. Assign a static IP address to your PC, for example 192.168.0.100.
2. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
3. Go to **Advanced** > **NAT Forwarding** > **Virtual Servers**, click **Add**.

Virtual Servers

ID

Service Type

External Port

Internal IP

Internal Port

Protocol

Status

Modify

+

Add

-

Delete

--	--	--	--	--	--	--	--	--
----	----	----	----	----	----	----	----	----

Note: Virtual Server can be configured only when there is an available interface. If the external port is already used for Remote Management or CWMP, Virtual Server will not take effect.

Interface Name:

ipoe_0_0_d

Service Type:

HTTP

View Existing Applications

External Port:

80

(XX-XX or XX)

Internal IP:

192 . 168 . 0 . 100

Internal Port:

80

(XX or Blank, 1-65535)

Protocol:

TCP

☒ Enable This Entry

Cancel

OK

4. Click [View Existing Applications](#), and choose [HTTP](#). The external port, internal port and protocol will be automatically filled in. Enter the PC's IP address 192.168.0.100 in the [Internal IP](#) field.

5. Click [OK](#) to make the settings effective.

🔗 Tips:

1. It is recommended to keep the default settings of [Internal Port](#) and [Protocol](#) if you are not clear about which port and protocol to use.

2. If the service you want to use is not in the [Service Type](#), you can enter the corresponding parameters manually. You should verify the port number that the service needs.

3. You can add multiple virtual server rules if you want to provide several services from a router. Please note that the [External Port](#) cannot be overlapped.

Done!

Internet users can enter [http://WAN IP](#) (in this example: [http://218.18.232.154](#)) to visit your personal website.

🔗 Tips:

1. For a WAN IP that is assigned dynamically by ISP, it is recommended to apply and register a domain name for the WAN by DDNS, go to [Set Up a Dynamic DNS Service Account](#) for more information. Then you can use [http://domain name](#) to visit the website.

2. If you have changed the default [External Port](#), you should use [http://WAN IP: External Port](#) or [http://domain name: External Port](#) to visit the website.

10.3. Open Ports Dynamically by Port Triggering

Port triggering can specify a triggering port and its corresponding external ports. When a host in the local network initiates a connection to the triggering port, all the external ports will be opened for subsequent connections. The router can record the IP

49

address of the host. When the data from the internet returns to the external ports, the router can forward them to the corresponding host. Port triggering is mainly applied to online games, VoIPs and video players. Common applications include MSN Gaming Zone, Dialpad, Quick Time 4 players, and so on.

Follow the steps below to configure the port triggering rules:

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to **Advanced > NAT Forwarding > Port Triggering** and click **Add**.

Port Triggering

+ Add - Delete

ID	Application	Triggering Port	Triggering Protocol	External Port	External Protocol	Status	Modify
--	--	--	--	--	--	--	--

Interface Name:

Application: [View Existing Applications](#)

Triggering Port: (XX, 1-65535)

Triggering Protocol:

External Port: (XX or XX-XX, 1-65535, at most 5 pairs)

External Protocol:

☒ Enable This Entry

[Cancel](#) [OK](#)

3. Click [View Existing Applications](#), and select the desired application. The triggering port and protocol, the external port and protocol will be automatically filled in. Here we take [MSN Gaming Zone](#) as an example.
4. Click [OK](#) to make the settings effective.

Tips:

1. You can add multiple port triggering rules according to your network needs.
2. If the application you need is not listed in the Existing Applications list, you can enter the parameters manually. You should verify the external ports the application uses first and enter them into [External Port](#) field according to the format suggested.

10.4. Make Applications Free from Port Restriction by DMZ

When a PC is set to be a DMZ (Demilitarized Zone) host in the local network, it is totally exposed to the internet, which can realize the unlimited bidirectional communication between internal hosts and external hosts. The DMZ host becomes a virtual server with

all ports opened. When you are not clear about which ports to open in some special applications, like IP camera and database software, you can set the PC to be a DMZ host.

Note:


DMZ is most applicable when you don't know which ports to open. When it is enabled, the DMZ host is totally exposed to the internet, which may bring some potential safety hazards. If DMZ is not in use, please disable it in time.

I want to: Make the home PC join the internet online game without port restriction.

For example, due to some port restriction, when playing the online games, you can log in normally but cannot join a team with other players. To solve this problem, set your PC as a DMZ with all ports opened.

How can I do that?

1. Assign a static IP address to your PC, for example 192.168.0.100.
2. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
3. Go to [Advanced](#) > [NAT Forwarding](#) > [DMZ](#) and select the [Enable](#) check box to turn on DMZ.

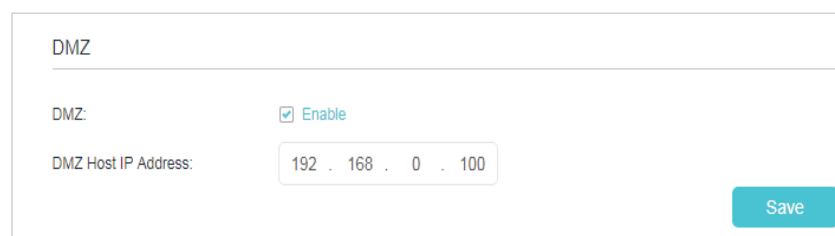

4. Enter the IP address 192.168.0.100 in the [DMZ Host IP Address](#) box.
5. Click [Save](#) to make the settings effective.

Done!

The configuration is completed. You've set your PC to a DMZ host and now you can join a team to game with other players.

10.5. Make Xbox Online Games Run Smoothly by UPnP


UPnP (Universal Plug and Play) protocol allows the applications or host devices to automatically find the front-end NAT device and send request to it to open the corresponding ports. With UPnP enabled, the applications or host devices in the both sides of NAT device can freely communicate with each other realizing the seamless

connection of the network. You need to enable the UPnP if you want to use applications such as multiplayer gaming, peer-to-peer connections, real-time communication (for example, VoIP or telephone conference), or remote assistance.

 Tips:

1. UPnP is enabled by default in this router.
2. Only the application supporting UPnP protocol can use this feature.
3. UPnP feature needs the support of operating system (e.g. Windows Vista/ Windows 7/ Windows 8, etc. Some operating systems need to install the UPnP components).

For example, when you connect your Xbox to the router which has connected to the internet to play online games, UPnP will send request to the router to open the corresponding ports allowing the following data penetrating the NAT to transmit. Therefore, you can play Xbox online games without a hitch.

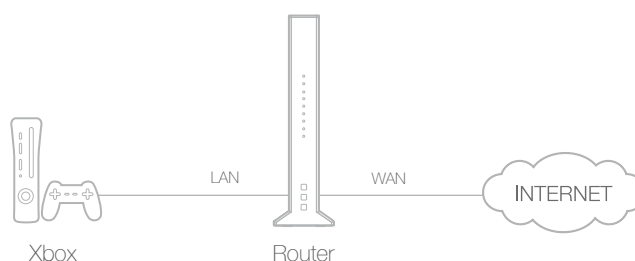

You can follow the steps to change the status of UPnP.

1. Visit <http://tplinkwifi.net>, and log in with the password you set for your router.
2. Go to **Advanced** > **NAT Forwarding** > **UPnP**, and enable or disable UpnP according to your needs.

UPnP

UPnP: ☒

UPnP Service List

Total Clients: 0 [Refresh](#)

ID	Service Description	External Port	Protocol	Internal IP Address	Internal Port
--	--	--	--	--	--

Chapter 11

VPN Server

The VPN (Virtual Private Networking) Server allows you to access your home network in a secured way through internet when you are out of home. The router offers two ways to setup VPN connection: OpenVPN and PPTP (Point to Point Tunneling Protocol) VPN.

OpenVPN is somewhat complex but with greater security and more stable. It is suitable for restricted environment, such as campus network and company intranet.


PPTP VPN is more easily used and its speed is faster, it's compatible with most operating systems and also supports mobile devices. Its security is poor and your packets may be cracked easily, and PPTP VPN connection may be prevented by some ISP.

This chapter contains the following sections, you can choose the appropriate VPN server connection type as needed.

- [Use OpenVPN to Access Your Home Network](#)
- [Use PPTP VPN to Access Your Home Network](#)

11.1. Use OpenVPN to Access Your Home Network

In the OpenVPN connection, the home network can act as a server, and the remote device can access the server through the router which acts as an OpenVPN Server gateway. To use the VPN feature, you should enable OpenVPN Server on your router, and install and run VPN client software on the remote device. Please follow the steps below to set up an OpenVPN connection.

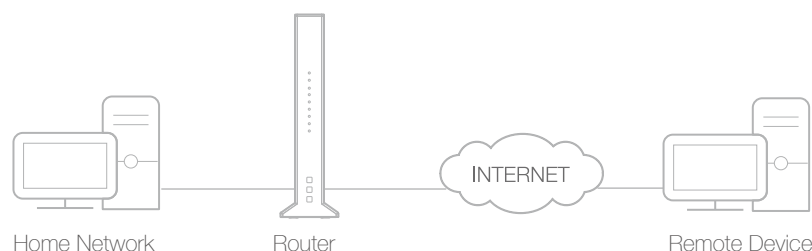

Step1. Set Up OpenVPN Server on Your Router

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to **Advanced > VPN > OpenVPN**, and select **Enable VPN Server**.

OpenVPN

Note: No certificate currently, please [Generate](#) one before enabling VPN Server.

☒ **Enable VPN Server**

Service Type: ☒ **UDP** ☐ TCP

Service Port:

VPN Subnet/Netmask:

Client Access: ☒ **Home Network Only** ☐ Internet and Home Network

[Save](#)

Note:

1. Before you enable VPN Server, we recommend you configure Dynamic DNS Service (recommended) or assign a static IP address for router's WAN port and synchronize your System Time with internet.
2. The first time you configure the OpenVPN Server, you may need to [Generate](#) a certificate before you enable the VPN Server.
3. Select the **Service Type** (communication protocol) for OpenVPN Server: UDP, TCP.
4. Enter a VPN **Service Port** to which a VPN device connects, and the port number should be between 1024 and 65535.
5. In the **VPN Subnet/Netmask** fields, enter the range of IP addresses that can be leased to the device by the OpenVPN server.

6. Select your **Client Access** type. Select **Home Network Only** if you only want the remote device to access your home network; select **Internet and Home Network** if you also want the remote device to access internet through the VPN Server.
7. Click **Save**.
8. Click **Generate** to get a new certificate.

Certificate

Generate the certificate.

Generate

Note:

If you have already generated one, please skip this step, or click **Generate** to update the certificate.

9. Click **Export** to save the OpenVPN configuration file which will be used by the remote device to access your router.

Configuration File

Export the configuration.

Export

Step 2. Configure OpenVPN Connection on Your Remote Device

1. Visit <http://openvpn.net/index.php/download/community-downloads.html> to download the OpenVPN software, and install it on your device where you want to run the OpenVPN client utility.

Note:

You need to install the **OpenVPN** client utility on each device that you plan to apply the VPN function to access your router. Mobile devices should download a third-party app from Google Play or Apple App Store.

2. After the installation, copy the file exported from your router to the OpenVPN client utility's "config" folder (for example, **C:\Program Files\OpenVPN\config** on Windows). The path depends on where the OpenVPN client utility is installed.
3. Run the OpenVPN client utility and connect it to OpenVPN Server.

Tips:


You can go to **Advanced > VPN > VPN Connections** to view the clients that are currently connected to the OpenVPN servers.

11.2. Use PPTP VPN to Access Your Home Network

PPTP VPN Server is used to create a VPN connection for remote device. To use the VPN feature, you should enable PPTP VPN Server on your router, and configure the PPTP connection on the remote device. Please follow the steps below to set up a PPTP VPN connection.

Step 1. Set Up PPTP VPN Server on Your Router

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to [Advanced](#) > [VPN Server](#) > [PPTP VPN](#), and select [Enable VPN Server](#).

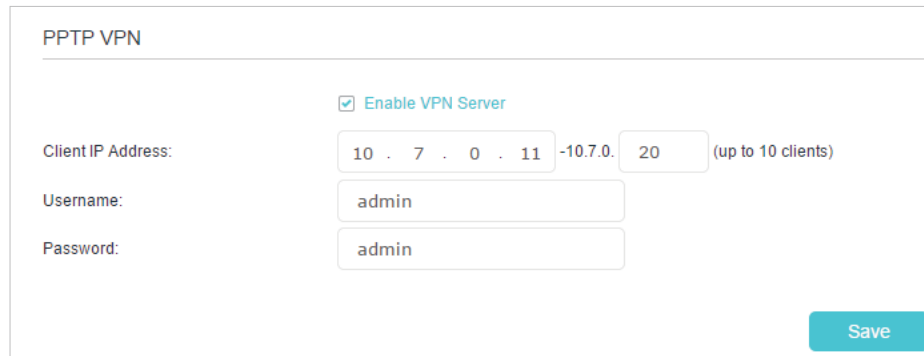

PPTP VPN

☒ [Enable VPN Server](#)

Client IP Address: -10.7.0. (up to 10 clients)

Username:

Password:

[Save](#)

Note:


Before you enable [VPN Server](#), we recommend you configure Dynamic DNS Service (recommended) or assign a static IP address for router's WAN port and synchronize your [System Time](#) with internet.

3. In the [Client IP Address](#) field, enter the range of IP addresses (up to 10) that can be leased to the devices by the PPTP VPN server.
4. Enter the [Username](#) and [Password](#) to authenticate clients to the PPTP VPN server.
5. Click [Save](#) to make the settings effective.


Step 2. Configure PPTP VPN Connection on Your Remote Device

The remote device can use the Windows built-in PPTP software or a third-party PPTP software to connect to PPTP Server. Here we use the [Windows built-in PPTP software](#) as an example.


1. Go to [Start](#) > [Control Panel](#) > [Network and Internet](#) > [Network and Sharing Center](#).
2. Select [Set up a new connection or network](#).

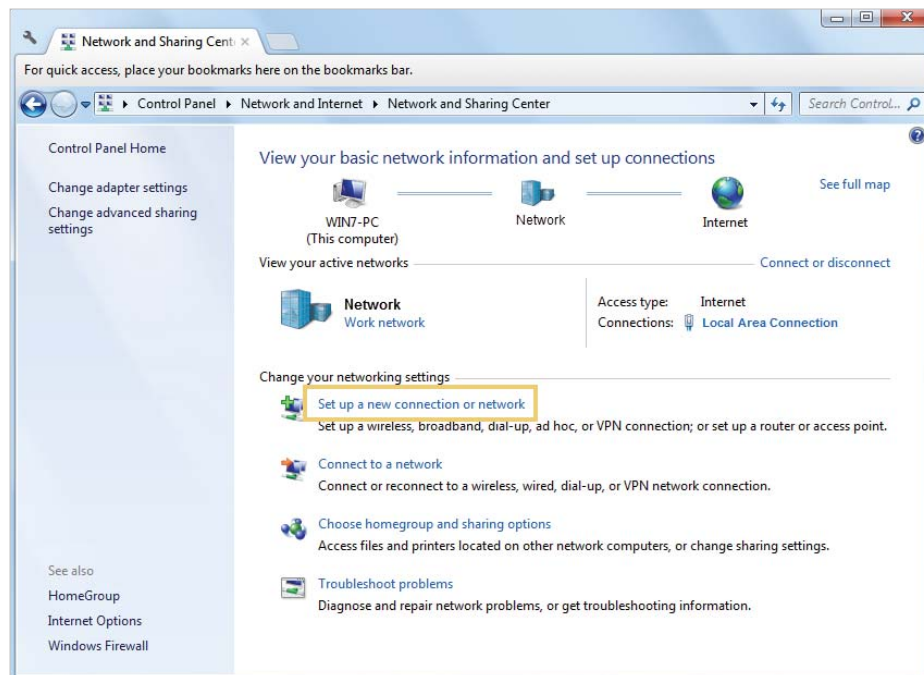


3. Select **Connect to a workplace** and click **Next**.

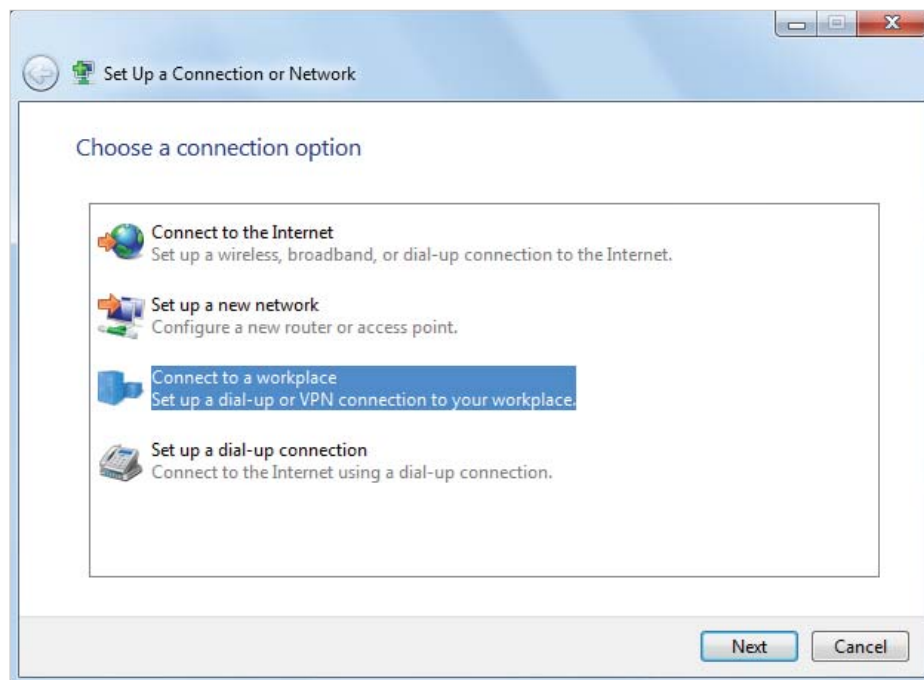


4. Select **Use my Internet connection (VPN)**.

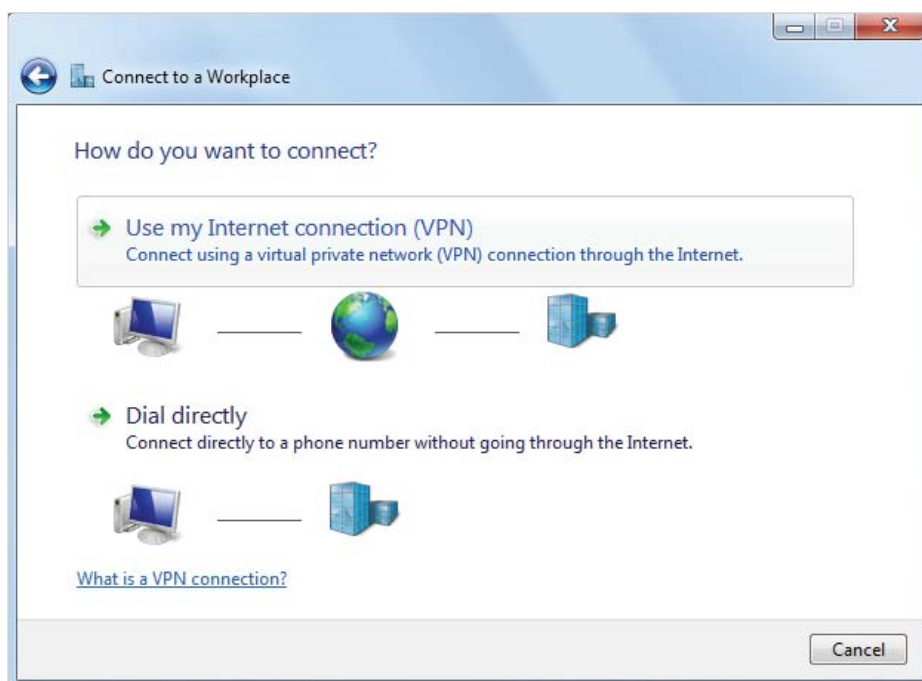


5. Enter the internet IP address of the router (for example: 218.18.1.73) in the **Internet address** field. Click **Next**.

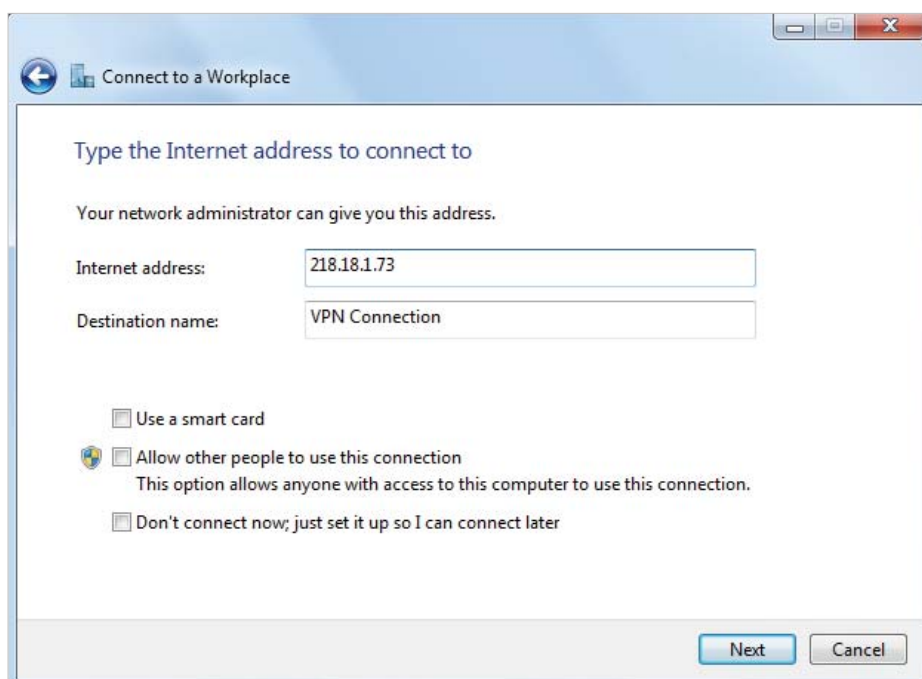

6. Enter the **User name** and **Password** you have set for the PPTP VPN server on your router, and click **Connect**.

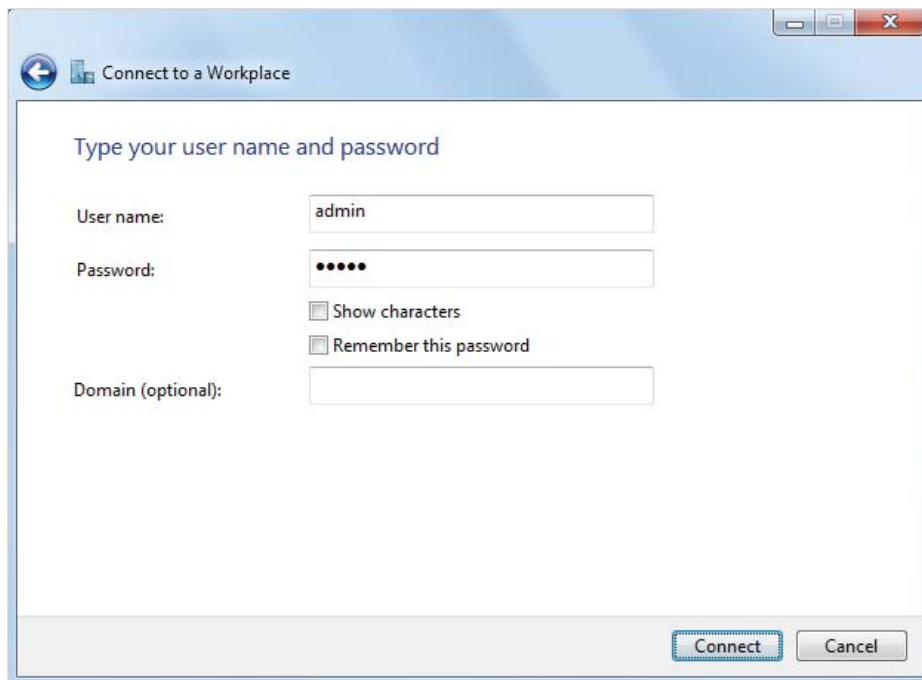

7. The PPTP VPN connection is created and ready to use.

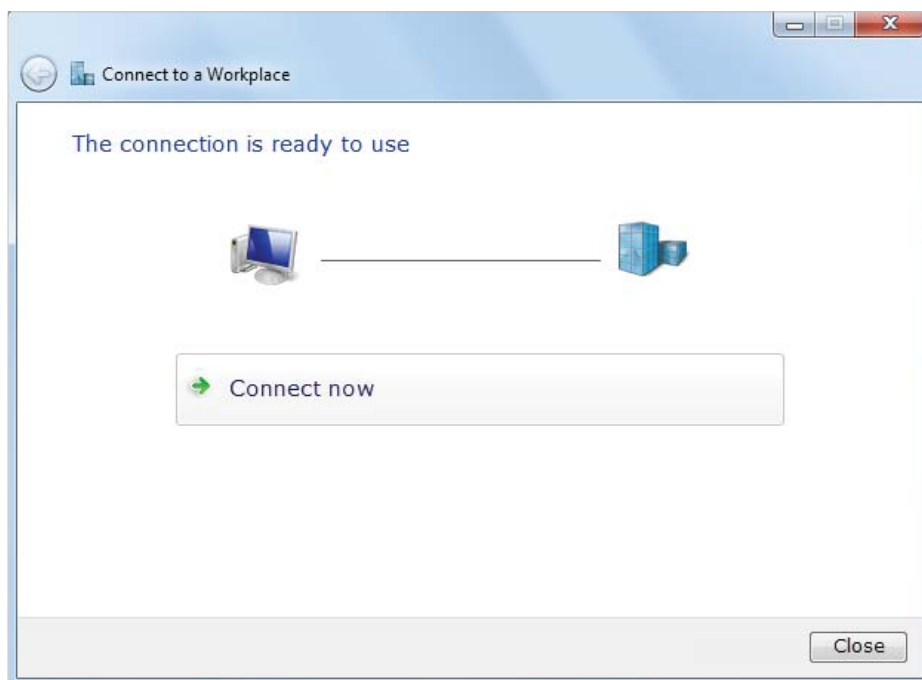

 Tips:

You can go to [Advanced > VPN > VPN Connections](#) to view the clients that are currently connected to the PPTP VPN servers.

Chapter 12

Customize Your Network Settings

This chapter introduces how to change the default settings or adjust the basic configuration of the router using the web management page.

It contains the following sections:

- [Change LAN Settings](#)
- [Configure IPv6 LAN Settings](#)
- [Set Up a Dynamic DNS Service Account](#)
- [Create Static Routes](#)
- [Set Up the IPv6 Tunnel](#)
- [Specify Wireless Settings](#)
- [Use WPS for Wireless Connection](#)
- [Schedule Your Wireless Function](#)


12. 1. Change LAN Settings

12. 1. 1. Change the LAN IP Address

The router is preset with a default LAN IP 192.168.0.1, which you can use to log in to its web management page. The LAN IP address together with the Subnet Mask also defines the subnet that the connected devices are on. If the IP address conflicts with another device in your local network or your network requires a specific IP subnet, you can change it.

Follow the steps below to change your IP address.

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to [Advanced](#) > [Network](#) > [LAN Settings](#) page and select [IPv4](#).

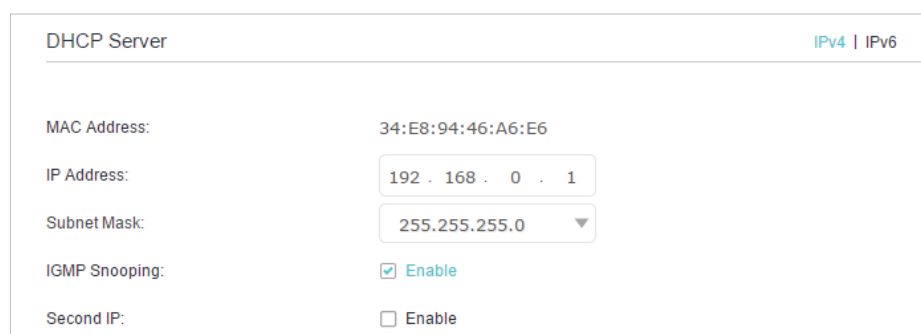

DHCP Server IPv4 | IPv6

MAC Address: 34:E8:94:46:A6:E6

IP Address: 192 . 168 . 0 . 1

Subnet Mask: 255.255.255.0 ▼

IGMP Snooping: ☒ Enable

Second IP: ☐ Enable

3. Enter a new [IP Address](#) appropriate to your needs.
4. Select the [Subnet Mask](#) from the drop-down list. The subnet mask together with the IP address identifies the local IP subnet.
5. Keep [IGMP Snooping](#) enabled by default. IGMP snooping is the process of listening to IGMP (Internet Group Management Protocol) network traffic. The function prevents hosts on a local network from receiving traffic for a multicast group they have not explicitly joined.
6. You can configure the router's [Second IP](#) and [Subnet Mask](#) for LAN interface through which you can also access the web management page.
7. Keep the rest settings as default.
8. Click [Save](#) to make the settings effective.

12. 1. 2. Use the Router as a DHCP Server

You can configure the router to act as a DHCP server to assign IP addresses to its clients. To use the DHCP server function of the router, you must configure all computers on the LAN to obtain an IP Address automatically.

Follow the steps below to configure DHCP server.

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to [Advanced](#) > [Network](#) > [LAN Settings](#) page and select [IPv4](#).

DHCP: ☒ Enable

☒ DHCP Server ☐ DHCP Relay

IP Address Pool: 192 . 168 . 0 . 100 - 192 . 168 . 0 . 199

Address Lease Time: 1440 minutes. (1-2880. The default value is 1440.)

Default Gateway: 0 . 0 . 0 . 0 (Optional)

Default Domain: (Optional)

Primary DNS: 0 . 0 . 0 . 0 (Optional)

Secondary DNS: 0 . 0 . 0 . 0 (Optional)

Save

3. Enable [DHCP](#) function and select [DHCP Server](#).
4. Specify the [IP Address Pool](#), the start address and end address must be on the same subnet with LAN IP. The router will assign addresses within this specified range to its clients. It is from 192.168.0.100 to 192.168.0.199 by default.
5. Enter a value for the [Address Lease Time](#). The [Address Lease Time](#) is the amount of time in which a DHCP client can lease its current dynamic IP address assigned by the router. After the dynamic IP address expires, the user will be automatically assigned a new dynamic IP address. The default is 1440 minutes.
6. Keep the rest settings as default and click [Save](#).

Note:

1. The router can be configured to work as a [DHCP Relay](#). A DHCP relay is a computer that forwards DHCP data between computers that request IP addresses and the DHCP server that assigns the addresses. Each of the device's interfaces can be configured as a DHCP relay. If it is enabled, the DHCP requests from local PCs will be forwarded to the DHCP server that runs on WAN side.
2. You can also appoint IP addresses within a specified range to devices of the same type by using [Condition Pool](#) feature. For example, you can assign IP addresses within the range (192.168.1.50 to 192.168.1.80) to Camera devices, thus facilitating the network management. Enable DHCP feature and configure the parameters according to your situation on the [Advanced](#) > [Network](#) > [LAN Settings](#) page.

12.1.3. Reserve LAN IP Addresses

You can view and add a reserved address for a client. When you specify an IP address for a device on the LAN, that device will always receive the same IP address each time when it accesses the DHCP server. If there are some devices in the LAN that require permanent IP addresses, please configure Address Reservation on the router for the purpose.

Follow the steps below to reserve an IP address for your devices.

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to [Advanced](#) > [Network](#) > [LAN Settings](#) page and select [IPv4](#).
3. Scroll down to locate the [Address Reservation](#) section and click [Add](#) to add an address reservation entry for your device.

Address Reservation

[+ Add](#) [- Delete](#)

☐	MAC Address	Reserved IP Address	Group	Enable	Modify
--	--	--	--	--	--

MAC Address: [Scan](#)

IP Address:

Group:

☒ [Enable This Entry](#)

[Cancel](#) [OK](#)

4. Enter the [MAC Address](#) of the device for which you want to reserve IP address.
5. Specify the IP address which will be reserved by the router.
6. Check to [Enable This Entry](#) and click [OK](#) to make the settings effective.

12.2. Configure IPv6 LAN Settings

Based on the IPv6 protocol, the router provides two ways to assign IPv6 LAN addresses:

- Configure the RADVD (Router Advertisement Daemon) address type
- Configure the DHCPv6 Server address type

12.2.1. Configure the RADVD Address Type

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to [Advanced](#) > [Network](#) > [LAN Settings](#).
3. Select [IPv6](#) to configure IPv6 LAN parameters.

DHCP Server IPv4 | IPv6

Group: Default

Address Type: ☒ RADVD ☐ DHCPv6 Server

RDNSS: ☐ Enable

Enable ULA Prefix: ☐ Enable

Site Prefix Type: ☒ Delegated ☐ Static

WAN Connection: No available interface ▼

Save

- 1) Select the **RADVD** as the address type to make the router assign IPv6 address prefixes to hosts.

Note:

Do not select the **Enable** check boxes to enable **RDNSS** and **ULA Prefix** unless required by your ISP. Otherwise you may not be able to access the IPv6 network. For more information about RDNSS and ULA Prefix, contact our technical support.

- 2) Keep **Site Prefix Type** as the setting **Delegated**. If your ISP has provided a specific IPv6 site prefix, select **Static** and enter the prefix.
- 3) Keep **WAN Connection** as the default setting.
4. Click **Save** to make the settings effective.

12.2.2. Configure the DHCPv6 Server Address Type

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to **Advanced** > **Network** > **LAN Settings**.
3. Select **IPv6** to configure IPv6 LAN parameters.

DHCP Server IPv4 | IPv6

Group: Default

Address Type: ☐ RADVD ☒ DHCPv6 Server

Starting IPv6 Address: :: 1 (1~FFFE)

Ending IPv6 Address: :: FFFE (1~FFFE)

Address Lease Time: 86400 seconds

Site Prefix Type: ☒ Delegated ☐ Static

WAN Connection: No available interface

Save

- 1) Select the **DHCPv6 Server** as the address type to make the router assign IPv6 addresses to hosts.
 - 2) Specify the **Starting/Ending IPv6 Address** for the IPv6 suffixes. The router will generate IPv6 addresses within the specified range.
 - 3) Keep **Address Lease Time** as the default setting.
 - 4) Keep **Site Prefix Type** as the default setting **Delegated**. If your ISP has provided a specific IPv6 site prefix, select **Static** and enter the prefix.
 - 5) Keep **WAN Connection** as the default setting.
4. Click **Save** to make the settings effective.

12.3. Set Up a Dynamic DNS Service Account

Most ISPs (Internet service providers) assign a dynamic IP address to the router and you can use this IP address to access your router remotely. However, the IP address can change any time and you don't know when it changes. In this case, you might need the DDNS (Dynamic Domain Name Server) feature on the router to allow you and your friends to access your router and local servers (FTP, HTTP, etc.) using domain name, in no need of checking and remembering the IP address.


Note:

DDNS does not work if the ISP assigns a private WAN IP address (such as 192.168.1.x) to the router.

To set up DDNS, please follow the instructions below:

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to **Advanced > Network > Dynamic DNS**.
3. Select the **Service Provider** (Dyndns or NO-IP).

4. Log in with your DDNS account, select a service provider and click [Go to register ...](#). Enter the username, password and domain name of the account (such as lisa.ddns.net).

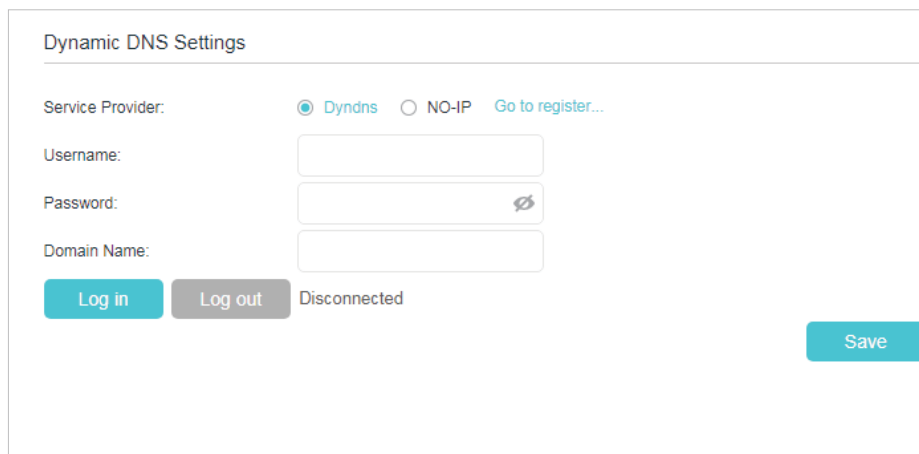

The screenshot shows a web form titled "Dynamic DNS Settings". It contains the following elements:

- Service Provider:** Two radio buttons, "Dyndns" (selected) and "NO-IP", followed by a link "Go to register..."
- Username:** A text input field.
- Password:** A text input field with a toggle icon on the right.
- Domain Name:** A text input field.
- Buttons:** "Log in" (teal), "Log out" (grey), and "Save" (teal).
- Status:** A label "Disconnected" next to the "Log out" button.

5. Click [Log in](#) and [Save](#).

 Tips:

If you want to use a new DDNS account, please log out first, then log in with the new account.


12.4. Create Static Routes

A static route is a pre-determined path that network information must travel to reach a specific host or network. Data from one point to another will always follow the same path regardless of other considerations. Normal internet usage does not require this setting to be configured.

I want to:

Visit multiple networks and multiple servers at the same time.

[For example](#), in a small office, my PC can surf the internet, but I also want to visit my company's server. Now I have a switch and another router. I connect the devices as shown in the following figure so that the physical connection between my PC and my company's server is achieved. To surf the internet and visit my company's network at the same time, I need to configure the static routing.

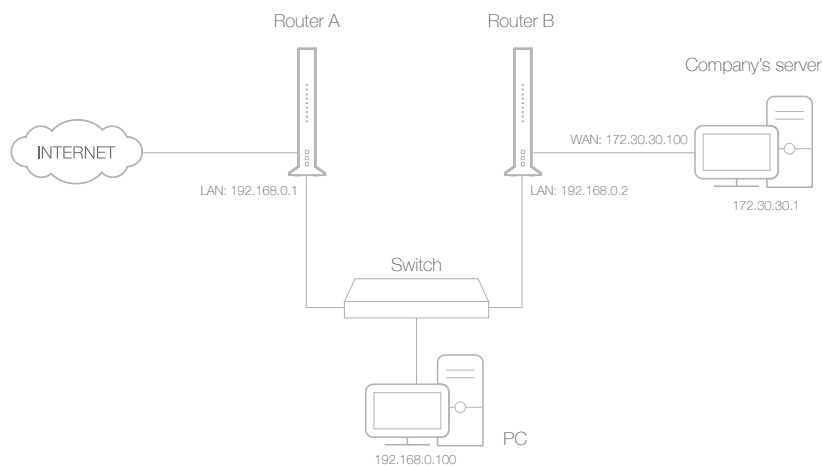

How can I do that?

- 1. Make sure the routers use different LAN IP addresses on the same subnet. Disable Router 2’s DHCP function.
- 2. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
- 3. Go to [Advanced > Network > Static Routing](#). Select your current [WAN Interface](#) and click [Save](#).

Default Gateway Settings

IPv4 | IPv6

Select a WAN interface as the system default gateway.

Select WAN Interface: ipoe_0_0_d

Save

Static Routing

+ Add - Delete

☐	ID	Network Destination	Subnet Mask	Gateway	Enable	Modify
☐	--	--	--	--	--	--

- 4. Click [Add](#) to add a new static routing entry. Finish the settings according to the following explanations:

Static Routing

☐	ID	Network Destination	Subnet Mask	Gateway	Enable	Modify
--	--	--	--	--	--	--

Network Destination: 172 . 30 . 30 . 1
 Subnet Mask: 255 . 255 . 255 . 255
 Gateway: 192 . 168 . 0 . 2
 Interface: LAN

☒ Enable This Entry

Cancel OK

- **Network Destination:** The destination IP address that you want to assign to a static route. This IP address cannot be on the same subnet with the WAN IP or LAN IP of the router. In the example, the IP address of the company network is the destination IP address, so here enters 172.30.30.1.
 - **Subnet Mask:** Determines the destination network with the destination IP address. If the destination is a single IP address, enter 255.255.255.255; otherwise, enter the subnet mask of the corresponding network IP. In the example, the destination network is a single IP, so here enters 255.255.255.255.
 - **Gateway:** The IP address of the gateway device to which the data packets will be sent. This IP address must be on the same subnet with the router's IP which sends out the data. In the example, the data packets will be sent to the LAN port of Router 2 and then to the Server, so the default gateway should be 192.168.0.2.
 - **Interface:** Determined by the port (WAN/LAN) that sends out the data packets. In the example, the data is sent to the gateway through the LAN port, so LAN should be selected.
5. Select the **Enable This Entry** check box to enable this entry.
 6. Click **Save** to save the settings.

Done!

Open a web browser on your PC. Enter the company server's IP address to visit the company network.

12.5. Set Up the IPv6 Tunnel

The IPv6 Tunnel feature helps you obtain IPv6 resources based on an IPv4 WAN connection or vice versa.

IPv6 Tunnel is a transition mechanism that enables IPv6-only hosts to reach IPv4 services or vice versa and allows isolated IPv6 hosts and networks to reach each other over IPv4-only infrastructure before IPv6 completely supplants IPv4. It is a temporary solution for networks that do not support native dual-stack, where both IPv6 and IPv4 run independently.

The router provides four tunneling mechanisms: [6to4](#), [6rd](#), [DS-Lite](#) and [MAP-T](#). The methods of setting up 6rd and DS-Lite tunnel are similar.

12.5.1. Use the Public IPv6 Tunnel Service-6to4

The 6to4 tunnel is a kind of public service. If there are any 6to4 servers on your network, you can use this mechanism to access IPv6 service. If your ISP provides you with an IPv4-only connection but you want to visit IPv6 websites, you can try to set up a 6to4 tunnel.

I want to: Set up the IPv6 tunnel though my ISP doesn't provide me with the tunnel service.

How can I do that?

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to [Advanced](#) > [Network](#) > [IPv6 Tunnel](#).
3. Enable [IPv6 Tunnel](#), and select [6to4](#) as the tunneling mechanism and select a WAN connection from the drop-down list, then click [Save](#).

IPv6 Tunnel

Note: Please check the IPv6 tunnel settings each time while reconfiguring WAN connection, as WAN connection configuration may take effect on tunnel settings.

IPv6 Tunnel: ☒ Enable

Tunneling Mechanism: 6to4

WAN Connection: ipoe_0_0_d

Save

Note:

If there is no available WAN connection to choose, make sure you have connected to the internet and the connection type is not Bridge.

Done! Now you can visit the IPv6 websites with the 6to4 tunnel.

Note:

If you still can't access IPv6 resources, it may mean that no 6to4 public server was found in your network. You can contact your ISP to sign up for IPv6 connection service.

12.5.2. Specify the IPv6 Tunnel with Parameters Provided by Your ISP

I want to: Specify the IPv6 tunnel with the parameters provided by my tunnel service provider.

How can I do that?

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to [Advanced](#) > [Network](#) > [IPv6 Tunnel](#).
3. Enable [IPv6 Tunnel](#), and select the [Tunneling Mechanism](#) (6rd, DS-Lite or MAP-T, we take 6rd as an example) and select a WAN connection from the drop-down list.
4. According to the parameters provided by your ISP, choose [Auto](#) or [Manual](#) as the configuration type. More parameters are needed if you choose [Manual](#).
5. Click [Save](#) to make the settings effective.

Note:

If there is no available WAN connection to choose, make sure you have connected to the internet and the connection type is not Bridge.

Done!

Now you can visit the IPv6 websites with the 6rd tunnel.

Tips:

The way to set up DS-Lite tunnel is similar to that of 6rd tunnel. If you are provided with an IPv6-only WAN connection and have signed up for DS-Lite tunnel service, specify the DS-Lite tunnel by referring to the steps above.

12.6. Specify Wireless Settings

12.6.1. Specify Basic Wireless Settings

The router's wireless network name (SSID) and password, and security option are preset in the factory. The preset SSID and password can be found on the label of the router. You can customize the wireless settings according to your needs.

Visit <http://tplinkwifi.net>, and log in with the password you set for the router.

➤ **To enable or disable the wireless function:**

1. Go to [Basic](#) > [Wireless](#).
2. The wireless radio is enabled by default. If you want to disable the wireless function of the router, just clear the [Enable](#) check boxes. In this case, all the wireless settings will be invalid.

💡 **Tips:**

You can also go to [Advanced](#) > [Wireless](#) > [Wireless Settings](#) to disable the corresponding wireless function in the [2.4GHz](#) and [5GHz](#) page.

➤ **To change the wireless network name (SSID) and wireless password:**

1. Go to [Basic](#) > [Wireless](#).
2. Enter a new SSID in the [Network Name \(SSID\)](#) field and a new password in the [Password](#) field. Both fields are case-sensitive.

📌 **Note:**

If you change the wireless settings with a wireless device, you will be disconnected when the settings are effective. Please write down the new SSID and password for future use.

➤ **To hide SSID:**

1. Go to [Basic](#) > [Wireless](#).
2. Select [Hide SSID](#), and your SSID won't display when you scan for local wireless networks on your wireless device and you need to manually join the network.

➤ **To change the mode or channel:**

Go to [Advanced](#) > [Wireless](#) > [Wireless Settings](#), and click the [2.4GHz](#) or [5GHz](#).

Mode: Select a transmission mode according to your wireless client devices. It is recommended to just leave it as default.

- 802.11n only: Select only if all of your wireless clients are 802.11n devices.
- 802.11gn mixed: Select if you are using both 802.11g and 802.11n wireless clients.
- 802.11bgn mixed: Select if you are using a mix of 802.11b, 11g, and 11n wireless clients.

■ **Note:** When 802.11n only mode is selected, only 802.11n wireless stations can connect to the router. It is strongly recommended that you select 802.11bgn mixed, and all of 802.11b, 802.11g, and 802.11n wireless stations can connect to the router.

- **802.11ac only (5GHz):** Select only if all of your wireless clients are 802.11ac devices.
- **802.11ac/n mixed (5GHz):** Select if you are using both 802.11ac and 802.11n wireless clients.
- **802.11a/n/ac mixed (5GHz):** Select if you are using a mix of 802.11a, 802.11n and 802.11ac wireless clients. It is strongly recommended that you select 11a/n/ac mixed.

Channel: Select the channel you want to use from the drop-down list. This field determines which operating frequency will be used. It is not necessary to change the wireless channel unless you notice interference problems with another nearby access point.

Channel Width: Select the channel width from the drop-down list. The default setting is **Auto**, which can adjust the channel width for your clients automatically.

Transmit Power: Select Low, Middle, or High to specify the data transmit power. The default and recommended setting is **High**.


➤ **To change the security option:**

1. Go to **Advanced > Wireless > Wireless Settings**.
2. Select the wireless network **2.4GHz** or **5GHz**.
3. Select an option from the **Security** drop-down list. We recommend you don't change the default settings unless necessary. If you select other options, configure the related parameters according to the help page.

12.6.2. View Wireless Information

➤ **To view the detailed wireless network settings:**

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to **Advanced > Status** page. You will find the **Wireless** panel.
3. Click **2.4GHz** or **5GHz** to view the wireless details.

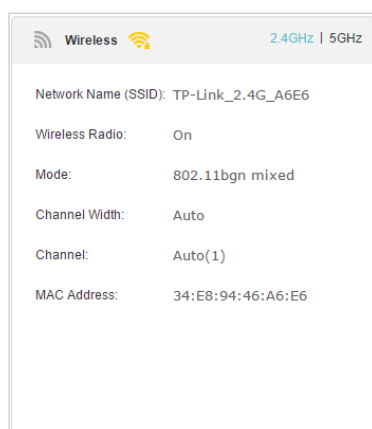

🔗 **Tips:** You can also see the wireless details by clicking the router icon on [Basic > Network Map](#).

➤ **To view the detailed information of the connected wireless clients:**

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to [Advanced > Wireless > Statistics](#) page.
3. You can view the detailed information of the wireless clients, including its connection type and security option as well as the packets transmitted.

🔗 **Tips:** You can also see the wireless details by clicking the wireless clients icon on [Basic > Network Map](#).

12.6.3. Advanced Wireless Settings

Advanced wireless settings are for those who want more network controls. If you are not familiar with the settings on this page, it's strongly recommended that you keep the provided default values; otherwise it may result in lower wireless network performance.

1. Visit <http://tplinkwifi.net>, and log in with the password you set for your router.
2. Go to [Advanced > Wireless > Advanced Settings](#).

Advanced Settings 2.4GHz | 5GHz

Beacon Interval:	100	(25-1000)
RTS Threshold:	2346	(1-2346)
DTIM Interval:	1	(1-255)
Group Key Update Period:	3600	seconds
WMM:	☒ Enable	
Short GI:	☒ Enable	
AP Isolation:	☐ Enable	
Air Time Fairness:	☒ Enable	

[Save](#)

- **Beacon Interval:** Enter a value between 100 and 1000 in milliseconds to determine the duration between which beacon packets are broadcasted by the router to synchronize the wireless network. The default is 100 milliseconds.
- **RTS Threshold:** Enter a value between 1 and 2346 to determine the packet size of data transmission through the router. By default, the RTS (Request to Send) Threshold size is 2346. If the packet size is greater than the preset threshold, the router sends Request to Send frames to a particular receiving station and negotiates the sending of a data frame, or else the packet will be sent immediately.
- **DTIM Interval:** Enter a value between 1 and 255 to determine the interval of the Delivery Traffic Indication Message (DTIM). 1 indicates the DTIM Interval is the same as **Beacon Interval**.
- **Group Key Update Period:** Enter the number of seconds to control the time interval for the encryption key automatic renewal. The default is 0, indicating no key renewal.
- **WMM:** This feature guarantees the packets with high-priority messages being transmitted preferentially. WMM is enabled compulsively under 802.11n or 802.11ac mode.
- **Short GI:** This feature is enabled by default and recommended to increase the data capacity by reducing the Guard Interval (GI) time.
- **AP Isolation:** Select this check box to enable the AP Isolation feature that allows you to confine and restrict all wireless devices on your network from interacting with each other, but still able to access the internet. AP isolation is disabled by default.
- **Airtime Fairness Feature:** Enable this feature if you want to sacrifice some of the networking time from the slow devices, so that your faster devices can have better quality of service.

12.7. Use WPS for Wireless Connection

You can use WPS (Wi-Fi Protected Setup) to add a new wireless device to your existing network quickly and easily.

12.7.1. Method 1: Use the WPS button


Use this method if your client device has a WPS button.

1. Press and hold the WPS button of the router for about 2 seconds.
2. Press the WPS button of the client device directly.
3. The WPS LED flashes for about 2 minutes during the WPS process.
4. When the WPS LED is on, the client device has successfully connected to the router.

12.7.2. Method 2: Use the WPS button on the web management page

Use this method if your client device has a WPS button.

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to **Advanced > Wireless > WPS**, locate the **WPS Settings** section and select **2.4GHz** or **5GHz** according to your needs.

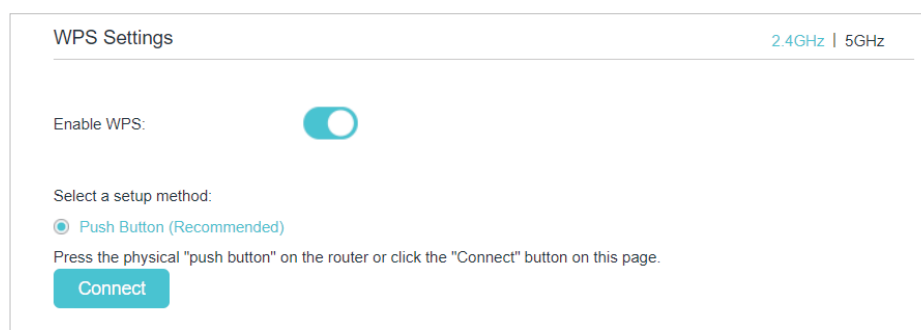


3. Make sure the **Enable WPS** is turned on, and then click **Connect**.
4. Press the WPS button of the client device directly.
5. The WPS LED of the router flashes for about 2 minutes during the WPS process.
6. When the WPS LED is on, the client device has successfully connected to the router.

12.7.3. Method 3: Enter the router's PIN on your client device

Use this method if your client device asks for the router's PIN.

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.

2. Go to [Advanced](#) > [Wireless](#) > [WPS](#), locate the [Router PIN](#) section and select [2.4GHz](#) or [5GHz](#) according to your needs.

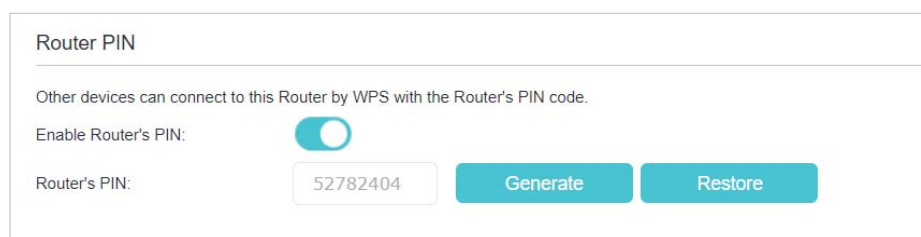

Router PIN

Other devices can connect to this Router by WPS with the Router's PIN code.

Enable Router's PIN: ☒

Router's PIN: [Generate](#) [Restore](#)


3. Make sure the [Enable Router's PIN](#) is turned on, and take a note of the current PIN of the router. You can also click the [Generate](#) button to get a new PIN.
4. On the client device, enter the router's PIN. (The default PIN is also printed on the label of the router.)
5. The WPS LED flashes for about two minutes during the WPS process.
6. When the WPS LED is on, the client device has successfully connected to the router.

Note:

1. The WPS LED on the router will light on for five minutes if the device has been successfully added to the network.
2. The WPS function cannot be configured if the wireless function of the router is disabled. Please make sure the wireless function is enabled before configuring the WPS.

12.7.4. Method 4: Enter the client device's PIN on the router

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to [Advanced](#) > [Wireless](#) > [WPS](#), locate the [WPS Settings](#) section and select [2.4GHz](#) or [5GHz](#) according to your needs.
3. Make sure the [Enable WPS](#) is turned on, and then select [PIN Number](#).

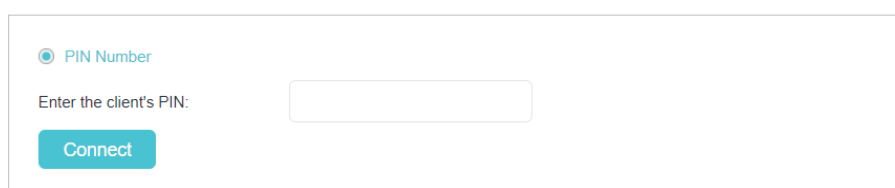

☒ PIN Number

Enter the client's PIN:

[Connect](#)

4. Enter the client device's PIN, and then click the [Connect](#) button.
5. [Device has been added successfully!](#) or similar information will appear on the web management page, which means the client device has successfully connected to the router. And the WPS LED on the router will light on for five minutes.

12.8. Schedule Your Wireless Function

You can automatically turn off your wireless network when you do not need the wireless connection.

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to [Advanced](#) > [Wireless](#) > [Wireless Schedule](#).
3. Enable the [Wireless Schedule](#) function.
4. Drag the pointer to select the time when you want your wireless network off, and then click [Save](#) to make the settings effective

Wireless Schedule

Wireless Schedule:
☒

	Sun	Mon	Tue	Wed	Thu	Fri	Sat
0:00							
1:00							
2:00							
3:00							
4:00							
5:00							
6:00							
7:00							
8:00							
9:00							
10:00							
11:00							
12:00							
13:00							
14:00							
15:00							
16:00							
17:00							
18:00							
19:00							
20:00							
21:00							
22:00							
23:00							
24:00							

☒ Wi-Fi Off

Restore
Save

Note:

1. Make sure that the time of the router is correct before using this function. For details, refer to [Set System Time](#).
2. The wireless LED will turn off if the corresponding wireless network is disabled.
3. The wireless network will be automatically turned on after the time period you set.

Chapter 13

Manage Your Router

This chapter introduces how to change the system settings and administrate your router's network.

It contains the following sections:

- [Set System Time](#)
- [Test Internet Connectivity](#)
- [Update the Firmware](#)
- [Back Up and Restore Configuration Settings](#)
- [Administration Management](#)
- [System Log](#)
- [CWMP Settings](#)
- [SNMP Settings](#)
- [Monitor the Internet Traffic Statistics](#)

13.1. Set System Time

System time is the time displayed while the router is running. The system time you configure here will be used for other time-based functions like Parental Controls and Wireless Schedule. You can manually set how to get the system time.

Follow the steps below to set your system time.

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to [Advanced](#) > [System Tools](#) > [Time Settings](#) page.




The screenshot shows the 'System Time' configuration page. It includes a 'Time Zone' dropdown menu set to '(GMT) Greenwich Mean Time: Dublin, Edinburgh, London, Lisbon'. Below this is a 'Date' field set to '1/1/2016' with a '(MM/DD/YY)' label. The 'Time' field is set to '7 : 23 : 19'. There are two 'NTP Server' fields, both set to '0.0.0.0' with '(Optional)' labels. At the bottom, there are three buttons: 'Get from PC', 'Get from the Internet', and 'Save'.

3. Configure the system time using the following methods:
 - Manually:** Select your time zone, enter the date and select the local time.
 - Get from PC:** Click this button if you want to use the current time of your PC.
 - Get from the Internet:** Click this button if you want to get time from the internet. Make sure your router can access the internet before you select this way to get system time.
4. Click [Save](#) to make the settings effective.

13.2. Test Internet Connectivity

Diagnostics is used to test the connectivity between the router and the host or other network devices.

1. Visit <http://tplinkwifi.net>, and log in with the password you set for your router.
2. Go to [Advanced](#) > [System Tools](#) > [Diagnostics](#).

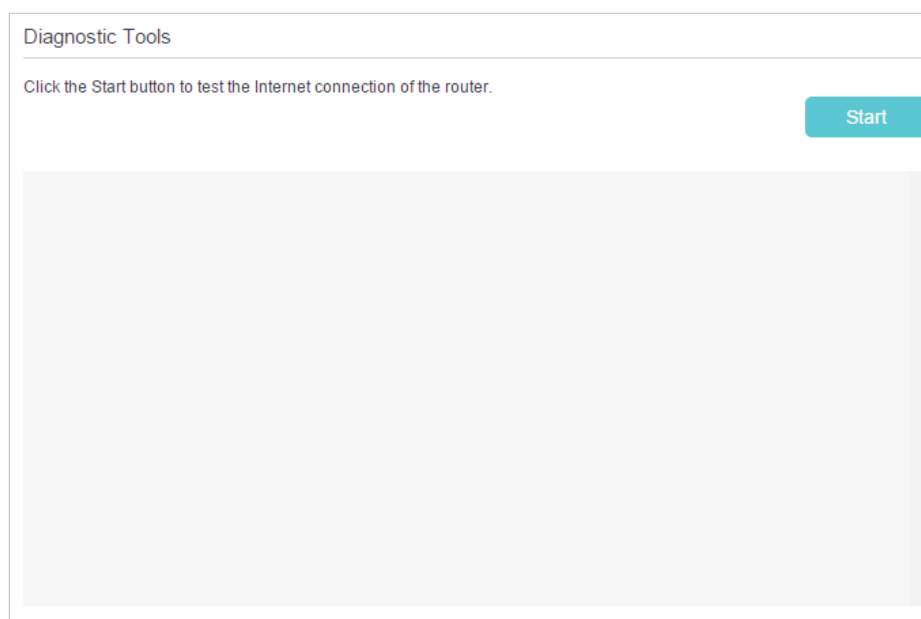

3. Click [Start](#) to test the internet connectivity and you will find the test results in the gray box.

13.3. Update the Firmware

TP-Link is dedicated to improving product features, giving you a better network experience.


We will inform you through the web management page if there's any update firmware available for your router. The latest firmware can also be downloaded from the [Support](#) page of our website www.tp-link.com for free.

Note:

1. Make sure that you have a stable connection between the router and your computer. It is NOT recommended to upgrade the firmware wirelessly.
2. Back up your router configuration before upgrading the firmware.
3. DO NOT turn off the router during the firmware upgrade.

You can follow the steps below to manually update the firmware.

1. Download the latest firmware file for the router from our website www.tp-link.com.
2. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
3. Go to [Advanced](#) > [System Tools](#) > [Firmware Upgrade](#).
4. Focus on the [Device Information](#) section. Make sure the downloaded firmware file matches with the [Hardware Version](#).
5. Focus on the [Local Upgrade](#) section. Click [Browse](#) to locate the downloaded new firmware file, and click [Upgrade](#).

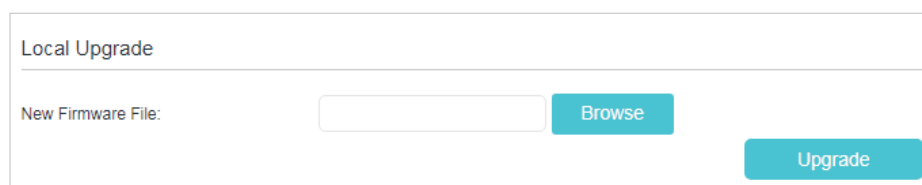

Local Upgrade

New Firmware File: [Browse](#)

[Upgrade](#)

6. Wait a few minutes for the upgrading and rebooting.


13.4. Back Up and Restore Configuration Settings

The configuration settings are stored as a configuration file in the router. You can back up the configuration file to your computer for future use and restore the router to a previous settings from the backup file when needed. Moreover, if needed you can erase the current settings and reset the router to its default factory settings.

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to [Advanced](#) > [System Tools](#) > [Backup & Restore](#).

➤ **To back up configuration settings:**

Click [Backup](#) to save a copy of the current settings to your local computer. A conf.bin file will be stored to your computer.

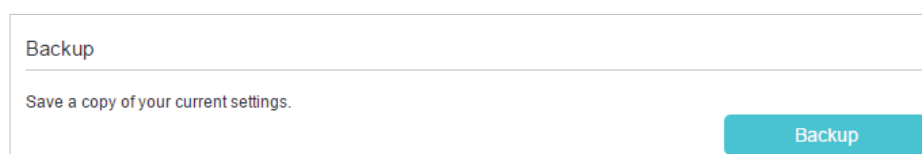


Backup

Save a copy of your current settings.

[Backup](#)

➤ **To restore configuration settings:**

1. Click [Browse](#) to locate the backup configuration file stored on your computer, and click [Restore](#)

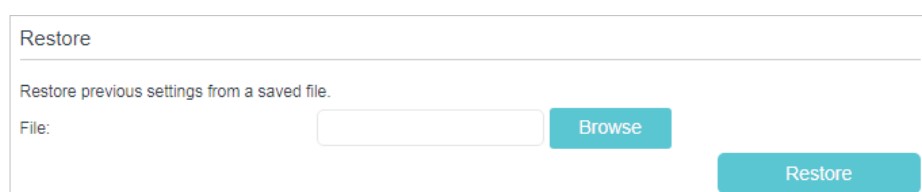

Restore

Restore previous settings from a saved file.


File: [Browse](#)

[Restore](#)

2. Wait a few minutes for the restoring and rebooting.

➤ **To reset the router to factory default settings:**

1. Click [Factory Restore](#) to reset the router.

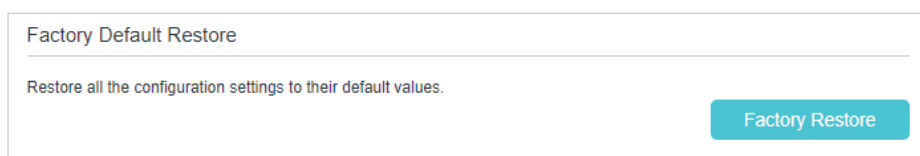The image shows a web interface for restoring factory defaults. It has a title 'Factory Default Restore' and a description 'Restore all the configuration settings to their default values.' Below the description is a teal button labeled 'Factory Restore'.

2. Wait a few minutes for the restoring and rebooting.

Note:


1. During the resetting process, do not turn off the router.
2. We strongly recommend you back up the current configuration settings before resetting the router.

13.5. Administration Management

13.5.1. Change the Login Password

The account management feature allows you to change your login password of the web management page.

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to [Advanced](#) > [System Tools](#) > [Administration](#) page. Locate the [Account Management](#) section.

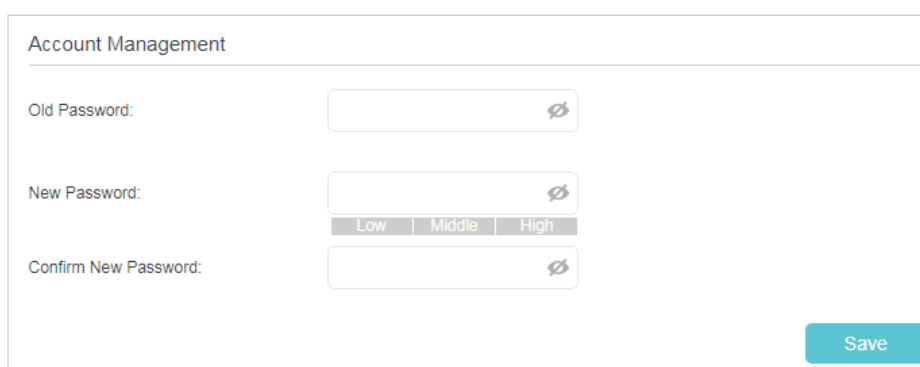The image shows the 'Account Management' web interface. It contains three password input fields: 'Old Password:', 'New Password:', and 'Confirm New Password:'. Each field has a toggle icon to the right. Below the 'New Password:' field, there are three tabs labeled 'Low', 'Middle', and 'High'. A teal 'Save' button is located at the bottom right of the form.


3. Enter the old password, then a new password twice (both case-sensitive).
4. Click [Save](#) to make the settings effective.
5. Use the new password for future logins.

13.5.2. Local Management

You can control the local devices' authority to manage the router via Local Management feature. By default all local connected devices are allowed to manage the router. You can also specify one device to manage the router and enable local management over a more secure way, HTTPS.

Follow the steps below to allow only the specific device to manage the router via the local management over HTTPS.

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to **Advanced > System Tools > Administration**, and locate the **Local Management** section.
3. Keep the **Port** as the default setting. Enable **Management over HTTPS** and keep the **Port for HTTPS** as the default setting. Enter the **IP address** or **MAC address** of the local device to manage the router.

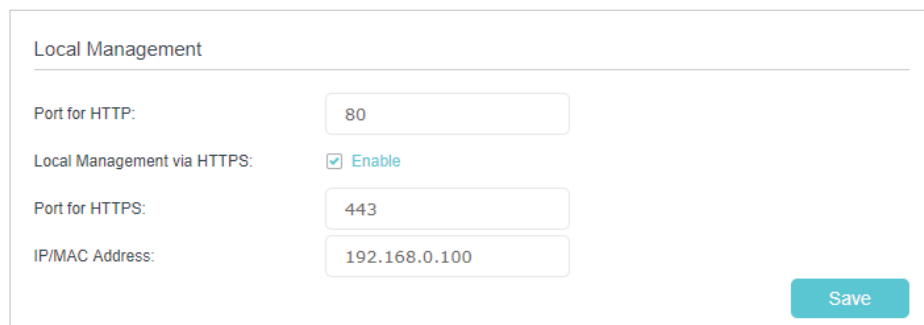

The screenshot shows the 'Local Management' configuration page. It has a title bar 'Local Management'. Below it, there are four input fields: 'Port for HTTP:' with the value '80', 'Local Management via HTTPS:' with a checked checkbox and the word 'Enable', 'Port for HTTPS:' with the value '443', and 'IP/MAC Address:' with the value '192.168.0.100'. A 'Save' button is located at the bottom right of the form.

4. Click **Save**.

Now, you can manage the router over both HTTP (<http://tplinkwifi.net>) and HTTPS (<https://tplinkwifi.net>).

Note:

If you want all local devices can manage the router, just leave the **IP/MAC Address** field blank.

13.5.3. Remote Management


By default, the remote devices are not allowed to manage the router from the internet. You can enable remote management over HTTP and/or HTTPS if needed. HTTPS is a more secure way to access the router.

Note:

If your ISP assigns a private WAN IP address (such as 192.168.x.x or 10.x.x.x), you cannot use the remote management feature because private addresses are not routed on the internet.

Follow the steps below to allow remote devices to manage the router over HTTPS.

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to **Advanced > System Tools > Administration**, and locate the **Remote Management** section.

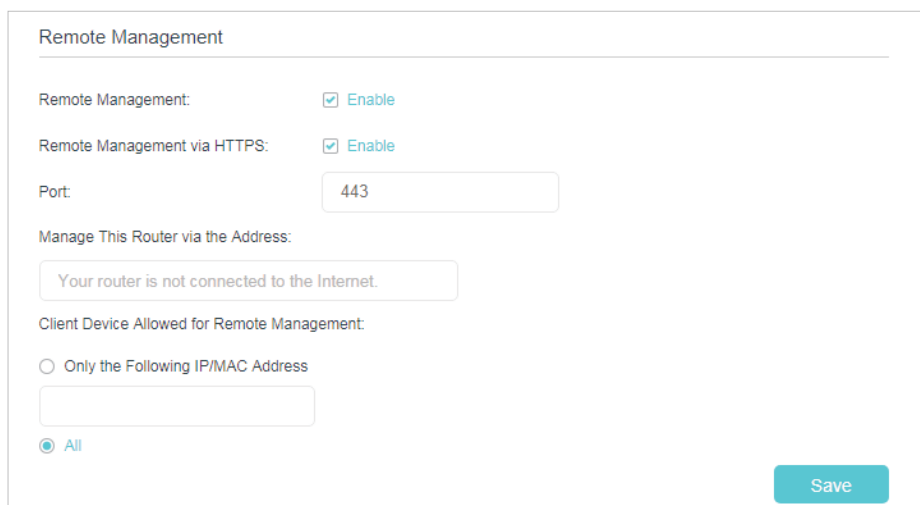

3. Enable [Remote Management](#) and [Remote Management via HTTPS](#) to allow for HTTPS connection. Keep the [Port](#) as the default setting.
4. Set the client device allowed for remote management. Select [All](#) to allow all remote devices to manage the router. If you just want to allow a specific device to manage the router, select [Only the Following IP/MAC Address](#) and enter the IP/MAC address of the remote device.
5. Click [Save](#).

All devices or the specific device on the internet can log in to your router using the address displayed on the [Manage This Router via the Address](#) field to manage the router.

 Tips:

1. If you were warned about the certificate when visiting the web management page remotely, click [Trust](#) (or a similar option) to continue. To avoid this warning, you can download and install the certificate on the router's web management page at [Advanced > System Tools > Administration](#).



2. The router's WAN IP is usually a dynamic IP. Please refer to [Set Up a Dynamic DNS Service Account](#) if you want to log in to the router through a domain name.

13.5.4. ICMP Ping

ICMP (Internet Control Message Protocol) Ping is used to diagnose the network by sending ICMP echo request packets to the target remote or local host and waiting for an ICMP response.

You can control the router's replies to ICMP Ping requests.

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.

2. Go to [Advanced](#) > [System Tools](#) > [Administration](#), and locate the [ICMP Ping](#) section.

ICMP Ping

ICMP Ping: ☐ Remote ☒ Local

Save

3. Specify the ICMP Ping reply options.
 - **Remote:** Select it if you want the computers on a public network to ping the router's WAN IP address.
 - **Local:** Enabled by default, if enabled, the computers on a private network can ping the router's LAN IP address.
4. Click [Save](#) to make the settings effective.

13.6. System Log

System Log can help you know what happened to your router, facilitating you to locate the malfunctions. For example when your router does not work properly, you may need to save the system log and send it to the technical support for troubleshooting.

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Click [Advanced](#) > [System Tools](#) > [System Log](#) page.

System Log

Type: ALL

Level: Notice

Refresh Delete All

ID	Time	Type	Level	Log Content
1	2016-01-01 02:43:34	HTTPD	Notice	Clear log.

Log Settings Save Log

➤ To view the system logs:

You can view specific system logs by selecting the log type and level.

Click [Refresh](#) to refresh the log list.

➤ To save the system logs:

You can save the system logs to your local computer or a remote server.

Click [Save Log](#) to save the logs in a txt file to your computer.

Click [Log Settings](#) to set the storage path of logs.

Log Settings

☒ Save Locally

Minimum Level: Information

☒ Save Remotely

Minimum Level: Warning

Server IP: 192.168.1.100

Server Port: 514

Local Facility Name: User

Back Save

- **Save Locally:** Select this option to cache the system log to the router's local memory, select the minimum level of system log to be saved from the drop-down list. The logs will be shown in the table in descending order on the System Log page.
- **Save Remotely:** Select this option to send the system log to a remote server, select the minimum level of system log to be saved from the drop-down list and enter the information of the remote server. If the remote server has a log viewer client or a sniffer tool implemented, you can view and analyze the system log remotely in real-time.

13.7. CWMP Settings

The router supports CWMP (CPE WAN Management Protocol), also called TR-069. This collects information, performs diagnostics and configures the devices automatically via ACS (Auto-Configuration Server).

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to [Advanced](#) > [System Tools](#) > [CWMP Settings](#).

CWMP Settings

CPE WAN Management Protocol (also called TR-069) allows Auto-Configuration Server (ACS) to perform auto-configuration, provision, connection, and diagnostics to this device. You may configure this function under your ISP's instructions.

CWMP: ☒

Inform: ☐

Inform DataModel with TR098: ☒

Inform Interval:

ACS URL:

ACS Username:

ACS Password: 

Interface used by TR-069 client:

☒ Connection Request Authentication

Username:

Password: 

Path:

Port:

URL:

- **CWMP:** Enable or disable the CWMP (CPE WAN Management Protocol) function.
- **Inform:** Enable or disable the function of sending an inform message to the ACS (Auto Configuration Server) periodically.
- **Inform Interval:** Set the time interval in seconds when the Inform message will be sent to the ACS.
- **ACS URL:** Enter the web address of the ACS which is provided by your ISP.
- **ACS Username/Password:** Enter the username/password to log in to the ACS server.
- **Interface used by TR-069 client:** Select which interface to be used by the TR-069 client.
- **Connection Request Authentication:** Select this check box to enable authentication for the connection request.
- **Username/Password:** Enter the username/password for the ACS server to log in to the router.
- **Path:** Enter the path for the ACS server to log in to the router.
- **Port:** Enter the port that connects to the ACS server.
- **URL:** Enter the URL that connects to the ACS server.

- **Get RPC Methods:** Click to get the methods to support CWMP.

Click **Save** to make the settings effective.

13.8. SNMP Settings

SNMP (Simple Network Management Protocol) is widely used in network management for network monitoring. It allows management applications to retrieve status updates and statistics from the SNMP agent within this device. In this way, network administrators can easily search and modify the information on any node on the network. Meanwhile, they can locate faults promptly and implement the fault diagnosis, capacity planning and report generating.

An **SNMP Agent** is an application running on the modem router that performs the operational role of receiving and processing SNMP messages, sending responses to the SNMP manager, and sending traps when an event occurs. So a router contains SNMP "agent" software can be monitored and/or controlled by SNMP Manager using SNMP messages.

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to **Advanced > System Tools > SNMP Settings**.

SNMP Settings

Simple Network Management Protocol (SNMP) allows management applications to retrieve status updates and statistics from the SNMP agent within this device.

Enable SNMP Agent: ☒

SNMP Agent for WAN: ☐

Read-only Community:

Write Community:

System Name:

System Description:

System Location:

System Contact:

Trap Manager IP:

Save

- **Enable SNMP Agent/SNMP Agent for WAN:** Turn on to enable the built-in SNMP agent that allows the router to operate as the operational role in receiving and processing of SNMP messages, sending responses to the SNMP manager, and triggering SNMP traps when an event occurs.
- **Read-only Community:** Displays the default public community string that protects the router from unauthorized access.

- **Write Community:** Displays the default write community string that protects the router from unauthorized changes.
- **System Name:** Displays the administratively-assigned name for this managed device.
- **System Description:** Displays the textual description of the managed device. This value should include the full name and version identification of the system's hardware type, software operating-system, and networking software.
- **System Location:** Displays the physical location of this device (for example, the telephone closet, 3rd floor).
- **System Contact:** Displays the textual identification of the contact person for this managed device, together with information on how to contact this person.
- **Trap Manager IP:** Displays the IP address of the host to receive the traps.

You are suggested to keep the default settings. Click **Save** to make the settings effective.

13.9. Monitor the Internet Traffic Statistics

The Traffic Statistics page displays the network traffic of the LAN, WAN and WLAN sent and received packets, allowing you to monitor the volume of internet traffic statistics.

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to **Advanced > System Tools > Traffic Statistics**.
3. Toggle on **Enable Traffic Statistics** to enable traffic statistics function, you can view the total number of packets and bytes received and transmitted by the router within the selected **Statistics Interval**. This function is disabled by default.

Traffic Statistics

Enable Traffic Statistics: ☒ Traffic Statistics and NAT Boost cannot be enabled at the same time.

Statistics Interval: 10 seconds

Save

4. You can refer to **Traffic Statistics List** for the detailed information about the traffic usage of all devices.

Traffic Statistics List

Refresh Reset All Delete All

IP Address/ MAC Address	Total Packets	Total Bytes	Current Packets	Current Bytes	Current ICMP Tx	Current UDP Tx	Current SYN Tx	Modify
--	--	--	--	--	--	--	--	--

FAQ

Q1. What should I do if I forget my wireless password?

The default wireless password is printed on the label of the router. If the password has been changed:

1. Connect your computer to the router using an Ethernet cable.
2. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
3. Go to **Basic** > **Wireless** to retrieve or reset your wireless password.

Q2. What should I do if I forget my web management password?


- Press and hold the Reset button of the router for at least 5 seconds until all LEDs turn on momentarily to reset the router to its factory default settings, and then visit <http://tplinkwifi.net> to create a new login password.

 **Note:** You'll need to reconfigure the router to surf the internet once the router is reset, and please mark down your new password for future use.

Q3. What should I do if I cannot log in to the router's web management page?

This can happen for a variety of reasons. Please try the methods below to log in again.


- Make sure your computer is connected to the router correctly and the corresponding LED indicator(s) light up.
- Make sure the IP address of your computer is configured as **Obtain an IP address automatically** and **Obtain DNS server address automatically**.
- Make sure <http://tplinkwifi.net> or <http://192.168.0.1> is correctly entered.
- Check your computer's settings:
 - 1) Go to **Start** > **Control Panel** > **Network and Internet**, and click **View network status and tasks**.
 - 2) Click **Internet Options** on the bottom left.
 - 3) Click **Connections** and select **Never dial a connection**.

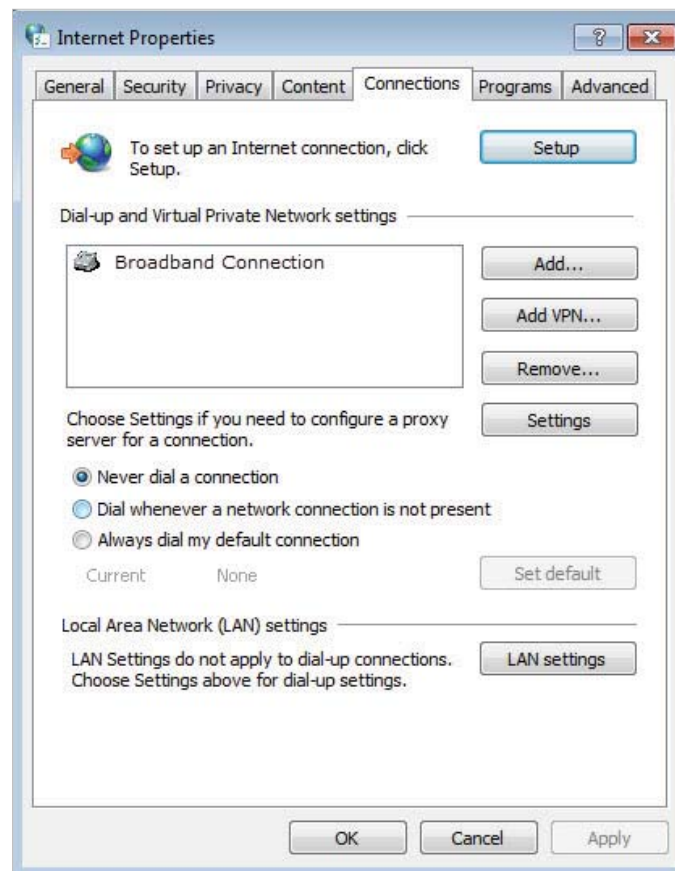

4) Click [LAN settings](#) and deselect the following three options and click [OK](#).



5) Go to [Advanced](#) > [Restore advanced settings](#), click [OK](#) to save the settings.

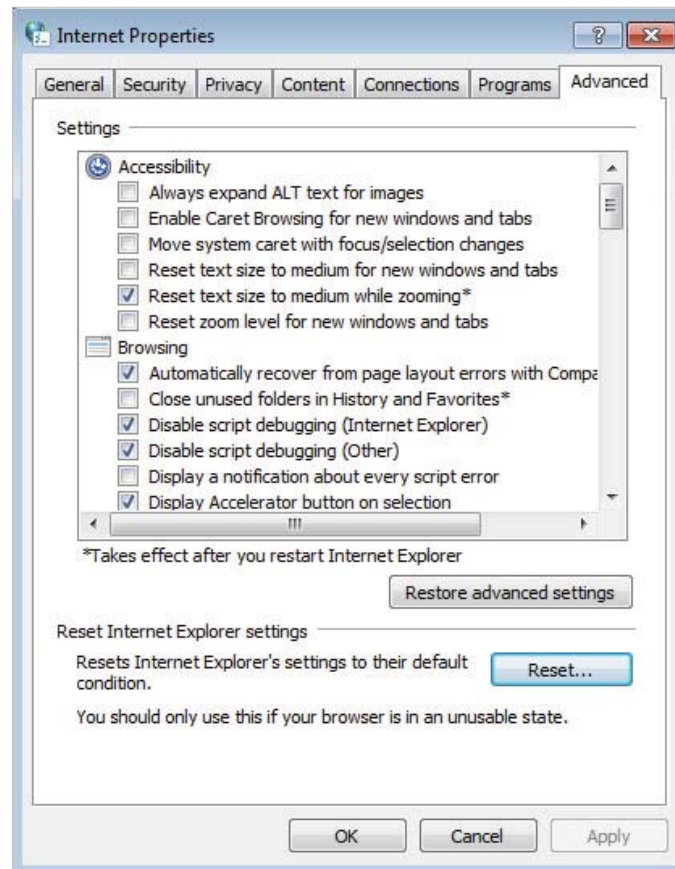

- Use another web browser or computer to log in again.
- Reset the router to factory default settings and try again. If login still fails, please contact the technical support.

Note: You'll need to reconfigure the router to surf the internet once the router is reset.

Q4. What should I do if I cannot access the internet even though the configuration is finished?

1. Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
2. Go to **Advanced** > **Status** to check internet status:

As the following images shows, if IP Address is a valid one, please try the methods below and try again:

Internet ✕ IPv4 | IPv6

MAC Address:	50-C7-BF-02-EA-DD
IP Address:	58.61.172.101
Subnet Mask:	255.255.255.255
Default Gateway:	58.61.172.1
Primary DNS:	202.96.134.33
Secondary DNS:	202.96.128.86
Connection Type:	PPPoE

- Your computer might not recognize any DNS server addresses. Please manually configure the DNS server.

1) Go to [Advanced](#) > [Network](#) > [LAN Settings](#).

2) Enter 8.8.8.8 as Primary DNS, click [Save](#).

Tips: 8.8.8.8 is a safe and public DNS server operated by Google.

DHCP: ☒ **Enable**

☒ **DHCP Server** ☐ DHCP Relay

IP Address Pool: -

Address Lease Time: minutes. (1-2880. The default value is 1440.)

Default Gateway: (Optional)

Default Domain: (Optional)

Primary DNS: (Optional)

Secondary DNS: (Optional)

[Save](#)

- Restart the modem and the router.
 - 1) Power off your modem and router, and leave them off for 1 minute.
 - 2) Power on your modem first, and wait about 2 minutes until it gets a solid cable or internet light.
 - 3) Power on the router.
 - 4) Wait another 1 or 2 minutes and check the internet access.
- Reset the router to factory default settings and reconfigure the router.
- Upgrade the firmware of the router.


- Check the TCP/IP settings on the particular device if all other devices can get internet from the router.

As the following image shows, if the IP Address is 0.0.0.0, please try the methods below and try again:



Internet	
MAC Address:	50-C7-BF-02-EA-DD
IP Address:	0.0.0.0
Subnet Mask:	0.0.0.0
Default Gateway:	0.0.0.0
Primary DNS:	0.0.0.0
Secondary DNS:	0.0.0.0
Connection Type:	PPPoE

- Make sure the physical connection between the router and the modem is proper.
- Clone the MAC address of your computer.
 - 1) Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
 - 2) Go to **Advanced** > **Network** > **Internet** and click the edit icon to find the **MAC Clone** section.
 - 3) Choose an option as needed (enter the MAC address if **Use Custom MAC Address** is selected), and click **OK**.

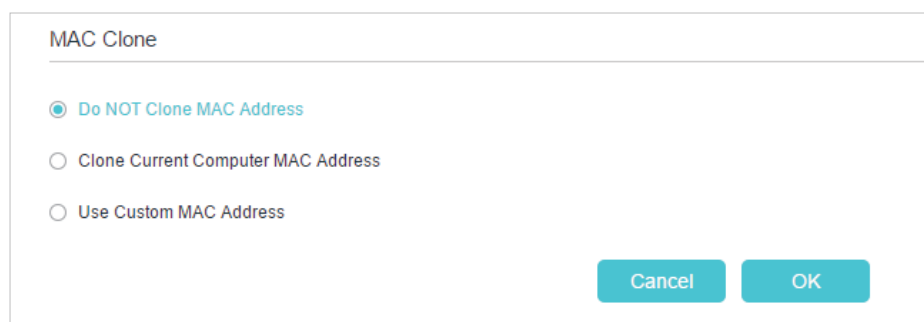

MAC Clone

☒ Do NOT Clone MAC Address
☐ Clone Current Computer MAC Address
☐ Use Custom MAC Address

Cancel OK


 Tips:

- Some ISP will register the MAC address of your computer when you access the internet for the first time through their Cable modem, if you add a router into your network to share your internet connection, the ISP will not accept it as the MAC address is changed, so we need to clone your computer's MAC address to the router.
- The MAC addresses of a computer in wired connection and wireless connection are different.
- Modify the LAN IP address of the router.

■ **Note:**

Most TP-Link routers use 192.168.0.1/192.168.1.1 as their default LAN IP address, which may conflict with the IP range of your existing ADSL modem/router. If so, the router is not able to communicate with your modem and you can't access the internet. To resolve this problem, we need to change the LAN IP address of the router to avoid such conflict, for example, 192.168.2.1.

- 1) Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
- 2) Go to [Advanced](#) > [Network](#) > [LAN Settings](#).
- 3) Modify the LAN IP address as the follow image shows. Here we take 192.168.2.1 as an example.
- 4) Click [Save](#).

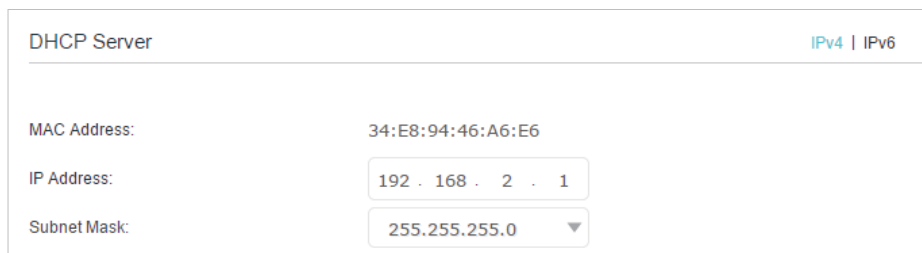

DHCP Server		IPv4 IPv6
MAC Address:	34:E8:94:46:A6:E6	
IP Address:	192 . 168 . 2 . 1	
Subnet Mask:	255.255.255.0 ▼	

- Restart the modem and the router.
 - 1) Power off your modem and router, and leave them off for 1 minute.
 - 2) Power on your modem first, and wait about 2 minutes until it get a solid cable or internet light.
 - 3) Power on the router.
 - 4) Wait another 1 or 2 minutes and check the internet access.
- Double check the internet connection type.
 - 1) Confirm your internet connection type, which can be learned from the ISP.
 - 2) Visit <http://tplinkwifi.net>, and log in with the password you set for the router.
 - 3) Go to [Basic](#) > [Internet](#).
 - 4) Select your [Internet Connection Type](#) and fill in other parameters.
 - 5) Click [Save](#).

Internet Connection Setup

VLAN ID: ☐ Enable

Internet Connection Type: Dynamic IP ▼

IP Address:

Subnet Mask:

Gateway:

PPPoE
 Dynamic IP
 Static IP

Save

6) Restart the modem and the router again.

- Please upgrade the firmware of the router.

If you've tried every method above but still cannot access the internet, please contact the technical support.

Q5.What should I do if I cannot find my wireless network or I cannot connect the wireless network?

If you fail to find any wireless network, please follow the steps below:

- Make sure the wireless function of your device is enabled if you're using a laptop with built-in wireless adapter. You can refer to the relevant document or contact the laptop manufacturer.
- Make sure the wireless adapter driver is installed successfully and the wireless adapter is enabled.
 - **On Windows 7 or higher**
 - 1) If you see the message [No connections are available](#), it is usually because the wireless function is disabled or blocked somehow.
 - 2) Click [Troubleshoot](#) and windows might be able to fix the problem by itself.
 - **On Windows XP**
 - 1) If you see the message [Windows cannot configure this wireless connection](#), this is usually because windows configuration utility is disabled or you are running another wireless configuration tool to connect the wireless.
 - 2) Exit the wireless configuration tool (the TP-Link Utility, for example).
 - 3) Select and right click on [My Computer](#) on desktop, select [Manage](#) to open Computer Management window.
 - 4) Expand [Services and Applications](#) > [Services](#), find and locate [Wireless Zero Configuration](#) in the Services list on the right side.
 - 5) Right click [Wireless Zero Configuration](#), and then select [Properties](#).

- 6) Change **Startup type** to **Automatic**, click on Start button and make sure the Service status is **Started**. And then click **OK**.

If you can find other wireless network except your own, please follow the steps below:

- Check the WLAN LED indicator on your wireless router/modem.
- Make sure your computer/device is still in the range of your router/modem. Move it closer if it is currently too far away.
- Go to **Advanced > Wireless > Wireless Settings**, and check the wireless settings. Double check your Wireless Network Name(SSID) and make sure the SSID is not hidden.

Wireless Settings 2.4GHz | 5GHz

Wireless Radio: ☒ Enable

Network Name (SSID): ☐ Hide SSID

Security:

Version: ☐ Auto ☒ WPA2-PSK

Encryption: ☐ Auto ☐ TKIP ☒ AES

Password:

Mode:

Channel:

Channel Width:

Transmit Power: ☐ Low ☐ Middle ☒ High

If you can find your wireless network but fail to connect, please follow the steps below:

- **Authenticating problem/password mismatch:**
 - 1) Sometimes you will be asked to type in a PIN number when you connect to the wireless network for the first time. This PIN number is different from the Wireless Password/Network Security Key, usually you can only find it on the label of your router.



2) If you cannot find the PIN or PIN failed, you may choose [Connecting using a security key instead](#), and then type in the [Wireless Password/Network Security Key](#).

3) If it continues to show note of [Network Security Key Mismatch](#), it is suggested to confirm the wireless password of your wireless router.

Note: Wireless Password/Network Security Key is case sensitive.

- **Windows unable to connect to XXXX / Can not join this network / Taking longer than usual to connect to this network:**
 - Check the wireless signal strength of your network. If it is weak (1~3 bars), please move the router closer and try again.
 - Change the wireless Channel of the router to 1, 6 or 11 to reduce interference from other networks.
 - Re-install or update the driver for your wireless adapter of the computer.

COPYRIGHT & TRADEMARKS

Specifications are subject to change without notice.  tp-link is a registered trademark of TP-Link Technologies Co., Ltd. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from TP-Link Technologies Co., Ltd. Copyright © 2019 TP-Link Technologies Co., Ltd. All rights reserved.

FCC STATEMENT



Product Name: AC2600 Wireless Dual Band Gigabit Router

Model Number: EC440-G4u

Component Name	Model
I.T.E POWER SUPPLY	S048CU1200330

Responsible party:

TP-Link USA Corporation, d/b/a TP-Link North America, Inc.

Address: 145 South State College Blvd. Suite 400, Brea, CA 92821

Website: <http://www.tp-link.com/us/>

Tel: +1 626 333 0234

Fax: +1 909 527 6803

E-mail: sales.usa@tp-link.com

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

FCC RF Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

"To comply with FCC RF exposure compliance requirements, this grant is applicable to only Mobile Configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter."

The device is restricted in indoor environment only.

We, **TP-Link USA Corporation**, has determined that the equipment shown as above has been shown to comply with the applicable technical standards, FCC part 15. There is no unauthorized change is made in the equipment and the equipment is properly maintained and operated.

Issue Date: 2019.01.15

FCC compliance information statement



Product Name: I.T.E POWER SUPPLY

Model Number: S048CU1200330

Responsible party:

TP-Link USA Corporation, d/b/a TP-Link North America, Inc.

Address: 145 South State College Blvd. Suite 400, Brea, CA 92821

Website: <http://www.tp-link.com/us/>

Tel: +1 626 333 0234

Fax: +1 909 527 6803

E-mail: sales.usa@tp-link.com

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or

television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

We, **TP-Link USA Corporation**, has determined that the equipment shown as above has been shown to comply with the applicable technical standards, FCC part 15. There is no unauthorized change is made in the equipment and the equipment is properly maintained and operated.

Issue Date: 2019.01.15

CE Mark Warning



This is a class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

OPERATING FREQUENCY(the maximum transmitted power)

2400 MHz - 2483.5 MHz (20dBm)

5150 MHz - 5250 MHz (23dBm)

EU declaration of conformity

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of directives 2014/53/EU, 2009/125/EC and 2011/65/EU.

The original EU declaration of conformity may be found at <http://www.tp-link.com/en/ce>

RF Exposure Information

This device meets the EU requirements (2014/53/EU Article 3.1a) on the limitation of exposure of the general public to electromagnetic fields by way of health protection.

The device complies with RF specifications when the device used at 20 cm from your body.

Restricted to indoor use.

Canadian Compliance Statement

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. l'appareil ne doit pas produire de brouillage;
2. l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

Caution:

1. The device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;

2. For devices with detachable antenna(s), the maximum antenna gain permitted for devices in the band 5725-5850 MHz shall be such that the equipment still complies with the e.i.r.p. limits specified for point-to-point and non-point-to-point operation as appropriate; and

The high-power radars are allocated as primary users (i.e. priority users) of the bands 5250-5350 MHz and 5650-5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.

Avertissement:

1. Le dispositif fonctionnant dans la bande 5150-5250 MHz est réservé uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux;
2. Le gain maximal d'antenne permis pour les dispositifs avec antenne(s) amovible(s) utilisant la bande 5725-5850 MHz doit se conformer à la limitation P.I.R.E spécifiée pour l'exploitation point à point et non point à point, selon le cas.

En outre, les utilisateurs devraient aussi être avisés que les utilisateurs de radars de haute puissance sont désignés utilisateurs principaux (c.-à-d., qu'ils ont la priorité) pour les bandes 5250-5350 MHz et 5650-5850 MHz et que ces radars pourraient causer du brouillage et/ou des dommages aux dispositifs LAN-EL.

Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body.

Déclaration d'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

Industry Canada Statement

CAN ICES-3 (B)/NMB-3(B)

Korea Warning Statements:

당해 무선설비는 운용중 전파혼신 가능성이 있음.

NCC Notice:

注意！

依據 低功率電波輻射性電機管理辦法

第十二條 經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性或功能。

第十四條 低功率射頻電機之使用不得影響飛航安全及干擾合法通行；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信規定作業之無線電信。低功率射頻電機需忍受合法通信或工業、科學以及醫療用電波輻射性電機設備之干擾。

BSMI Notice

安全諮詢及注意事項

- 請使用原裝電源供應器或只能按照本產品注明的電源類型使用本產品。
- 清潔本產品之前請先拔掉電源線。請勿使用液體、噴霧清潔劑或濕布進行清潔。
- 注意防潮，請勿將水或其他液體潑灑到本產品上。
- 插槽與開口供通風使用，以確保本產品的操作可靠並防止過熱，請勿堵塞或覆蓋開口。
- 請勿將本產品置放於靠近熱源的地方。除非有正常的通風，否則不可放在密閉位置中。
- 請不要私自打開機殼，不要嘗試自行維修本產品，請由授權的專業人士進行此項工作。

限用物質含有情況標示聲明書

產品元件名稱	限用物質及其化學符號					
	鉛	鎘	汞	六價鉻	多溴聯苯	多溴二苯醚
	Pb	Cd	Hg	CrVI	PBB	PBDE
PCB	○	○	○	○	○	○
外殼	○	○	○	○	○	○
電源適配器	-	○	○	○	○	○
備考1. 超出0.1 wt %” 及 “超出0.01 wt %” 系指限用物質之百分比含量超出百分比含量基準值。						
備考2. “○” 系指該項限用物質之百分比含量未超出百分比含量基準值。						
備考3. “ - ” 系指該項限用物質為排除項目。						



Продукт сертифіковано згідно с правилами системи УкрСЕПРО на відповідність вимогам нормативних документів та вимогам, що передбачені чинними законодавчими актами України.



Safety Information

- Keep the device away from water, fire, humidity or hot environments.
- Do not attempt to disassemble, repair, or modify the device.
- Do not use damaged charger or USB cable to charge the device.
- Do not use any other chargers than those recommended
- Do not use the device where wireless devices are not allowed.
- Adapter shall be installed near the equipment and shall be easily accessible.
-  Use only power supplies which are provided by manufacturer and in the original packing of this product. If you have any questions, please don't hesitate to contact us.

Please read and follow the above safety information when operating the device. We cannot guarantee that no accidents or damage will occur due to improper use of the device. Please use this product with care and operate at your own risk.

For EU/EFTA, this product can be used in the following countries:

AT	BE	BG	CH	CY	CZ	DE	DK
EE	EL	ES	FI	FR	HR	HU	IE
IS	IT	LI	LT	LU	LV	MT	NL
NO	PL	PT	RO	SE	SI	SK	UK

Explanations of the symbols on the product label

Symbol	Explanation
	DC voltage
	Indoor use only
	RECYCLING This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/ EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.