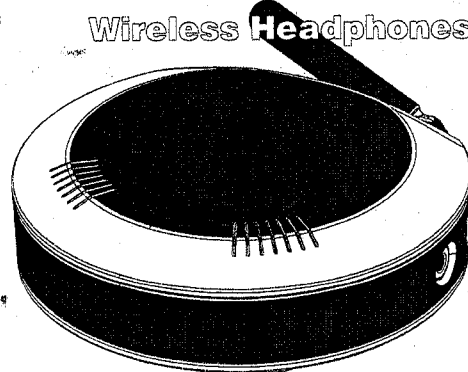


Note: The manufacturer is not responsible for any radio or TV interference cause by unauthorized modifications to this equipment. Such modifications could void the User's authority to operate the equipment.

Wireless Headphones

Instructions



Introduction**Plug In**

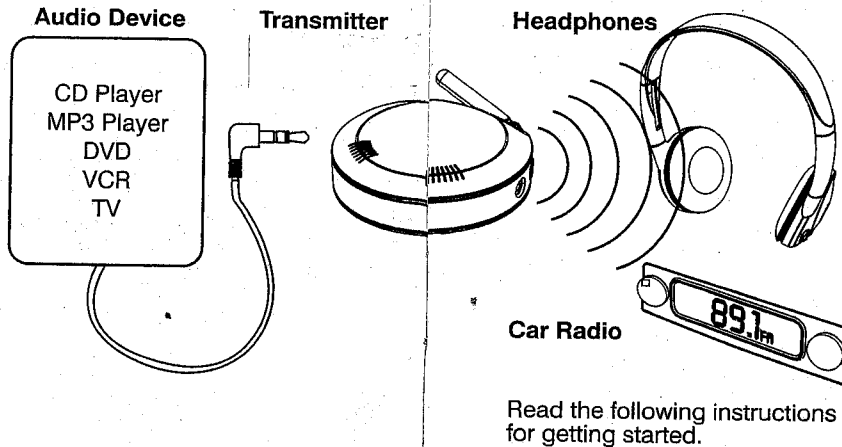
Plug in any audio device to the Transmitter.

Transmit

Transmitter uses FM frequencies to wirelessly broadcast up to 20 ft.

Tune In

Tune into the Transmitter with the Headphones, Car radio or any radio.

Getting Started

Plug In / Transmit**Transmitter****Using the Transmitter**

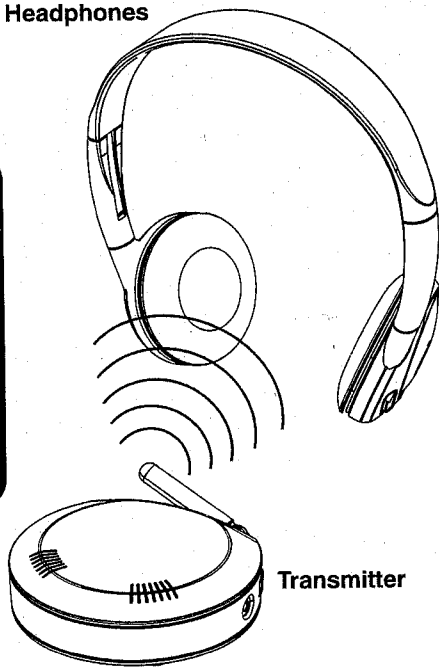
 
BAND2 • BAND1 • OFF

Slide band switch for:
Power

 
Plug Audio cord into jack

Connect Audio cord to Audio
device: MP3 player, DVD, etc.

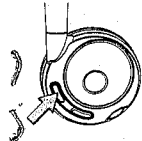
Music Device

Tuning In**Headphones****Transmitter****Using the Headphones**

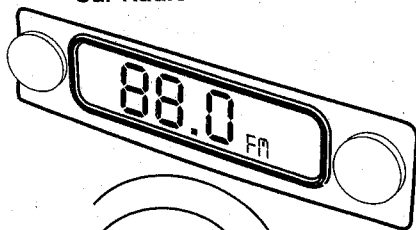
 
Rotate the Volume dial
for power



Press the Reset button

 


Press the Scan button to tune
into the Wireless Transmitter

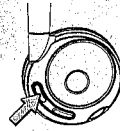
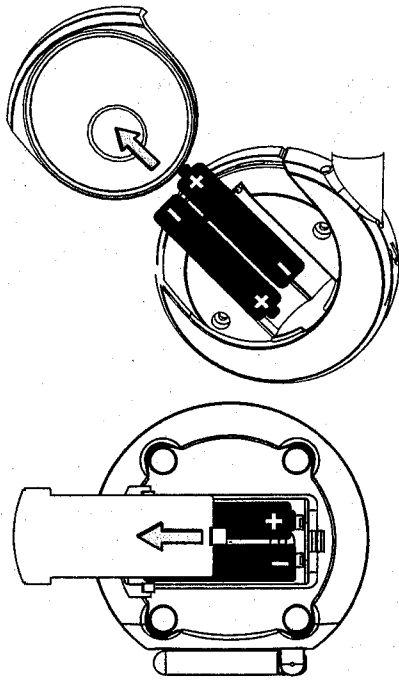
Tuning In**Car Radio****Transmitter****Using your Car Radio**

You can tune in with your Car radio or any Radio.

 
Tune your radio to:
Band

Headphone FM Scan Radio

You can use the Headphones as a FM Scan Radio too!
Press the Reset button

Batteries

Press Scan to tune into desired station



Rotate the Volume dial for desired volume

Inserting the Batteries

- Remove the battery door and insert 2 AA batteries for the headphones and transmitter