

Features of your vehicle

■ CD Player

■ Type B-1



■ Type B-2



(equipped with *Bluetooth®* Wireless Technology)

* No  logo will be shown if the AMP is not supported.

Features of your vehicle

SYSTEM CONTROLLERS AND FUNCTIONS

* Display and settings may differ depending on the selected audio.

Audio Head Unit

■ Type B-1



(1)  (EJECT)
Ejects the disc.

(2) **RADIO**

Converts to Radio(FM/AM) mode.
Each time the key is pressed, the mode is changed in order of FM1 → FM2 → AM.

(3) **MEDIA**

Start Media mode
Each time the key is pressed, the mode is changed in order of CD, USB(iPod®) AUX, My Music, BT Audio.

(4) **PHONE**

Converts to Phone mode
* When a phone is not connected, the connection screen is displayed.

(5) PWR/VOL knob

● Power : Press to turn power on/off.
● Volume : Turn left / right to control volume.

(6) 

When pressed shortly(under 0.8 seconds)

- Radio mode : plays previous / next frequency.
- Media (CD / USB / iPod® / My Music /BT Audio) modes : changes the track, Song(file)

When pressed and held (0.8 seconds)

- Radio mode : continuously changes the frequency. Upon release, plays the current frequency.
- Media(CD / USB / iPod® / My Music) modes : rewinds or fast forwards the track or file
- During a Handsfree call, controls the call volume.

Features of your vehicle



(7) **DISP**

- Each time the button is shortly pressed (under 0.8 seconds), sets screen Off → Screen On → Screen Off

* Audio operation is maintained and only the screen will be turned Off. In the screen Off state, press any key to turn the screen On again.

(8) **MUTE**

When the button is pressed, stopssound and  (MUTE ICON) is displayed on LCD.

(9) **SCAN**

- Radio Mode
 - Press the key (under 0.8 seconds): Previews each broadcast for 5 seconds each
 - Media (CD / USB / iPod® / My Music) Mode
 - Press the key (under 0.8 seconds): Previews each song (file) for 10 seconds each
- * Press the key again to continue listening to the current song (file).

(10) **SETUP**

Converts to Setup mode.

(11) TUNE knob

- Radio mode : turn to change broadcast frequencies.
- Media (CD / USB / iPod® / My Music) Mode : turn to search tracks/channels/files.

(12)

MP3, CD, USB mode : Folder Search
* May differ depending on the selected audio

Features of your vehicle

Audio Head Unit (for Type B-2)

■ Type B-2



(13) **FM**

Changes to FM mode.

Each time the key is pressed, the mode changed in order of FM1 → FM2.

(14) **AM**

Changes to AM mode.

(15) **MEDIA**

Start Media mode

Each time the key is pressed, the mode is changed in order of CD, USB(iPod®) AUX, My Music.

(16) **SEEK TRACK**

When pressed shortly(under 0.8 seconds)

- Radio mode : plays previous / next frequency.
- Media (CD / USB / iPod® / My Music) mode : changes the track, Song(file)

When pressed and held (0.8 seconds)

- Radio mode : continuously changes the frequency.
Upon release, plays the current frequency.
- Media(CD / USB / iPod® / My Music) mode : rewinds or fast forwards the track or file

Features of your vehicle

■ CD Player

■ Type B-3



■ Type B-4



(equipped with **Bluetooth®** Wireless Technology)

* No ∞Infinity logo will be shown if the AMP is not supported.

Features of your vehicle

SYSTEM CONTROLLERS AND FUNCTIONS

* Display and settings may differ depending on the selected audio.

Audio Head Unit

■ Type B-3



(1)  (EJECT)
Ejects the disc.

(2) **RADIO**

Converts to Radio(FM/AM) mode.
Each time the key is pressed, the mode is changed in order of FM1 → FM2 → FMA → AM → AMA.

(3) **MEDIA**

Start Media mode.

Each time the key is pressed, the mode is changed in order of CD, USB(iPod®), AUX, My Music, BT Audio.

(4) 

Converts to Phone mode

* When a phone is not connected, the connection screen is displayed.

(5) PWR/VOL knob

● Power : Press to turn power on/off.

● Volume : Turn left / right to control volume.

(6) 

When pressed shortly(under 0.8 seconds)

- Radio mode : plays previous / next frequency.

- Media (CD / USB / iPod® / My Music /BT Audio) mode : changes the track, Song(file)

When pressed and held (0.8 seconds)

- Radio mode : continuously changes the frequency. Upon release, plays the current frequency.

- Media(CD / USB / iPod® / My Music) mode : rewinds or fast forwards the track or file

- During a Handsfree call, controls the call volume.

Features of your vehicle



(7)

- Each time the button is shortly pressed (under 0.8 seconds), sets screen Off → Screen On → Screen Off

* Audio operation is maintained and only the screen will be turned Off. In the screen Off state, press any key to turn the screen On again.

(8)

- Set TA(Traffic Announcement) feature On/Off.

(9)

Radio Mode

- Radio Mode : previews all receivable broadcasts for 5 seconds each
- Media (CD / USB / iPod® / My Music) mode : previews each song (file) for 10 seconds each.

* Press and holding the key again to continue listening to the current song (file).

(10)

Converts to Setup mode.

(11)

Radio mode : turn to change broadcast frequencies.

Media (CD / USB / iPod® / My Music) mode : turn to search tracks/channels/files.

(12)

MP3, CD, USB mode : Folder Search

* May differ depending on the selected audio

Features of your vehicle

Audio Head Unit (for Type B-4)

■ Type B-4



(13) **FM**

Changes to FM mode.

Each time the key is pressed, the mode changed in order of FM1 → FM2 → FMA.

(14) **AM**

Changes to AM → AMA mode.

(15) **MEDIA**

Start Media mode

Each time the key is pressed, the mode is changed in order of CD, USB(iPod®) AUX, My Music.

(16) **SEEK TRACK**

When pressed shortly (under 0.8 seconds)

- Radio mode : plays previous / next frequency.
- Media (CD / USB / iPod® / My Music) mode : changes the track, Song(file)

When pressed and held (0.8 seconds)

- Radio mode : continuously changes the frequency.
Upon release, plays the current frequency.
- Media(CD / USB / iPod® / My Music) mode : rewinds or fast forwards the track or file

Features of your vehicle

PHONE (if equipped)

Before using the *Bluetooth*® Wireless Technology phone features

- In order to use *Bluetooth*® Wireless Technology phone, you must first pair and connect the *Bluetooth*® Wireless Technology mobile phone.
- If the mobile phone is not paired or connected, it is not possible to enter Phone mode. Once a phone is paired or connected, the guidance screen will be displayed.
- If Priority is set upon vehicle ignition (IGN/ACC ON), the *Bluetooth*® Wireless Technology phone will be automatically connected. Even if you are outside, the *Bluetooth*® Wireless Technology phone will be automatically connected once you are in the vicinity of the vehicle. If you do not want automatic *Bluetooth*® Wireless Technology phone connection, set the *Bluetooth*® Wireless Technology power to OFF.

Making a call using the Steering remote controller



- (1) **MUTE** button : Mute the microphone during a call.
- (2) **+**, **-** button : Raises or lowers speaker volume.
- (3) **Call** button : Places and transfers calls.
- (4) **End Call** button : Ends calls or cancels functions.

- Check call history and making call

- ① Shortly press (under 0.8 seconds) the **Call** key on the steering remote controller.
- ② The call history list will be displayed on the screen.
- ③ Press the **Call** key again to connect a call to the selected number.

- Redialing the most recently called number

- ① Press and hold (over 0.8 seconds) the **Call** key on the steering remote controller.
- ② The most recently called number is redialed.

Features of your vehicle

RADIO MODE

**Type B-1, Type B-2
(except Colombia model)**

Basic Mode Screen



(1) Mode Display
Displays currently operating mode

(2) Frequency
Displays the current frequency

(3) Preset
Displays current preset number [1] ~ [6]

(4) Preset Display
Displays preset buttons

(5) Auto store
Automatically saves frequencies with superior reception to Preset buttons

Switching to Radio Mode

(Type B-1)

Pressing the **RADIO** key will change the operating mode in order of FM1 → FM2 → AM

(Type B-2)

Pressing the **FM** key will change the operating mode in order of FM1 → FM2

Pressing the **AM** key will change the operating AM mode

If [Mode Pop-up] is turned on within **SETUP** ► [Display], then pressing the **RADIO** key will display the Radio Pop-up Mode screen.



Turn the **TUNE** knob to move the focus. Press the knob to select

Features of your vehicle

Searching Radio Frequencies

Using Seek

Press the  key to play the previous/next frequency.

 
Using TUNE

Turn the  knob to select the desired frequency.

Using Radio Mode

Selecting /Saving Presets

Press the  button to display the broadcast information for the frequency saved to each button.

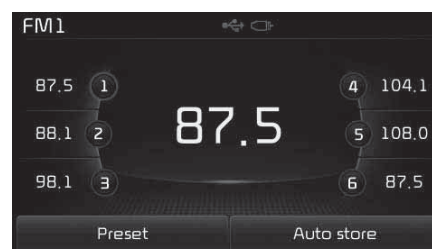

Press the  ~  buttons to play the desired preset.

* NOTICE

While listening to a frequency you want to save as a preset, press and hold one of the [1] ~ [6] preset buttons (over 0.8 seconds) to save the current frequency to the selected preset.

Auto Store

Press the  button to automatically save receivable frequencies to Preset buttons.

Scan

Press the  key to preview frequencies with superior reception for 5 seconds each.

Press and hold the  key (over 0.8 seconds) to preview presets for 5 seconds each.

* NOTICE

- Once scan is complete, the previous frequency will be restored.
- While Scan is operating, pressing the  key will cancel the scan operation.

Features of your vehicle

RADIO MODE (for RDS model) Type B-1, Type B-2 (for Colombia model), Type B-3, Type B-4

Basic Mode Screen



(1) Mode Display
Displays currently operating mode

(2) Frequency
Displays the current frequency

(3) Preset
Displays current preset number [1] ~ [6]

(4) Preset Display
Displays saved presets

(5) Auto store
Automatically saves frequencies with superior reception to Preset buttons

(6) RDS Menu
Displays the RDS Menu

(7) RDS Info
Displays RDS broadcast information

Switching to Radio Mode

Type B-1 (for Colombia model)

Pressing the **RADIO** key will change the operating mode in order of FM1 → FM2 → AM.

Type B-2 (for Colombia model)

Pressing the **FM** key will change the operating mode in order of FM1 → FM2.

Pressing the **AM** key will change the operating mode AM.

Type B-3

Pressing the **RADIO** key will change the operating mode in order of FM1 → FM2 → FMA → AM → AMA.

 
Type B-4

Pressing the **FM** key will change the operating mode in order of FM1 → FM2 → FMA.

Pressing the **AM** key will change the operating mode in order of AM → AMA.

Features of your vehicle

If [Pop-up Mode] / [Mode Pop-up] is turned on within **SETUP** ► [Display], then pressing the **RADIO**, **FM** / **AM** key will display the Radio Pop-up Mode screen.

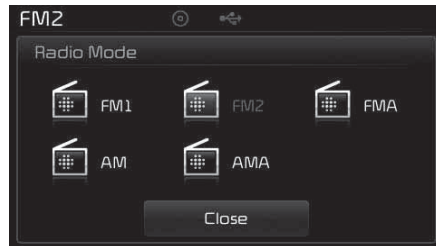

Turn the **TUNE** knob to move the focus. Press the knob to select.

Searching Radio Frequencies

Using Seek

Press the **SEEK TRACK** key to play the previous/next frequency.

Using TUNE

Turn the **TUNE** knob to select the desired frequency.

Using Radio Mode

Selecting/Saving Presets

Press the **1** ~ **6** buttons to play the desired preset.



Press the **INFO** button to display the broadcast information for the frequency saved to each button.



* NOTICE

While listening to a frequency you want to save as a preset, press and hold one of the [1] ~ [6] preset buttons (over 0.8 seconds) to save the current frequency to the selected preset.

Auto Store

Press the **INFO** button to automatically save receivable frequencies to Preset buttons.

 
* NOTICE

While Auto Store is operating, pressing the [Cancel] button again will cancel Auto Store and restore the previous frequency.

Features of your vehicle

RDS Menu

Press the  button to set the AF (Alternative Frequency), Region and News features.

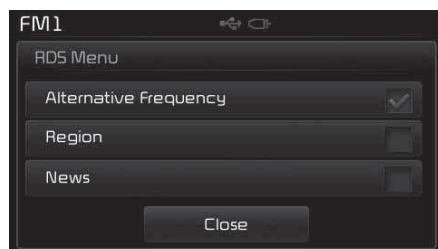

* NOTICE

The RDS Menu is not supported within AM or AMA mode.

Scan

 
- Radio Mode
- Press the key (under 0.8 seconds):
Previews each broadcast for 5 seconds each
- CD, USB, My Music mode
- Press the key (under 0.8 seconds):
Previews each song (file) for 10 seconds each
- * Press the key again to continue listening to the current song (file).

* NOTICE

Once scan is complete, the previous frequency will be restored.
While Scan is operating, pressing the  key (under 0.8 seconds) will cancel the scan operation.

TA (Traffic Announcement)

Press the  key to turn the TA (Traffic Announcement) feature On/Off.

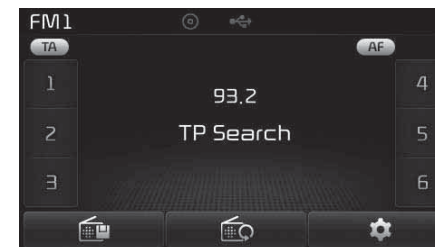


Features of your vehicle

MEDIA MODE**Switching to Media Mode****(Type B-1, Type B-3)**

Pressing the **MEDIA** key will change the operating mode in order of CD → USB (iPod®) → AUX → My Music → BT Audio.

(Type B-2, Type B-4)

 Pressing the key will change the operating mode in order of CD → USB (iPod®) → AUX → My Music.

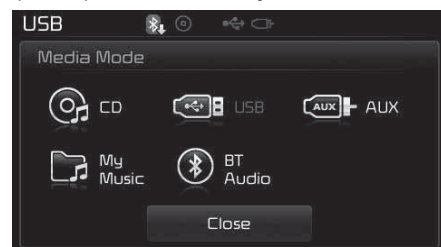

If [Pop-up Mode] / [Mode Pop-up] is turned on within **SETUP** ► [Display], then pressing the **MEDIA** key will display the Media Pop-up Mode screen.

Turn the **TUNE** knob to move the focus. Press the knob to select.

*** NOTICE**

The media mode pop up screen can be displayed only when there are two or more media modes turned on.

Title Icon

When a *Bluetooth®* Wireless Technology (if equipped), iPod®, USB, or AUX device is connected or a CD is inserted, the corresponding mode icon will be displayed.



 
Icon	Title
	<i>Bluetooth®</i> Wireless Technology (if equipped)
	CD
	iPod®
	USB
	AUX

Features of your vehicle


AUDIO CD MODE

Basic Mode Screen

■ Type B-1, Type B-2 (except Colombia model)

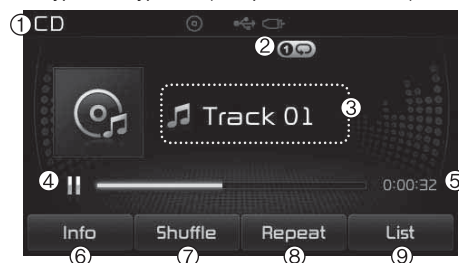

 ■ Type B-1, Type B-2 (for Colombia model), Type B-3, Type B-4

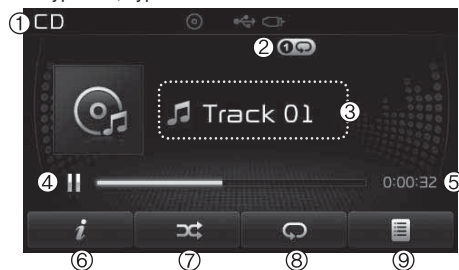

(1) Mode

Displays currently operating mode

(2) Operation State

From Repeat/Shuffle(Random)/ Scan, displays the currently operating function

(3) Track Info

Displays information about the current track

(4) Play/Pause

Changes the play/pause state

(5) Play Time

Displays the current play time

(6) Info

Shows detailed information about the current track

(7) Shuffle(Random)

Turns the Shuffle(Random) feature on/off

(8) Repeat

Turns the Repeat feature on/off

(9) List

Moves to the list screen

 
Features of your vehicle

Using Audio CD Mode


Playing/Pausing CD Tracks

Once an audio CD is inserted, the mode will automatically start and begin playing.

■ Type B-1, Type B-2 (except Colombia model)

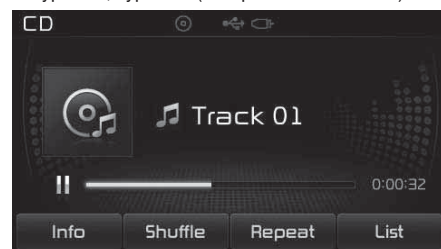

 ■ Type B-1, Type B-2 (for Colombia model), Type B-3, Type B-4

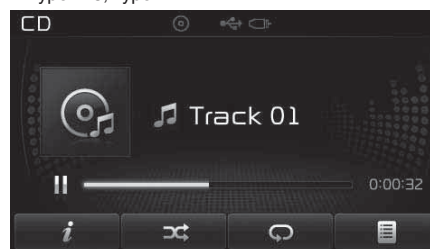

While playing, press the **||** button to pause and press **▶** button to play.

* NOTICE

- Only genuine audio CDs are supported. Other discs may result in recognition failure (e.g. copy CD-R, CDs with labels)
- The artist and title information are displayed on the screen if track information is included within the audio CD.

Changing Tracks

Press the **SEEK TRACK** key to move to the previous or next track.

 
* NOTICE

- Pressing the **SEEK TRACK** key after the track has been playing for 2 seconds will start the current track from the beginning.
- Pressing the **SEEK TRACK** key before the track has been playing for 1 seconds will start the previous track.

Features of your vehicle

Selecting from the List

Turn the **TUNE** knob left/right to search for the desired track.

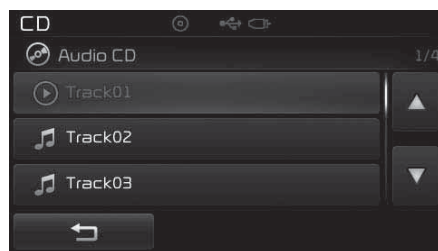

Once you find the desired track, press the **TUNE** knob to start playing.

Rewinding / Fast-forwarding Tracks

While playing, press and hold the **SEEK TRACK** key (over 0.8 seconds) to rewind or fast-forward the current track.

Scan

 
Press the **SCAN** key to play the first 10 seconds of each file.

Press the **SCAN** key again to turn off.


Audio CD Mode Menu

Within this mode, you will have access to the Info, Shuffle(Random), Repeat and List features.

■ Type B-1, Type B-2 (except Colombia model)

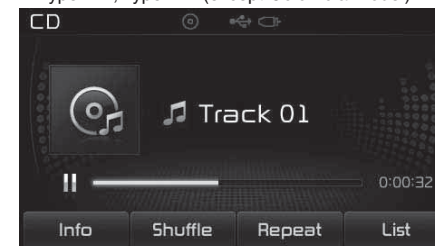

 ■ Type B-1, Type B-2 (for Colombia model), Type B-3, Type B-4

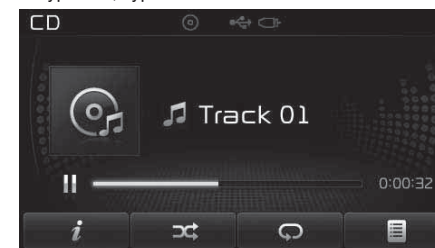

Features of your vehicle

Info

Press the **Info** () button to display details about the current disc.

Shuffle(Random)

Press the **Shuffle** () button to play tracks in shuffle(random) order.

Press the button again to turn the Shuffle(Random) feature off.

- Shuffle(Random): Plays all tracks in shuffle(random) order.

 
Repeat

Press the **Repeat** () button to repeat the current track. Press the button again to turn the repeat feature off.

- Repeat: Repeats the current track.

List

Press the **List** () button to display the track list screen.

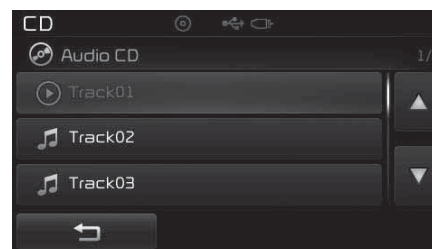


Turn the  TUNE knob left/right to search for tracks. Once the desired track is displayed, press the knob to select and play.

Features of your vehicle


MP3 CD MODE

Basic Mode Screen

 ■ Type B-1, Type B-2 (except Colombia model)

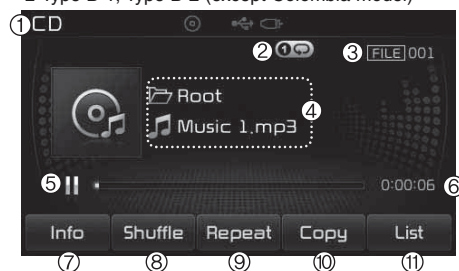

 ■ Type B-1, Type B-2(for Colombia model),
Type B-3, Type B-4

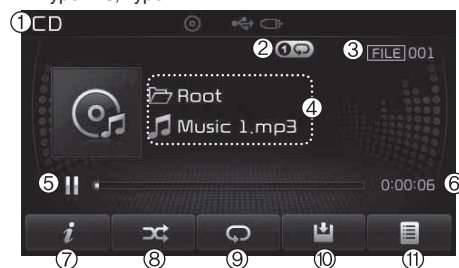

(1) Mode

Displays currently operating mode.

(2) Operation State

From Repeat/Shuffle(Random)/ Scan, displays the currently operating function

(3) File Index

Displays the current file number

(4) File Info

Displays information about the current file

(5) Play/Pause

Changes the play/pause state

(6) Play Time

Displays the current play time

(7) Info

Shows detailed information about the current file

(8) Shuffle(Random)

Turns the Shuffle(Random) feature on/off

(9) Repeat

Turns the Repeat feature on/off

(10) Copy

Copies the current file into My Music

(11) List

Moves to the list screen

 
Features of your vehicle

Using MP3 CD Mode


Playing/Pausing MP3 Files

Once an MP3 disc is inserted the mode will automatically start and being playing.

■ Type B-1, Type B-2 (except Colombia model)

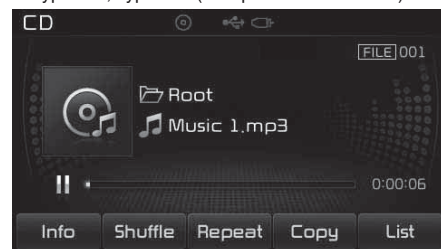

 ■ Type B-1, Type B-2 (for Colombia model),
Type B-3, Type B-4

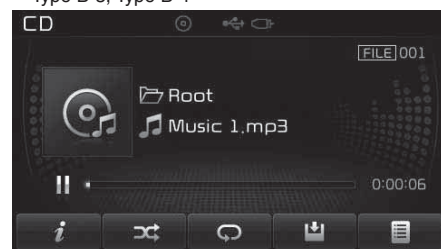

While playing, press the **||** button to pause and press **▶** button to play.

* NOTICE

If there are numerous files and folders within the disc, reading time could take more than 10 seconds and the list may not be displayed or song searches may not operate. Once loading is complete, try again.

Changing Files

 
Press the **SEEK TRACK** key to move to the previous or next file.

* NOTICE

- Pressing the **SEEK TRACK** key after the file has been playing for 2 seconds will start the current file from the beginning.
- Pressing the **SEEK TRACK** key before the file has been playing for 1 seconds will start the previous file.

Selecting from the List

Turn the **⦿TUNE** knob left/right to search for the desired file.

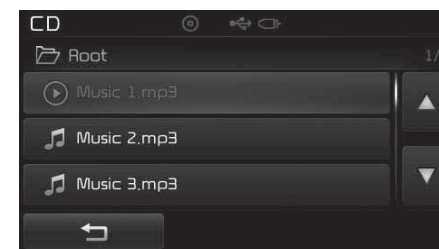

Once you find the desired file, press the **⦿TUNE** knob to start playing.

Rewinding / Fast-forwarding Files

While playing, press and hold the **SEEK TRACK** key (over 0.8 seconds) to rewind or fast-forward the current file.

Features of your vehicle

Scan

 
Press the **SCAN** key to play the first 10 seconds of each file.

Press the **SCAN** key again to turn off.

Searching Folders

Press the **▼FOLDER▲** key to select and search folders.

Once the desired folder is displayed, press the **TUNE** knob to select.

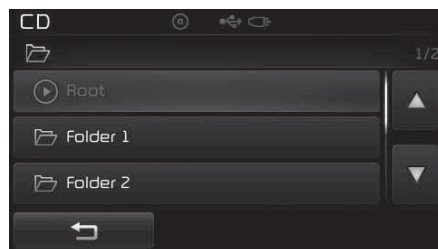


The first file within the selected folder will begin playing.


MP3 CD Mode Menu

Within this mode, you will have access to the Info, Shuffle(Random), Repeat, Copy and List features.

 ■ Type B-1, Type B-2 (except Colombia model)

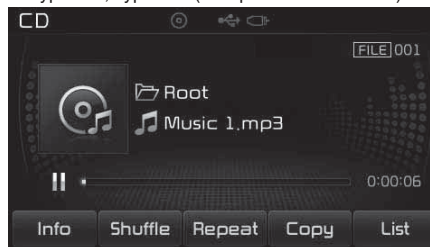

 ■ Type B-1, Type B-2 (for Colombia model), Type B-3, Type B-4

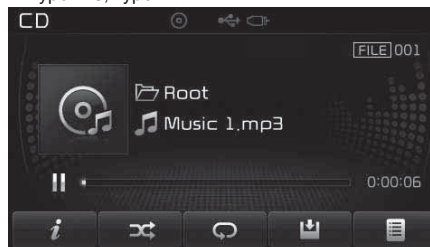

Info

Press the **Info** (**i**) button to display details about the current file.

* NOTICE

- When the 'Folder File' option is set as the default display within Display setup, the album/artist/file information are displayed as detailed file information.
- When the 'Album Artist Song' option is set as the default display, the folder name/file name are displayed as detailed file information.
- The title, artist and album info are displayed only when such information are recorded within the MP3 file ID3 tag.

Features of your vehicle

Shuffle(Random)

Press the **Shuffle** () button to play files in Shuffle(Random) order.

Each time the button is pressed, the feature changes in order of Shuffle(Random) Folder → Shuffle(Random) All → Off.

- Shuffle(Random) Folder : Plays all files within the current folder in shuffle(random) order.
- Shuffle(Random) All : Plays all files in shuffle(random) order.

Repeat

Press the **Repeat** () button to repeat the current file or folder.

Each time the button is pressed, the feature changes in order of Repeat → Repeat Folder → Off.

- Repeat: Repeats the current file.
- Repeat Folder: Repeats all files within the current Folder.

Copying Files

 
Press the **Copy** () button to copy the current file into My Music.

* NOTICE

Selecting another feature during copying will display a pop-up asking whether you wish to cancel copying. To cancel, select 'Yes'.

List

Press the **List** () button to display the file list screen.

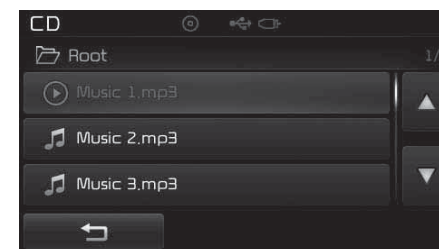

Turn the **TUNE** knob left/right to search for files. Once the desired file is displayed, press the knob to select and play.

Features of your vehicle

* NOTICE - USING THE USB DEVICE

- Connect the USB device after turning on the engine. The USB device may become damaged if it is already connected when the ignition is turned on. The USB device may not operate properly if the car ignition is turned on or off with the USB device connected.
- Heed caution to static electricity when connecting/disconnecting USB devices.
- Encoded MP3 Players will not be recognized when connected as an external device.
- When connecting an external USB device, the device may not properly recognize the USB is in some states.
- Only products formatted with byte/sectors under 64Kbyte will be recognized.
- This device recognizes USB devices formatted in FAT 12/16/32 file formats. This device does not recognize files in NTFS file format.

(Continued)

(Continued)

- Some USB devices may not be supported due to compatibility issues.
- Avoid contact between the USB connector with bodily parts or foreign objects.
- Repeated connecting/disconnecting of USB devices within short periods of time may result in product malfunction.
- A strange noise may occur when disconnecting the USB.
- Make sure to connect/disconnect external USB devices with the audio power turned off.
- The amount of time required to recognize the USB device may differ depending on the type, size or file formats stored in the USB. Such differences in time are not indications of malfunctions.
- The device only supports USB devices used to play music files.
- USB images and videos are not supported.

(Continued)

(Continued)

- Do not use the USB I/F to charge batteries or USB accessories that generate heat. Such acts may lead to worsened performance or damage to the device.
- The device may not recognize the USB device if separately purchased USB hubs and extension cables are being used. Connect the USB directly with the multimedia terminal of the vehicle.
- When using mass storage USB devices with separate logical drives, only files saved to the root drive can be played.
- Files may not properly operate if application programs are installed to the USBs.
- The device may not operate normally if MP3 Players, cellular phones, digital cameras, or other electronic devices (USB devices not recognized as portable disk drives) are connected with the device.

(Continued)

Features of your vehicle

(Continued)

- Charging through the USB may not work for some mobile devices.
- The device may not support normal operation when using a USB memory type besides (Metal Cover Type) USB Memory.
- The device may not support normal operation when using formats such as HDD Type, CF, or SD Memory.
- The device will not support files locked by DRM (Digital Rights Management.)
- USB memory sticks used by connecting an Adaptor (SD Type or CF Type) may not be properly recognized.
- The device may not operate properly when using USB HDDs or USBs subject to connection failures caused by vehicle vibrations. (e.g. i-stick type)

(Continued)

(Continued)

- Avoid use of USB memory products that can also be used as key chains or mobile phone accessories. Use of such products may cause damage to the USB jack.
- Connecting an MP3 device or phone through various channels, such as AUX/BT or Audio/USB mode may result in pop noises or abnormal operation.



Features of your vehicle

USB MODE

Basic Mode Screen



(1) Mode

Displays currently operating mode

(2) Operation State

From Repeat/Shuffle(Random)/ Scan, displays the currently operating function

(3) File Index

Displays the current file number

(4) File Info

Displays information about the current file

(5) Play/Pause

Changes the play/pause state

(6) Play Time

Displays the current play time

(7) Info

Displays detailed information for the current file

(8) Shuffle(Random)

Turns the Shuffle(Random) feature on/off

(9) Repeat

Turns the Repeat feature on/off

(10) Copy

Copies the current file into My Music

(11) List

Moves to the list screen

 
Features of your vehicle

Using USB Mode


Playing/Pausing USB Files

Once a USB is connected, the mode will automatically start and begin playing a USB file.

■ Type B-1, Type B-2 (except Colombia model)

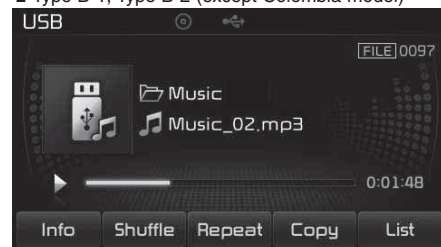

 ■ Type B-1, Type B-2 (for Colombia model),
Type B-3, Type B-4

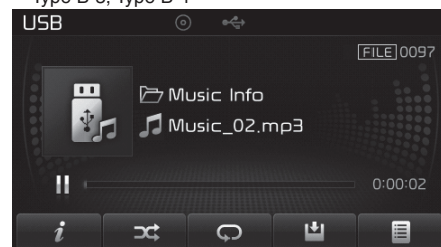

While playing, press the  button to pause and press  button to play.

* NOTICE

- Loading may require additional time if there are many files and folders within the USB and result in faulty list display or file searching. Normal operations will resume once loading is complete.
- The device may not support normal operation when using a USB memory type besides (Metal Cover Type) USB Memory.

Changing Files

Press the  keys to move to the previous or next file.

 
* NOTICE

- Pressing the  key after the file has been playing for 2 seconds will start the current file from the beginning.
- Pressing the  key before the file has been playing for 1 seconds will start the previous file.

Features of your vehicle

Selecting from the List

Turn the **TUNE** knob left/right to search for the desired file.

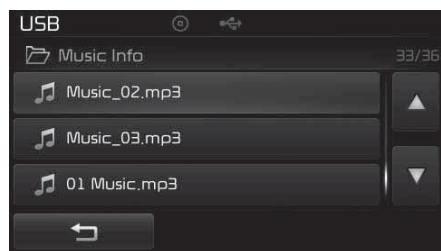

Once you find the desired file, press the **TUNE** knob to start playing.

Rewinding / Fast-forwarding Files

While playing, press and hold the **SEEK TRACK** key (over 0.8 seconds) to rewind or fast-forward the current file.

 
Scan

Press the **SCAN** key to play the first 10 seconds of each file.

Press the **SCAN** key again to turn off.

Searching Folders

Press the **FOLDER** key to select and search folders.

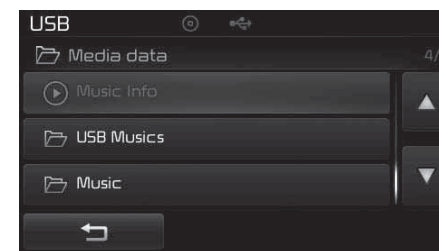

Once the desired folder is displayed, press the **TUNE** knob to select.

 
The first file within the selected folder will begin playing.

Features of your vehicle


USB Mode Menu

Within this mode, you will have access to the Info, Shuffle(Random), Repeat, Copy and List features.

■ Type B-1, Type B-2 (except Colombia model)

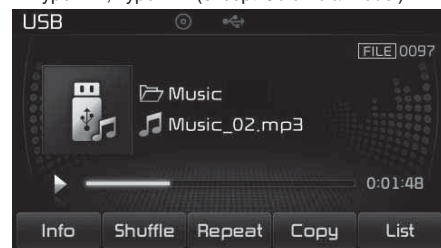

 ■ Type B-1, Type B-2(for Colombia model),
Type B-3, Type B-4

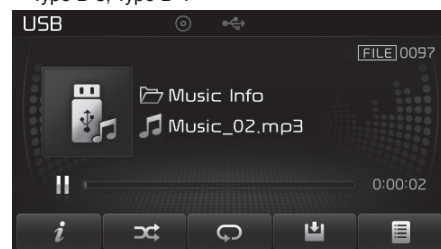

Info

Press the **Info** () button to display details about the current file.

* NOTICE

- When the 'Folder File' option is set as the default display within Display setup, the album/artist/file information are displayed as detailed file information.
- When the 'Album Artist Song' option is set as the default display, the folder name/file name are displayed as detailed file information.
- The title, artist and album info are displayed only when such information are recorded within the MP3 file ID3 tag.

Shuffle(Random)

Press the **Shuffle** () button to play files in shuffle(random) order.

Each time the button is pressed, the feature changes in order of Shuffle(Random) Folder → Shuffle(Random) All → Off.

- Shuffle(Random) Folder : Plays the files in the current folder in shuffle(random) order.
- Shuffle(Random) All : Plays all files in shuffle(random) order.

Repeat

Press the **Repeat** () button to repeat the current file or folder.

Each time the button is pressed, the feature changes in order of Repeat → Repeat Folder → Off.

- Repeat (Icon) : Repeats the current file.
- Repeat Folder (Icon) : Repeats all files within the current folder.

Features of your vehicle

Copying Files


Press the **Copy** () button to copy the current file into My Music.

*** NOTICE**

 Selecting another feature during copying will display a pop-up asking whether you wish to cancel copying. To cancel, select 'Yes'.

List

Press the **List** () button to display the file list screen.

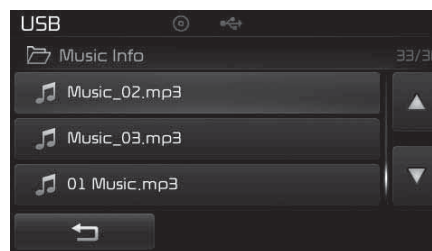

Turn the **⦿TUNE** knob left/right to search for files. Once the desired file is displayed, press the knob to select and play.

Features of your vehicle

*** NOTICE - USING THE iPod® DEVICE**

- iPod® is a registered trademark of Apple Inc.
- In order to use the iPod® while operating the keys, you must use a dedicated iPod® cable. (the cable that is supplied when purchasing iPod®/iPhone® products)
- If the iPod® is connected to the vehicle while it is playing, a high pitch sound could occur for approximately 1-2 seconds immediately after connecting. If possible, connect the iPod® to the vehicle with the iPod® stopped/paused.
- During ACC ON state, connecting the iPod® through the iPod® cable will charge the iPod® through the car audio system.
- When connecting with the iPod® cable, make sure to fully insert the jack to prevent communication interference.

(Continued)

(Continued)

- When the EQ features of an external device, such as the iPod®, and the audio system are both active, EQ effects could overlap and cause sound deterioration and distortion. Whenever possible, turn off the EQ feature within the external device upon use by connecting with the audio system.
- Noise may occur when an iPod® or AUX device is connected. When such devices are not being used, disconnect the device for storage.
- When the iPod® or AUX device power is connected to the power jack, playing the external device may result in noise. In such cases, disconnect the power connection before use.
- Skipping or improper operation may occur depending on the characteristics of your iPod®/iPhone® device.
- If your iPhone is connected to both the *Bluetooth®* Wireless Technology and USB, the sound may not be properly played. In your iPhone, select the Dock connector or *Bluetooth®* Wireless Technology to change the sound output (source).

(Continued)

(Continued)

 
- iPod® mode cannot be operated when the iPod® cannot be recognized due to the playing of versions that do not support communication protocols, cases of iPod® abnormalities and defects.
- For fifth generation iPod® Nano devices, the iPod® may not be recognized when the battery level is low. Please charge the iPod® for use.
- Search/play orders shown within the iPod® device may differ with the orders shown within the audio system.
- If the iPod® malfunctions due to an iPod® device defect, reset the iPod® and try again. (To learn more, refer to your iPod® manual)
- Some iPod®s may not sync with the System depending on its version. If the Media is removed before the Media is recognized, then the system may not properly restore the previously operated mode. (iPad charging is not supported.)

Features of your vehicle


iPod® MODE

Basic Mode Screen

■ Type B-1, Type B-2 (except Colombia model)

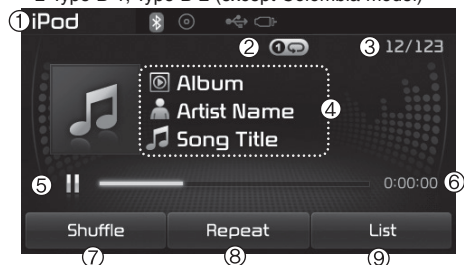

 ■ Type B-1, Type B-2(for Colombia model), Type B-3, Type B-4

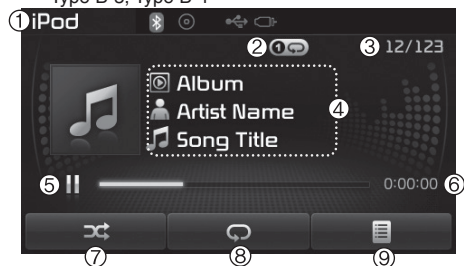

(1) Mode

Displays currently operating mode

(2) Operation State

From Repeat/Shuffle(Random), displays the currently operating function

(3) Song Index

Displays the current song/total number of songs

(4) Song Info

Displays information about the current song

(5) Play/Pause

Changes the play/pause state

(6) Play Time

Displays the current play time

(7) Shuffle(Random)

Turns the Shuffle(Random) feature on/off

(8) Repeat

Turns the Repeat feature on/off

(9) List

Moves to the list screen

 
Features of your vehicle

Using iPod® Mode


Playing/Pausing iPod® Songs

Once an iPod® is connected, the mode will automatically start and begin playing an iPod® song.

■ Type B-1, Type B-2 (except Colombia model)

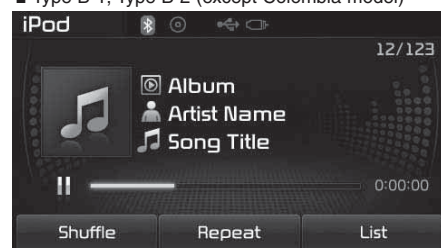

 ■ Type B-1, Type B-2(for Colombia model),
Type B-3, Type B-4

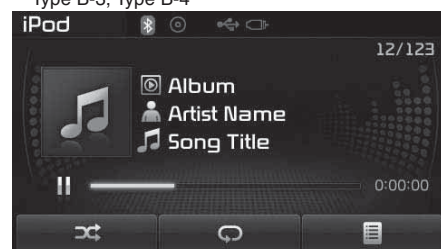

While playing, press the  button to pause and press  button to play.

* NOTICE

iPod® with unsupported communication protocols may not properly operate in the audio system.

Changing Songs

Press the  key to move to the previous or next song.

* NOTICE

- Pressing the  key after the song has been playing for 2 seconds will start the current song from the beginning.
- Pressing the  key before the song has been playing for 1 seconds will start the previous song.
- Slight time differences may exist depending your iPod® product.

Rewinding / Fast-forwarding Songs

 
While playing, press and hold the  key (over 0.8 seconds) to rewind or fast-forward the current song.

Features of your vehicle


Searching Categories

Turn the **ⓈTUNE** knob left/right to search for the desired category.

■ Type B-1, Type B-2 (except Colombia model)

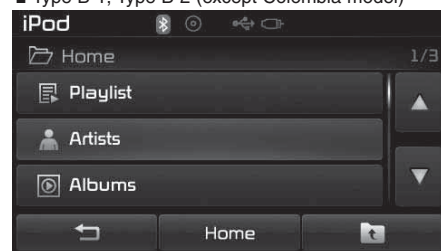

 ■ Type B-1, Type B-2 (for Colombia model), Type B-3, Type B-4

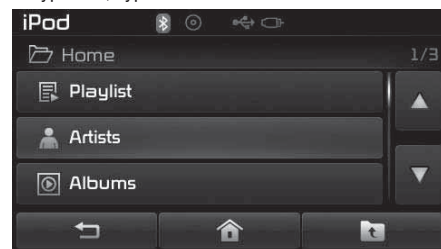

Once you find the desired category, press the **ⓈTUNE** knob to select and play.

 
* NOTICE

There are eight categories that can be searched, including **Playlists, Artists, Albums, Genres, Songs, Composers, Audiobooks** and **Podcasts**.


Category Menu

Within the iPod® Category menu, you will have access to the **⏮**, **Home** (**🏠**), and **⏭** features.

■ Type B-1, Type B-2 (except Colombia model)

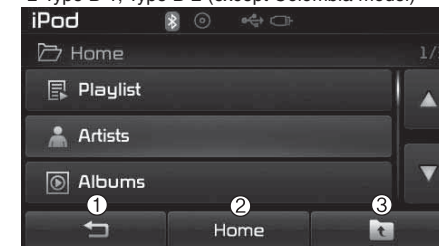

 ■ Type B-1, Type B-2 (for Colombia model), Type B-3, Type B-4

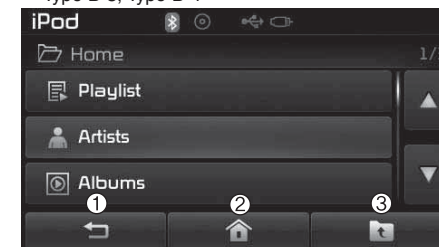

- (1) **⏮** : Displays the play screen
- (2) **Home** (**🏠**): Moves to the iPod® root category screen
- (3) **⏭**: Moves to the previous category

Features of your vehicle

 
* NOTICE

- If the search mode is accessed while playing a song, the most recently searched category is displayed.
- Search steps upon initial connection may differ depending on the type of iPod® device.


iPod® Mode Menu

Within this mode, you will have access to the Shuffle(Random), Repeat and List features.

- Type B-1, Type B-2 (except Colombia model)

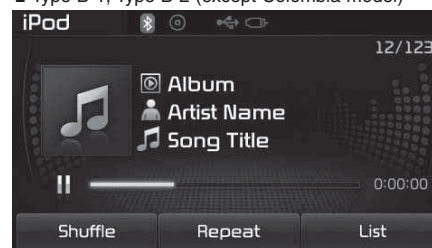

 - Type B-1, Type B-2 (for Colombia model), Type B-3, Type B-4

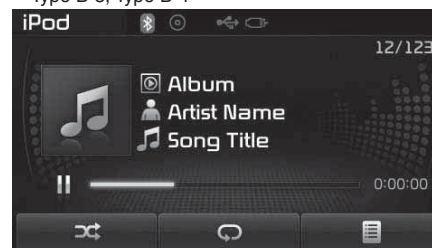

Shuffle(Random)

Press the **Shuffle** () button to play songs in shuffle(random) order.

- Shuffle(Random) All : Plays all songs in shuffle(random) order.

Repeat

Press the **Repeat** () button to repeat the current song. Press the button again to turn the repeat feature off.

 
- Repeat : Repeats the current song

Features of your vehicle


List

Press the **List** () button to display the Category Menu.

■ Type B-1, Type B-2 (except Colombia model)

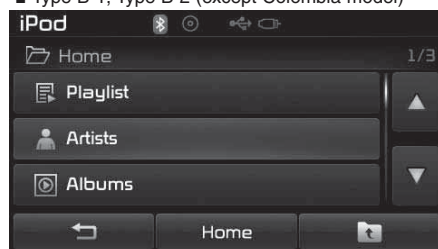

 ■ Type B-1, Type B-2 (for Colombia model), Type B-3, Type B-4

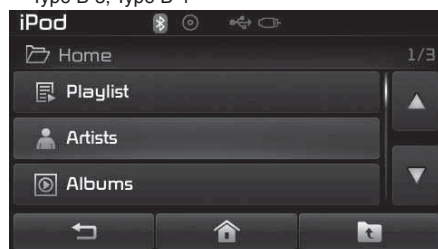

Turn the **TUNE** knob left/right to search for the desired category.

 
Once you find the desired category, press the **TUNE** knob to select and play.

AUX MODE


Using AUX Mode

Press the **MEDIA** key ▶ Select [AUX]

■ Type B-1, Type B-2 (except Colombia model)

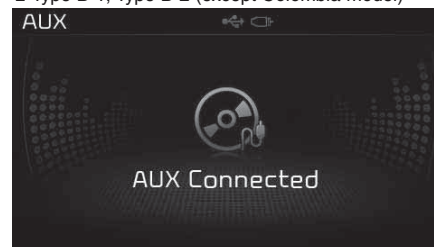

 ■ Type B-1, Type B-2 (for Colombia model), Type B-3, Type B-4

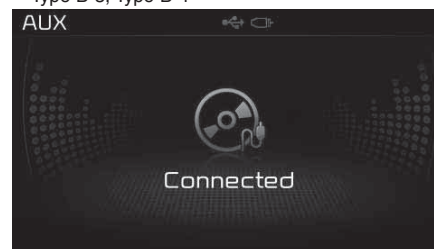

An external device can be connected to play music

Connecting an External Device

External audio players (Camcorders, car VCR, etc.) can be played through a dedicated cable.

 
 
* NOTICE

- If an external device connector is connected with the AUX terminal, then AUX mode will automatically operate. Once the connector is disconnected, the previous mode will be restored.
- AUX mode can be used only when an external audio player (camcorder, car VCR, etc.) has been connected.
- The AUX volume can be controlled separately from other audio modes.
- Connecting a connector jack to the AUX terminal without an external device will convert the system to AUX mode, but only output noise. When an external device is not being used, also remove the connector jack.
- When the external device power is connected to the power jack, playing the external device may output noise. In such cases, disconnect the power connection before use.
- Fully insert the AUX cable to the AUX jack upon use.

Features of your vehicle

MY MUSIC MODE

Basic Mode Screen

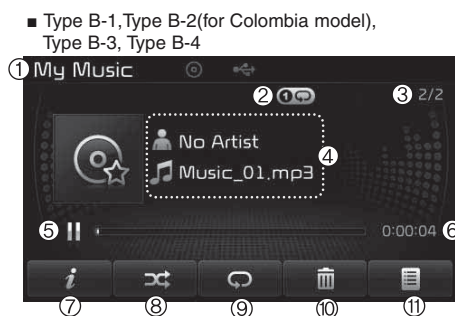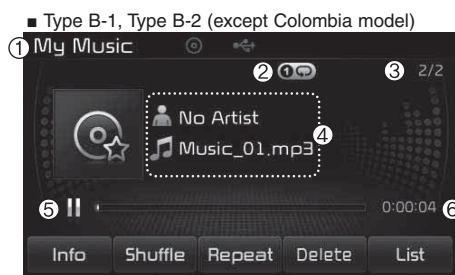

(1) Mode

Displays currently operating mode

(2) Operation State

From Repeat/Shuffle(Random)/ Scan, displays the currently operating function

(3) File Index

Displays the current file/total number of files

(4) File Info

Displays information about the current file

(5) Play/Pause

Changes the play/pause state

(6) Play Time

Displays the current play time

(7) Info

Displays detailed information for the current file

(8) Shuffle(Random)

Turns the Shuffle(Random) feature on/off

(9) Repeat

Turns the Repeat feature on/off

(10) Delete

Deletes the current file

(11) List

 
Moves to the list screen

Features of your vehicle


Using My Music Mode

Playing/Pausing My Music Files

■ Type B-1, Type B-2 (except Colombia model)

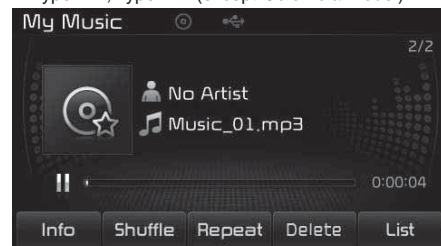

 ■ Type B-1, Type B-2(for Colombia model), Type B-3, Type B-4

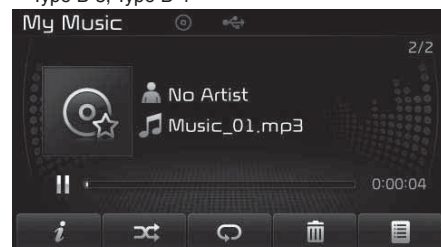

While playing, press the **||** button to pause and press **▶** button to play.

* NOTICE

If there are no files saved within My Music, the [My Music] button will be disabled.

Changing Files

Press the **SEEK TRACK** key to move to the previous or next file.

 
* NOTICE

- Pressing the **SEEK TRACK** key after the file has been playing for 2 seconds will start the current file from the beginning.
- Pressing the **SEEK TRACK** key before the file has been playing for 1 second will start the previous file.


Selecting from the List

Turn the **⦿TUNE** knob left/right to search for the desired file.

■ Type B-1, Type B-2 (except Colombia model)

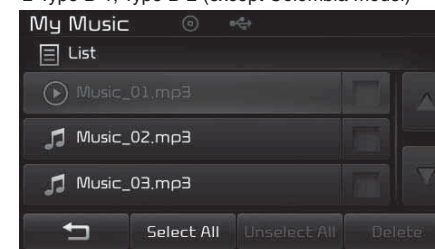

 ■ Type B-1, Type B-2(for Colombia model), Type B-3, Type B-4

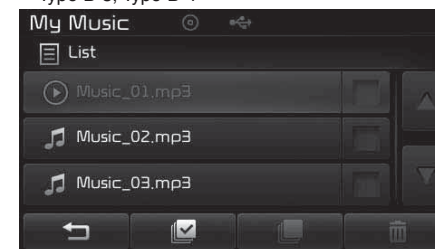

Once you find the desired file, press the **⦿TUNE** knob to start playing.

Features of your vehicle

Rewinding / Fast-forwarding Files

While playing, press and hold the  key (over 0.8 seconds) to rewind or fast-forward the current file.

Scan

 
Press the  key to play the first 10 seconds of each file.

Press the  key again to turn off.


My Music Mode Menu

Within this mode, you will have access to the Info, Shuffle(Random), Repeat, Delete and List features.

■ Type B-1, Type B-2 (except Colombia model)

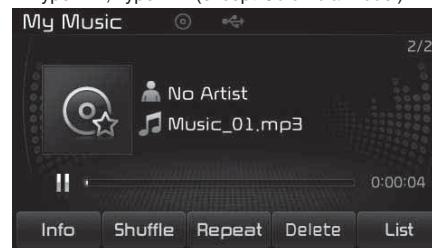

 ■ Type B-1, Type B-2(for Colombia model), Type B-3, Type B-4

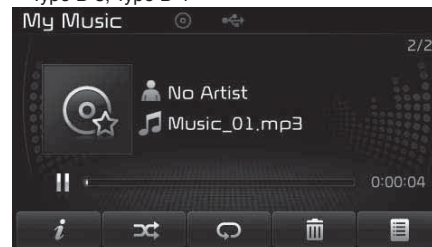

Info

Press the  button to display details about the current file.

* NOTICE

The title, artist and album info are displayed only when such information is recorded within the MP3 file ID3 tag.

Features of your vehicle

Random

Press the **Shuffle** () button to play files in random order. Press the button again to turn the Random feature off.

Repeat

Press the **Repeat** () button to repeat the current song. Press the button again to turn the repeat feature off.

 
Deleting Files

Press the **Delete** () button to delete the current file.


List

Press the **List** () button to display the file list screen.

■ Type B-1, Type B-2 (except Colombia model)

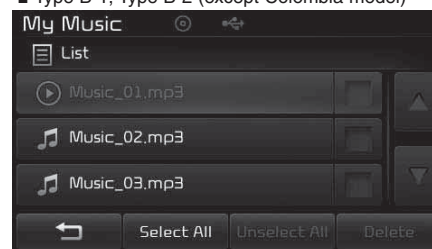

 ■ Type B-1, Type B-2 (for Colombia model), Type B-3, Type B-4

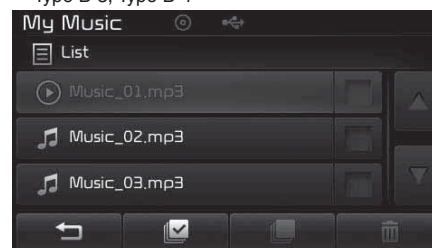


Turn the **ⒸTUNE** knob left/right to search for files. Once the desired file is displayed, press the knob to select and play.


List Menu

From the List screen, it is possible to delete files you previously saved into My Music.

 ■ Type B-1, Type B-2 (except Colombia model)

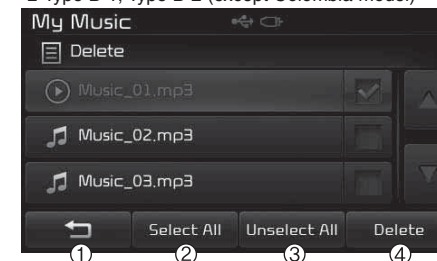

 ■ Type B-1, Type B-2 (for Colombia model), Type B-3, Type B-4

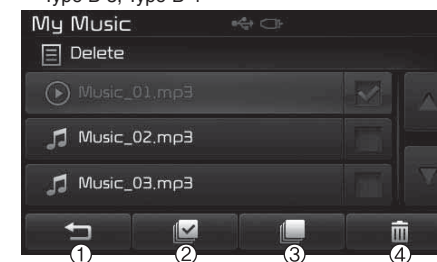

Features of your vehicle

Press the **Select All** () button or individually select the files you want to delete. Once files are selected, the **Unselect All** () button and **Delete** () buttons will be enabled.

- (1)  : Moves to the previous screen
- (2) **Select All**: Selects all files
- (3) **Unselect All**: Deselects all selected files
- (4) **Delete**: Deletes selected files

After selecting the files you want to delete, press the **Delete** () button to delete the selected files.

* NOTICE

- If there is memory available, up to 6,000 files can be saved.
- Identical files cannot be copied more than 1,000 times.
- To check memory information, go to **SETUP** ► [System] ► [Memory Information]

* NOTICE - USING THE *Bluetooth*® Wireless Technology Audio Mode

- *Bluetooth*® Wireless Technology Audio Mode can be used only when a *Bluetooth*® Wireless Technology phone has been connected.
- *Bluetooth*® Wireless Technology Audio Mode will not be available when connecting mobile phones that do not support this feature.
- While *Bluetooth*® Wireless Technology Audio is playing, if the *Bluetooth*® Wireless Technology phone is connected, then the music will also stop.
- Moving the Track up/down while playing *Bluetooth*® Wireless Technology audio mode may result in pop noises in some mobile phones.
- *Bluetooth*® Wireless Technology streaming audio may not be supported in some mobile phones.

(Continued)

(Continued)

- When returning to *Bluetooth*® Wireless Technology Audio mode after ending a call, the mode may not automatically restart in some mobile phones.
- Receiving an incoming call or making an outgoing call while playing *Bluetooth*® Wireless Technology Audio may result in audio interference.

 
Features of your vehicle

Bluetooth® Wireless Technology AUDIO MODE Type B-1, Type B-3

Using Bluetooth® Wireless Technology Audio Mode

Playing/Pausing Bluetooth® Wireless Technology Audio

Once a *Bluetooth®* Wireless Technology device is connected, the mode will automatically start.

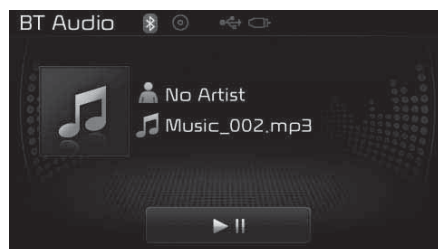

While playing, press the  button to pause and press  button to play.

*** NOTICE**

The play/pause feature may operate differently depending on the mobile phone.

Changing Files

Press the  key to move to the previous or next file.

Setting Connection

If a *Bluetooth®* Wireless Technology device has not been connected, press the **SETUP** key ►[Phone] button to display the *Bluetooth®* Wireless Technology connection screen.

It is possible to use the pair phone, connect/disconnect and delete features from your *Bluetooth®* Wireless Technology phone.

*** NOTICE**

- If the *Bluetooth®* Wireless Technology audio is not operating properly, check whether the feature is turned off at **SETUP** ►[Phone] ►[Audio streaming] (Streaming Audio). If the feature is off, turn back on and try again.
- If music is not yet playing from your mobile device after converting to *Bluetooth®* Wireless Technology Audio mode, pressing the play button once may start playing the mode. Check to see that music is playing from the *Bluetooth®* Wireless Technology device after converting to *Bluetooth®* Wireless Technology Audio Mode.

Features of your vehicle

Bluetooth® Wireless Technology**Using Bluetooth® Wireless Technology Handsfree**

- *Bluetooth®* Wireless Technology refers to a short-distance wireless networking technology which uses a 2.45GHz frequency to connect various devices within a certain distance.
- Supported within PCs, external devices, *Bluetooth®* Wireless Technology phones, PDAs, various electronic devices, and automotive environments, *Bluetooth®* Wireless Technology allows data to be transmitted at high speeds without having to use a connector cable.

- *Bluetooth®* Wireless Technology Handsfree refers to a device which allows the user to conveniently make phone calls with *Bluetooth®* Wireless Technology mobile phones through the audio system.

**CAUTION**

- *Bluetooth® Wireless Technology Handsfree is a feature that enables drivers to practice safe driving. Connecting the car audio system with a Bluetooth® Wireless Technology phone allows the user to conveniently make calls, receive calls, and manage the phone book. Before using the Bluetooth® Wireless Technology, carefully read the contents of this user's manual.*
- *Excessive use or operations while driving may lead to negligent driving practices and be the cause of accidents.*
- *Do not operate the device excessively while driving.*
- *Viewing the screen for prolonged periods of time is dangerous and may lead to accidents. When driving, view the screen only for short periods of time.*

Features of your vehicle

* NOTICE - USING UPON CONNECTING *Bluetooth*® Wireless Technology PHONE

- Before connecting the car audio system with the mobile phone, check to see that the mobile phone supports *Bluetooth*® Wireless Technology features.
- Even if the phone supports *Bluetooth*® Wireless Technology, the phone will not be found during device searches if the phone has been set to hidden state or the *Bluetooth*® Wireless Technology power is turned off. Disable the hidden state or turn on the *Bluetooth*® Wireless Technology power prior to searching/connecting with the car audio system.

(Continued)

(Continued)

- If you do not want to automatically connect your *Bluetooth*® Wireless Technology phone, try the following.
 1. Turn off the *Bluetooth*® Wireless Technology feature in your mobile phone.
-For more information on *Bluetooth*® Wireless Technology features within your mobile, refer to your mobile phone user's manual.
 2. Turn off the *Bluetooth*® Wireless Technology feature in your car audio system.
-To turn off the *Bluetooth*® Wireless Technology feature in your car audio system, go to **SETUP** > [Phone] and [turn off] the *Bluetooth*® Wireless Technology feature.
- Park the vehicle when connecting the car audio system with your mobile phone.

(Continued)

(Continued)

- *Bluetooth*® Wireless Technology connection may become intermittently disconnected in some mobile phones. Follow these steps to try again.
 1. Turn the *Bluetooth*® Wireless Technology function within the mobile phone off/on and try again.
 2. Turn the mobile phone power Off/On and try again.
 3. Completely remove the mobile phone battery, reboot, and then again.
 4. Reboot the audio system and try again.
 5. Delete all paired devices, pair and try again.
- The Handsfree call volume and quality may differ depending on the mobile phone.

(Continued)

Features of your vehicle

(Continued)

- *Bluetooth*® Wireless Technology features supported within the vehicle are as follows. Some features may not be supported depending on your *Bluetooth*® Wireless Technology device.
 - Answering and placing *Bluetooth*® Wireless Technology Handsfree calls
 - Menu operation during call (Switch to Private, Switch to call waiting, Outgoing volume)
 - Download Call History
 - Download Mobile Phone book
 - Phone book/Call History Auto Download
 - *Bluetooth*® Wireless Technology device auto connection - *Bluetooth*® Wireless Technology Audio
- It is possible to pair up to five *Bluetooth*® Wireless Technology devices to the car system.
- Only one *Bluetooth*® Wireless Technology device can be connected at a time.

(Continued)

(Continued)

- Other devices cannot be paired while a *Bluetooth*® Wireless Technology device is already connected.
- When a *Bluetooth*® Wireless Technology device is being connected, the connection process cannot be canceled.
- Only *Bluetooth*® Wireless Technology Handsfree and *Bluetooth*® Wireless Technology audio related features will operate within this system.
- Normal operation is possible only for devices that support Handsfree or audio features, such as a *Bluetooth*® Wireless Technology mobile phone or a *Bluetooth*® Wireless Technology audio device.
- Only one function can be used at a time between the *Bluetooth*® Wireless Technology Handsfree and *Bluetooth*® Wireless Technology audio. (While playing *Bluetooth*® Wireless Technology audio, streaming will end upon entering the *Bluetooth*® Wireless Technology phone screen.)

(Continued)

(Continued)

- If a connected *Bluetooth*® Wireless Technology device becomes disconnected for various reasons, such as being out of range, turning the device OFF, or a *Bluetooth*® Wireless Technology communication error, *Bluetooth*® Wireless Technology devices are automatically searched and connected.
- Placing the audio system within an electromagnetic environment may result in noise interference.

Features of your vehicle

Bluetooth® Wireless Technology Type B-1 (except Colombia model)

Pairing a Bluetooth® Wireless Technology Device

What is Bluetooth® Wireless Technology Pairing?

Pairing refers to the process of synchronizing your *Bluetooth®* Wireless Technology phone or device with the car audio system for connection. Pairing is necessary to connect and use the *Bluetooth®* Wireless Technology feature.

- The *Bluetooth®* word mark and logos are registered trademarks owned by *Bluetooth®* SIG, Inc. and any use of such marks by Kia is under license. Other trademarks and trade names are those of their respective owners. A *Bluetooth®* enabled cell phone is required to use *Bluetooth®* Wireless Technology.

 
⚠ WARNING

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.


Pairing Key / Key on the Steering Remote Controller

When No Devices have been Paired

1. Press the  key or the  key on the steering remote controller. The following screen is displayed.
2. Press the  button to enter the Pair Phone screen.

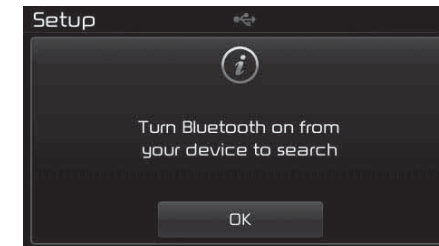

Features of your vehicle

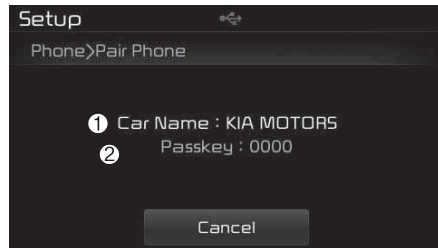 


- (1) Car Name : Name of device as shown when searching from your *Bluetooth*® Wireless Technology device
- (2) Passkey : Passkey used to pair the device
3. From your *Bluetooth*® Wireless Technology device (i.e. Mobile Phone), search and select your car audio system.
4. After a few moments, a screen is displayed where the passkey is entered.
Here, enter the passkey "0000" to pair your *Bluetooth*® Wireless Technology device with the car audio system.

5. Once pairing is complete, the following screen is displayed.

Some phones (i.e., iPhone, Android and Blackberry phones) may offer an option to allow acceptance of all future Bluetooth connection requests by default." and "Visit <http://www.kia.com/#/bluetooth> for additional information on pairing your Bluetooth-enabled mobile phone, and to view a phone compatibility list.

 * NOTICE

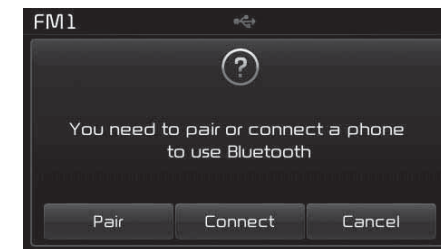


If *Bluetooth*® Wireless Technology devices are paired but none are currently connected, pressing the **PHONE** key or the  key on the steering wheel displays the following screen. Press the [Pair] button to pair a new device or press the [Connect] to connect a previously paired device.

Features of your vehicle

Pairing through [PHONE] Setup

 Press the **SETUP** key ► Select [Phone] ► Select [Pair Phone]

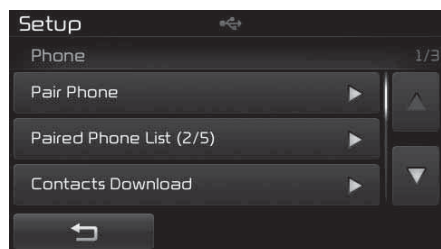

The following steps are the same as those described in the section "When No Devices have been Paired" on the previous page.

 
* NOTICE

- The waiting period during phone pairing will last for one minute. The pairing process will fail if the device is not paired within the given time. If the pairing process fails, you must start the process from the beginning.
- Generally, most *Bluetooth®* Wireless Technology devices will automatically connect once pairing is complete. However, some devices may require a separate verification process to connect. Check to see whether *Bluetooth®* Wireless Technology has been properly connected within your mobile phone.
- List of paired *Bluetooth®* Wireless Technology devices can be viewed at **SETUP** ► [Phone] ► [Paired Phone List].

Features of your vehicle

Connecting a Device

Press the **SETUP** key ▶ Select [Phone] ▶ Select [Paired Phone List]

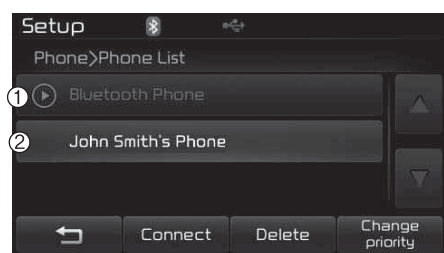

- (1) Connected Phone : Device that is currently connected
- (2) Paired Phone : Device that is paired but not connected

From the paired phone list, select the device you want to connect and press the **Connect** button.

 


Changing Priority

What is Priority?


It is possible to pair up to five *Bluetooth®* Wireless Technology devices with the car audio system. The "Change Priority" feature is used to set the connection priority of paired phones. However, the most recently connected phone will always be set as the highest priority.

Press the **SETUP** key ▶ Select [Phone] ▶ Select [Paired Phone List]

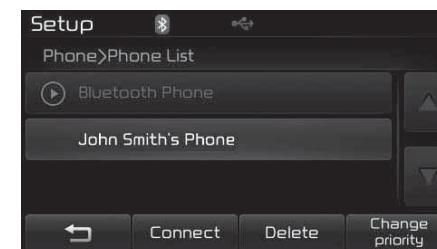

Features of your vehicle

 From the paired phone list, select the phone you want to switch to the highest priority, then press the **Change priority** button from the Menu. The selected device will be changed to the highest priority.

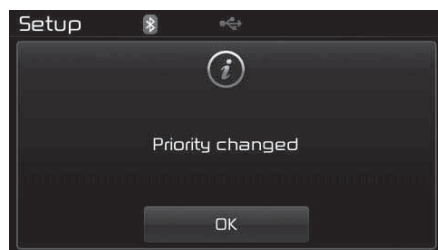


* NOTICE

When a device is currently connected, even if you change the priority to a different device, the currently connected phone will always be set as the highest priority.

Disconnecting a Device

 
Press the **SETUP** key ▶ Select [Phone] ▶ Select [Paired Phone List]

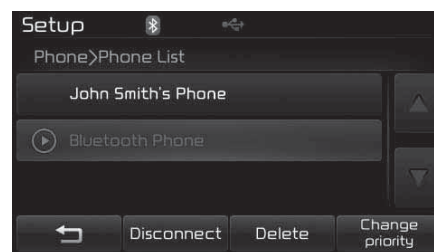

From the paired phone list, select the currently connected device and press the **Disconnect** button.

Deleting a Device

 Press the **SETUP** key ▶ Select [Phone] ▶ Select [Paired Phone List]

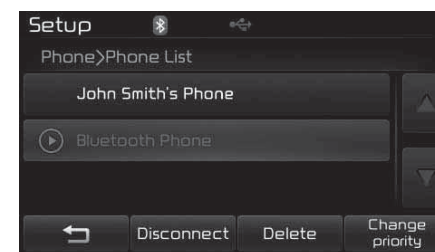

From the paired phone list, select the device you want to delete and press the **Delete** button.

Features of your vehicle

* NOTICE

 
- When deleting the currently connected device, the device will automatically be disconnected to proceed with the deleting process.
- If a paired *Bluetooth*® Wireless Technology device is deleted, the device's call history and contacts data will also be deleted.
- To re-use a deleted device, you must pair the device again.

USING *Bluetooth*® Wireless Technology

Phone Menu Screen

Phone Menus

With a *Bluetooth*® Wireless Technology device connected, press the **PHONE** key to display the Phone menu screen.

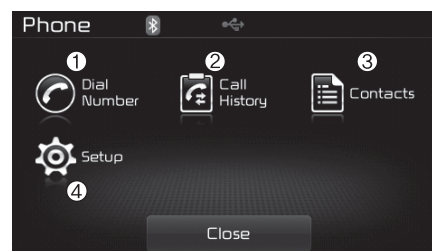

- (1) Dial Number : Displays the dial screen where numbers can be dialed to make calls
- (2) Call History : Displays the call history list screen

- (3) Contacts : Displays the Contacts list screen
- (4) Setup : Displays Phone related settings

 
* NOTICE

- If you press the [Call History] button but there is no call history data, a prompt is displayed which asks whether to download call history data.
- If you press the [Contacts] button but there is no contacts data stored, a prompt is displayed which asks whether to download contacts data.
- This feature may not be supported in some mobile phones. For more information on download support, refer to your mobile phone user's manual.

Features of your vehicle

Calling by Dialing a Number

Press the **PHONE** key ▶ Select [Dial Number]

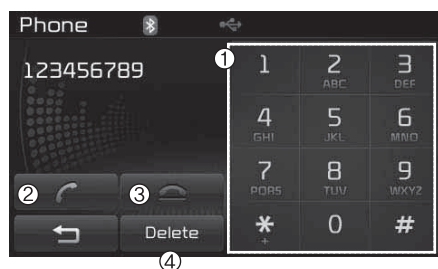


- (1) Dial Pad : Used to enter phone number
- (2) Call : If a number has been entered, calls the number. If no number has been entered, switches to call history screen
- (3) End : Deletes the entered phone number
- (4) Delete : Deletes entered numbers one digit at a time

Answering Calls

Answering a Call

 Answering a call with a *Bluetooth®* Wireless Technology device connected will display the following screen.

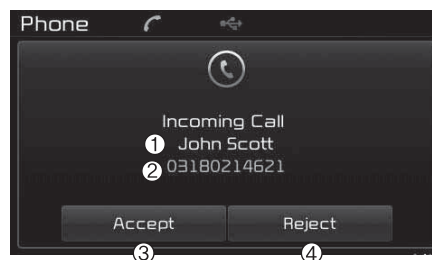


- (1) Caller : Displays the other party's name when the incoming caller is saved within your contacts
- (2) Incoming Number : Displays the incoming number
- (3) Accept : Accept the incoming call
- (4) Reject : Reject the incoming call

* NOTICE

- When an incoming call pop-up is displayed, most Audio and SETUP mode features are disabled. Only the call volume will operate.
- The telephone number may not be properly displayed in some mobile phones.
- When a call is answered with the mobile phone, the call mode will automatically revert to Private mode.

Features of your vehicle

 During a Handsfree Call

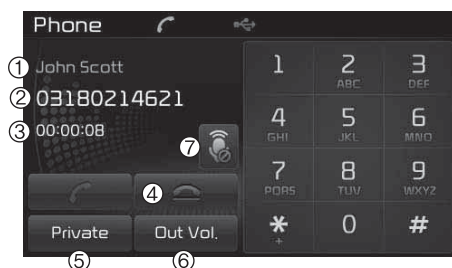


- (1) Caller : Displays the other party's name if the incoming caller is saved within your contacts
- (2) Incoming Number : Displays the incoming number
- (3) Call time : Displays the call time
- (4) End : Ends call
- (5) Private : Converts to Private mode
- (6) Out Vol. : Sets call volume as heard by the other party
- (7) Mute : Turns Mic Mute On/Off

* NOTICE

If the mic is muted, the other party will not be able to hear your voice.

Call History

 Press the **PHONE** key ▶ Select [Call History]

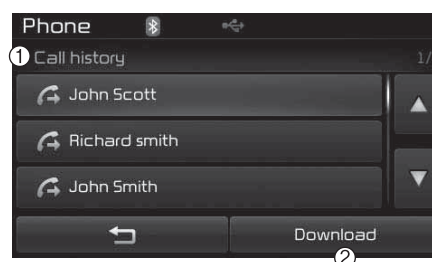


A list of incoming, outgoing and missed calls is displayed.

Press the **Download** button to download the call history.

- (1) Call History :
 - Displays recent calls (call history)
 - Connects call upon selection
- (2) Download : Download Recent Call History

Contacts

 Press the **PHONE** key ▶ Select [Contacts]

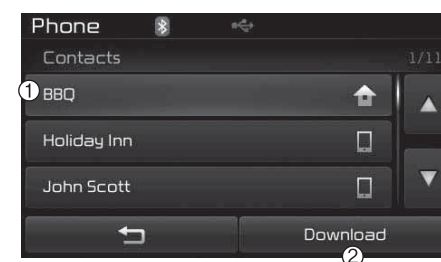

The list of saved phone book entries is displayed. Press the **Download** button to download the call history.

- (1) Contacts List :
 - Displays downloaded contacts entries
 - Connects call upon selection
- (2) Download : Download contacts entries

Features of your vehicle

* NOTICE

- Up to 1,000 contacts entries can be copied into car contacts.
- Upon downloading contacts data, previously saved contacts data will be deleted.
- Downloading is not possible if the contacts download feature is turned off within the *Bluetooth®* Wireless Technology device. Also, some devices may require device authorization upon attempting to download. If downloading cannot be normally conducted, check the *Bluetooth®* Wireless Technology device setting or the screen state.
- Caller ID information will not be displayed for unsaved callers.
- The download feature may not be supported in some mobile phones. Check to see that the *Bluetooth®* Wireless Technology device supports the download feature.

Features of your vehicle

**Bluetooth® Wireless Technology
Type B-1(for Colombia model),
Type B-3****Pairing a Bluetooth® Wireless
Technology Device****What is Bluetooth® Wireless
Technology Pairing?**

Pairing refers to the process of synchronizing your Bluetooth® Wireless Technology phone or device with the car audio system for connection. Pairing is necessary to connect and use the Bluetooth® Wireless Technology feature.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Kia is under license. Other trademarks and trade names are those of their respective owners. A Bluetooth® enabled cell phone is required to use Bluetooth® wireless technology.

⚠ WARNING

 
Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

**Pairing Key / Key
on the Steering Remote
Controller*****When No Devices have been
Paired***

1. Press the  key or the  key on the steering remote controller. The following screen is displayed.
2. Press the  button to enter the Pair Phone screen.



Features of your vehicle

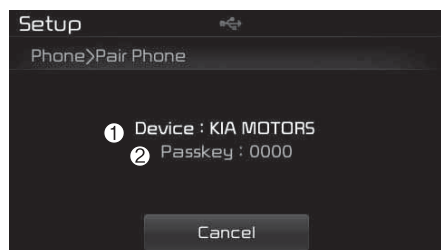

- (1) Device : Name of device as shown when searching from your *Bluetooth*® Wireless Technology device
- (2) Passkey : Passkey used to pair the device
3. From your *Bluetooth*® Wireless Technology device (i.e. Mobile Phone), search and select your car audio system.
4. After a few moments, a screen is displayed where the passkey is entered. Here, enter the passkey "0000" to pair your *Bluetooth*® Wireless Technology device with the car audio system.
5. Once pairing is complete, the following screen is displayed.

Some phones (i.e., iPhone®, Android and Blackberry phones) may offer an option to allow acceptance of all future Bluetooth connection requests by default." and "Visit <http://www.kia.com/#/bluetooth> for additional information on pairing your Bluetooth-enabled mobile phone, and to view a phone compatibility list.

 
* NOTICE



If *Bluetooth*® Wireless Technology devices are paired but none are currently connected, pressing the **PHONE** key or the **[PHONE]** key on the steering wheel displays the following screen. Press the [Pair] button to pair a new device or press the [Connect] to connect a previously paired device.

Pairing through [PHONE] Setup

Press the **SETUP** key ▶ Select [Phone] ▶ Select [Pair Phone]

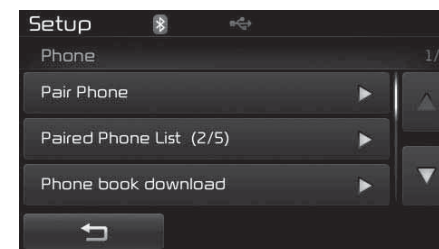

The following steps are the same as those described in the section "When No Devices have been Paired" on the previous page.

Features of your vehicle

*** NOTICE**

- The waiting period during phone pairing will last for one minute. The pairing process will fail if the device is not paired within the given time. If the pairing process fails, you must start the process from the beginning.
- Generally, most *Bluetooth®* Wireless Technology devices will automatically connect once pairing is complete. However, some devices may require a separate verification process to connect. Check to see whether *Bluetooth®* Wireless Technology has been properly connected within your mobile phone.
- List of paired *Bluetooth®* Wireless Technology devices can be viewed at **SETUP** ▶ [Phone] ▶ [Paired Phone List].

 
Connecting a Device

Press the **SETUP** key ▶ Select [Phone] ▶ Select [Paired Phone List]



- (1) Connected Phone : Device that is currently connected
 (2) Paired Phone : Device that is paired but not connected

From the paired phone list, select the device you want to connect and press the **Bluetooth** button.

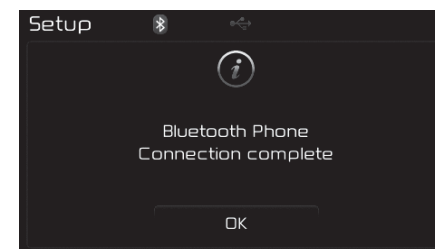


Features of your vehicle

Changing Priority


What is Priority?

It is possible to pair up to five *Bluetooth®* Wireless Technology devices with the car audio system. The "Change Priority" feature is used to set the connection priority of paired phones. However, the most recently connected phone will always be set as the highest priority.

 Press the **SETUP** key ▶ Select [Phone] ▶ Select [Paired Phone List]

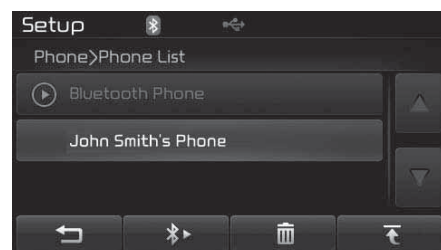

 From the paired phone list, select the phone you want to switch to the highest priority, then press the **↶** button from the Menu. The selected device will be changed to the highest priority.

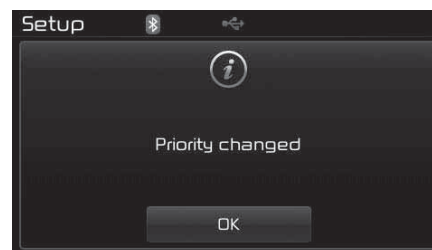


*** NOTICE**

When a device is currently connected, even if you change the priority to a different device, the currently connected phone will always be set as the highest priority.

Disconnecting a Device

 Press the **SETUP** key ▶ Select [Phone] ▶ Select [Paired Phone List]

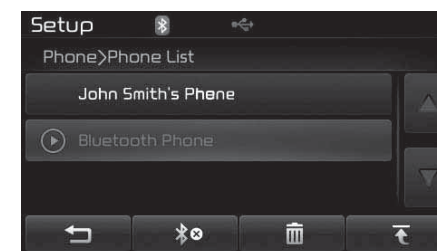


From the paired phone list, select the currently connected device and press the **✖** button.

Features of your vehicle

Deleting a Device

 Press the **SETUP** key ▶ Select [Phone] ▶ Select [Paired Phone List]

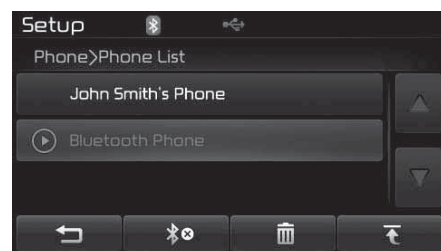

From the paired phone list, select the device you want to delete and press the button.

* NOTICE

 
- When deleting the currently connected device, the device will automatically be disconnected to proceed with the deleting process.
- If a paired *Bluetooth®* Wireless Technology device is deleted, the device's call history and phone book data will also be deleted.
- To re-use a deleted device, you must pair the device again.

USING *Bluetooth®* Wireless Technology

Phone Menu Screen

Phone Menus

With a *Bluetooth®* Wireless Technology device connected, press the **PHONE** key to display the Phone menu screen.

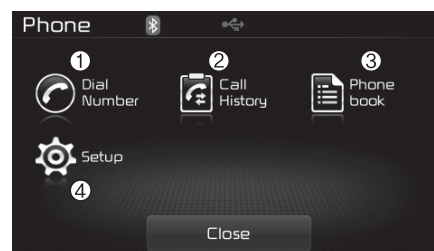

- (1) Dial Number : Displays the dial screen where numbers can be dialed to make calls
- (2) Call History : Displays the call history list screen

- (3) Phone book : Displays the Phone book list screen
- (4) Setup : Displays Phone related settings

* NOTICE

- If you press the [Call History] button but there is no call history data, a prompt is displayed which asks whether to download call history data.
- If you press the [Phone book] button but there is no phone book data, a prompt is displayed which asks whether to download phone book data.
- This feature may not be supported in some mobile phones. For more information on download support, refer to your mobile phone user's manual.

Features of your vehicle

Calling by Dialing a Number

Press the **PHONE** key ▶ Select [Dial Number]

 


- (1) Dial Pad : Used to enter phone number
- (2) Call : If a number has been entered, calls the number. If no number has been entered, switches to call history screen
- (3) End : Deletes the entered phone number
- (4) Delete : Deletes entered numbers one digit at a time

Answering Calls

Answering a Call

Answering a call with a *Bluetooth®* Wireless Technology device connected will display the following screen.

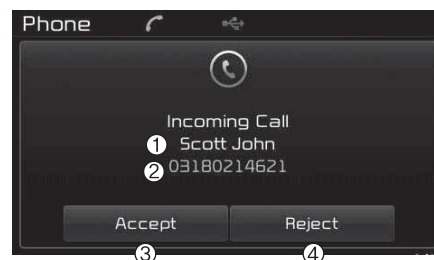


- (1) Caller : Displays the other party's name when the incoming caller is saved within your phone book
- (2) Incoming Number : Displays the incoming number
- (3) Accept : Accept the incoming call
- (4) Reject : Reject the incoming call

* NOTICE

- When an incoming call pop-up is displayed, most Audio and SETUP mode features are disabled. Only the call volume will operate.
- The telephone number may not be properly displayed in some mobile phones.
- When a call is answered with the mobile phone, the call mode will automatically revert to Private mode.

 Features of your vehicle

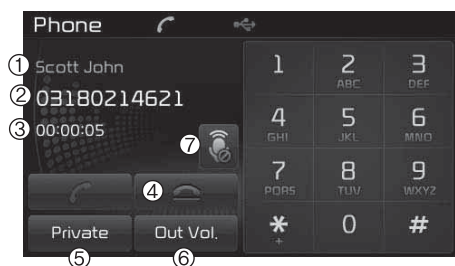During a Handsfree Call


- (1) Caller : Displays the other party's name if the incoming caller is saved within your phone book
- (2) Incoming Number : Displays the incoming number
- (3) Call time : Displays the call time
- (4) End : Ends call
- (5) Private : Converts to Private mode
- (6) Out Vol. : Sets call volume as heard by the other party
- (7) Mute : Turns Mic Mute On/Off

*** NOTICE**

 If the mic is muted, the other party will not be able to hear your voice.

Call History

Press the **PHONE** key ▶ Select [Call History]

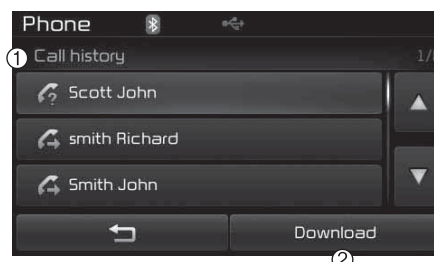

A list of incoming, outgoing and missed calls is displayed.

Press the [Download] button to download the call history.

- (1) Call History :
 - Displays recent calls (call history)
 - Connects call upon selection
- (2) Download : Download Recent Call History


*** NOTICE**

 - The call history list will display up to 30 outgoing, incoming, and missed calls.
- Upon downloading call histories, previously saved histories are deleted.
- Incoming calls with hidden caller IDs will not be saved in the call history list.
- Previously saved phone book entries are stored even if a device is disconnected and re-connected.
- The download feature may not be supported in some mobile phones. Check to see that the *Bluetooth®* Wireless Technology device supports the download feature.

Features of your vehicle

Phone Book

Press the **PHONE** key ▶ Select [Phone book]

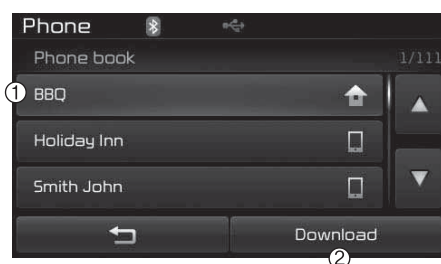

The list of saved phone book entries is displayed. Press the [Download] button to download the call history.

(1) Contact List :

- Displays downloaded phone book entries
- Connects call upon selection

(2) Download : Download phone book entries

* NOTICE

 
- Up to 1,000 phone book entries can be copied into car phone book.
- Upon downloading phone book data, previously saved phone book data will be deleted.
- Downloading is not possible if the phone book download feature is turned off within the *Bluetooth®* Wireless Technology device. Also, some devices may require device authorization upon attempting to download. If downloading cannot be normally conducted, check the *Bluetooth®* Wireless Technology device setting or the screen state.
- Caller ID information will not be displayed for unsaved callers.
- The download feature may not be supported in some mobile phones. Check to see that the *Bluetooth®* Wireless Technology device supports the download feature.

Features of your vehicle

SETUP TYPE B-1,TYPE B-2 (except Colombia model)

Starting Mode

Press the **SETUP** key▶ Select the Setup screen.

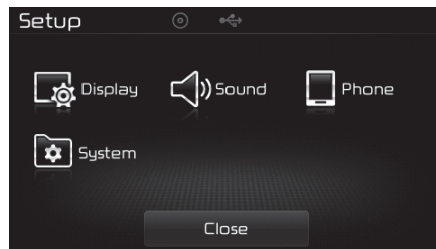


You can select and control options related to [Display], [Sound], [Phone] (if equipped) and [System].

Display Settings

Adjusting the Brightness

 Press the **SETUP** key▶ Select [Display]▶ Select [Brightness]

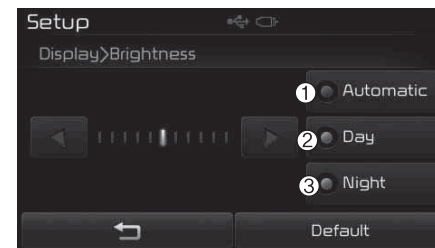


Use the ◀, ▶ buttons to adjust the screen brightness or set the Brightness on Automatic, Day, or Night mode.

Press the **Default** button to reset.

- (1) Automatic : Adjusts the brightness automatically
- (2) Day : Always maintains the brightness on high
- (3) Night : Always maintains the brightness on low

Pop-up Mode

 Press the **SETUP** key▶ Select [Display]▶ Select [Mode Pop up]

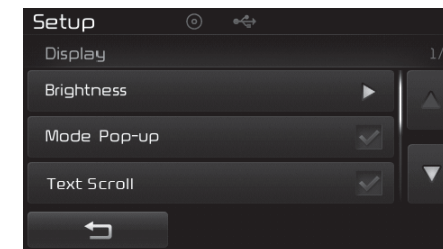

This feature is used to display the Pop-up Mode screen when entering radio and media modes.

When this feature is turned on, pressing the **RADIO** or **MEDIA** key will display the Pop-up Mode screen.

 
* NOTICE

The media Pop-up Mode screen can be displayed only when two or more media modes have been connected.

Features of your vehicle

Text Scroll

Press the **SETUP** key ▶ Select [Display] ▶ Select [Text Scroll]


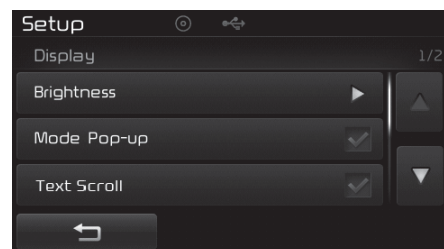


This feature is used to scroll text displayed on the screen when it is too long to be displayed at once.

When turned on, the text is repeatedly scrolled. When turned off, the text is scrolled just once.

MP3 Information Display

  Press the **SETUP** key ▶ Select [Display] ▶ Select [Media Display]

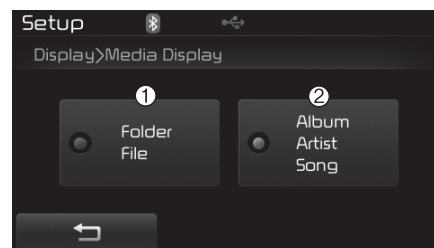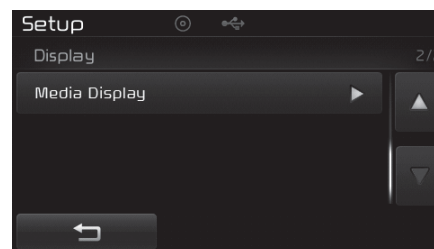

This feature is used to change the information displayed within USB and MP3 CD modes.

(1) Folder File : Displays file name and folder name

(2) Album Artist Song : Displays album name/artist name/song

Sound Settings

Sound Settings

Press the **SETUP** key ▶ Select [Sound] ▶ Select [Sound Setting]



Features of your vehicle

 
Use the ◀, ▶, ▲, ▼ buttons to adjust the Fader/Balance settings.

Use the ◀, ▶ buttons to adjust the Bass/Middle/Treble settings.

Press the **Default** button to reset.

SDVC (Speed Dependent Volume Control)


Press the **SETUP** key ▶ Select [Sound] ▶ Select [Speed Dependent Vol.]

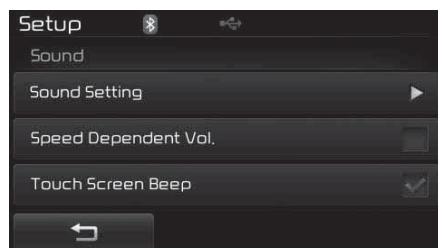

The volume level is controlled automatically according to the vehicle speed. SDVC can be set by selecting from On/Off.

Touch Screen Beep

 Press the **SETUP** key ▶ Select [Sound] ▶ Select [Touch Screen Beep]

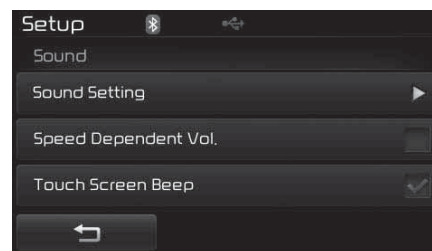

This feature is used to turn the touch screen beep on/off.

Features of your vehicle

Bluetooth® Wireless Technology Setting

TYPE B-1(except Colombia model)

 
The *Bluetooth®* word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Kia is under license. Other trademarks and trade names are those of their respective owners. A *Bluetooth®* enabled cell phone is required to use *Bluetooth®* wireless technology.

⚠ WARNING

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

Pairing a New Device

Press the **SETUP** key ▶ Select [Phone] ▶ Select [Pair Phone]

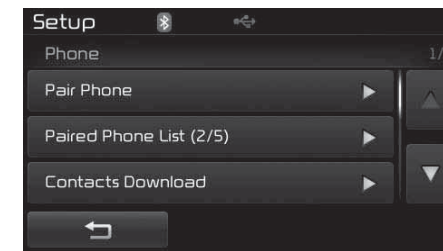

Bluetooth® Wireless Technology devices can be paired with the audio system.

For more information, refer to the "Pairing through Phone Setup" section within *Bluetooth®* Wireless Technology.

Features of your vehicle

Viewing Paired Phone List

Press the **SETUP** key ▶ Select [Phone] ▶ Select [Paired Phone List]



This feature is used to view mobile phones that have been paired with the audio system. Upon selecting a paired phone, the setup menu is displayed.

For more information, refer to the "Setting *Bluetooth®* Wireless Technology Connection" section within *Bluetooth®* Wireless Technology.

- (1) : Moves to the previous screen
- (2) Connect/Disconnect Phone : Connect/disconnects currently selected phone
- (3) Delete : Deletes the currently selected phone
- (4) Change Priority : Sets currently selected phone to highest connection priority


*** NOTICE BEFORE DOWN-LOADING CONTACTS**

 - To learn more about whether your mobile phone supports contacts downloads, refer to your mobile phone user's manual.
- The contacts for only the connected phone can be downloaded.

Features of your vehicle

Downloading Contacts

Press the **SETUP** key ▶ Select [Phone] ▶ Select [Contacts Download]

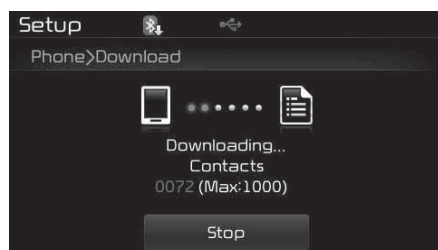


As the contacts are downloaded from the mobile phone, a download progress bar is displayed.

* NOTICE

- Up to 1,000 contacts entries can be copied into car contacts.
- Up to 1,000 contacts entries can be saved for each paired device.
- Upon downloading contacts data, previously saved contacts data will be deleted. However, contacts entries saved to other paired phones are not deleted.

Auto Download (Contacts)

 Press the **SETUP** key ▶ Select [Phone] ▶ Select [Auto Download]

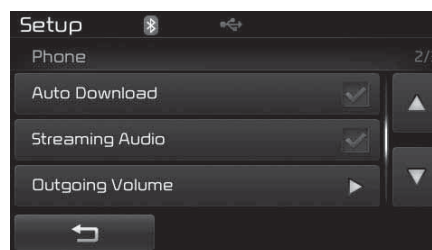


This feature is used to automatically download mobile contacts entries once a *Bluetooth®* Wireless Technology phone is connected.

* NOTICE

- The Auto Download feature will download mobile contacts entries every time the phone is connected. The download time may differ depending on the number of saved contacts entries and the communication state.
- When downloading a contacts, first check to see that your mobile phone supports the contacts download feature.

Streaming Audio

 Press the **SETUP** key ▶ Select [Phone] ▶ Select [Streaming Audio]

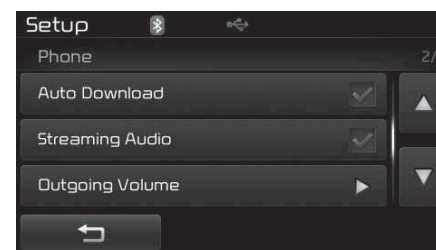


When Streaming Audio is turned on, you can play music files saved in your *Bluetooth®* Wireless Technology device through the audio system.

Features of your vehicle

Outgoing Volume

 Press the **SETUP** key ▶ Select [Phone] ▶ Select [Outgoing Volume]

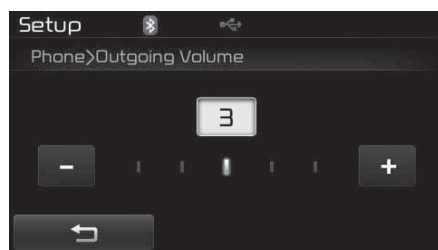


Use the **-**, **+** buttons to adjust the outgoing volume level.

Turning Bluetooth System Off

Press the **SETUP** key ▶ Select [Phone] ▶ Select [Bluetooth System Off]

 Once *Bluetooth®* Wireless Technology is turned off, *Bluetooth®* Wireless Technology related features will not be supported within the audio system.

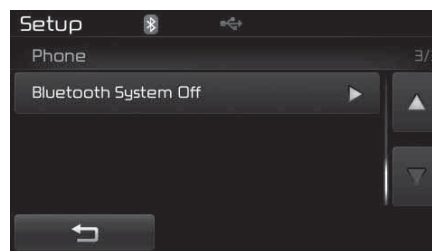

* NOTICE

 
To turn *Bluetooth®* Wireless Technology back on, go to **SETUP** ▶ [Phone] and press “Yes”.

Features of your vehicle

System Setting

Memory Information

Press the **SETUP** key ▶ Select [System] ▶ Select [Memory Information]

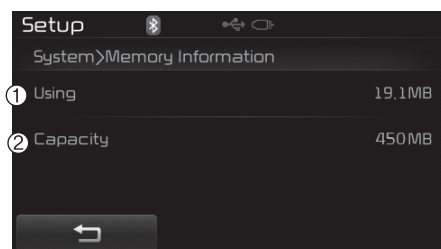

This feature displays information related to system memory.

(1) Using : Displays capacity currently in use

(2) Capacity : Displays total capacity

 
Features of your vehicle

SETUP

Type B-1, Type B-2 (for Colombia model) Type B-3, Type B-4

Starting Mode

Press the **SETUP** key ▶ Select the Setup screen.

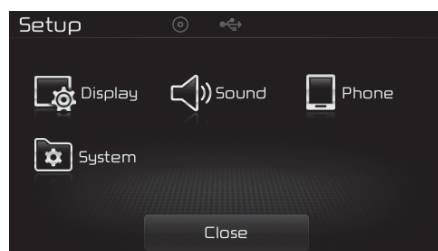


You can select and control options related to [Display], [Sound], [Phone] (if equipped) and [System].

Display Settings

Adjusting the Brightness

 Press the **SETUP** key ▶ Select [Display] ▶ Select [Brightness]

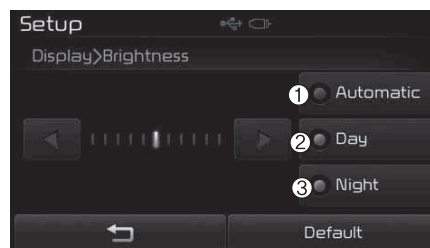


Use the ◀, ▶ buttons to adjust the screen brightness or set the Brightness on Automatic, Day, or Night mode.

Press the **Default** button to reset.

- (1) Automatic : Adjusts the brightness automatically
- (2) Day : Always maintains the brightness on high
- (3) Night : Always maintains the brightness on low

Pop-up Mode

 Press the **SETUP** key ▶ Select [Display] ▶ Select [Pop-up Mode]

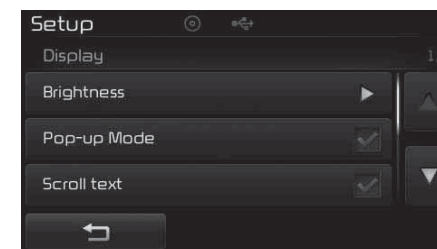

This feature is used to display the Pop-up Mode screen when entering radio and media modes.

When this feature is turned on, pressing the **RADIO** or **MEDIA** key will display the Pop-up Mode screen.

 
* NOTICE

The media Pop-up Mode screen can be displayed only when two or more media modes have been connected.

Features of your vehicle

Scroll text

Press the **SETUP** key ▶ Select [Display] ▶ Select [Scroll text]

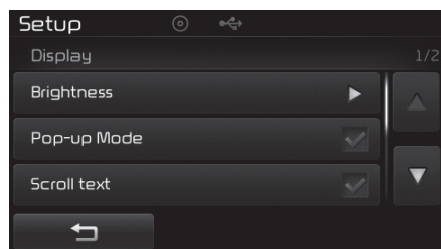


This feature is used to scroll text displayed on the screen when it is too long to be displayed at once.

When turned on, the text is repeatedly scrolled. When turned off, the text is scrolled just once.

MP3 Information Display

 Press the **SETUP** key ▶ Select [Display] ▶ Select [Song Info]

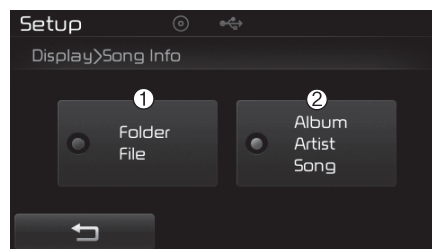

This feature is used to change the information displayed within USB and MP3 CD modes.

- (1) Folder File : Displays file name and folder name
- (2) Album Artist Song : Displays album name/artist name/song

Features of your vehicle

Audio Settings

Audio Settings

Press the **SETUP** key ▶ Select [Sound] ▶ Select [Audio settings]



 
Use the **◀**, **▶**, **▲**, **▼** buttons to adjust the Fader/Balance settings.

Use the **◀**, **▶** buttons to adjust the Bass/Middle/Treble settings.

Press the **Default** button to reset.

SDVC (Speed Dependent Volume Control)


Press the **SETUP** key ▶ Select [Sound] ▶ Select [Speed Dependent Vol.]

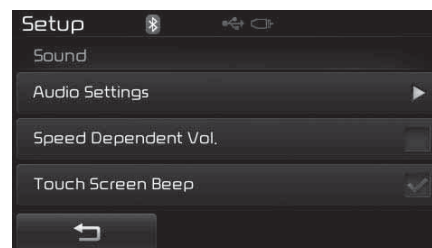

The volume level is controlled automatically according to the vehicle speed. SDVC can be set by selecting from On/Off.

Touch Screen Beep

 Press the **SETUP** key ▶ Select [Sound] ▶ Select [Touch Screen Beep]

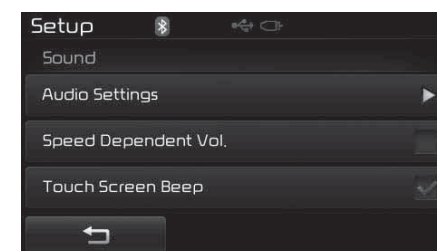

This feature is used to turn the touch screen beep on/off.

Features of your vehicle

Bluetooth® Wireless Technology Setting

Type B-1(For Colombia model) Type B-3

 
The *Bluetooth®* word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Kia is under license. Other trademarks and trade names are those of their respective owners. A *Bluetooth®* enabled cell phone is required to use *Bluetooth®* wireless technology.

⚠ WARNING

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

Pairing a New Device

Press the **SETUP** key ▶ Select [Phone] ▶ Select [Pair Phone]

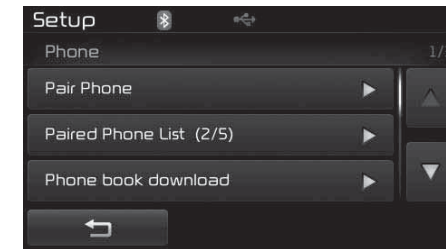

Bluetooth® Wireless Technology devices can be paired with the audio system.

For more information, refer to the "Pairing through Phone Setup" section within *Bluetooth®* Wireless Technology.

Features of your vehicle

Viewing Paired Phone List

Press the **SETUP** key ▶ Select [Phone] ▶ Select [Paired Phone List]



This feature is used to view mobile phones that have been paired with the audio system. Upon selecting a paired phone, the setup menu is displayed.

For more information, refer to the "Setting *Bluetooth®* Wireless Technology Connection" section with in *Bluetooth®* Wireless Technology.

- 1) : Moves to the previous screen
- 2) Connect/Disconnect Phone : Connect/ disconnects currently selected phone


- 3) Delete : Deletes the currently selected phone
- 4) Change Priority : Sets currently selected phone to highest connection priority

*** NOTICE BEFORE DOWNLOADING PHONE BOOKS**

 - Only phone books within connected phones can be downloaded. Also check to see that your mobile phone supports the download feature.
- To learn more about whether your mobile phone supports phone book downloads, refer to your mobile phone user's manual.
- The Phone book for only the connected phone can be downloaded. Before downloading, check to see whether your phone supports the download feature.

Downloading Phone books

Press the **SETUP** key ▶ Select [Phone] ▶ Select [Phone book Download]

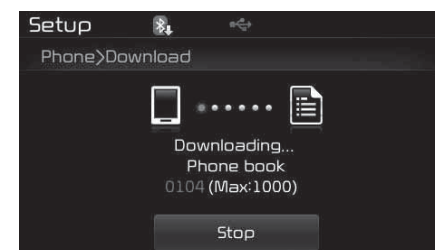

The Phone book is downloaded from the mobile phone and the download progress is displayed.


*** NOTICE**

 - Up to 1,000 phone book entries can be copied into car phone book.
- Up to 1,000 phone book entries can be saved for each paired device.
- Upon downloading phone book data, previously saved phone book data will be deleted. However, Phone book entries saved to other paired phones are not deleted.

Features of your vehicle

Auto Download (Phone Book)


Press the **SETUP** key ▶ Select [Phone] ▶ Select [Auto Download]

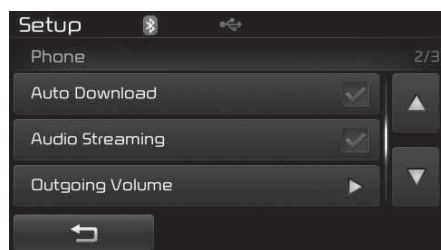

This feature is used to automatically download mobile phone book entries once a *Bluetooth®* Wireless Technology phone is connected.

Audio Streaming

 
Press the **SETUP** key ▶ Select [Phone] ▶ Select [Audio Streaming]

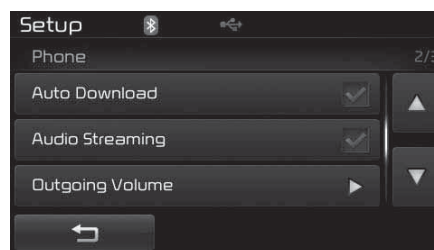

When Audio Streaming is turned on, you can play music files saved in your *Bluetooth®* Wireless Technology device through the audio system.

Outgoing Volume

 Press the **SETUP** key ▶ Select [Phone] ▶ Select [Outgoing Volume]

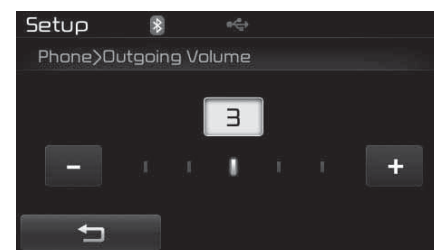

Use the **-**, **+** buttons to adjust the outgoing volume level.

* NOTICE

 
- The Auto Download feature will download mobile phone book entries every time the phone is connected. The download time may differ depending on the number of saved phone book entries and the communication state.
- When downloading a phone book, first check to see that your mobile phone supports the phone book download feature.

Features of your vehicle

Turning Bluetooth System Off

Press the **SETUP** key ▶ Select [Phone] ▶ Select [Bluetooth System Off]

Once *Bluetooth®* Wireless Technology is turned off, *Bluetooth®* Wireless Technology related features will not be supported within the audio system.

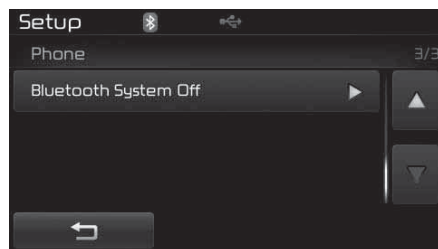

* NOTICE

To turn *Bluetooth®* Wireless Technology back on, go to **SETUP** ▶ [Phone] and press “Yes”.

⚠ CAUTION

 
Bluetooth® Wireless Technology audio streaming may not be supported in some *Bluetooth®* Wireless Technology phones.

Features of your vehicle

System Setting

Memory Information

Press the **SETUP** key ▶ Select [System] ▶ Select [Memory Information]

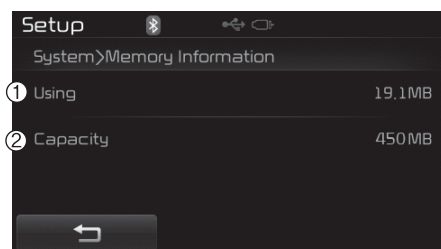


This feature displays information related to system memory.

- (1) Using : Displays capacity currently in use
- (2) Capacity : Displays total capacity

Language

 Press the **SETUP** key ▶ Select [System] ▶ Select [Language]

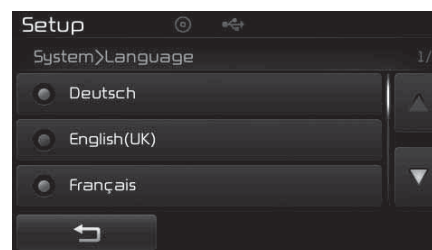

This feature is used to change the system language.

If the language is changed, the system will restart and apply the selected language.

* NOTICE

Language Setting is depend on the Audio System

REAR VIEW CAMERA (if equipped)

- The system has been equipped with a rear view camera for user safety by allowing a wider rear range of vision.
- The rear view camera will automatically operate when the ignition key is turned ON and the transmission lever is set to R.
- The rear view camera will automatically stop operating when set to a different lever.

CAUTION

The rear view camera has been equipped with an optical lens to provide a wider range of vision and may appear different from the actual distance. For safety, directly check the rear and left/right sides.

Features of your vehicle

APPENDIX

Name	Description
12hr	12 HOUR
24hr	24 HOUR
AST(A.Store)	AUTO STORE
AMA	AM RADIO (AUTO STORE)
FMA	FM RADIO (AUTO STORE)
AUX	External Audio mode
BASS	BASS
TREBLE	TREBLE
BT	Bluetooth
PRESET	PRESET
RDS Search	Radio Data System Search
TA	Traffic Announcement
Radio	Radio
FM/AM/USB	FM/AM/USB
Max	MAXIMUM
Min	minimum
Low	Low
Mid	Middle
On	On
Off	Off
PowerBass	PowerBass
Setting	Setting
OK	OK
MENU	MENU
PowerTreble	PowerTreble

Name	Description
SDVC	Speed Dependent VolumeControl
Setup	Setup
Service Following	Service Following
CURRENT	CURRENT
Current/Total	Current/Total
DEVICE NAME	DEVICE NAME
NAME	NAME
NAME HERE	NAME HERE
NUMBER	NUMBER
PHONE NAME	PHONE NAME
Received Date	Received Date
Received Message	Received Message
Received Time	Received Time
TIME	TIME
AST	AUTO STORE
AM	AM RADIO
CD	COMPACT DISC
FM	FM RADIO(AUTO STORE)
L=R	LEFT=RIGHT
Middle	Middle
My Music	My Music
Track	Track
USB	USB

Features of your vehicle

APPENDIX

Name		Description
Phone		Phone
Engineering Mode		Engineering Mode
SEEK		SEEK
Icon		Icon

Appendix Homologation

FCC Compliance Statement.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions :

- (1) This device may not cause harmful interference, and**
- (2) This device must accept any interference received, including interference that may cause undesired operation.**

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do Not



Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.

Be sure

The antenna(s) used for this device must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.