

RKE-4F31 Remote Keyless Entry

User Manual

OUTLINE

1. How to use RKE-4F31

- RKE-4F31 is Remote Keyless System.
- This unit controls door lock/unlock/trunk/panic with wireless.

2. Introduction of Transmitter (RKE-4F31)

- Transmitter has three buttons
- Transmitter use the battery
- Frequency is 433.92MHz

GENERAL DESCRIPTION

PRIMARY FUNCTION

- Remote door lock/unlock/trunk/panic - Operating distance : over 30m - Id input (setting mode)

Manual

1) LOCK Button

If the LOCK button is pushed over 30ms, then TRANSMITTER sends the LOCK Data.

2) UNLOCK Button

If the UNLOCK button is pushed over 30ms, then TRANSMITTER sends the UNLOCK Data.

3) TAILGATE Button

If the TAILGATE button is pushed over 1000ms, then TRANSMITTER sends the TAILGATE OPEN Data.