

RKE-4F37 Remote Keyless Entry

User Manual

OUTLINE

1. How to use RKE-4F31

- RKE-4F37 is Remote Keyless System.
- This unit controls door lock/unlock/tailgate/PSD(Power Sliding Door)/Panic wirelessly.

2. Introduction of Transmitter (RKE-4F37)

- Transmitter has six buttons
- Transmitter use the battery
- Frequency is 433.92MHz

Manual

1) LOCK Button

If the LOCK button is pushed over 30ms, then TRANSMITTER sends the LOCK Data.

2) UNLOCK Button

If the UNLOCK button is pushed over 30ms, then TRANSMITTER sends the UNLOCK Data.

3) TAILGATE Button

If the TAILGATE button is pushed over 1000ms,
then TRANSMITTER sends the TAILGATE OPEN Data.

4) PSD(Power Sliding Door) - Left Button

If the PSD-L button is pushed over 1000ms, then TRANSMITTER sends the PSD-L OPEN Data.

5) PSD(Power Sliding Door) -Right Button

If the PSD-R button is pushed over 1000ms, then TRANSMITTER sends the PSD-R OPEN Data.

6) PANIC Button

If the PANIC button is pushed over 500ms, then TRANSMITTER sends the PANIC Data.