

Porsche Wireless Mouse

Introduction

Thank you for buying the
Porsche computer mouse.
This User Guide is
designed to help you to
get to know the mouse
and its various functions.

Package includes

1 mouse



2 AA batteries

 
 
 


1 nano receiver



1 User Guide





Proper use

This Porsche wireless mouse is a device used for information technology purposes, and is an input device for a computer. The device may not be used outside of enclosed spaces. Only use the device in office and living areas. Using the mouse in any other way constitutes improper use. No claims may be made with regard to damages resulting from improper use. The user bears all risks associated with such use.

Product features

The Porsche computer mouse is a wireless laser mouse that operates in the 2.4 GHz band and works properly right from the very start – without you having to change any settings – thanks to its Plug & Play functionality. If there is interference in the radio channel as a result of radiation in the vicinity, the mouse automatically searches for a free channel and thereby provides a stable and secure connection. With its 2 buttons and the 3-way scroll wheel, the Porsche computer mouse offers all you need for intuitive computer operation. The high-resolution laser sensor allows you to work perfectly and comfortably on any surface. You can set

the mouse pointer speed and double-click function using your operating system's mouse control settings.


System requirements

- Operating systems:
- Windows 7, 8, 10
 - Windows Vista,
 - Windows XP,
 - Mac OS
- Interface:
- USB-Port 1.1 or higher

Additional information

© PLH | Porsche Lizenz- und Handelsgesellschaft mbH & Co. KG
Grönerstraße 5
D-71636 Ludwigsburg
www.porsche-design.com
www.porsche.com
All rights reserved.

 PLH reserves the right to make technical changes. PLH assumes no liability for damage resulting either directly or indirectly from faults, omissions or deviations between this product and the documentation.



Product Description
A - Right button
B - Middle button and scroll wheel
C - Left button



D - On/Off switch
E - Laser sensor
F - Battery compartment



Preparation
1. Take the mouse out of the packaging.
2. Open the battery compartment F and remove the cover.



3. Remove the nano receiver G stored in the middle.



4. Plug the nano receiver G into a free USB port on your PC or Laptop.



5. Insert the two AA batteries H into the battery compartment. Make sure to insert them correctly as shown in the battery compartment.



6. Then close the battery compartment.



7. Switch on the mouse using the On/Off switch **D** ("ON"). Your Porsche computer mouse is now ready for operation and can be used immediately after it is detected automatically on your computer.



Information

Your mouse will start working straight away. You do not have to set a connection ID.

Storing the nano receiver

When you are not using your mouse, please store the nano receiver carefully in the battery compartment.



1. Unplug the nano receiver **G** from the USB port on your PC.



2. Open the battery compartment **F** and remove the cover.



3. Insert the nano receiver **G** into its storage slot.



4. Close the cover on the battery compartment **F**. The nano receiver is now safely stored and cannot get lost.






5. Switch off the mouse using the On/Off switch **D**.

Troubleshooting

If your mouse is not working properly, try the following:

Problem	Solution
The PC does not detect the Porsche computer mouse.	Unplug the nano receiver from the USB port and then plug it in again. Wait until the operating system reports that the newly detected hardware is ready.
The Porsche computer mouse will not work.	Make sure that the mouse is switched on (On/Off switch in ON position).
The Porsche computer mouse will not work.	Check that the batteries are inserted correctly.
The Porsche computer mouse will not work.	Check that the batteries are not flat.

   If the Porsche computer mouse still does not work properly, please contact your Porsche dealer.



Important safety instructions

Read the operating instructions carefully and keep them for future reference. Only pass the product on to other people together with the operating instructions.

- This product is not a toy. Keep it out of reach of children and pets.
- The poly bag poses a suffocation hazard. Keep it out of reach of babies and children. Do not put the bag in children's beds, pushchairs or playpens. This bag is not a toy.
- Keep the product away from extreme temperatures, flammable gases, steam and extreme sunlight.
- Avoid contact with damp and moisture.
- Only clean the device using a clean, dry cloth. Do not use any aggressive or abrasive substances, or any substances containing alcohol.
- If safe usage can no longer be guaranteed (due to damages or malfunctions), take the product out of operation and ensure it cannot be used inadvertently by anyone.
- To avoid electrical shocks, do not open the housing. The device does not contain any parts that need to be maintained by the user.
- Do not make any alterations to the device. Unauthorised alterations can impact product safety or system performance, and can prevent compliance with relevant laws. In this case, the warranty is no longer valid.
- Ensure that maintenance and repair work is only carried out by qualified specialists.
- **DANGER TO LIFE!** Keep the batteries out of reach of pets and children, especially batteries fitting within the limits of the truncated cylinder. If swallowed, seek immediate medical attention and contact your local poison control centre.
- **RISK OF EXPLOSION!** Never recharge non-rechargeable batteries. Do not short-circuit or open the batteries. Do not heat the batteries.

- Never throw the batteries in fire or water.
- Do not place the batteries under mechanical stress.
- Always ensure you insert the batteries correctly and take into account the '+' and '-' markings on the battery and on the device.
- Replace all batteries at the same time and ensure you do not mix old and new batteries or batteries of different types.
- Remove empty batteries immediately from the device to avoid any damage caused by leakages.
- Never try to disassemble or open the batteries as this can cause the electrolytes in the batteries to burn.

Declaration of Conformity China RoHS Compliance

We hereby declare the conformity of this product with the Chinese marking requirements set forth in the Management Methods for the Restriction of the Use of Hazardous Substances in Electrical and Electronic Products and the standard SJ/T 11364-2014.

Environmental Protection Use Period [EPUP]

This product can be used safely during its environmental protection use period of 50 years. The Environmentally Friendly Use Period is valid only when the product is operated under normal conditions as defined in the product instructions manual. For any additional information in this regard please contact the customer service of your region or send an email to customerservice@porsche-design.de

Except as expressly stated herein and as required under mandatory provisions of the standard SJ/T 11364-2014, Porsche Lizenz- und Handelsgesellschaft mbH & Co. KG makes no representation or warranty of any kind, expressed or implied, with respect to EPUP and expressly disclaims any representations or warranties, expressed or implied, with respect to the EPUP.

FCC Regulations

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Technical Data / Porsche Computer Mouse

Dimensions:	approx. 131 x 60,91 x 34,66 mm
Net weight (without batteries):	approx. 76 g
Gross weight (with batteries):	approx. 122 g
Number of buttons:	2 main buttons, 3-way scroll wheel
Sensor type:	optical
Movement resolution:	2000 dpi
Radio frequency:	2,4 GHz
Modulation method:	FHSS
Number of channels:	34
HF output power:	Max. 1,117 mW (0,048 dBm)
Power supply:	2 x 1,5 V DC, alkaline battery, size: AA, 2600 mAh
Power consumption:	23,5 mA (max.) / 0,06 mA (min.)
Range:	6 m (min.)
Transmission angle:	360°
Low energy level display:	2,0 V

Receiver

Dimensions:	approx. 19,0 x 14,5 x 6,5 mm
Net weight:	1 g
Power supply:	5 V DC, 100 mA
Power consumption:	20 mA
Interface:	USB 1.1 or higher

Operating environment

The electromagnetic compatibility (EMC) of this product was tested with regard to the typical operating environment for this product category (residential use, use in the commercial and light-industrial environment). Its use in all other operating environments was not tested. Possible consequences of using this product in non-tested operating environments: There can be interference from other products in the immediate vicinity or there is a risk of temporary malfunctions and/or data loss/data corruption. Examples of non-tested operating environments and relevant information: Industrial environments: Risk of interference from strong electromagnetic fields, particularly close to large machines and units.

EU – Declaration of Conformity



marking

We, the distributors

PLH | Porsche Lizenz- und Handelsgesellschaft mbH & Co. KG
Groenerstrasse 5 | 71636 Ludwigsburg | Germany

confirm and declare under our sole responsibility that the product

PORSCHE WIRELESS MOUSE

WAP0508110M917
[battery-powered wireless mouse]

complies with the following directives, standards and/or regulations.

Directive 2014/53/EU
RoHS Directives 2011/65/EU and 2015/863/EU

The conformity of the product that is the subject of this declaration was evaluated according to the following technical standards or provisions:

EN 300 440 V 2.1.1: 2017
EN 301 489-1 V 2.1.1: 2017
EN 301 489-3 V 2.1.1: 2017
EN 60950-1: 2006+A11: 2009+A1: 2010+A12: 2011+A2: 2013
EN 62479: 2010

Legally binding signature:

Date: 18.1.2021 Name: Dr. Jan Biedner Role: CEO/management spokesperson



Disposal

 
The following information applies only to EU member states:
The crossed-out wheeled bin symbol indicates that this product must be collected and disposed of separately from regular household waste. Integrated batteries and rechargeable batteries can be disposed of together with the product. These components are separated from the product in recycling centres. The black bar indicates that the product was placed on the market after August 13, 2005. By using separate collection systems for this computer mouse and batteries, you will help to ensure the proper disposal of products and thus help to prevent potential negative consequences for human health and the environment. For more detailed information about the collection and recycling programmes available in your country, please contact your local city council and the dealer from whom you purchased the product.



Disposal of batteries and rechargeable batteries

The crossed-out wheeled bin symbol indicates that batteries and/or rechargeable batteries must be collected and disposed of separately from regular household waste. If batteries or rechargeable batteries contain more than the specified values of lead (Pb), mercury (Hg) and/or cadmium (Cd) defined in the Battery Directive (2006/66/EC), the chemical symbols for lead (Pb), mercury (Hg) and/or cadmium (Cd) will appear below the crossed-out wheeled bin symbol. By using separate collection systems for batteries, you will help to ensure the proper disposal of batteries and thus help to prevent potential negative consequences for human health and the environment. In the interests of environmental protection, do not dispose your product as household waste if it has served its time, but instead dispose it in a professional manner. About collection points

and their opening hours, you can get in touch with your local administration. Defect or used batteries / Batteries must comply with the directive 2006/66 / EC and its amendments be recycled. Enter batteries or the product over the offered collection facilities back. Environmental damage due to wrong disposal of the batteries/ accumulators! Batteries/rechargeable batteries cannot be disposed with household waste. They can contain toxic heavy metals and are subject to hazardous waste treatment. The chemical symbols the heavy metals are as follows:
Cd = Cadmium
Hg = mercury
Pb = Lead.
Therefore, give up used Batteries / accumulators in a municipal Collection point.
For more detailed information about the collection and recycling programmes available in your country, please contact your local city council and the dealer from whom you purchased the product.

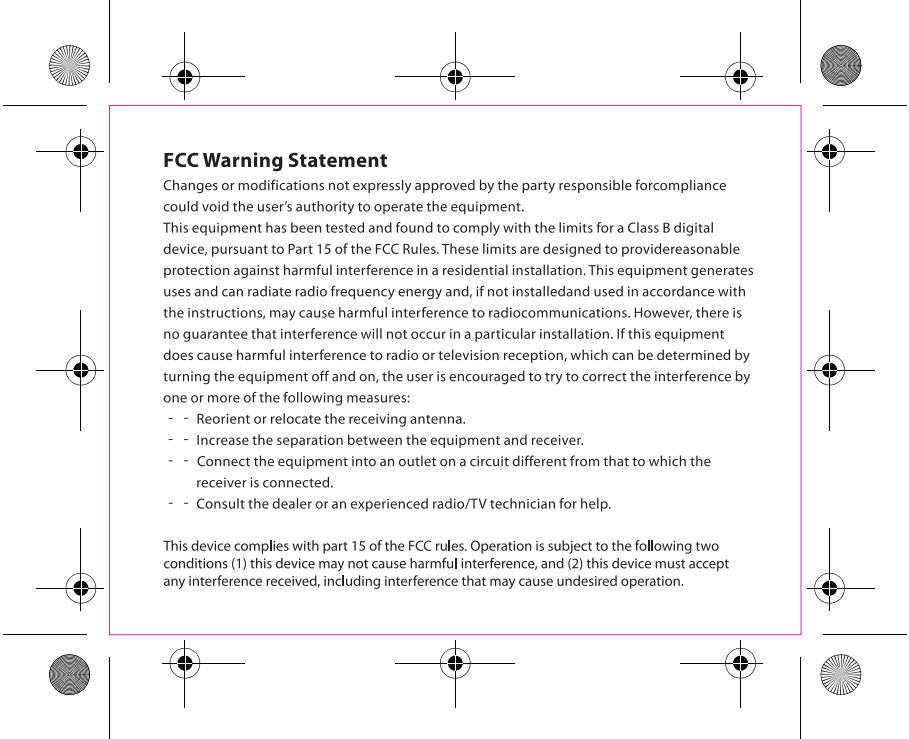

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radiocommunications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.