

Please scan here to download operating instructions

3 Modes Ultra-light Wireless Mouse Operating Instructions

Dear user

Thank you for choosing our REDRAGON product. To protect your rights and for better customer service, we ask that you note our warranty rules.

- Within guaranty period, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
- Consumable parts (such as foot pad) and spare parts replacement are not included in our warranty.

Button Instructions

- Left button
- Right button
- Scroll wheel(Click as middle button)
- Side button, defaulted forward
- Side button, defaulted backward
- DPI button
- Pair button
- Connection mode/Power switch: BT/OFF/2.4G

Wired Connection

[BT/OFF/2.4G] switch on "OFF", connect the mouse to computer with USB cable. The computer will recognize and configure the mouse automatically.

2.4G Wireless Connection

[BT/OFF/2.4G] switch on "2.4G", Plug USB receiver into computer USB port, click any button, the computer will recognize and configure the mouse automatically.

BT Connection

[BT/OFF/2.4G] switch on "BT", the blue indicator light quickly flashes, press ⑦ button for 3s to select BT pair mode. Turn on the computer BT and search for available device, and select device name " BT 5.1 Mouse", the computer will recognize and configure the mouse automatically.

DPI adjustment and indication

Press DPI button to cyclic adjust DPI in 400 DPI/800 DPI/1600 DPI/2400 DPI/4000 DPI, when adjusting DPI, the DPI indicator flashes as below:M730-WL support max 10000 DPI.

RED ----- 400 DPI
BLUE ----- 800 DPI
GREEN----- 1600 DPI
CYAN ----- 2400 DPI
PURPLE ----- 4000 DPI

Report rate adjustment and indication

Press ③+④ to cycling adjust report rate in 125Hz/250Hz /500Hz /1000Hz, when adjusting report rate, the LED indicator will flash in White as below:

Report rate	LED twinkle times
125Hz	1
250Hz	2
500Hz	3
1000Hz	4

(Report rate adjustment is not available on BT mode, 125Hz by default)

Lighting effect switching

Press ③+⑤ to cyclic switch 6 lighting effect. (blue by default)

Auto sleep and power save function

The mouse will enter sleep mode when it is out of operation in 3 minutes, move or click any button to wake it up, when the mouse is out of operation in 10 minutes, the mouse will enter power save mode, click any button to wake it up. If you do not use it for a long time, please turn the bottom switch to OFF to save energy.

How to recharge the battery

- Low battery warning---the DPI indicator will red light flashes when the battery is low.
- Use the USB Type-C cable to connect to PC USB port to charge the battery, the DPI indicator will red light steadily on, after battery fully charged the indicator turns to defaulted color.

Warning:Charging current: 5V = 1A max

DO NOT use fast-charging adapter to recharge your mouse!

Built-in Li-thion battery 1 unit

FAQ

- If the mouse is not responding, please check whether the mouse is plugged correctly in the corresponding computers USB port, or try another USB ports.
- If the mouse is moving slowly, jumping or with delay, please try another surface. Dark, dirty, un-flat, bright surfaces may affect the performance of mouse. Mouse pad strongly recommended.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment o fffand on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

1. **Cleaning Instructions:** Before deaning, always unplug the device from the computer's USB port. Clean the surfaces with a soft, dry cloth. For stubborn dirt, use a cloth that is slightly dampened with water. Do not use chemical agents or solvents. Ensure the devices are completely dry before reconnecting them.

2. **Ergonomic Health and Safety Guide:** Incorrect or prolonged use of computer equipment can lead to discomfort, fatigue, headaches and serious long-term injuries known as musculoskeletal disorders (MSDs). Please take relaxation breaks every 30-60 minutes.

3. **WARNING:** The product is not a toy. Please keep it out of reach of small children. The product contains small components that may pose a choking hazard.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

BATTERY SAFETY GUIDELINES

DO NOT replace the battery with a different model.

DO NOT use this product if the battery shows signs of damage including, but not limited to tearing, deformation, leakage, or the smell of electrolytic material.

DO NOT touch the battery fi material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes.

DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other non-standard operating condition.

DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations.

DO NOT impact, bend, alter, dissemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful.

CAUTION

Failing to follow all safety guidelines may result product damage, explosion, fire, and/or electric shock.

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes : (1) Cet appareil ne doit pas causer d'interférences. (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

PT

Prezado usuário,

Obrigado por escolher a marca REDRAGON . Para proteger seus direitos e oferecer um melhor atendimento ao cliente, pedimos que você observe as regras da nossa garantia.

- Dentro do período da garantia, os reparos são garantidos nos casos de falha devido a problemas no circuito elétrico. Danos causados pela desmontagem, por impactos violentos, imersão em água, ligação em correntes ou voltagens incorretas e danos causados por desastres naturais, como incêndios, inundações ou terremotos, não estão incluídos.
- Peças que sofrem desgaste (como pés) e a substituição de peças avulsas não estão incluídas em nossa garantia.

Instruções dos botões

- Botão esquerdo
- Botão direito
- Botão da rodinha (dicado como botão do meio)
- Botão lateral, avança por padrão.
- Botão lateral, volta por padrão.
- Botão DPI
- Botão de pareamento
- Chave do modo de conexão/energia: BT/OFF/2.4G

Conexão com fio

Coloque o interruptor [BT/OFF/2.4G] na posição "OFF" e conecte o mouse ao computador com o cabo USB. O computador vai reconhecer e configurar o mouse automaticamente.

Conexão sem fio 2.4 G

Coloque a chave [BT/OFF/2.4G] em "2.4G", conecte o receptor USB à porta USB do computador e clique em qualquer botão; o computador reconhecerá e configurará o mouse automaticamente.

Conexão com Bluetooth

Coloque a chave [BT/OFF/2.4G] em "BT"; o indicador azul piscará rapidamente. Pressione o botão ⑦ por 3 segundos para selecionar o modo de pareamento BT. Ative o Bluetooth do computador e pesquise dispositivos disponíveis. Selecione o dispositivo "BT 5.1 Mouse"; o computador reconhecerá e configurará o mouse automaticamente.

Ajuste e indicação de DPI

Pressione o botão de DPI para ajustar entre 400 DPI/800 DPI/1600 DPI/2400 DPI/4000 DPI; ao ajustar o DPI, o indicador de DPI piscará conforme abaixo:compativel com M730-WL, máx 10000 DPI.

VERMELHO ----- 400 DPI
AZUL ----- 800 DPI
VERDE ----- 1600 DPI
CIANO ----- 2400 DPI
ROXO ----- 4000 DPI

Ajuste e indicação da velocidade de leitura

Pressione ③+④ para definir a velocidade de leitura em 125Hz/250Hz/500Hz/1000Hz. Ao ajustar a velocidade de leitura, o LED indicador piscará em branco conforme indicado abaixo:

Taxa de leitura	OLED pisca
125Hz	1vez
250Hz	2vez
500Hz	3vez
1000Hz	4vez

(O ajuste da velocidade de leitura não está disponível no modo BT, sendo 125Hz o padrão).

Troca do efeito da retroiluminação

Pressione ③+⑤ para alternar entre os seis efeitos de iluminação. (azul por padrão)

Função de desativação automática para economia de energia

O mouse entrará no modo inativo quando se não for utilizado por 3 minutos. Mova o mouse ou clique em qualquer botão para ativá-lo. Se o mouse ficar inativo por 10 minutos, ele entrará no modo de economia de energia. Clique em qualquer botão para ativá-lo. Se não for utilizá-lo por um longo período, coloque a chave inferior em OFF para economizar energia.

Como recarregar a bateria

- Aviso de bateria fraca — o indicador de DPI piscará em vermelho quando a bateria estiver baixa.
- Use o cabo USB Tipo-C para conectar à porta USB do PC e carregar a bateria. O indicador de DPI ficará aceso em vermelho continuamente; quando a bateria estiver totalmente carregada, o indicador voltará à cor padrão.

Aviso: Corrente de carga: 5V=1A máx

NÃO use adaptador de carregamento rápido para recarregar o mouse!

Bateria de ion de lítio embutida, 1 unidade..

Dúvidas frequentes

- Se o mouse não estiver respondendo, verifique se o mouse está conectado corretamente na porta USB correspondente do computador ou experimente usar outra porta USB.
- Se o cursor estiver se movimentando lentamente, saltando ou com movimentos intermitentes, experimente outra superfície. Superfícies escuras, sujas, irregulares ou brilhantes podem afetar o desempenho do mouse. É recomendado o uso de um mouse pad.

型号	HL M730-WL 4134		备注： 尺寸： L100*W100mm 材质： 80g书写纸， 风琴折页， 正反印 印刷： 单色				
名称	说明书(英+巴西)						
日期	2026-1-14						
页码	1 OF 1		文件编号				
绘图	曾超余	审核	香敏琪	核准		版本	A.1