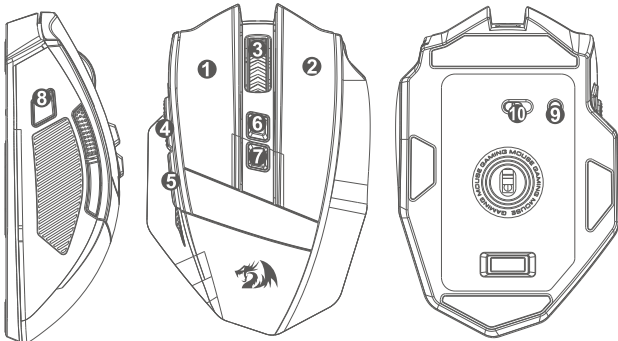


 REDRAGON STEALTH WIRELESS 3 MODES CONNECTION WIRELESS GAMING MOUSE 3 Modes Connection Wireless Gaming Mouse Operating Instructions	US UK Dear user Thank you for choosing our REDRAGON product. To protect your rights and for better customer service, we ask that you note our warranty rules. 1. Within guaranty period, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included. 2. Consumable parts (such as foot pad) and spare parts replacement are not included in our warranty. 1	Button Instructions 1. Left button 2. Right button 3. Scroll wheel(Click as middle button) 4. Side button, defaulted forward 5. Side button, defaulted backward 6. DPI+ button 7. DPI- button 8. Fire button (It is not available on BT mode) 9. Pair button (BT) 10. Mode/Power Switch: BT/OFF/2.4G  2	Wired Connection Connect the mouse to computer with USB cable in any mode of BT/OFF/2.4G connection, mouse will turn to wired connection.The computer will recognize and configure the mouse automatically, and the mouse battery will be charging at same time. 2.4G Wireless Connection [BT/OFF/2.4G] switch on "2.4G", plug USB receiver into computer USB port, click any button, the computer will recognize and configure the mouse automatically. BT Connection [BT/OFF/2.4G] switch on "BT", the blue indicator light quickly flashes, press ⑨ button for 3s to select BT pair mode. Turn on the computer BT and search for available device, and select device name "BT 5.1 Mouse", the computer will recognize and configure the mouse automatically.  3	DPI adjustment and indication Press DPI button to cyclic adjust DPI in 400DPI/800DPI/1600DPI/2400DPI/3200DPI, when adjusting DPI, the DPI indicator flashes as below: RED ----- 400 DPI BLUE ----- 800 DPI GREEN----- 1600 DPI CYAN ----- 2400 DPI PURPLE --- 3200 DPI The mouse support max 24000DPI, download & install the software to adjust. Report rate adjustment and indication Press ③+④ to cycling adjust report rate in 125Hz /250 Hz /500 Hz /1000 Hz, when adjusting report rate, the LED indicator will flash in White as below: <table><tr><th>Report rate</th><th>LED twinkle times</th></tr><tr><td>125Hz</td><td>1</td></tr><tr><td>250Hz</td><td>2</td></tr><tr><td>500Hz</td><td>3</td></tr><tr><td>1000Hz</td><td>4</td></tr></table> (Report rate adjustment is not available on BT mode.) Backlight effect adjustment (on the edge of the mouse) Press ③+⑤ to cyclic switch 6 backlight effect. 4	Report rate	LED twinkle times	125Hz	1	250Hz	2	500Hz	3	1000Hz	4
Report rate	LED twinkle times													
125Hz	1													
250Hz	2													
500Hz	3													
1000Hz	4													
Auto sleep and power save function The mouse will enter sleep mode to save energy when it is out of operation in 3 minutes, move or click any button to wake it up. How to recharge the battery 1.Low battery warning---the Scroll wheel led will flash red light when the battery is low. 2.Use the USB Type-C cable to connect to PC USB port to charge the battery, the Scroll wheel led will be red light steadily on, after battery fully charged the indicator turns to defaulted color.  Warning:Charging current: 5V = 1A max. DO NOT use fast-charging adapter to recharge your mouse! Built-in Li-ion battery 1 unit FAQ 1. If the mouse is not responding, please check whether the mouse is plugged correctly in the corresponding computers USB port, or try another USB ports. 2. If the mouse is moving slowly, jumping or with delay, please try another surface. Dark, dirty, un-flat, bright surfaces may affect the performance of mouse. Mouse pad strongly recommended.  5	FCC STATEMENT 1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. 2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. RF warning statement: The device has been evaluated to meet general RF exposure requirement. The devicecan be used in portable exposure condition without restriction. 6	ISED WARNING This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licenceexempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device. L'émetteur/récepteurexempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et DéveloppementéconomiqueCanada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'appareil doit accepter tout brouillage radioélectrique subi, même si e brouillage est susceptible d'en compromettre le fonctionnement 'appareil numérique du ciem conforme 1. Cleaning Instructions: Before cleaning, always unplug the device from the computer's USB port. Clean the surfaces with a soft, dry cloth. For stubborn dirt, use a cloth that is slightly dampened with water. Do not use chemical agents or solvents. Ensure the devices are completely dry before reconnecting them. 2. Ergonomic Health and Safety Guide: Incorrect or prolonged use of computer equipment can lead to discomfort, fatigue, headaches and serious long-term injuries known as musculoskeletal disorders (MSDs). Please take relaxation breaks every 30-60 minutes. 3. WARNING: The product is not a toy. Please keep it out of reach of small children. The product contains small components that may pose a choking hazard. 7	BATTERY SAFETY GUIDELINES DO NOT replace the battery with a different model. DO NOT use this product if the battery shows signs of damage including, but not limited to tearing, deformation, leakage, or the smell of electrolytic material. DO NOT touch the battery fi material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes. DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other non-standard operating condition. DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations. DO NOT impact, bend, alter, dissemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful.  CAUTION Failing to follow all safety guidelines may result product damage, explosion, fire, and/or electric shock. 8	  9										

型号	HL M923-WL 4151	备注： 尺寸： L100*W100mm 材质： 80g书写纸， 风琴折页， 正反印 印刷： 单色			
名称	说明书(英)				
日期	2025-12-22				
页码	1 OF 1	文件编号			
绘图	曾超余	审核	香敏琪	核准	版本 A.0