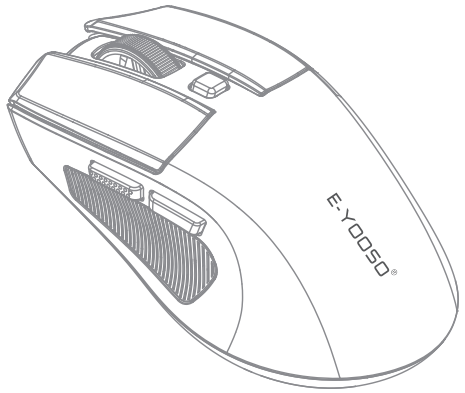 


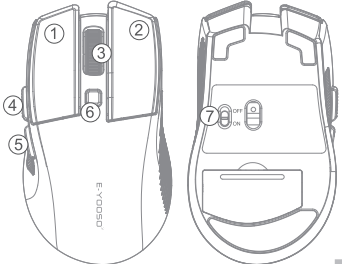 
E-YOOSO®

USER MANUAL



X-55
Wireless Mouse

Wireless Mouse

HOW TO CONNECT THE 2.4G WIRELESS MOUSE?
1. Insert the attached USB receiver into the proper USB interface of the computer, which will identify and connect the receiver automatically.
2. Install an AA battery in the compartment according to the polarity marks at the bottom of the mouse. it means that the mouse is working.
PRODUCTS FEATURE
1. 2.4GHz operating frequency, transmission distance up to 10 meters.
2. Five DPI adjustable: 800/1200/1600/2400/4000 DPI.
3. Original high-end power-saving Chip KA8G2, Lower power consumption, More stable cursor, Adaptable to all sorts of surfaces.
4. Power saving mode, maximum saving of battery energy.
5. Low battery reminder function.
6. Support Windows98SE / ME / 2000 / XP/ Vista / Windows 7/ Win10 / Win11 / Mac10. X And other operating systems.
7. Receiver, plug and play.
MOUSE BUTTONS DEFAULT FUNCTION
1. Left button
2. Right button
3. Middle button
4. Forward
5. Backward
6. DPI button
7. Power switch (Mouse bottom)

EN

Wireless Mouse

ADVANCED FUNCTIONS
1. DPI Adjustment Function
Click the DPI switching button, then you can switch among these five speeds. During the process, the red LED under the mouse wheel will: flash only one time at 800 DPI; two times at 1200 DPI; three times at 1600 DPI; four times at 2400 DPI; five times at 4000 DPI.
2. Rate of Return Adjustment Function
Click the middle button and the right button at the same time for 3s and the polling rate will change between 125Hz and 250Hz. When it comes to 125Hz, the red LED will slowly flash three times; when it comes to 250Hz, the red LED will quickly flash three times.
3. Auto Sleep Function
If you do not use the mouse after stopping, the mouse will enter the sleep state, and you can wake it up by pressing the button or moving the mouse (you need to press the button to wake it up after stopping for about 8 minutes).
WARM REMINDER: Please remove the battery when not using the mouse for a long time, so as not to corrode the parts.
4. Low battery tips
When the battery is low, the red LED will flash to remind you of replacing the battery.
5. Receiver Collection Function
Receiver can be placed in the storage interface at the bottom of the mouse.
RECONNECTION
The wireless mouse may disconnect with the receiver due to high temperature and high magnetic field. In this case, you have to reconnect them.
1. Disconnect the receiver and insert it again.
2. Remove the battery and then install it in line with the right steps (keep the distance between the mouse and the receiver within about 30CM).

EN

Wireless Mouse

PACKAGE CONTENT
1*Wireless Mouse 1*USB Receiver 1*User Manual
1. **Cleaning Instructions:** Before cleaning, always unplug the device from the computer's USB port. Clean the surfaces with a soft, dry cloth. For stubborn dirt, use a cloth that is slightly dampened with water. Do not use chemical agents or solvents. Ensure the devices are completely dry before reconnecting them.
2. **Ergonomic Health and Safety Guide:** Incorrect or prolonged use of computer equipment can lead to discomfort, fatigue, headaches and serious long-term injuries known as musculoskeletal disorders (MSDs). Please take relaxation breaks every 30-60 minutes.
3. **WARNING:** The product is not a toy. Please keep it out of reach of small children. The product contains small components that may pose a choking hazard.
BATTERY SAFETY GUIDELINES
DO NOT replace the battery with a different model
DO NOT use this product if the battery shows signs of damage including, but not limited to tearing, deformation, leakage, or the smell of electrolytic material.
DO NOT touch the battery fi material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes
DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other non-standard operating condition.
DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations.
DO NOT impact, bend, alter, dissemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful
CAUTION:
Failing to follow all safety guidelines may result product damage, explosion, fire, and/or electric shock

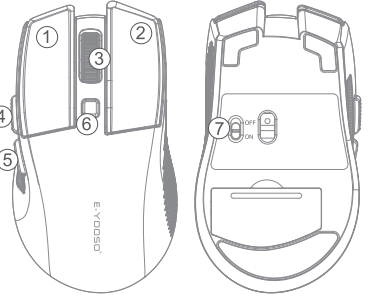 
EN

FCC STATEMENT
1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.
RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

QC / PASS
Certificate of Quality
Checker: QC1

Service Email: Eyoososervice@163.com
Welcome to Address: www.eyspc.cn
Made in China

使用手册X-55 无线鼠标

和计算机的联接方式-2.4G无线联接
1. 将随机附带的USB 接受器正确插入计算机的有效USB 接口，计算机将自动识别并连接此接受器。
2. 将一节AA电池按鼠标底部电池仓极性标示正确装入，鼠标即可正常使用。
产品特色
1. 2.4G工作频率，通用性强，无遮挡传输距离远达10米。
2. 五档分辨率可调: 800/1200/1600/2400/4000。
3. 使用低功耗芯片KA8G2，使鼠标的功耗更低，电池续航更久。
4. 支持多级省电模式，最大的节约电池能量。
5. 低电量提醒功能。
6. 支持Windows98SE/ME/2000/XP/Vista/Win7/ Win 10/Win11/Mac10.x 等操作系统。
7. 接收器，即插即用。
按键功能分布
1. 左键
2. 右键
3. 中键
4. 前进键
5. 后退键
6. DPI键
7. 电源开关 (鼠标底部)

中文

无线鼠标

产品高级功能
1. DPI调节功能
请点按DPI切换按钮，即可以在这五档之间循环切换，切换过程中，鼠标滚轮下的红色LED指示灯: 800 DPI时闪烁1次，1200 DPI时闪烁2次，1600 DPI时闪烁3次，2400 DPI时闪烁4次，4000 DPI时闪烁5次。
2. 回报率调节功能
同时按住鼠标的中键和右键约3秒，鼠标回报率将在125Hz和250Hz间切换，当切换到125Hz时，鼠标滚轮下红色LED将慢闪3次，当切换到250Hz时，鼠标滚轮下红色LED将快闪3次。
3. 自动休眠功能
放停后不使用鼠标，鼠标将进入休眠状态，使用按键或移动鼠标即可唤醒(放停约8分钟后需按键唤醒)。
温馨提醒：长时间不使用鼠标时请取出电池，以免腐蚀机件
4. 低电提示
当鼠标电池电量偏低时，在使用鼠标的过程中，鼠标滚轮下红色LED将闪烁，提醒您及时换入新的电池。
5. 接收器收藏功能
接收器，可置于鼠标底部收纳插口，便于携带外出以免遗漏。
重新连接
无线鼠标和接收器由于某些特殊原因，例如高温，高磁场等，有可能失去正常连接，需要重新连接才可以使用。
1. 拔下接收器然后重新插上。
2. 鼠标电池拆卸后重新正确装入(和接收器保持约30CM内距离)。

中文

无线鼠标

注意事项
本鼠标使用红外线作为移动寻迹光源，符合相关的安全规定。
本鼠标使用2.4GHz无线电波传送数据，视线使用距离为10米，如果有较大的障碍物，环境干扰等，使用距离将会有所减少!
在凹凸不平,反光等桌面上可能影响鼠标的使用。
包装内容
2.4G无线鼠标 x1
USB接收器 x1
使用说明书 x1
注意
如果电池更换不当会有爆炸危险
只能用同样类型或等效类型的电池来更换
--用错误型号的电池组替换，可能会使安全防护失效(例如，对某些类型的锂电池组)；
--将电池组投入火中或加热炉中，或对电池组进行机械挤压或切割的处理可能导致爆炸；
--将电池组放置在极高温度环境中，可能导致爆炸或泄漏可燃液体或气体；
和
--电池组承受极低气压，可能导致爆炸或泄漏可燃液体或气体；
--非专业人员请勿拆解或维修此产品，否则有可能造成产品进一步的损坏或人身伤害!
产品合格证
合格品
检验:QC1

中文

产品中有害物质的名称及含有信息表

部件名称	印刷电路板组件	外壳及附件	
有害物质	铅 (Pb)	X	O
	汞 (Hg)	O	O
	镉 (Cd)	O	O
	六价铬 (Cr(IV))	O	O
	多溴联苯 (PBBs)	O	O
	多溴二苯醚 (PBDEs)	O	O
	邻苯二甲酸二 (2-乙基) 己酯 (DEHP)	O	O
	邻苯二甲酸丁基苯酯 (BBP)	O	O
邻苯二甲酸二正丁酯 (DBP)	O	O	
邻苯二甲酸二异丁酯 (DIBP)	O	O	

本表格依据SJ/T 11364的规定编制。
注1:
O: 表示该有害物质在该部件所有均质材料中的含量均满足电器电子产品有害物质限制使用国家标准要求。
X: 表示该有害物质至少在该部件的某一均质材料中的含量不满足电器电子产品有害物质限制使用国家标准要求。
注2:
以上未列出的部件，表明其有害物质含量均满足电器电子产品有害物质限制使用国家标准要求。表中标记“X”的部件，皆因全球技术发展水平限制而无法实现有害物质的替代。
该电子电气产品含有某些有害物质，在环保使用期限内可以放心使用，超过环保使用期限之后则应该进入回收循环系统。

《废弃电器电子产品回收处理管理条例》
倡导环保和低碳的消费体验，建议拥有该产品的用户在不需要此产品时，应遵守国家废弃电器电子产品回收处理相关法律法规，将其交给当地具有国家认可的回收处理资质的厂商进行回收处理，降低资源浪费，保护地球自然环境。

保修卡
产品“三包”服务:
产品质量实行“三包”服务，产品质保期以购机日起保修1年。在质保期内，如因产品本身质量问题我司视情况提供免费维修、更换或退货服务。
*销售人员承诺的产品之外的服务及附加的配置、赠品，不在本保修服务范围内。
*如无法提供购买时间凭证，产品统一按照序列号标签的时间进行质保时间计算。
购买日期:客户名称:
联系电话:客户地址:
制造商: 东莞市丰润计算机有限公司
地址: 广东省东莞市凤岗镇油甘埔村南岸 工业区D栋
电话: 86-769-86800666 服务电话: 400-865-9898
网址: www.eyspc.cn 鼠标执行标准号: GB/T 26245-2010
中国制造
CE RoHS 10 0.25-5 W USB PD