

封面



REDRAGON

CRUX PRO

3 MODES CONNECTION  
BACKLIGHTING GAMING KEYBOARD



Please scan here to  
download user manual



User manual

US UK

Dear user

Thank you for choosing REDRAGON product. To protect your rights and for better customer service, please read the following warranty rules carefully.


1. Within 18 months of purchase date, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.

2. Consumable parts (such as foot pads) and spare parts replacement are not included in our warranty.

O.S. Support

Windows XP/ Vista/ Win 7/ Win 8/ Win 10/ Win 11/ Mac O.S.

How to connect the keyboard with multiple devices

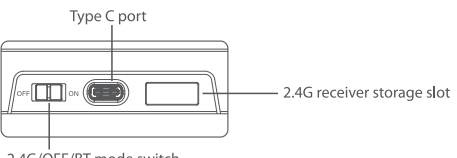

2.4G/OFF/BT mode switch

Wired Connection

Connect the keyboard to computer with USB cable. The computer will recognize and configure the keyboard automatically. When the keyboard under 2.4Ghz wireless connection or BT connection modes, the keyboard will switch to wired connection mode and charge the battery while connect the keyboard to PC by USB cable.

2.4G Wireless Connection

1. [ON/OFF] switch on "ON", the LED  flashing, plug the USB receiver into your computer USB port, the keyboard will connect with computer automatically.

2. If auto-connection unsuccessfully, or you want to connect to new device, plug out the USB receiver, press and hold [FN]+[3] for 3 seconds, the LED  flashes quickly, plug the USB receiver into computer USB port, after paired the LED  will turn off.

BT Connection

1. [ON/OFF] switch on "ON".

2. Press and hold [FN]+[1/2] for 3 seconds,  
BT1: [FN]+[1], **NUM** flash quickly;  
Turn on BT function and searching for available devices, It will find "BT5.0 KB" device names. Select the BT name to pair, after paired the **NUM / CAPS** will turn off.

3. To switch the BT connections between BT1/BT2, press [FN]+ [1/2].

Product Features

Backlight

1. Press [FN]+[ENTER] to cyclic switch the default 15 backlight patterns, press [FN]+[SPACE BAR] to turn ON/OFF the backlight.

2. Press [FN] + [←/→] to adjust light rotating speed, total 5 levels.  
Press [FN] / [↑ / ↓] to adjust backlight brightness, total 5 levels.

[WIN] lock

Press [FN] + [WIN] to lock [WIN] key, repeat to unlock (DO NOT lock the key when using on MAC O.S.)

Windows / MAC shortcut keys switching

Press [FN]+[S] to switch to Windows shortcut keys.

Press [FN]+[A] to switch to MAC shortcut keys.

Commands of key combinations with [FN] key

| WINDOWS O.S.        |                                   |
|---------------------|-----------------------------------|
| FN+F1: Media Player | FN+F7: Play/Pause                 |
| FN+F2: Volume -     | FN+F8: Next track                 |
| FN+F3: Volume +     | FN+F9: E-mail                     |
| FN+F4: Mute         | FN+F10: Internet Browser Homepage |
| FN+F5: Stop Play    | FN+F11: Lock the PC               |
| FN+F6: Pre track    | FN+F12: Calculator                |

MAC O.S,

|                            |                   |
|----------------------------|-------------------|
| FN+F1: Screen brightness - | FN+F7: Pre track  |
| FN+F2: Screen brightness + | FN+F8: Play/Pause |
| FN+F3: CMD+ALT+ ↑          | FN+F9: Next track |
| FN+F4: CMD+SPACE           | FN+F10: Mute      |
| FN+F5: Siri                | FN+F11: Volume -  |
| FN+F6: CMD+SHIFT+4         | FN+F12: Volume +  |

Restore factory settings

Press and hold [FN] + [ESC] for 3 seconds.

Power save mode & How to recharge

On wireless/BT connection mode, when keyboard without any operation over 6 minutes, the keyboard backlight will turn off to save the battery, when keyboard without any operation over 30 minutes, the keyboard will enter power save mode, press any key to wake up. When battery is low, the backlight will turn off, the LED  will blink red slowly to remind user to charge the keyboard.

Connect the keyboard with computer for charging, the power LED will steady on Red when charging, after fully charged turn OFF.

Warning: Charging Input: 5V≡1A

DO NOT use fast-charging adapter to recharge your keyboard !

Built-in Li-ion battery 1 unit.

FAQ

1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.

2. If you spill liquid on the keyboard, please unplug the keyboards USB cable from the computer immediately. Wipe off excessliquid and put the keyboard in a dry and ventilated place. Make sure the keyboard is dried naturally before the next use.

BATTERY SAFETY GUIDELINES

DO NOT replace the battery with a different model.

DO NOT use this product if the battery shows signs of damage including, but not limited to tearing, deformation, leakage, or the smell of electrolytic material.

DO NOT touch the battery if material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes.

DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other non-standard operating condition.

DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations.

DO NOT impact, bend, alter, dissemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful.

CAUTION:

Failing to follow all safety guidelines may result product damage, explosion, fire, and/or electric shock.

ISED WARNING

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licenceexempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteurexempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et DéveloppementéconomiqueCanada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

(1) L'appareil ne doit pas produire de brouillage, et

(2) L'appareil doit accepter tout brouillage radioélectrique subi, même si e brouillage est susceptible d'en compromettre le fonctionnement 'appareil numérique du ciem conforme

1. Cleaning Instructions:

Before cleaning, always unplug the device from the computer's USB port. Clean the surfaces with a soft, dry cloth. For stubborn dirt, use a cloth that is slightly dampened with water. Do not use chemical agents or solvents. Ensure the devices are completely dry before reconnecting them.

2. Ergonomic Health and Safety Guide:

Incorrect or prolonged use of computer equipment can lead to discomfort, fatigue, headaches and serious long-term injuries known as musculoskeletal disorders (MSDs). Please take relaxation breaks every 30-60 minutes.

3. WARNING:

The product is not a toy. Please keep it out of reach of small children. The product contains small components that may pose a choking hazard.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

PT

Prezado usuário,

Obrigado por escolher a marca REDRAGON . Para proteger seus direitos e oferecer um melhor atendimento ao cliente, pedimos que você observe as regras da nossa garantia.


1. Dentro do período da garantia, os reparos são garantidos nos casos de falha devido a problemas no circuito elétrico. Danos causados pela desmontagem, por impactos violentos, imersão em água, ligação em correntes ou voltagens incorretas e danos causados por desastres naturais, como incêndios, inundações ou terremotos, não estão incluídos.

2. Peças que sofrem desgaste (como pés) e a substituição de peças avulsas não estão incluídas em nossa garantia.

Compatibilidade com SO

Windows XP, Vista, Win 7, Win 8, Win 10, Win 11, Mac O.S.

Como conectar o teclado a diversos dispositivos

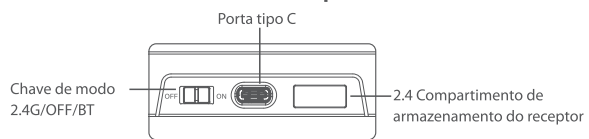

Conexão com fio

Conecte o teclado ao computador com o cabo USB. O computador irá reconhecer e configurar o teclado automaticamente. Quando o teclado estiver nos modos de conexão sem fio de 2.4GHz ou conexão Bluetooth, ele irá alternar para o modo de conexão com fio e carregar a bateria ao ser conectado ao PC via cabo USB.

Conexão BT

1. [ON/OFF] passe para "ON".

2. Pressione e segure [FN]+[1/2] por 3 segundos.

BT1: [FN]+[1], **NUM** piscará rapidamente;

BT2: [FN]+[2], **CAPS** piscará rapidamente.

Ative a função BT e procure os dispositivos disponíveis. Serão encontrados os nomes de dispositivo "BT5.0 KB". Selecione um nome no BT para parear e, após o pareamento, o **NUM / CAPS** ficará constantemente aceso.

3. Para alternar entre as conexões BT BT1/BT2, pressione [FN]+ [1/2].

Características do produto

Retroiluminação

1. Pressione [FN]+[ENTER] para alternar entre os 15 padrões predefinidos de retroiluminação, pressione [FN]+[SPACE BAR] para LIGAR/DESLIGAR a retroiluminação.

2. Pressione [FN] + [←/→] para ajustar a velocidade de rotação da luz, com um total de cinco níveis.

Pressione [FN] / [↑ / ↓] para ajustar o brilho da retroiluminação, com um total de cinco níveis.

[WIN] Bloqueio

Pressione [FN] + [WIN] para bloquear a tecla [WIN], repita para desbloquear (NÃO bloqueie a tecla se utilizar no sistema operacional MAC).

Atalhos de teclas para alternar entre Windows/MAC

Pressione [FN]+[S] para passar para as teclas de atalho do Windows.

Pressione [FN]+[A] para passar para as teclas de atalho do MAC.

Comandos via combinações de teclas com a tecla [FN]

| S.O. WINDOWS                          | MAC O.S,                          |
|---------------------------------------|-----------------------------------|
| FN + F1: Reprodutor de mídia          | FN + F1: Reduz o brilho da tela   |
| FN + F2: Baixar o volume              | FN + F2: Aumenta o brilho da tela |
| FN + F3: Aumentar o volume            | FN + F3: CMD + ALT+ ↑             |
| FN + F4: Mudo                         | FN + F4: CMD + SPACE              |
| FN + F5: Parar Reproduzir             | FN + F5: Siri                     |
| FN + F6: Faixa anterior               | FN + F6: CMD + SHIFT + 4          |
| FN + F7: Tocar/Pausa                  | FN + F7: Faixa anterior           |
| FN + F8: Próxima faixa                | FN + F8: Tocar/Pausa              |
| FN + F9: Email                        | FN + F9: Próxima faixa            |
| FN + F10: Página inicial do navegador | FN + F10: Mudo                    |
| FN + F11: Bloquear o PC               | FN + F11: Baixar o volume         |
| FN + F12: Calculadora                 | FN + F12: Aumentar o volume       |

Restaura configurações de fábrica

Pressione e segure [FN ]+ [ESC ] por 3 segundos.

Modo de economia de energia e como carregar

No modo de conexão sem fio/BT, se o teclado ficar sem qualquer operação por mais de 6 minutos, a retroiluminação será desligada para poupar bateria. Se o teclado permanecer sem operação por mais de 30 minutos, entrará no modo de economia de energia. Pressione qualquer tecla para ativá-lo.

Quando a bateria estiver fraca, a retroiluminação será desligada, e o LED  piscará lentamente em vermelho para lembrar o usuário de carregar o teclado.

Conecte o teclado ao computador para carregar; o LED de energia ficará vermelho durante o carregamento e, após a carga completa, desligará.

Aviso: corrente de carga: 5V≡1A máx

NÃO use adaptador de carregamento rápido para recarregar o teclado!

Bateria de íon de lítio embutida, 1 unidade

Dúvidas frequentes

1. Se o teclado não responder, verifique se o cabo USB do teclado está inserido corretamente na porta USB correspondente no computador, ou experimente outra porta USB no computador.

2. Se você derramar líquido no teclado, desconecte o cabo USB do teclado do computador imediatamente. Enxugue o excesso de líquido e coloque o teclado em um local seco e ventilado. É importante que o teclado seque naturalmente antes de utilizá-lo.

|    |                        |                                                 |     |      |  |    |  |     |
|----|------------------------|-------------------------------------------------|-----|------|--|----|--|-----|
| 型号 | HL-K518RGB-PRO-GB/7393 | 备注：尺寸：100x100mm (折页)<br>材质：80g书写纸<br>印刷：单黑色双面印刷 |     | 文件编号 |  | 版本 |  | A.3 |
| 名称 | 说明书                    |                                                 |     |      |  |    |  |     |
| 日期 | 2026-1-23(修改)          |                                                 |     |      |  |    |  |     |
| 页码 | 1 OF 1                 |                                                 |     |      |  |    |  |     |
| 绘图 | 邓子松                    | 审核                                              | 香敏琪 | 核准   |  |    |  |     |