

US UK Dear user Thank you for choosing REDRAGON product. To protect your rights and for better customer service, please read the following warranty rules carefully. 1. Within 18 months of purchase date, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included. 2. Consumable parts (such as foot pads) and spare parts replacement are not included in our warranty. OS Support Windows XP/ Vista/ Win 7/ Win 8/ Win 10/Win 11 How to connect the keyboard with multi-ple devices 2.4G/OFF/BT mode switch 2.4G OFF BT Type C port Wired Connection 1. 2.4G/OFF/BT switch on "OFF". 2. Connect the keyboard to computer with USB cable. 3. The computer will recognize and configure the keyboard automatically and charging the keyboard battery.	2.4G Wireless Connection 1. [2.4G/OFF/BT] switch on "2.4G", the LED M flash in Yellow, plug the USB receiver into your computer USB port, the keyboard will connect with computer automatically. 2. If auto-connection unsuccessfully, or you want to connect to new device, plug out the USB receiver, press and hold [FN]+[4] for 3 seconds, the LED M flash quickly in Yellow, plug the USB receiver into computer USB port, after paired the LED will turn to steady on. BT Connection 1. [2.4G/OFF/BT] switch on "BT". 2. Press and hold [FN]+[1/2/3] for 3 seconds, LED M flashes in Blue[BT1] or Cyan[BT2] or Pink[BT3] quickly. 3. Turn on BT function and searching for available device, it will find "BT3.O Keyboard and BT5.O Keyboard" device names. Select a BT name to pair, after pairing the LED will turn to steady on. 4. To switch the BT connections between BT1/BT2/BT3, press [FN]+ [1/2/3]. Product Features Backlight 1. Press [FN]+[INS] to cyclic switch the default 8 backlight patterns. 2. Press [FN]+[←/→] to adjust light rotating speed, total 5 levels. 3. Press [FN]+[↑ / ↓] to adjust backlight brightness, total 5 levels. 4. Backlight color switching (available on limited light patterns): Press [FN]+[ENTER] to cyclic switch Red, Green, Blue, Yellow, Purple, Cyan, White, RGB. [WIN] lock Press [FN] + [WIN] to lock [WIN] key, repeat to unlock. Commands of key combinations with [FN] key	<table><tr><td>FN + F1: Media Player</td><td>FN + F7: Play/Pause</td></tr><tr><td>FN + F2: Volume -</td><td>FN + F8: Next track</td></tr><tr><td>FN + F3: Volume +</td><td>FN + F9: E-mail</td></tr><tr><td>FN + F4: Mute</td><td>FN + F10: Internet Browser Homepage</td></tr><tr><td>FN + F5: Stop Play</td><td>FN + F11: This PC</td></tr><tr><td>FN + F6: Pre track</td><td>FN + F12: Search</td></tr></table> Restore factory settings Press and hold [FN] + [ESC] for 3 seconds. Power save mode & How to recharge On wireless/BT connection mode, when keyboard without any operation over 3 minutes, the keyboard backlight will turn off to save the battery, when keyboard without any operation over 30 minutes, the keyboard will enter power save mode, press any key to wake up. When battery is low, the backlight will turn off, the LED M will blink red slowly to remind user to charge the keyboard. Connect the keyboard with computer for charging, the LED M will steady on Red when charging, after fully charged the LED recover to current connection mode inidcating. Warning: Charging Input: 5V==2A Built-in Li-ion battery 1 unit FAQ 1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.	FN + F1: Media Player	FN + F7: Play/Pause	FN + F2: Volume -	FN + F8: Next track	FN + F3: Volume +	FN + F9: E-mail	FN + F4: Mute	FN + F10: Internet Browser Homepage	FN + F5: Stop Play	FN + F11: This PC	FN + F6: Pre track	FN + F12: Search	2. If you spill liquid on the keyboard, please unplug the keyboards USB cable from the computer immediately. Wipe off excess liquid and put the keyboard in a dry and ventilated place. Make sure the keyboard is dried naturally before the next use. BATTERY SAFETY GUIDELINES DO NOT replace the battery with a different model. DO NOT use this product if the battery shows signs of damage including, but not limited to tearing, deformation, leakage, or the smell of electrolytic material. DO NOT touch the battery if material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes. DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other non-standard operating condition. DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations. DO NOT impact, bend, alter, dissemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful. CAUTION: Failing to follow all safety guidelines may result product damage, explosion, fire, and/or electric shock. This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device. Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes : (1) Cet appareil ne doit pas	causer d'interférences, (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil. FCC Statement Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. REDRAGON QUALITY ASSURED
FN + F1: Media Player	FN + F7: Play/Pause															
FN + F2: Volume -	FN + F8: Next track															
FN + F3: Volume +	FN + F9: E-mail															
FN + F4: Mute	FN + F10: Internet Browser Homepage															
FN + F5: Stop Play	FN + F11: This PC															
FN + F6: Pre track	FN + F12: Search															
1	2	3	4	5												

PT Prezado usuário, Obrigado por escolher a marca REDRAGON. Para proteger seus direitos e oferecer um melhor atendimento ao cliente, pedimos que você observe as regras da nossa garantia. 1. Dentro do período da garantia, os reparos são garantidos nos casos de falha devido a problemas no circuito elétrico. Danos causados pela desmontagem, por impactos violentos, imersão em água, ligação em correntes ou voltagens incorretas e danos causados por desastres naturais, como incêndios, inundações ou terremotos, não estão incluídos. 2. Peças que sofrem desgaste (como pés) e a substituição de peças avulsas não estão incluídas em nossa garantia.	Compatibilidade com SO Windows XP/ Vista/ Win 7/ Win 8/ Win 10/Win 11 Como conectar o teclado a diversos dispositivos Conexão com fio 1. 2.4G/OFF/BT passar para "OFF". 2. Conecte o teclado ao computador com o cabo USB. 3. O computador vai reconhecer e configurar o teclado e carregar a bateria automaticamente. Conexão sem fio 2.4 G 1. Passe a chave [2.4G/OFF/BT] para "2.4G". O LED piscará em amarelo. Conecte o receptor USB na porta USB do computador e o teclado será conectado automaticamente ao computador. 2. Se a conexão automática não for bem-sucedida, ou se você quiser conectar a outro dispositivo, desconecte o receptor USB, pressione e segure [FN] + [4] por três segundos. O LED M piscará na cor amarelo. Conecte o receptor USB à porta USB do computador e, após o pareamento, o LED ficará aceso continuamente. Conexão BT 1. Chave [2.4G/OFF/BT] em "BT". 2. Pressione e segure [FN]+[1/2/3] por três segundos. O LED piscará rapidamente em azul [BT1], ciano [2] ou rosa [BT3]. 3. Ligue a função BT e inicie a procura dos dispositivos disponíveis até encontrar os nomes dos dispositivos BT3.O Keyboard e BT5.O. Keyboard. Selecione um nome no BT para parear	e, após o pareamento, o LED ficará constantemente aceso. 4. Para alternar entre as conexões BT BT1/BT2/BT3, pressione [FN]+[1/2/3]. Características do produto Retroiluminação 1. Pressione [FN]+[INS] para alternar entre oito padrões de retroiluminação. 2. Pressione[FN]+[←/→] para ajustar a velocidade de rotação da luz, com um total de cinco níveis. 3. Pressione [FN]+[↑ / ↓] para ajustar o brilho da retroiluminação, com um total de cinco níveis. 4. Troca de cor da luz de fundo (disponível em padrões de luz limitados): Pressione [FN]+[ENTER] para alternar entre vermelho, verde, azul, amarelo, roxo, ciano, branco e RGB. [WIN] Bloqueio Pressione [FN] + [WIN] para desbloquear a tecla [WIN], pressione novamente para desbloquear. Comandos via combinações de teclas com a tecla [FN] <table><tr><td>FN + F1: Reprodutor de mídia</td><td>FN + F7: Tocar/Pausa</td></tr><tr><td>FN + F2: Baixar o volume</td><td>FN + F8: Próxima faixa</td></tr><tr><td>FN + F3: Aumentar o volume</td><td>FN + F9: Email</td></tr><tr><td>FN + F4: Mudo</td><td>FN + F10: Página inicial do navegador</td></tr><tr><td>FN + F5: Parar Reproduzir</td><td>FN + F11: Este PC</td></tr><tr><td>FN + F6: Faixa anterior</td><td>FN + F12: Pesquisa</td></tr></table>	FN + F1: Reprodutor de mídia	FN + F7: Tocar/Pausa	FN + F2: Baixar o volume	FN + F8: Próxima faixa	FN + F3: Aumentar o volume	FN + F9: Email	FN + F4: Mudo	FN + F10: Página inicial do navegador	FN + F5: Parar Reproduzir	FN + F11: Este PC	FN + F6: Faixa anterior	FN + F12: Pesquisa	Restaura configurações de fábrica Pressione e segure [FN]+ [ESC] por 3 segundos. Modo de economia de energia e como carregar No modo de conexão sem fio/BT, se o teclado ficar sem qualquer operação por mais de 3 minutos, a retroiluminação será desligada para poupar bateria. Se o teclado permanecer sem operação por mais de 30 minutos, entrará no modo de economia de energia. Pressione qualquer tecla para ativá-lo. Quando a bateria estiver fraca, a retroiluminação será desligada, e o LED M piscará lentamente em vermelho para lembrar o usuário de carregar o teclado. Conecte o teclado ao computador para carregar. A tecla M permanecerá acesa em vermelho durante o carregamento e, quando a carga estiver completa, retornará à indicação do modo de conexão atual. Aviso: corrente de carga: 5V == 2A máx Bateria de íon de lítio embutida, 1 unidade. REDRAGON QUALITY ASSURED Dúvidas frequentes 1. Se o teclado não responder, verifique se o cabo USB do teclado está inserido corretamente na porta USB correspondente no computador, ou experimente outra porta USB no computador. 2. Se você derramar líquido no teclado, desconecte o cabo USB do teclado do computador imediatamente. Enxugue o excesso de líquido e coloque o teclado em um local seco e ventilado. É importante que o teclado seque naturalmente antes de utilizá-lo.	REDRAGON QUALITY ASSURED REDRAGON NETHERBANE PRO REDRAGON 3 MODES CONNECTION GAMING KEYBOARD Please scan here to download user manual Mechanical Gaming Keyboard User manual
FN + F1: Reprodutor de mídia	FN + F7: Tocar/Pausa															
FN + F2: Baixar o volume	FN + F8: Próxima faixa															
FN + F3: Aumentar o volume	FN + F9: Email															
FN + F4: Mudo	FN + F10: Página inicial do navegador															
FN + F5: Parar Reproduzir	FN + F11: Este PC															
FN + F6: Faixa anterior	FN + F12: Pesquisa															
6	7	8	9													

封面

型号	HL K521RGB-KS/7528		备注：尺寸：100x100mm (折页) 材质：80g书写纸 印刷：单黑色双面印刷				Eastertimes Tech
名称	说明书						
日期	2025-4-16						
页码	1 OF 1		文件编号				
绘图	雷国建	审核	香敏琪	核准	版本	A.0	